
INSTALLATION	Accessory ENGINE BLOCK HEATER P/N 08T44-SNA-101	Application 2014 CIVIC 2-DOOR	Publications No. All 50703-50858 Issue Date JAN 2014
PARTS LIST	ТО	OLS AND SUPPLIES REQ	UIRED
Engine block heater	Rat 8 m 10 r Tor	lips screwdriver chet m, 10 mm, 19 mm, and 24 mm Open end wrench que wrench	mm Sockets
Aluminum washer	Hea	gonal cutters avy gloves in pan	
Heater harness	Tap Whi Coo Eye	e measure te marker plant (Honda All Season An protection (face shield, sa nket	
Protective cap	3 m Utili Pus	m and 5 mm Drill bits ty knife hpin	
12 Black wire ties (Some may not used)	Tap File Sho The Equ	p towel following tool is available th ipment Program. On the iN	I, click on: Service >
7 Wire ties with clip (Some may not used)	the	vice Bay > Tool and Equipi number under "Search". O rim Tool Set (T/N SOJATP	r, call 888-424-6857.
5 Wire ties (Natural)			

Illustration of the Engine Block Heater Installed on the Vehicle

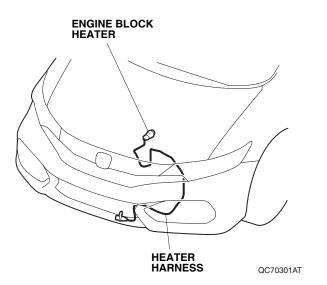

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- Always use Honda All Season Antifreeze/Coolant Type 2. Using a non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail.
- To avoid burning out the element, do not operate the engine block heater until it is installed in the vehicle and you have added the coolant.
- 1. Disconnect the negative cable from the battery.
- 2. Allow the engine and all cooling system components to cool down.

3. Place a clean drain pan under the radiator drain plug, then remove the drain plug from the bottom of the radiator to drain the coolant. Remove the radiator cap to increase the flow.


NOTICE: Radiator coolant will damage the body paint. Quickly rinse any spilled coolant from body paint finish.

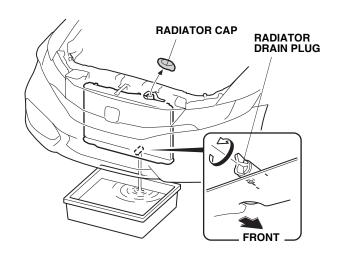


QC70302AT

4. Drain the coolant completely, then reinstall the radiator cap.


- 5. Remove the front bumper:
 - On each side, attach tape to the areas shown.
 - Wrap a shop towel around the hood latch.

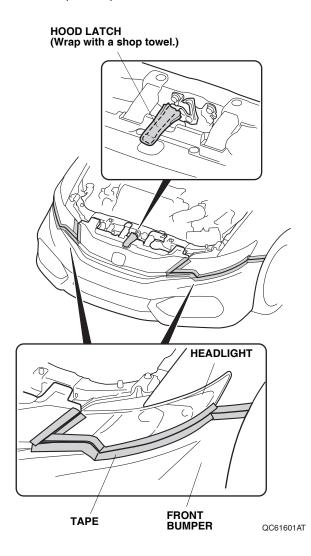

• Remove the 4 self-tapping screws, 10 clips, and 2 bolts.

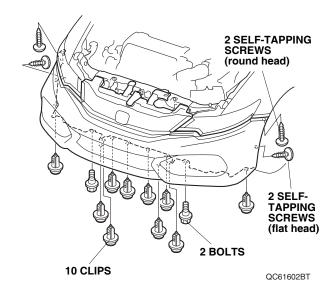


• On each side, release two retaining tabs.

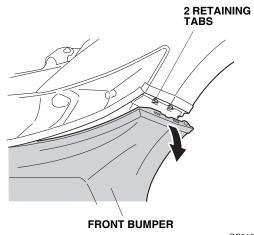


QC61603AT


• On each side, release four retaining tabs.

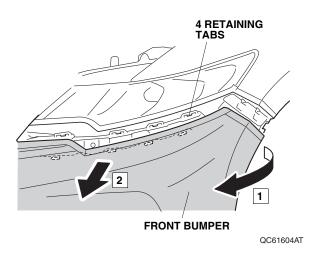

• With the help of an assistant, remove the front bumper (four clips and unplug the vehicle connectors). Place the front bumper on a blanket to prevent damage.

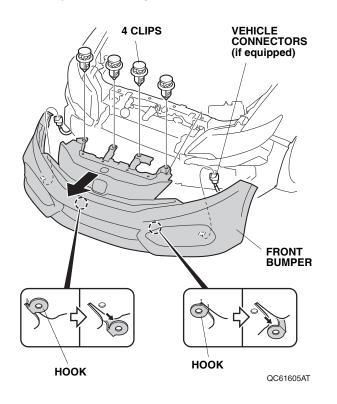


6. Open the positive cable cover and disconnect the positive (+) battery cable from the battery.

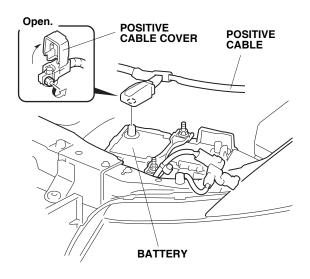


QC70303AT


7. Remove the battery (two nuts, battery setting plate, battery upper cover, battery, and battery under cover).

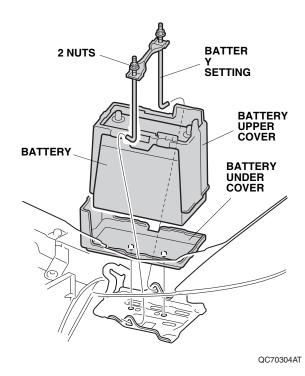

8. Get the heater harness. Using a tape measure, measure and mark the heater harness at the measurements A, B, C, and D.

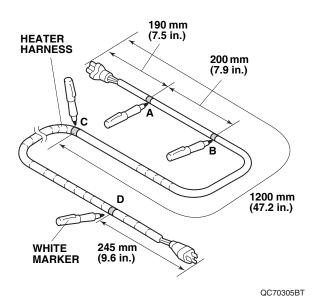


 Locate and remove the drain bolt and washer. Coolant remaining in the engine jackets flows out of the hole when the bolt is removed. Retain the bolt; it will be used if the block heater is removed. NOTE: Use a new washer if the drain bolt is reinstalled.

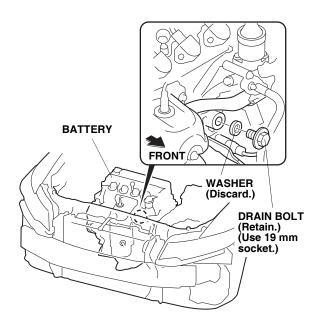


QC70306AT


 Install the engine block heater with aluminum washer into the bolt hole using a 24 mm socket and a torque wrench. Torque the engine block heater to 85 N·m (8.7 kgf·m, 63 lbf·ft).

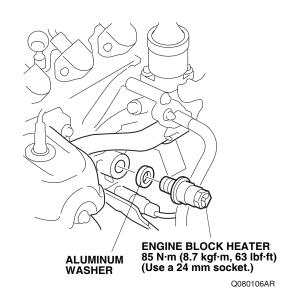


11. Plug the connector end of the heater harness into the engine block heater. Make sure the heater harness connector is fully seated in the engine block heater.

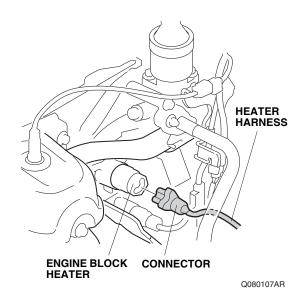

12. Secure the heater harness to the vehicle bracket with one wire tie at the white mark (point A).

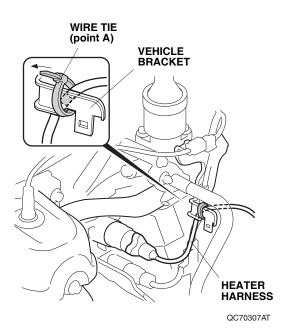


13. Route the heater harness as shown. Secure the heater harness to the fan shroud rib with one wire tie at the white mark (point B).

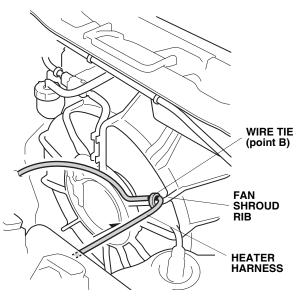


Q080109AR

14. Route the heater harness along the top of the fan shroud.

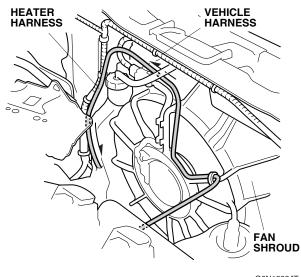


Q0N1803AT


15. Using three black wire ties and three wire ties, secure the heater harness to the fan shroud rib and vehicle harness.

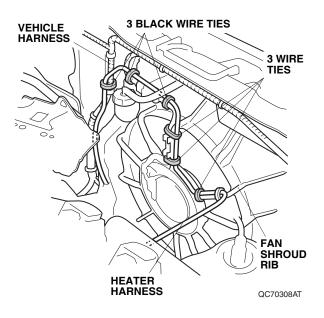

16. Route the heater harness under the vehicle frame as shown.

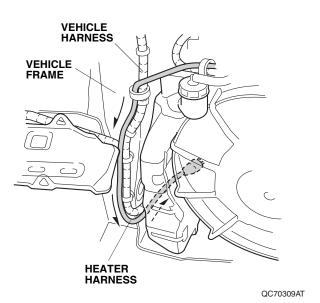


17. Using one black wire tie, secure the heater harness to the vehicle harness.

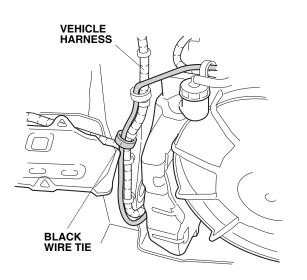


QC70310AT


18. Route the heater harness as shown. Install one wire tie with clip to the heater harness at the white mark (point C) you made, and secure it to the vehicle panel hole. If the vehicle panel hole is already used by vehicle harness, align the white mark (point C) you made with the vehicle clip. Using one black wire tie, secure the heater harness to the vehicle harness.

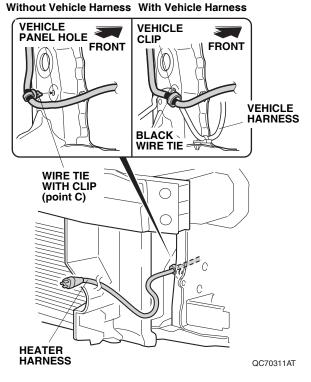


19. Using a utility knife, cut out the scribe mark of the vehicle panel in the area shown.

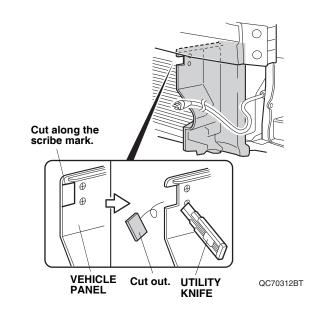


20. Using a pushpin, pierce the two scribe marks on the vehicle panel at the location shown. While wearing eye protection, drill the two pierced marks with a 3 mm drill bit, then enlarge the holes with a 5 mm drill bit as shown. Remove any burrs.

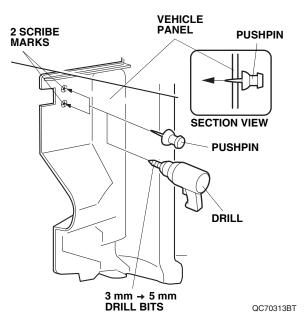


21. Secure the heater harness to the two 5 mm holes in the vehicle panel with one black wire tie at the white mark (point D).

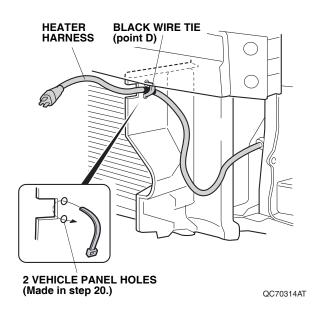


22. Bundle up the excess heater harness, and secure it to the vehicle panel hole with one black wire tie.

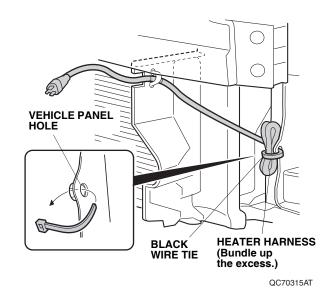


23. Using a utility knife, cut out the front bumper at the location shown. Remove any burrs.

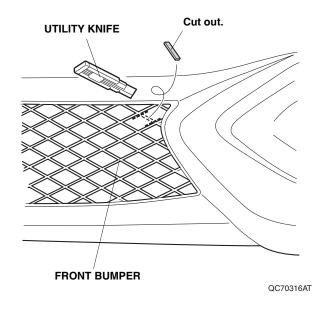


24. Route the heater harness through the front bumper as shown, then reinstall the front bumper with the help of an assistant.

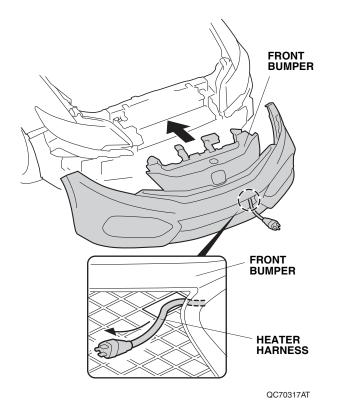

25. Using one black wire tie, secure the heater harness to the front bumper.

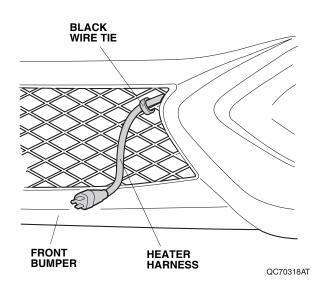

26. Attach the protective cap to the front bumper, and plug the heater harness connector into the protective cap.

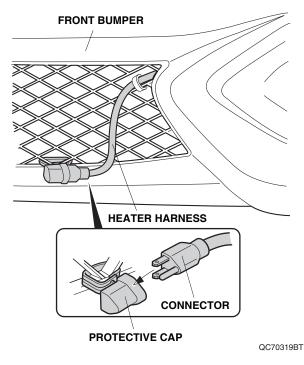

- 27. Reinstall all removed parts except for the radiator cap.
- 28. Reinstall the radiator drain plug.
- 29. Remove the radiator cap and fill the system with the recommended coolant. Follow the instructions in the Service Manual to fill the cooling system and check for leaks. Particularly check that there is no leak around the engine block heater.
- 30. Make sure that the heater harness is routed properly and all connectors are plugged in.
- 31. Reinstall the radiator cap.
- 32. Put the drain bolt (removed in step 9) in the glove box.
- 33. Reconnect the negative cable to the battery.
- 34. Press and hold the radio power button for two seconds to restore radio and navi (if equipped) system functions.
- 35. Reset the clock.
- 36. Restore the systems back to normal operation as described in the Service Manual if necessary.