$ \square $ HONDA –	Accessory	Application	Publications No.
INSTALLATION INSTRUCTIONS	SPARE TIRE KIT P/N 06421-TR5-A00	2014 CIVIC NGV	All 51008 Issue Date FEB 2014
PARTS LIST	То	ol Pouch	
Spare tire rim	Isc	OLS AND SUPPLIES REQUI	RED
Valve stem		STALLATION	
Spare tire caution label	in te	Cutomer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by	
Wing bolt		D-it-yourselfers." DTE: Be careful not to scratch the inte	
Spacer cone	·	the spare tire kit. Install the correct size tire.	
Tool case		Use a tire changer, and the Op furnished with the tire changer to the spare tire rim. Give all the removed parts to y	to install the spare tire
Jack	1.	Using isopropyl alcohol on a spare tire rim in the area sho	
	and a start of the		~
Wheel nut wrench/Jack handle		VALVE STEM HOLE	
Extension bar		SPARE TIRE RIM	
Tire and load information label	2.	Clean this area with isopropyl alcohol. Remove the adhesive backir	ng from the caution
Support plate		label, and attach the caution rim in the area shown.	-

3. Use a tire changer to install the spare tire (sold separately) onto the spare tire rim. Inflate the spare tire to 60 psi (420 kPa, 4.2 kgf/cm2).

Installing the Spare Tire Kit

- 4. Open the trunk lid.
- 5. Remove the trunk lid cover.



6. Remove the temporary tire repair kit and set it aside, it will not be reused.



TEMPORARY TIRE REPAIR KIT AND TRUNK TOOL BOX Set aside. 7. Install the spare tire assembly into the cargo area (label side down), and secure it to the vehicle using the spacer cone and the wing nut provided. Tighten the wing nut securely.



8. Assemble the tools in the tool case, and install the tool case in the trunk tool box. Place the trunk tool box on top of the spare tire as shown.



9. Install the jack into the bracket at the rear of the trunk. Tighten the jack to keep it locked in place.



10. Reinstall the trunk lid cover.

11. Open the driver's door, and locate the TIRE AND LOADING INFORMATION label on the doorjamb. Using isopropyl alcohol on a shop towel, clean the doorjamb over the exiting label.



- 12. Remove the adhesive labelfrom the new TIRE AND LOADING INFORMATION label, and attach it over the existing label.
- 13. Give all removed parts to the customer.