



INSTALLATION INSTRUCTIONS

Accessory
17" SPARE WHEEL
P/N 08W17-SJC-103A

Application
2014 PILOT

Publications No.
All 50233
Issue Date
AUG 2013

PARTS LIST

 
Spare wheel
(The illustration may differ from the actual wheel.)



3 Tire pressure information labels



Valve



TOOLS AND SUPPLIES REQUIRED

Isopropyl alcohol
Shop towel

SPECIFICATIONS

| Vehicle grade | Tire pressure information label ID code |
|--------------------------|---|
| LX | JC1SG |
| EX, EX-L, EXL-N, Touring | JC1SH |

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- Before attaching the tire pressure information label, check the grade of the vehicle and the ID code on the tire pressure information label.
- Be sure to install the correct size tire.
- Please refer to the vehicle owner's manual for the spare wheel installation.
- Use a tire changer to install and remove the tire as described in the operation manual furnished with the tire changer. Do not use a tire lever to install the tire as it may cause damage to the tire and spare wheel.

Open the driver's door. Using isopropyl alcohol, thoroughly clean the area where the Tire Pressure Information Label will attach. Remove the adhesive backing from the label, and attach it on the standard tire pressure information label as shown.

