

PARTS LIST 2 head restraint covers Center head restraint cover Left seat-back cover Right seat-back cover Left seat cushion cover Right seat cushion cover Right seat cushion cover Right seat cushion cover Right seat cushion cover Cover Right seat cushion cover	cations No. I 51177 sue Date PR 2014
Installing the Head Restraint Covers Installing the Head Restraint Covers	
and lifting up on the head restraint.	
Left seat-back cover	ng the butto
Left seat-back cover Right seat-back cover Left seat cushion cover Left seat cushion cover	
Left seat-back cover Right seat-back cover Left seat cushion cover Left seat cushion cover	
Right seat-back cover	
Left seat cushion cover	RESTRAINT
Left seat cushion cover	
Left seat cushion cover	2
Left seat cushion cover	1
Left seat cushion cover	
Left seat cushion cover	
Left seat cushion cover	ACK
Je Je	QC91301AK
Right seat cushion cover	
Right seat cushion cover	
Right seat cushion cover	

2. Install a head restraint cover on each head restraint as shown.

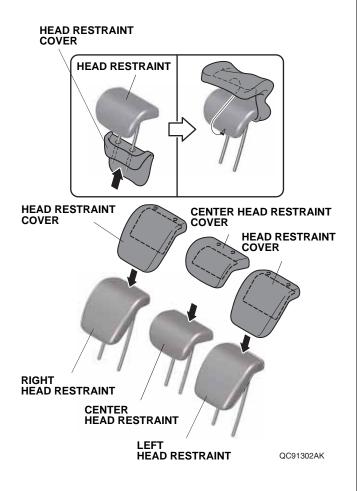


Installing the Left Seat-back Cover

3. Pull the lever and fold the left seat-back halfway forward. Install the left seat-back cover over the left seat-back.

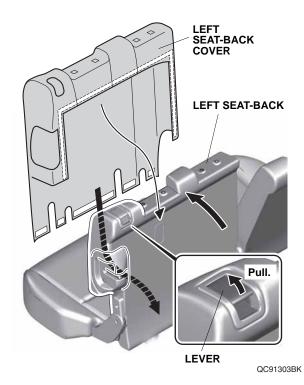

4. Lift up the left seat cushion. Secure the fastener on the left seat-back cover as shown.

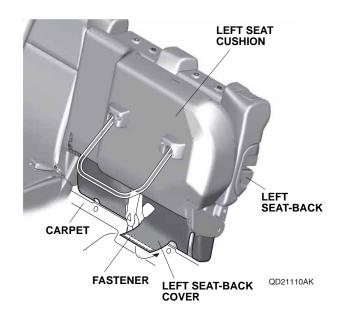

5. Lower the left seat cushion, and fold the left seatback fully forward. Pull the seat-back cover tight, and secure it to the left seat-back with the five fasteners.




QC91304BK

6. Lift the left seat-back. Tuck the left seat-back cover under each head restraint guide as shown.




Installing the Left Seat Cushion Cover


7. Remove the two seat belt buckles from the loops.

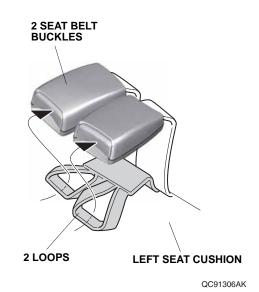


8. Install the left seat cushion cover over the left seat cushion.

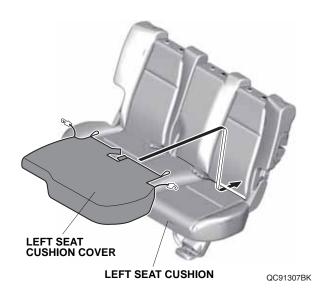


9. Secure the seat belt buckles in the two loops.

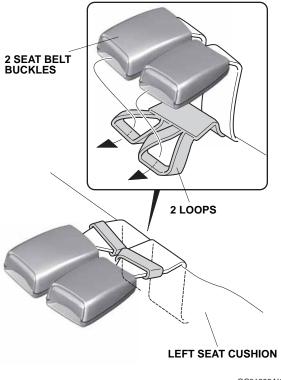

- QC91309AK
- 10. Lift up the left seat cushion. Secure the fasteners on the left seat cushion.

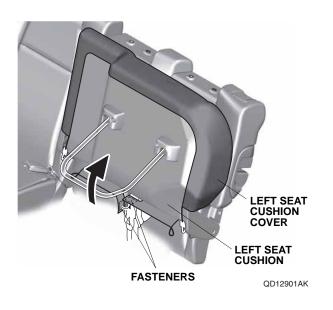


11. Secure the left seat cushion cover to the left seat cushion with two hooks and two loops, and lower the left seat cushion.

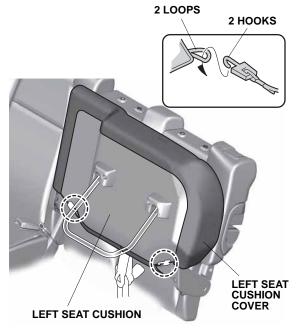

QC91308BK


Installing the Right Seat-back Cover

12. Pull the lever and fold the right seat-back halfway forward. Install the right seat-back cover over the right seat-back.

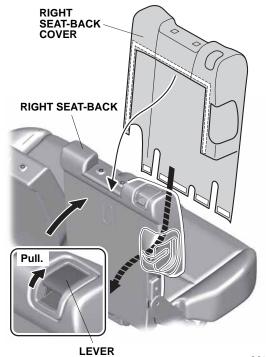

QC91310BK

13. Lift up the right seat cushion. Secure the fastener on the right seat-back cover as shown.

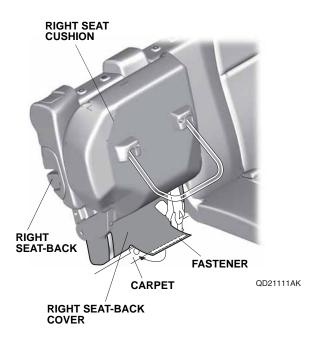

14. Lower the right seat cushion, and fold the right seatback fully forward. Pull the seat-back cover tight, and secure it to the right seat-back with the four fasteners.




15. Lift the right seat-back. Tuck the right seat-back cover under each head restraint guide as shown.




Installing the Right Seat Cushion Cover

16. Remove the two seat belt buckles from the loops.

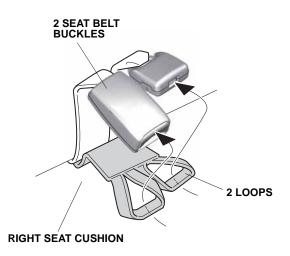


QC91313AK


17. Install the right seat cushion cover over the right seat cushion.

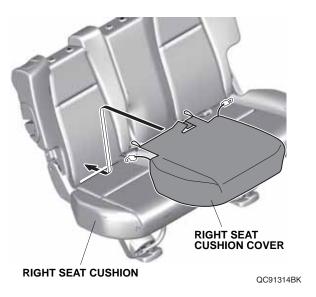

18. Secure the seat belt buckles in the two loops.

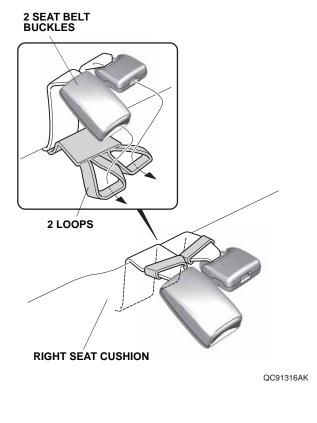

19. Lift up the right seat cushion. Secure the fasteners on the right seat cushion cover as shown.

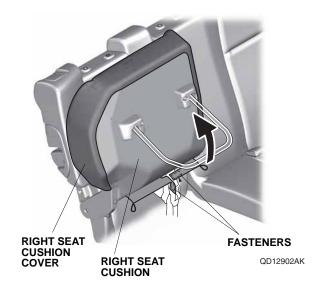

20. Secure the right seat cushion cover to the right seat cushion with two hooks and two loops, and lower the right seat cushion.



21. Install the headrests.