



GENUINE ACCESSORIES

INSTALLATION INSTRUCTIONS

PART NUMBER:
0000-8F-L26


INSTALLATION KIT,
MOONROOF

APPLICABLE MODELS:
2013 > MAZDA5
MOONROOF


PACKAGE CONTENTS




TRIM RING
0000-8F-L50

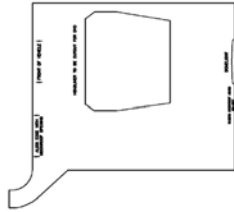


CUTTING TEMPLATE

 

INSTALLATION
MANUAL

 


INTERFACE RELAY
0000-8F-L54

 

DIODE HARNESS
0000-8F-L56



 T-HARNESS
0000-8F-L28



DVD MOUNTING
BRACKET (TOP)



DVD MOUNTING
BRACKET (BOTTOM)



DOMELIGHT HARNESS
0000-8F-L12



POWER HARNESS 0000-8F-L13

TOOLS REQUIRED

- UTILITY KNIFE
- #2 PHILLIPS SCREWDRIVER
- MARKER
- FASTENER REMOVER
- POWERED SCREWDRIVER
- SMALL FLAT TIP SCREWDRIVER
- DIAGONAL CUTTERS
- RATCHET
- 8, 10, AND 14mm SOCKETS
- PLIERS
- FIBER STICK (QTY 2)
- TORQUE WRENCH
- SAFETY GLASSES
- LOCTITE
- PROTECTIVE CLOTH
- MASKING TAPE
- RULER

HARDWARE KIT (MAZDA SERVICE P/N: 0000-8F-Z55A)



GROMMET
P/N: GJ6A-68-155A
(QTY 2)



CLIP
P/N: GJ6A-68-162
(QTY 2)



FOAM BLOCK
(QTY 2)



TIE WRAP (QTY 18)



CRIMP LOCK
(QTY 2)



M5 NUTS
(QTY 4)



SELF-DRILLING
SCREWS (QTY 2)

 


TRIM RING SCREW SET
(QTY 1)


SELF TAPPING SCREWS #4 X 5/16 (QTY 1)
 SELF TAPPING SCREWS #4 X 7/16 (QTY 3)
 SCREWS ISO 3 X 8MM (QTY 5)



DVD ASSEMBLY MOUNTING
M5 x 20mm SCREWS
(QTY 4)



FOAM TAPE STRIPS
(QTY 18)

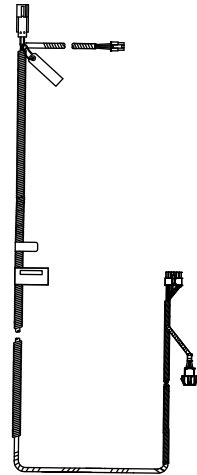

DVD MAIN HARNESS 0000-8F-L52

NOTE: ILLUSTRATIONS ARE GENERIC AND MAY NOT LOOK EXACTLY LIKE THE ACTUAL PARTS

0

BEFORE INSTALLATION

1. ACQUIRE 0000-8F-Z70 MAIN KIT (required with installation kit).
2. SET PARKING BRAKE.
3. CLEAN HANDS & TOOLS.
4. RECORD RADIO & SATELLITE PRESETS. (Refer to table in Section 13)
5. DISCONNECT NEGATIVE BATTERY CABLE.

1 HEADLINER PREPARATION

- 1.) ALIGN THE TEMPLATE (1) BETWEEN THE MOONROOF OPENING (2) AND THE DOME LIGHT AND TAPE IN PLACE. (SEE FIGURE 1)
- 2.) USING A MARKER, CAREFULLY TRACE THE DVD CUTOUT AREA (3) ON THE HEADLINER. REMOVE THE TAPE AND TEMPLATE (1). (SEE FIGURE 1)

CAUTION:

- BEFORE PROCEEDING WITH THE FOLLOWING STEP MAKE SURE THE MOONROOF SUNSHADE IS CLOSED.

- 3.) USING A SHARP UTILITY KNIFE, CAREFULLY CUT THE HEADLINER ALONG THE LINES TRACED ON THE HEADLINER (1) AND REMOVE THE CUTOUT MATERIAL. (SEE FIGURE 2)

NOTE:

AFTER REMOVING THE HEADLINER CUTOUT, MAKE SURE TO REMOVE ANY MATERIAL ABOVE THE HEADLINER ON EITHER SIDE OF THE CUTOUT.

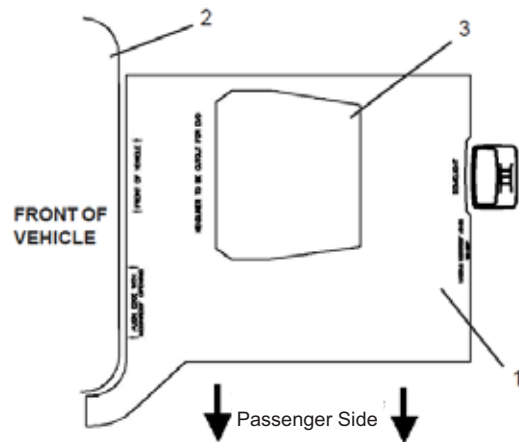


FIGURE 1

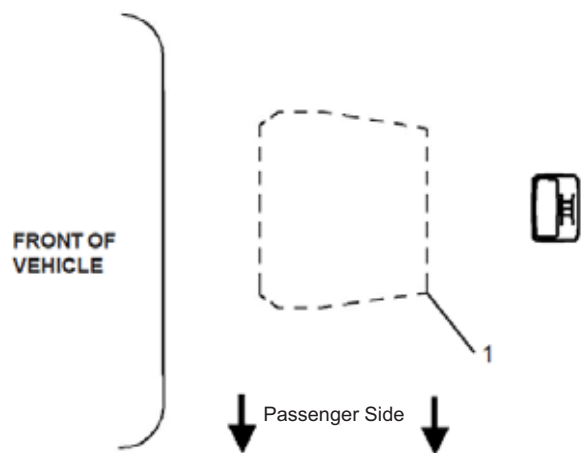


FIGURE 2

2 REMOVE VEHICLE COMPONENTS

SIDE WALL REMOVAL, DRIVER SIDE

- 1.) REMOVE THE FASTENER A. (SEE FIGURE 3)

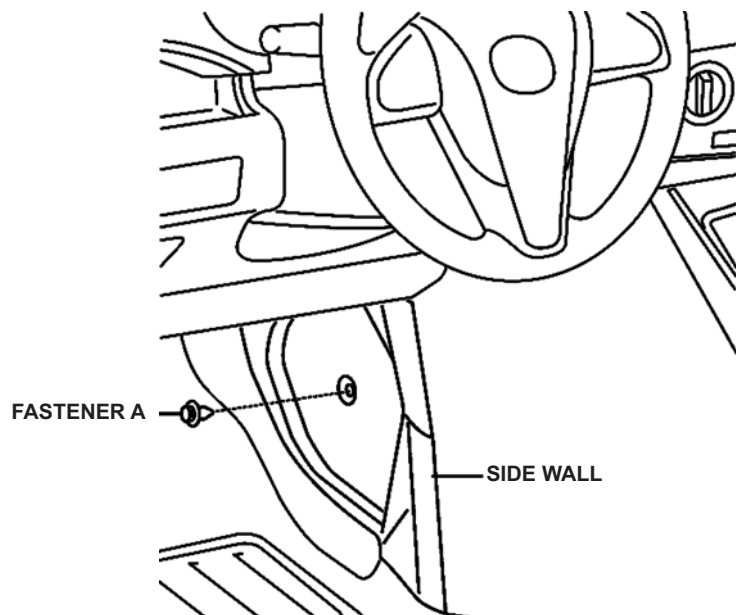


FIGURE 3

2

REMOVE VEHICLE COMPONENTS (CONTINUED)

SIDE WALL REMOVAL, DRIVER SIDE (CONTINUED)

- 2.) PULL OUT THE SIDE WALL IN THE DIRECTION OF THE ARROW (1) THEN REMOVE THE CLIPS B AND HOOK C. (SEE FIGURE 4)

CAUTION:

- WHEN REMOVING THE CLIPS A AND HOOK B, BE CAREFUL NOT TO DAMAGE THE GUIDE D.

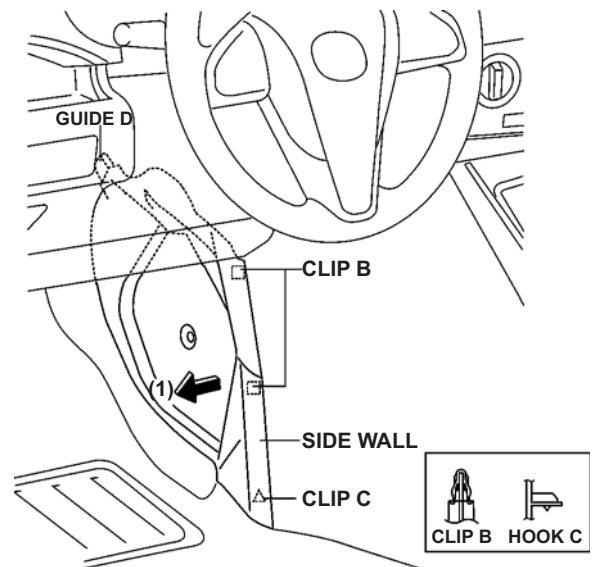


FIGURE 4

- 3.) PULL THE SIDE WALL IN THE DIRECTION OF THE ARROW (2) AND THEN REMOVE IT WHILE DETACHING THE GUIDE D. (SEE FIGURE 5)

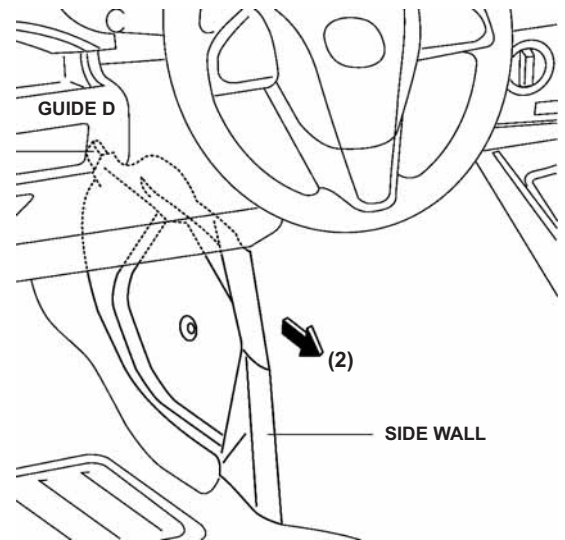


FIGURE 5

SIDE WALL REMOVAL, PASSENGER SIDE

- 1.) PULL OUT THE SIDE WALL IN THE DIRECTION OF THE ARROW (1) THEN REMOVE THE CLIPS A AND HOOK B. (SEE FIGURE 6)

CAUTION:

- WHEN REMOVING THE CLIPS B AND HOOK C, BE CAREFUL NOT TO DAMAGE THE GUIDE C.

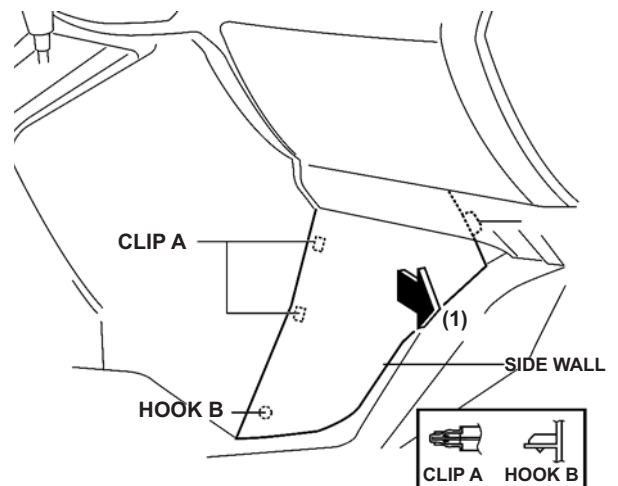


FIGURE 6

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

SIDE WALL REMOVAL, PASSENGER SIDE (CONTINUED)

- 2.) PULL THE SIDE WALL IN THE DIRECTION OF THE ARROW (2) THEN REMOVE IT DETACHING THE GUIDE C. (SEE FIGURE 7)

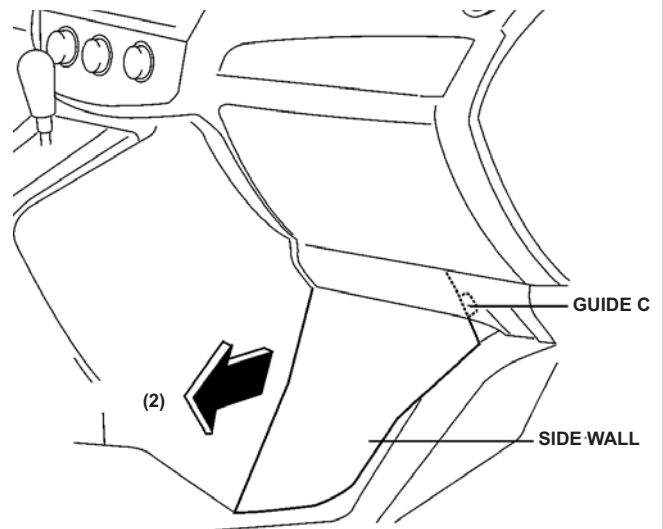


FIGURE 7

CENTER CONSOLE BOX REMOVAL

- 1.) PULL OUT THE CENTER CONSOLE IN THE DIRECTION OF THE ARROWS (1), (2) AND (3) WHILE DETACHING HOOK A, PIN B AND CLIP C. (SEE FIGURE 8)

NOTE:

DISCONNECT THE SEAT SWITCH CONNECTOR IN VEHICLES EQUIPPED WITH A SEAT WARMER.

- 2.) REMOVE THE CENTER CONSOLE BOX. (SEE FIGURE 8)

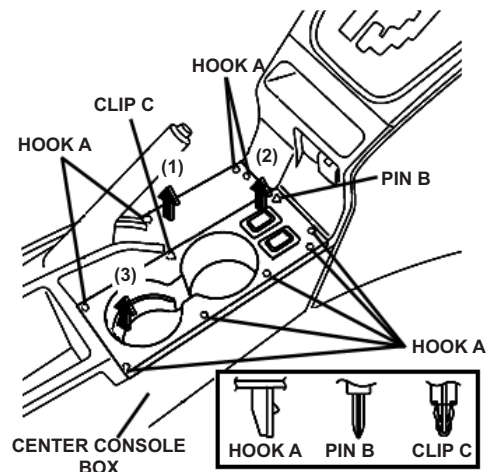


FIGURE 8

CONSOLE PANEL REMOVAL

- 1.) PULL THE CONSOLE PANEL IN THE DIRECTION OF THE ARROWS (1), (2) AND (3) WHILE DETACHING CLIPS A. (SEE FIGURE 9)
- 2.) DISCONNECT THE CONNECTORS. (SEE FIGURE 9)

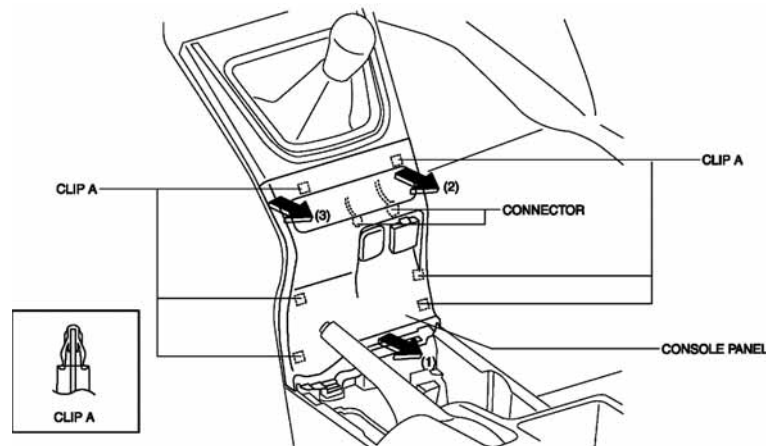


FIGURE 9

CENTER CONSOLE REMOVAL

- 1.) REMOVE THE SERVICE HOLE COVERS THEN REMOVE SCREWS A. (SEE FIGURE 10)

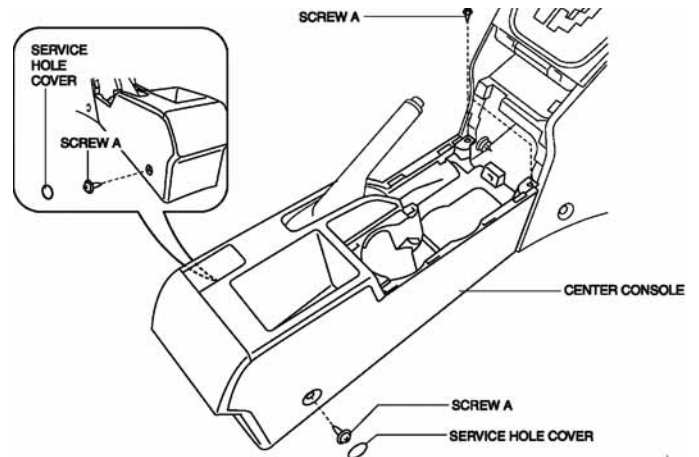


FIGURE 10

- 2.) PULL THE CENTER CONSOLE IN THE DIRECTION OF THE ARROWS (1) AND (2) WHILE REMOVING HOOKS B AND PINS C. (SEE FIGURE 11)
- 3.) DISCONNECT THE REAR FAN SWITCH CONNECTOR.
- 4.) REMOVE THE CENTER CONSOLE.

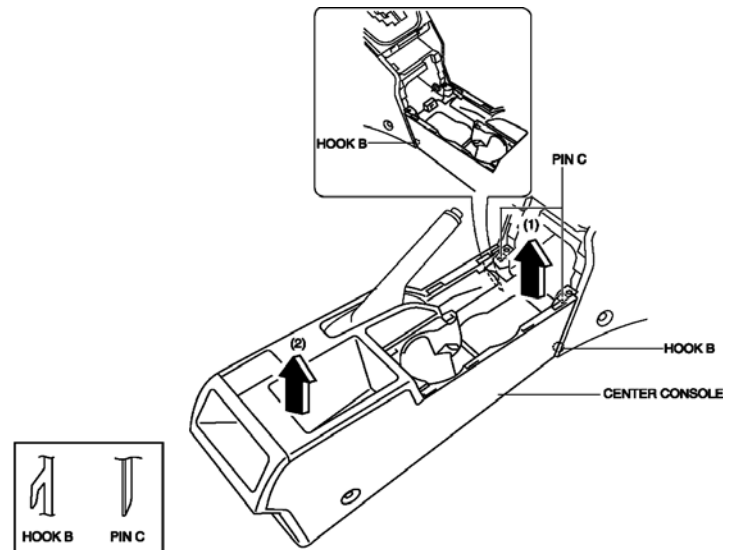


FIGURE 11

SHIFT PANEL (ATX) REMOVAL

- 1.) PLACE THE SELECTOR LEVER IN THE NEUTRAL POSITION.
- 2.) PULL THE SHIFT PANEL IN THE DIRECTION OF THE ARROWS (1), (2), (3) AND (4) WHILE REMOVING THE CLIPS. (SEE FIGURE 12)
- 3.) REMOVE THE SHIFT PANEL.

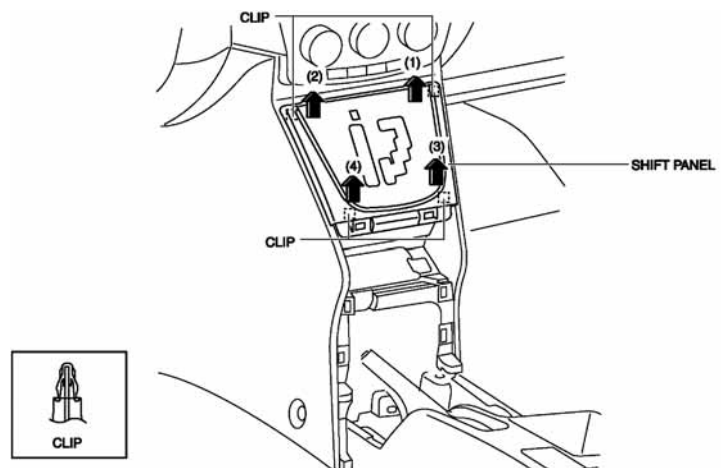


FIGURE 12

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

SHIFT PANEL (MTX) REMOVAL

- 1.) PLACE THE SHIFT LEVER IN THE NEUTRAL POSITION.
- 2.) PULL THE SHIFT PANEL IN THE DIRECTION OF THE ARROWS (1), (2), (3) AND (4) WHILE REMOVING THE CLIPS. (SEE FIGURE 13)
- 3.) REMOVE THE SHIFT PANEL.

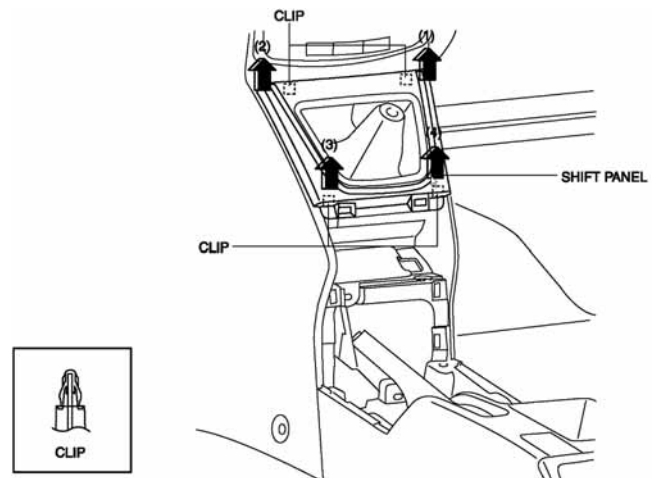


FIGURE 13

FRONT CONSOLE REMOVAL

CAUTION:

- WHEN REMOVING THE FRONT CONSOLE, ALWAYS MAKE SURE THAT IT DOES NOT INTERFERE WITH THE HEATER CONTROL UNIT. AFFIX PROTECTIVE TAPE ALONG THE SHADED AREA SHOWN IN THE FIGURE TO PREVENT SCRATCHES AND DAMAGE.

- 1.) REMOVE THE SERVICE HOLE COVERS, THEN REMOVE SCREWS A. (SEE FIGURE 14)

NOTE:

- FOR ATX VEHICLES REMOVE THE TWO ADDITIONAL SCREWS A IN THE FRONT OF THE CONSOLE.

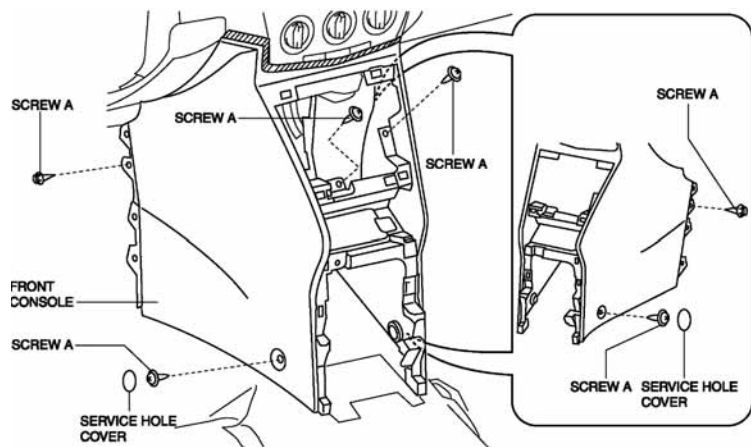


FIGURE 14

- 2.) PULL THE FRONT CONSOLE IN THE IN THE DIRECTION OF THE ARROWS (1), (2), (3) AND (4). REMOVE THE CONSOLE WHILE DETACHING CLIP B. (SEE FIGURE 15)

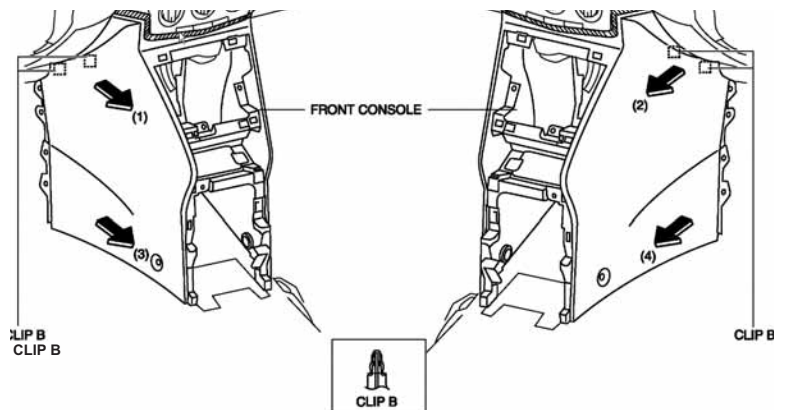


FIGURE 15

2

REMOVE VEHICLE COMPONENTS (CONTINUED)

SWITCH PANEL REMOVAL

1. PULL THE SWITCH PANEL OUTWARD AND DISENGAGE CLIPS A AND PINS B IN DIRECTION AND ORDER SHOWN (1), (2), (3). (SEE FIGURE 16)
2. DISCONNECT THE HAZARD SWITCH CONNECTOR AND BLUETOOTH CONNECTOR (IF EQUIPPED). (SEE FIGURE 16)
3. REMOVE SWITCH PANEL. (SEE FIGURE 16)

CAUTION:

- WHEN PULLING OUT THE SWITCH PANEL, BE CAREFUL NOT TO DAMAGE CLIPS A, AND PINS B.

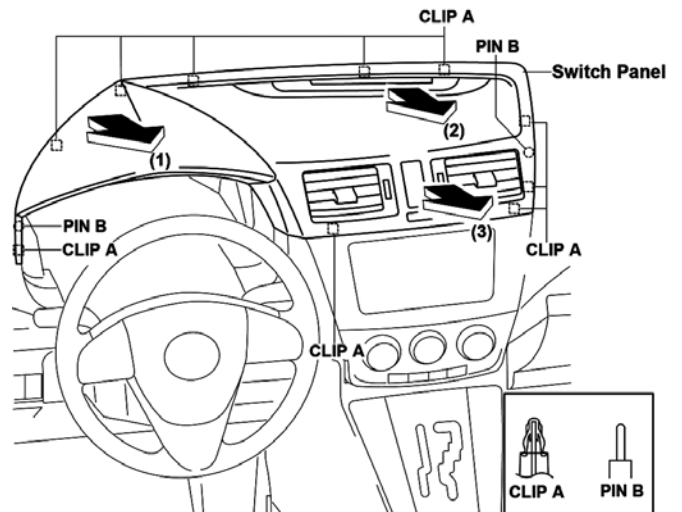


FIGURE 16

CLIMATE CONTROL UNIT REMOVAL

1. REMOVE THE TWO SCREWS. (SEE FIGURE 17)
2. RELEASE THE LEFT AND RIGHT TABS
3. DISCONNECT THE TWO CLIMATE CONTROL UNIT CONNECTORS. (SEE FIGURE 17)
4. REMOVE THE CLIMATE CONTROL UNIT. (SEE FIGURE 17)

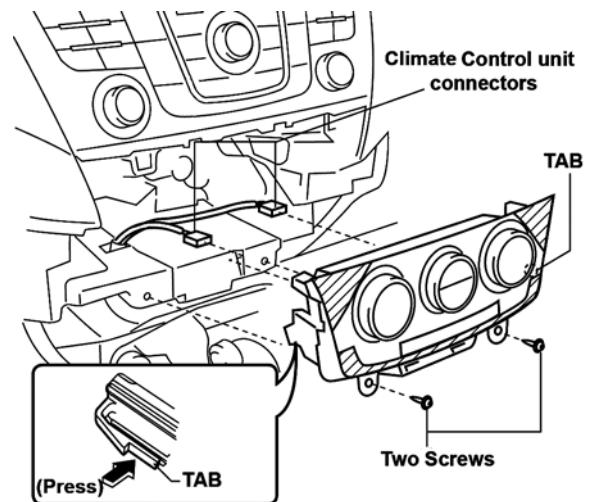


FIGURE 17

AUDIO UNIT REMOVAL

1. REMOVE THE THREE SCREWS AND ONE BOLT. (SEE FIGURE 18)
2. PULL THE AUDIO UNIT OUTWARD AND DISENGAGE CLIPS A. (SEE FIGURE 18)
3. DISCONNECT THE CONNECTORS AND REMOVE THE AUDIO UNIT. (SEE FIGURE 18)

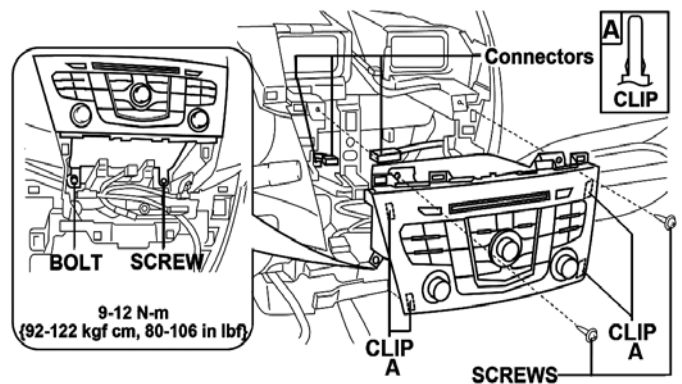


FIGURE 18

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

SIDE PANEL REMOVAL

- 1.) PULL THE SIDE PANEL IN THE DIRECTION OF THE ARROW (1) AND THEN REMOVE THE HOOKS A. (SEE FIGURE 19)

CAUTION:

- WHEN PULLING OUT THE SIDE PANEL, BE CAREFUL NOT TO DAMAGE TABS B.

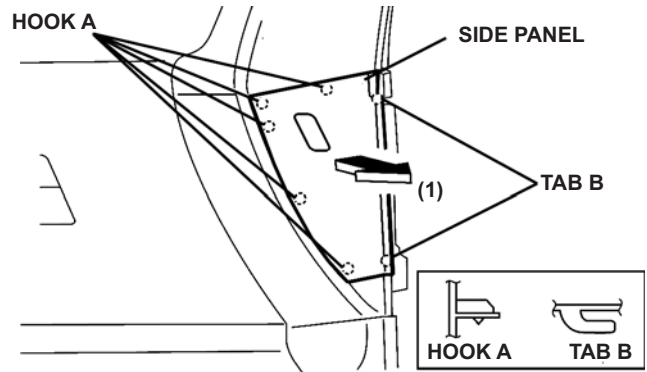


FIGURE 19

- 2.) PULL THE SIDE PANEL IN THE DIRECTION OF ARROW (2) WHILE DETACHING TABS B. (SEE FIGURE 20)
- 3.) REMOVE THE SIDE PANEL.

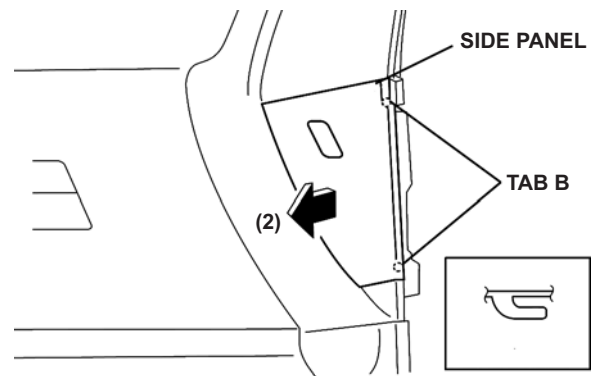


FIGURE 20

SCUFF PLATES (INNER), DRIVER AND PASSENGER SIDE

- 1.) PULL THE FRONT SCUFF PLATE UPWARD WHILE DETACHING TABS A, DETACH CLIPS B, PINS C AND D FROM THE BODY, AND THEN REMOVE THE INNER FRONT SCUFF PLATE. (SEE FIGURE 21)

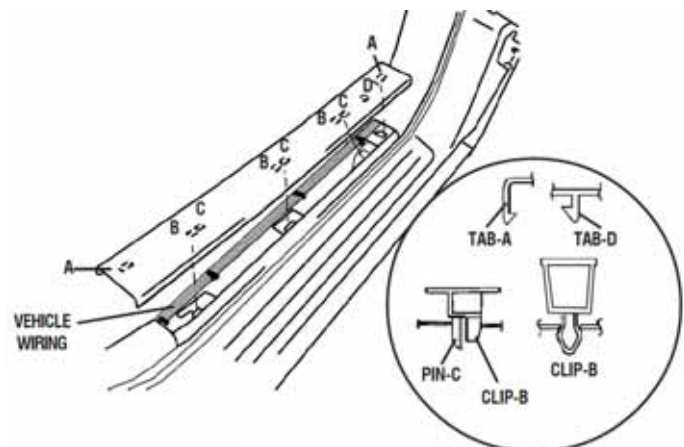


FIGURE 21

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

FRONT PASSENGER SIDE TRIM

- 1.) REMOVE THE FASTENER. (SEE FIGURE 22)
- 2.) PULL THE FRONT SIDE TRIM IN THE DIRECTION SHOWN BY THE ARROW, THEN DETACH CLIP A AND LOCATOR PIN B. (SEE FIGURE 22)
- 3.) REMOVE THE FRONT PASSENGER SIDE TRIM. (SEE FIGURE 22)

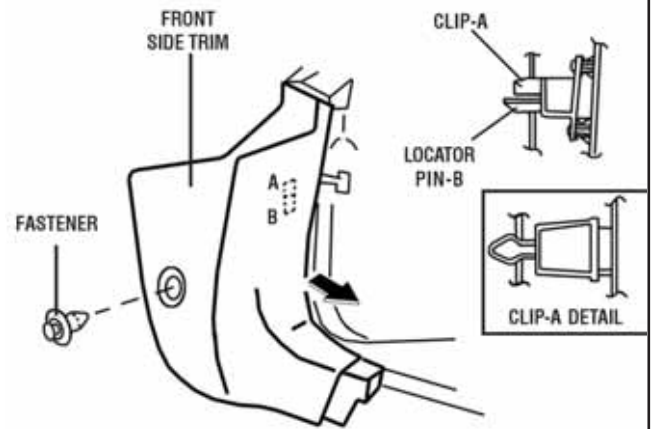


FIGURE 22

GLOVE COMPARTMENT LID

- 1.) PRESS THE STAY DAMPER IN THE DIRECTION SHOWN BY THE ARROW AND DETACH IT FROM THE GLOVE COMPARTMENT LID. (SEE FIGURE 23)
- 2.) WHILE PRESSING THE STOPPERS IN THE DIRECTION SHOWN BY THE ARROWS, DETACH THE STOPPERS FROM THE GLOVE COMPARTMENT LID. (SEE FIGURE 23)

CAUTION:

- WHEN RE-INSTALLING THE FRONT PASSENGER SIDE SCUFF PLATE, MAKE SURE THAT THE WIRING HARNESS IS NOT PINCHED. IF THE WIRING HARNESS IS PINCHED, IT MAY CAUSE MALFUNCTIONS.

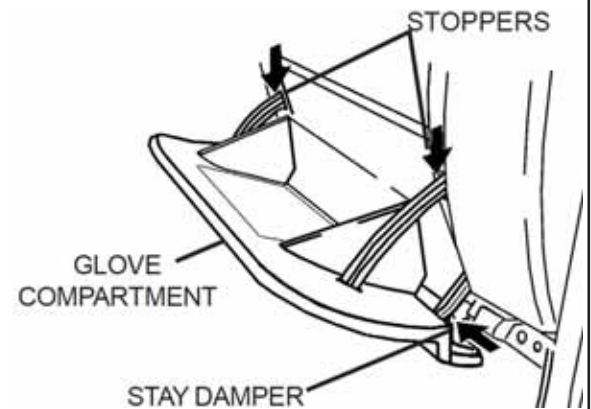


FIGURE 23

- 3.) PULL THE GLOVE COMPARTMENT LID OUTWARD WHILE LOWERING IT TO THE POSITION AS SHOWN THEN DETACH THE CLIP AND REMOVE THE GLOVE COMPARTMENT LID. (SEE FIGURE 24)

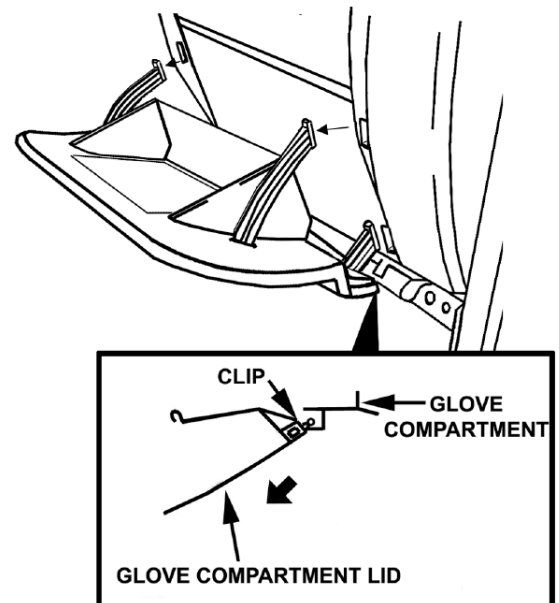


FIGURE 24

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

GLOVE COMPARTMENT LID (CONTINUED)

- 4.) REMOVE THE MOUNTING SCREWS (A) (5 LOCATIONS). (SEE FIGURE 25)
- 5.) PULL THE GLOVE COMPARTMENT OUTWARD AND DETACH CLIPS (B) (5 LOCATIONS). (SEE FIGURE 25)
- 6.) DISCONNECT THE GLOVE COMPARTMENT LIGHT BULB. (VEHICLES WITH GLOVE COMPARTMENT LIGHT BULB ONLY)
- 7.) REMOVE THE GLOVE COMPARTMENT.

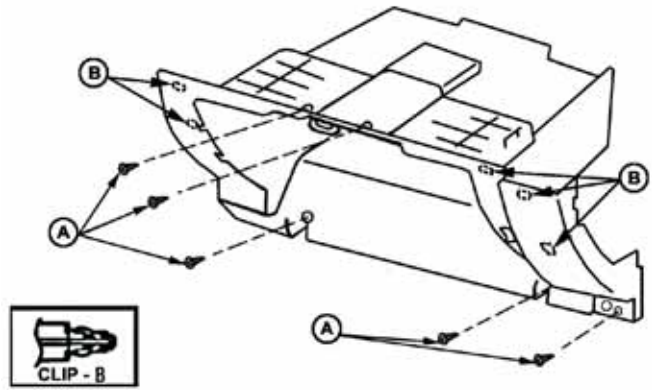


FIGURE 25

NOTE:

BE EXTREMELY CAREFUL NOT TO DAMAGE THE HEADLINER WHILE PERFORMING THE PROCEDURES BELOW.

CAUTION:

- BEFORE PROCEEDING WITH THE FOLLOWING STEPS, SPREAD A PROTECTIVE CLOTH OVER THE SEAT AND FLOOR AREA BELOW THE SEAMING WELT.

A-PILLAR TRIM, DRIVER AND PASSENGER SIDE

- 1.) PARTIALLY REMOVE THE WEATHER STRIP NEAR THE A-PILLAR TRIM PANEL.
- 2.) USING A FIBER STICK DISENGAGE THE 3 RETAINING TABS. (SEE FIGURE 26)

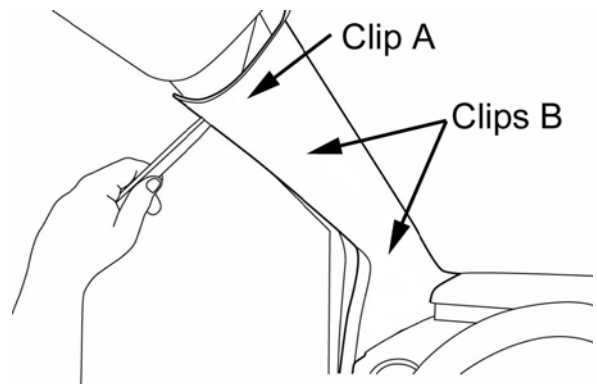


FIGURE 26

- 3.) PULL THE A-PILLAR TRIM IN THE DIRECTION OF THE ARROW (2) AND REMOVE THE A-PILLAR TRIM WHILE DETACHING TAB C. (SEE FIGURE 27)

CAUTION:

- WHILE PULLING OUT THE A-PILLAR TRIM BE CAREFUL NOT TO DAMAGE TAB C.

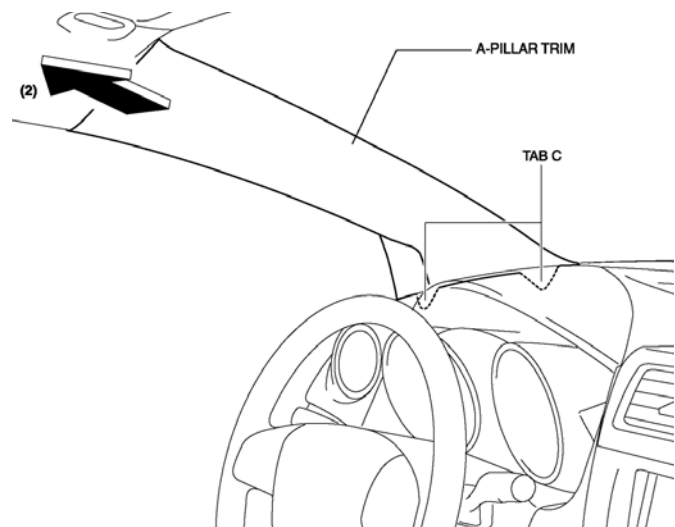


FIGURE 27

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

A-PILLAR TRIM, DRIVER AND PASSENGER SIDE (CONTINUED)

- 3.) REMOVE THE A-PILLAR TRIM PANEL FROM THE VEHICLE.

NOTE:

CLIP "A" AND GROMMET "B" MUST BE REPLACED DURING RE-ASSEMBLY, USING THE SUPPLIED "A" PILLAR TRIM CLIP AND GROMMET. IN SOME INSTANCES, CLIP "A" MAY BECOME UNATTACHED FROM THE A-PILLAR TRIM PANEL. REMOVE THE CLIP FROM THE BODY STRUCTURE BY ROTATING COUNTER-CLOCKWISE 45° WHILE PULLING OUTWARD. REMOVE THE GROMMET BY INSERTING A FLAT HEAD SCREW DRIVER BETWEEN THE BODY AND THE GROMMET. DISENGAGE THE TABS AND REMOVE THE GROMMET. (SEE FIGURE 28)

CLIP P/N: GJ6A-68-162

GROMMET P/N: GJ6A-68-155A

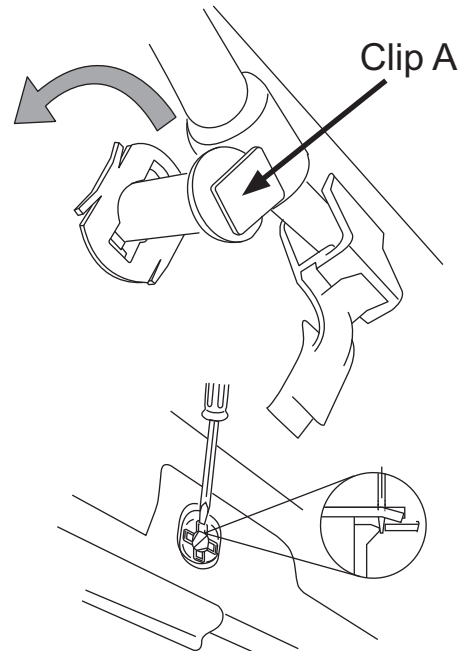


FIGURE 28

SUNVISOR REMOVAL, DRIVER AND PASSENGER SIDE

- 1.) REMOVE THE SCREW. (SEE FIGURE 29)
- 2.) UNHOOK AND REMOVE THE SUNVISOR. (SEE FIGURE 29)

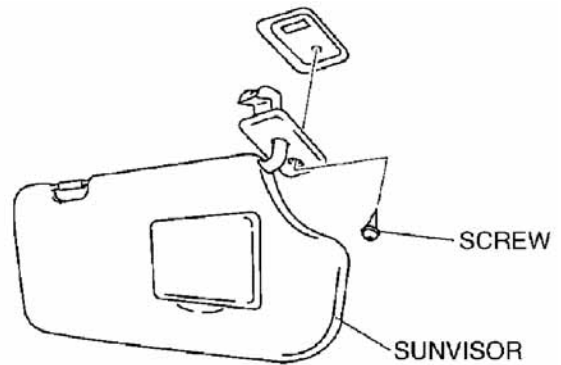


FIGURE 29

- 3.) PRESS THE SUNVISOR CENTER ADAPTER TABS AS SHOWN USING TWO FIBER STICKS, AND REMOVE THE CENTER ADAPTER. (SEE FIGURE 30)


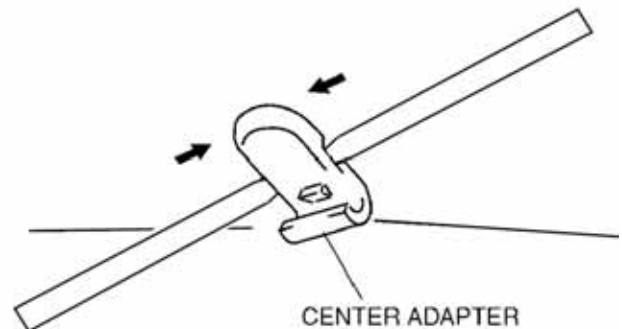


FIGURE 30

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

FRONT MAP LIGHT

- 1.) INSERT A FIBER STICK INTO THE GAP BETWEEN THE HEADLINER AND THE MAP LIGHT.
(SEE FIGURE 31)
- 2.) PRESS THE TABS AND REMOVE THE MAP LIGHT.
(SEE FIGURE 31)

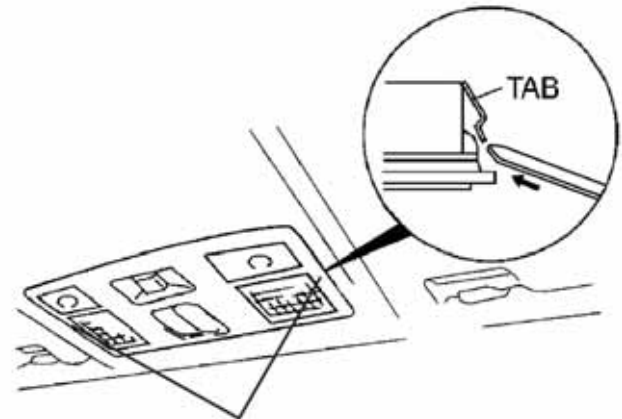

NOTE: TABS ARE LOCATED CENTER OF BOTH SIDES OF THE MAP LIGHT

FIGURE 31

- 3.) DISCONNECT THE TWO MAP LIGHT CONNECTORS.
(SEE FIGURE 32)

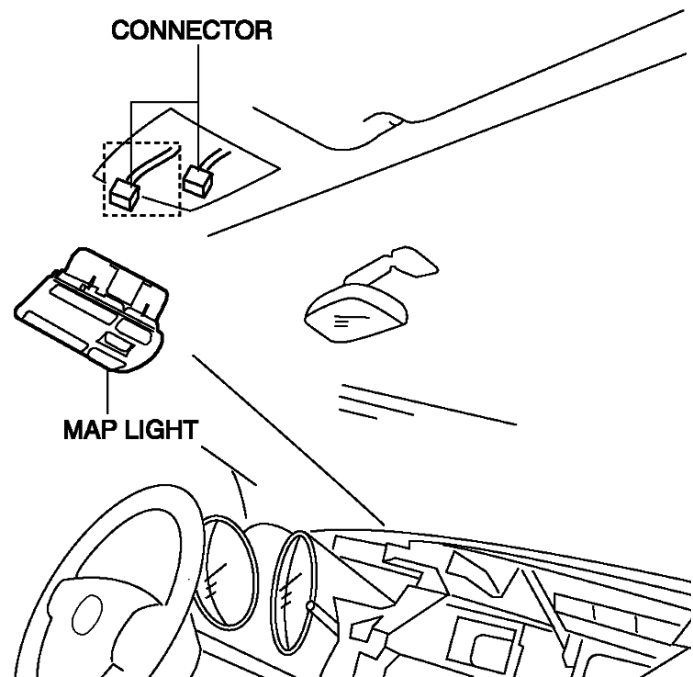


FIGURE 32

FRONT AND REAR ASSIST HANDLES, DRIVER AND PASSENGER SIDE

- 1.) INSERT A SMALL FLAT TIP SCREWDRIVER INTO THE ASSIST HANDLE NOTCH AND GENTLY PRY TO REMOVE THE TWO ASSIST HANDLE COVERS.
(SEE FIGURE 33)

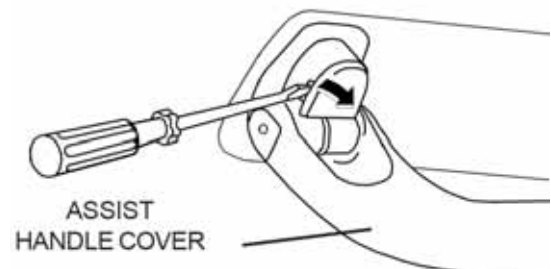


FIGURE 33

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

FRONT AND REAR ASSIST HANDLES, DRIVER AND PASSENGER SIDE (CONTINUED)

- 2.) REMOVE THE ASSIST HANDLE BY PULLING OUTWARD. (SEE FIGURE 34)

WARNING:

THE SIDE AIR BAG SENSOR IS ATTACHED TO THE LOWER PART OF THE B-PILLAR. WHEN WORKING AROUND THE B-PILLAR, AVOID EXCESSIVE IMPACT TO THE LOWER PART OF THE B-PILLAR.

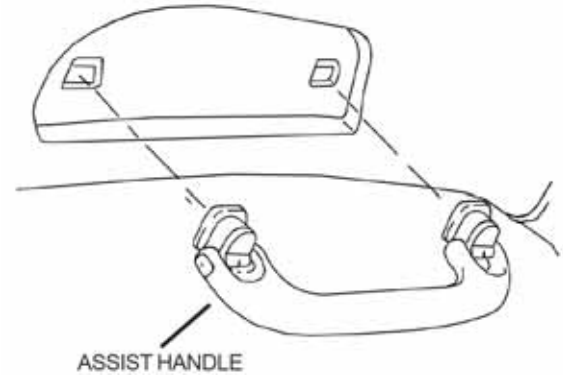


FIGURE 34

REAR DOOR SCUFF PLATES, DRIVER AND PASSENGER SIDE

- 1.) DETACH TABS A WHILE PULLING THE REAR SCUFF PLATE IN THE DIRECTION OF ARROW (1). DETACH PINS B, CLIPS C, PINS D WHILE PULLING IN THE DIRECTION OF ARROW (2). (SEE FIGURE 35)

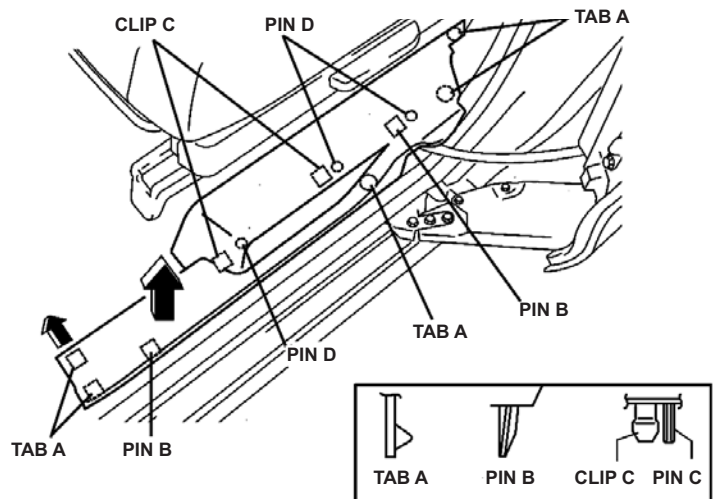


FIGURE 35

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

CAUTION:

BEFORE PROCEEDING WITH THE FOLLOWING STEPS, SPREAD A PROTECTIVE CLOTH OVER THE SEAT AND FLOOR AREA.

B-PILLAR LOWER TRIMS, DRIVER AND PASSENGER SIDE

- 1.) PARTIALLY PEEL BACK THE SEAMING WELT.
- 2.) PULL THE B-PILLAR LOWER TRIM IN THE DIRECTION OF ARROW (1) AND (2). DETACH TABS A, CLIPS B AND PINS C. (SEE FIGURE 36)
- 3.) REMOVE THE B-PILLAR LOWER TRIM. (SEE FIGURE 36)

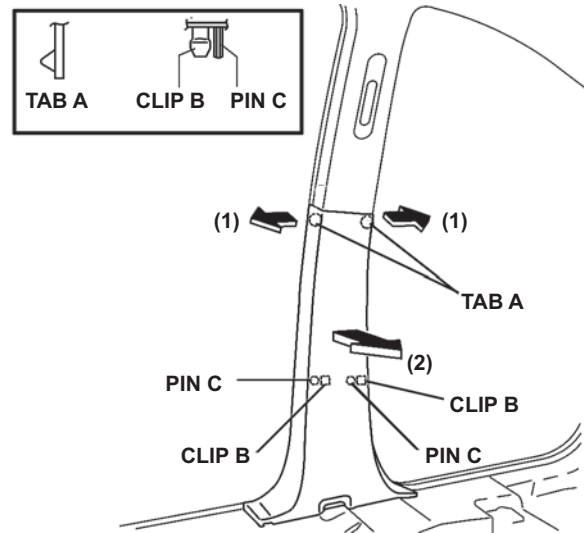


FIGURE 36

B-PILLAR SEAT BELT ADJUSTER ANCHORS, DRIVER AND PASSENGER SIDE

CAUTION:

THE ELR (EMERGENCY LOCKING RETRACTOR) HAS A SPRING THAT WILL UNWIND IF THE RETRACTOR COVER IS REMOVED. THE SPRING CANNOT BE REWOUND BY HAND. IF THIS OCCURS, THE ELR WILL NOT WORK PROPERLY. THEREFORE, DO NOT DISASSEMBLE THE RETRACTOR.

- 1.) USE A FIBER STICK TO REMOVE THE BOLT COVER. THERE ARE THREE TABS SECURING THE BOLT COVER IN PLACE. (SEE FIGURE 37 AND SEC. A-A)
- 2.) REMOVE THE BOLT THEN REMOVE THE FRONT SEAT BELT FROM B-PILLAR. (SEE FIGURE 37)

NOTE: WHEN REINSTALLING THE BOLT REFER TO TORQUE VALUES:
 $38.3 - 78.4 \text{ N-M}$ ($3.9 - 8 \text{ KG-M}$ $28.3 - 57.8 \text{ FT-LBS}$)

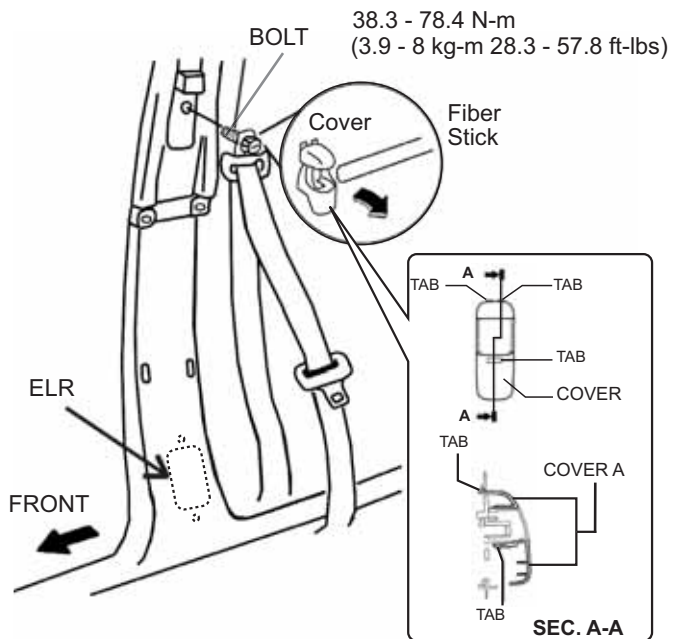


FIGURE 37

CAUTION:

BEFORE PROCEEDING WITH THE FOLLOWING STEPS, SPREAD A PROTECTIVE CLOTH OVER THE SEAT AND FLOOR AREA.

B-PILLAR UPPER TRIM, DRIVER AND PASSENGER SIDE

- 1.) PARTIALLY PEEL BACK THE SEAMING WELT.
- 2.) PULL THE B-PILLAR UPPER TRIM OUTWARD AND DETACH CLIPS A AND LOCATOR PIN B. (SEE FIGURE 38)
- 3.) DETACH THE TAB FROM THE BODY AND REMOVE THE B-PILLAR UPPER TRIM. (SEE FIGURE 38)

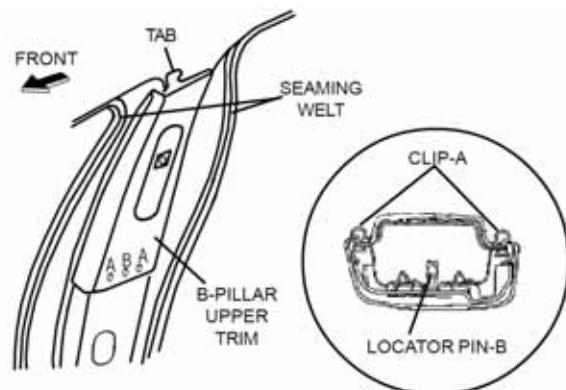


FIGURE 38

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

CARGO SUB-COMPARTMENT REMOVAL

- 1.) SLIGHTLY BEND BACK THE REAR PACKAGE TRAY LID. (SEE FIGURE 39)
- 2.) PULL THE SUB-TRUNK IN THE DIRECTION OF THE ARROW WHILE DETACHING THE CLIPS. (SEE FIGURE 39)
- 3.) REMOVE THE SUB-TRUNK.

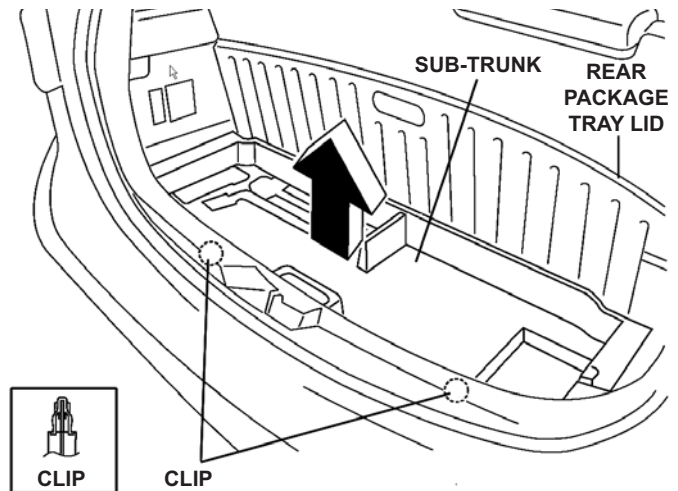


FIGURE 39

THIRD-ROW SEAT REMOVAL

- 1.) REMOVE THE THREE FASTENERS. (SEE FIGURE 40)
- 2.) REMOVE THE THREE COVERS. (SEE FIGURE 40)
- 3.) REMOVE THE FIVE 14 MM BOLTS. (SEE FIGURE 40)

NOTE:

WHEN REINSTALLING THE BOLT REFER TO TORQUE VALUES:
36.3 – 54.0 N-M (3.71 – 5.51KG-M 26.8 – 39.8 FT-LBS)

- 4.) REMOVE THE THIRD-ROW SEAT. (SEE FIGURE 40)

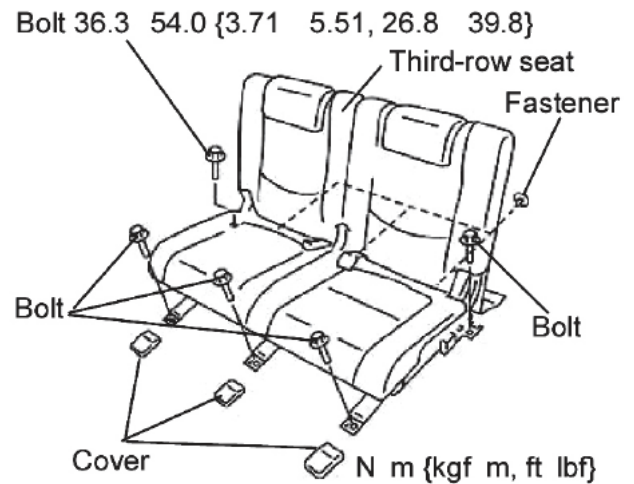


FIGURE 40

TRUNK END TRIM REMOVAL

- 1.) REMOVE THE TWO FASTENERS A. (SEE FIGURE 41)

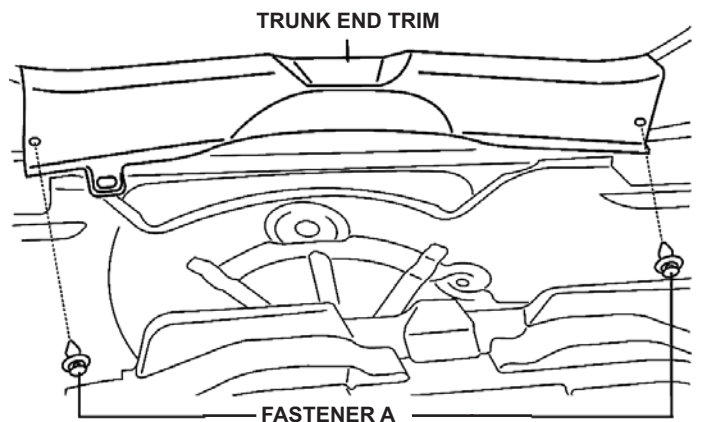


FIGURE 41

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

TRUNK END TRIM REMOVAL (CONTINUED)

- 2.) PULL IN THE DIRECTION OF ARROWS (1), (2), AND (3) AND REMOVE PINS B, CLIPS C, CLIP D AND PINS E. (SEE FIGURE 42)

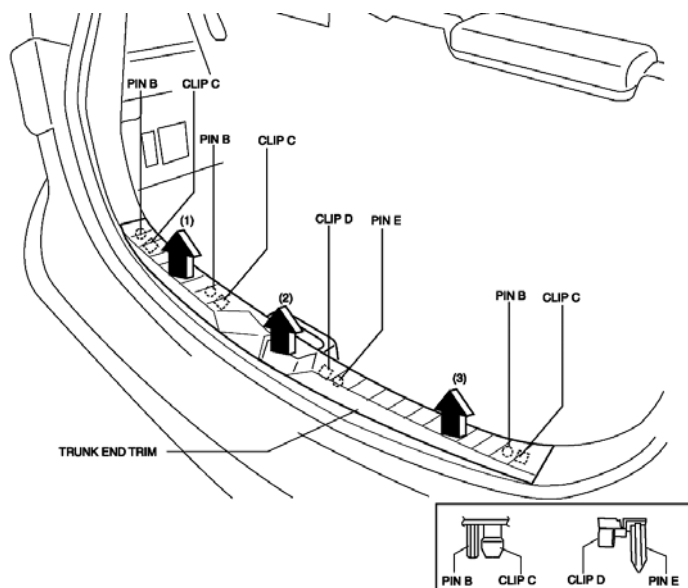


FIGURE 42

REAR HEADER TRIM REMOVAL

- 1.) PULL THE REAR HEADER TRIM AND DETACH CLIPS A AND B, PIN C, AND TABS D. (SEE FIGURE 43)
- 2.) REMOVE THE REAR HEADER TRIM. (SEE FIGURE 43)

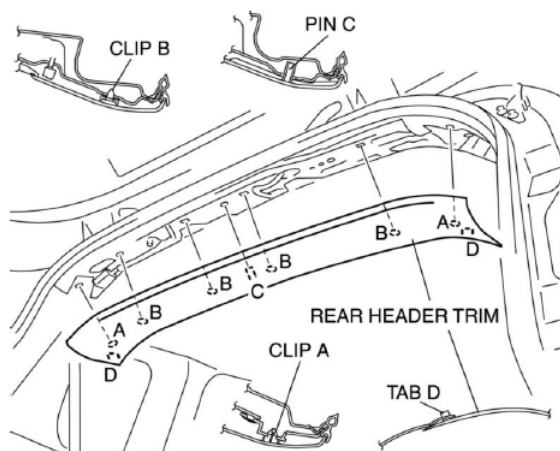


FIGURE 43

TRUNK SIDE TRIM REMOVAL

- 1.) REMOVE SCREWS A. (SEE FIGURE 44)
- 2.) REMOVE THE SERVICE HOLE COVER, THEN REMOVE SCREW B. (SEE FIGURE 44)

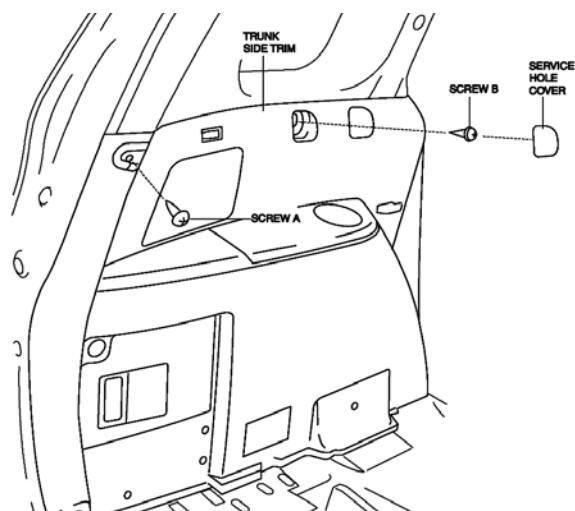


FIGURE 44

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

TRUNK SIDE TRIM REMOVAL (CONTINUED)

- 3.) REMOVE BOLT C THEN REMOVE CARGO HOOK. (SEE FIGURE 45)
- 4.) HOLD C-PILLAR TRIM WITH YOUR HANDS AND PULL THE TRUNK SIDE TRIM IN THE DIRECTION OF ARROWS (1), (2), (3), AND (4). REMOVE HOOKS AND GUIDES B. (SEE FIGURE 45)

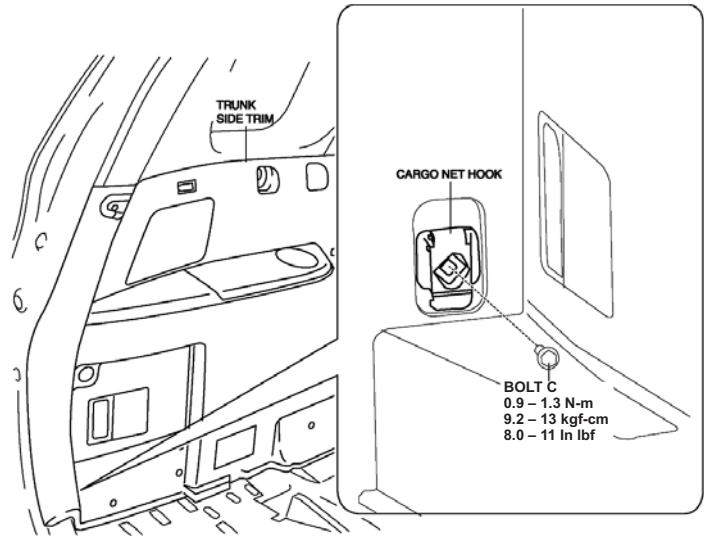


FIGURE 45

- 5.) PULL THE TRUNK SIDE TRIM IN THE DIRECTION OF ARROWS (1), (2), (3), AND (4). REMOVE CLIPS C AND PIN D. (SEE FIGURE 46)

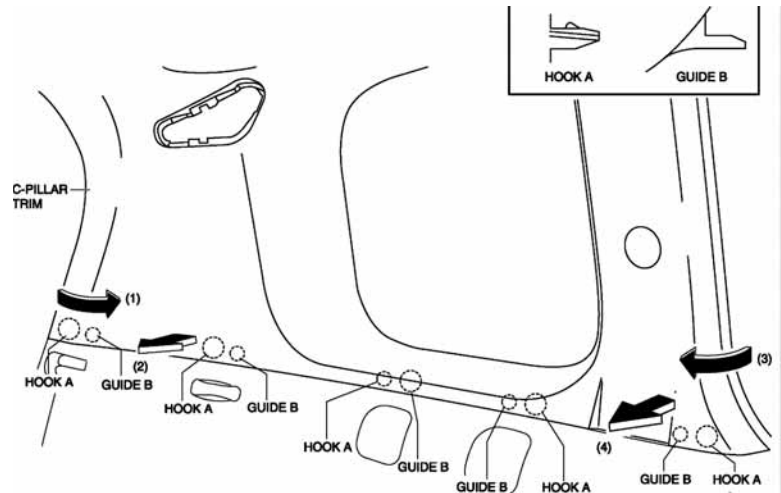


FIGURE 46

- 6.) PULL THE TRUNK SIDE TRIM IN THE DIRECTION OF THE ARROW. REMOVE CLIPS C AND PIN D. (SEE FIGURE 47)
- 7.) REMOVE TRUNK SIDE TRIM.

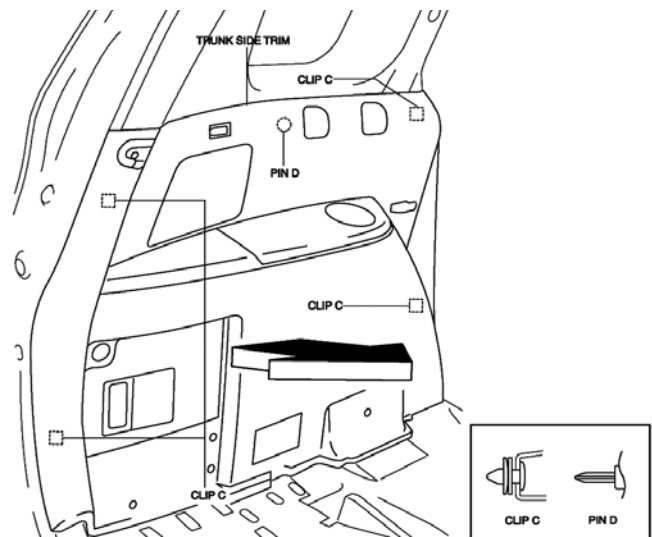


FIGURE 47

2 REMOVE VEHICLE COMPONENTS (CONTINUED)

C-PILLAR TRIM REMOVAL

- 1.) REMOVE FASTENERS A.
(SEE FIGURE 48)

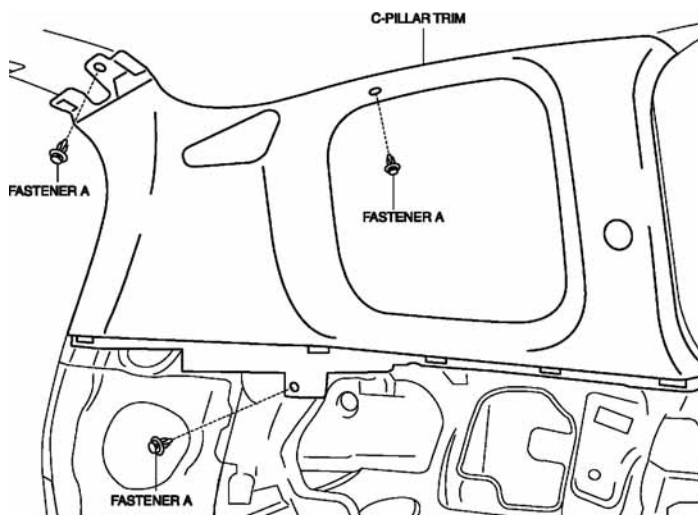


FIGURE 48

- 2.) PULL THE C-PILLAR TRIM IN THE DIRECTION OF ARROWS (1), AND (2). REMOVE C-PILLAR TRIM WHILE DETACHING CLIPS B AND PIN C. (SEE FIGURE 49)
- 3.) SLIDE THE C-PILLAR TRIM IN THE DIRECTION OF THE ARROW (3) AND REMOVE THE C-PILLAR TRIM FROM CLIP D. (SEE FIGURE 49)
- 4.) AFTER REMOVING THE C-PILLAR TRIM, REMOVE CLIPS D FROM THE BODY. (SEE FIGURE 49)

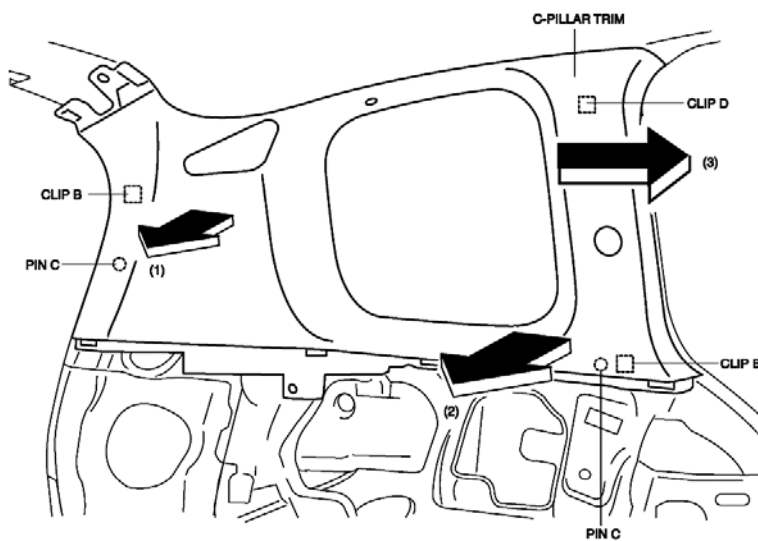
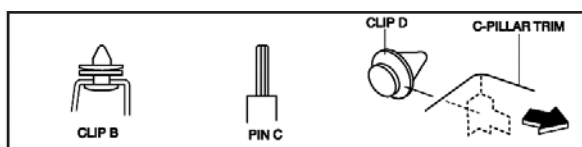


FIGURE 49

3 HEADLINER REMOVAL / INSTALLATION

MOONROOF TRIM

- 1.) REMOVE MOONROOF TRIM RING FROM HEADLINER.
(SEE FIGURE 50)
- 2.) LOOSEN THE FRONT AND REAR METAL BRACKETS
BY CAREFULLY PRYING BACK THE TABS.

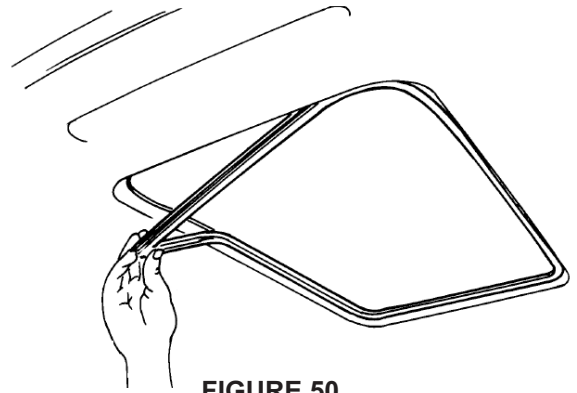


FIGURE 50

- 3.) DISCONNECT THE ANTENNA
FEEDER NUMBER 2.
(SEE FIGURE 51)
- 4.) DISCONNECT THE REAR
WASHER HOSE.
(SEE FIGURE 51)
- 5.) DISCONNECT THE CONNECTOR.
(SEE FIGURE 51)

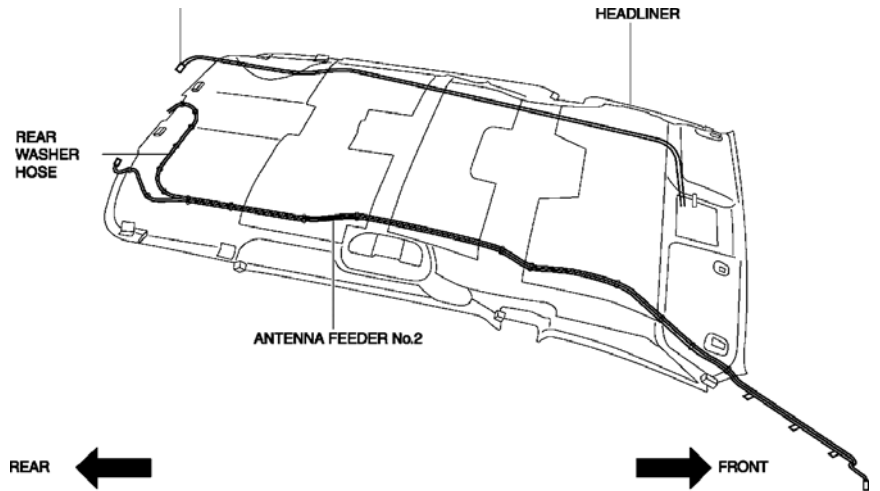


FIGURE 51

- 6.) REMOVE THE FASTENERS.
(SEE FIGURE 52)
- 7.) TAKE THE HEADLINER OUT FROM
THE OPENED LIFTGATE.

CAUTION:

ASSISTANCE IS ADVISED FOR THIS STEP. FAILURE TO USE CARE IN REMOVING THE HEADLINER COULD DAMAGE OR CREASE THE HEADLINER RESULTING IN A COSTLY REPAIR. USE EXTREME CARE WHILE HANDLING THE HEADLINER TO AVOID STAINING OR CREASING.

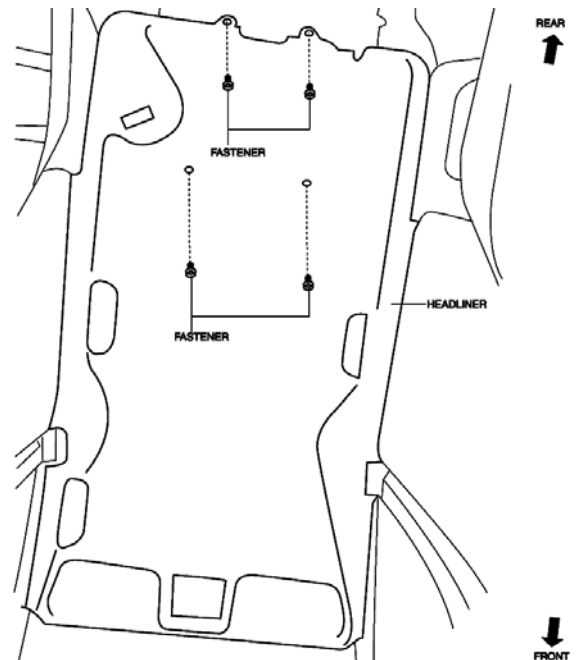


FIGURE 52

4 INSTALL THE DVD ASSEMBLY BRACKETS

- 1.) INSERT THE TWO TABS ON THE FORWARD SIDE OF THE TOP DVD MOUNTING BRACKET (1) INTO THE TWO HOLES (2) IN THE ROOF BOW ABOVE THE MOONROOF BRACKET AS SHOWN. (SEE FIGURE 53)

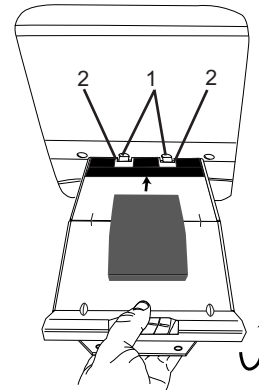


FIGURE 53

- 2.) WITH THE TOP DVD MOUNTING BRACKET TABS IN-PLACE, PUSH THE REAR SIDE OF THE BRACKET (1) UPWARD AND USE THE SUPPLIED TWO SELF-DRILLING SCREWS (2) TO SECURE THE BRACKET TO THE ROOF BOW (3). (SEE FIGURE 54)

NOTE:

THE USE OF A POWERED SCREWDRIVER WILL MAKE INSTALLATION EASIER.

NOTE:

TIGHTEN SELF DRILLING SCREWS TO 1.10 ± 0.10 N-m

CAUTION:

- OVER TIGHTENED SCREWS WILL CAUSE THREADS TO STRIP, DO NOT OVER TORQUE! IF OVER-TORQUED, THEN REPLACE SCREWS WITH #12, 1/2" PANHEAD PHILLIPS SCREWS. (NOT INCLUDED)

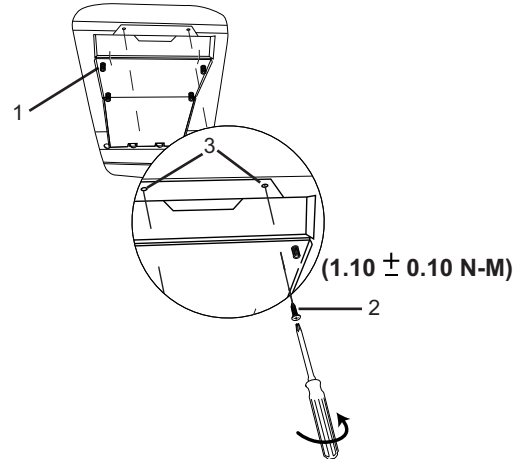


FIGURE 54

- 3.) WITH THE TOP DVD MOUNTING BRACKET INSTALLED (1), SLIDE THE THREE TABS (2) ON THE FORWARD SIDE OF THE BOTTOM DVD MOUNTING BRACKET (3) SO THAT THE TABS GRIP THE ROOF BOW. (SEE FIGURE 55)

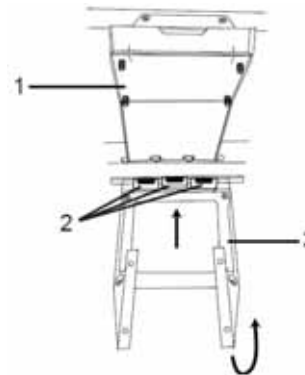


FIGURE 55

- 4.) PUSH THE REARWARD SIDE OF THE BOTTOM DVD MOUNTING BRACKET UPWARD AND SECURE USING FOUR M5 NUTS (2) WITH LOCTITE APPLIED. USE A 8mm SOCKET OR A NUTDRIVER TO TIGHTEN DOWN THE FOUR M5 NUTS. (SEE FIGURE 56)

NOTE:

WHEN INSTALLING THE FOUR NUTS (2) REFER TO TORQUE VALUES: 2.7 ± 0.10 N-M

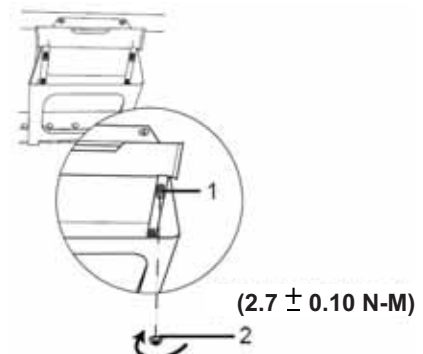


FIGURE 56

5 ROUTE THE DVD MAIN WIRING HARNESS

WARNING: KEEP CLEAR OF THE SIDE AIR BAG CURTAIN AND AVOID EXCESSIVE IMPACT.

- 1.) INSTALL TWO FOAM BLOCKS (1) ON THE HEADLINER AS SHOWN BETWEEN THE SUNROOF OPENING (2) AND THE DVD CUTOUT (3). FOAM BLOCKS SHOULD BE 60 mm (APPROXIMATELY 2-1/4") APART. (SEE FIGURE 57)

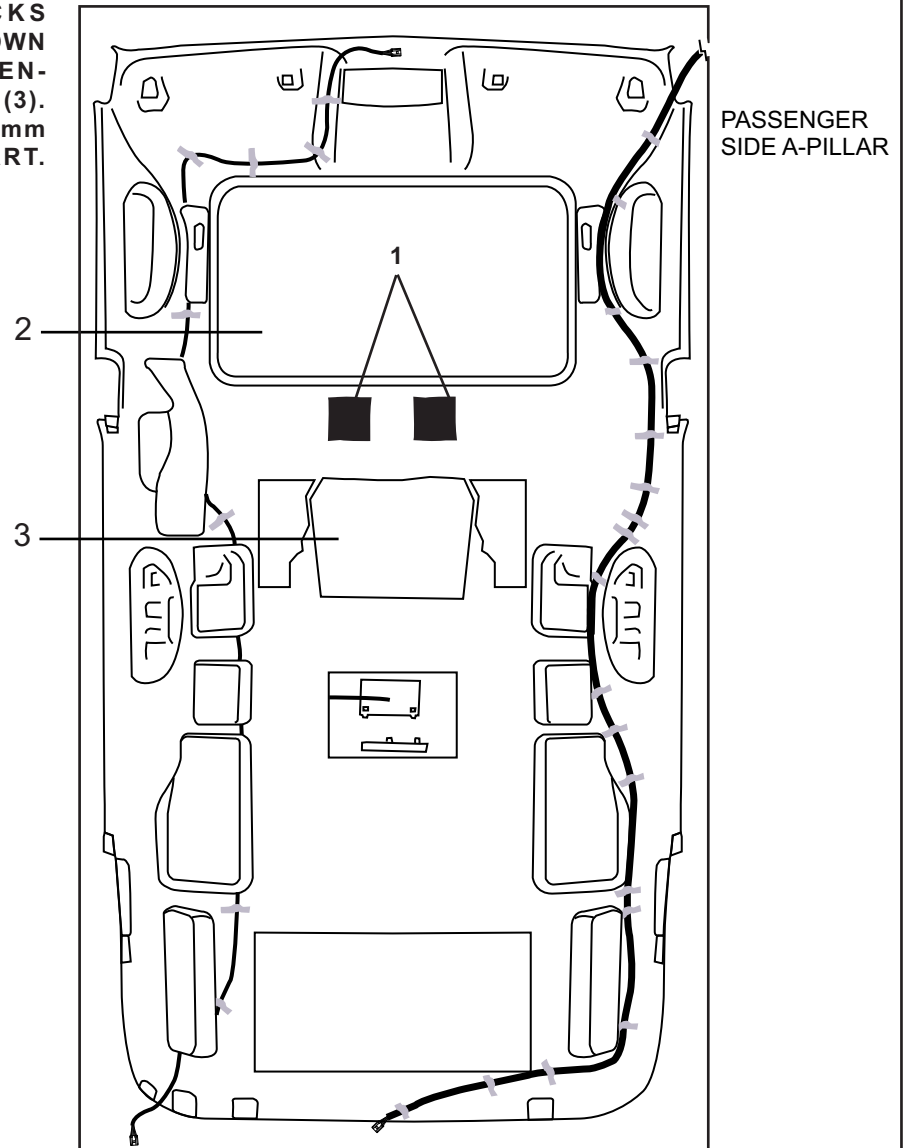


FIGURE 57

ROUTE THE DVD MAIN WIRING HARNESS (CONTINUED)

- 2.) INSTALL THE CHRISTMAS TREE WIRE TIE (1) ON THE MAIN HARNESS INTO THE ANCHOR HOLE ON THE DRIVER SIDE OF THE BOTTOM DVD MOUNTING BRACKET, SECURING THE MAIN HARNESS IN PLACE. (SEE FIGURE 58)
- 3.) ROUTE THE DVD MAIN HARNESS FORWARD TOWARDS THE FRONT OF THE VEHICLE AND AROUND THE BRACKET EDGE TOWARDS THE PASSENGER SIDE OF THE VEHICLE. (SEE FIGURE 58)

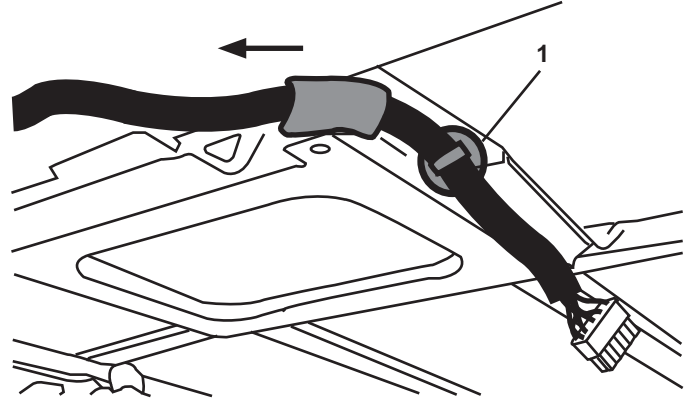


FIGURE 58

- 4.) CONNECT THE 3-PIN DOME LIGHT CONNECTOR ON THE DVD MAIN HARNESS TO THE MATING CONNECTION ON THE DOME LIGHT HARNESS. WRAP ONE PIECE OF FOAM TAPE (1) AROUND THE DOME LIGHT CONNECTORS. (SEE FIGURE 59)

NOTE:

CLEAN OIL FROM FOAM PAD INSTALLATION AREA WITH ALCOHOL. FAILURE TO CLEAN INSTALLATION AREA WILL AFFECT ADHESION.

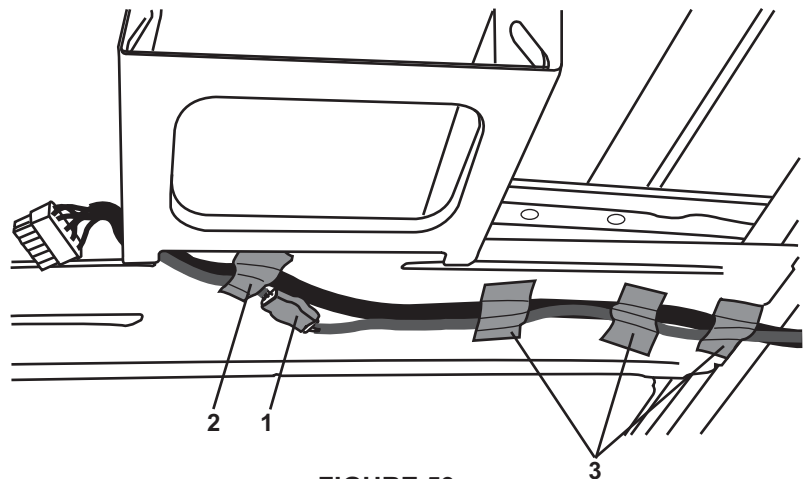


FIGURE 59

- 5.) SECURE THE DVD MAIN HARNESS TO THE VEHICLE MOONROOF BRACKET USING ONE PIECE OF FOAM TAPE (2). (SEE FIGURE 59)
- 6.) ROUTE THE DVD MAIN HARNESS TOWARDS THE PASSENGER SIDE OF THE VEHICLE AND SECURE WITH THREE PIECES OF FOAM TAPE (3). (SEE FIGURE 59)

- 7.) ROUTE THE DVD MAIN HARNESS TOWARDS THE FRONT OF THE VEHICLE AND ABOVE THE AIRBAGS. SECURE WITH THREE PIECES OF TAPE (1). (SEE FIGURE 60)

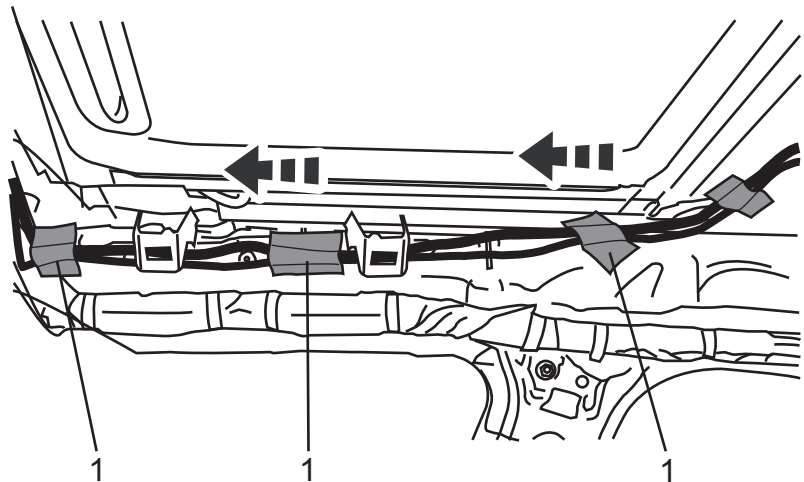


FIGURE 60

5 ROUTE THE DVD MAIN WIRING HARNESS (CONTINUED)

- 8.) ROUTE THE DOME LIGHT HARNESS FROM THE TOP OF THE PASSENGER SIDE A-PILLAR AREA TOWARDS THE FRONT DOME LIGHT AREA. SECURE THE DOME LIGHT HARNESS USING TWO STRIPS OF FOAM TAPE (1). (SEE FIGURE 61)

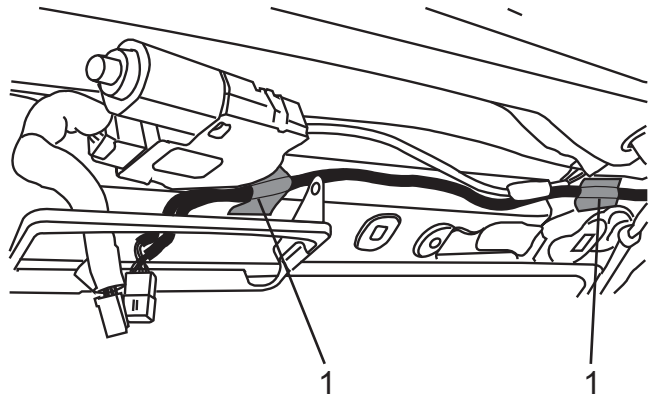


FIGURE 61

- 9.) CAREFULLY RE-INSTALL THE HEADLINER IN THE VEHICLE.

CAUTION:

- ASSISTANCE IS ADVISED FOR THIS STEP. FAILURE TO USE CARE IN INSTALLING THE HEADLINER COULD DAMAGE OR CREASE THE HEAD-LINER RESULTING IN A COSTLY REPAIR. USE EXTREME CARE WHILE HANDLING THE HEADLINER TO AVOID STAINING OR CREASING.

- 10.) INSTALL THE FOUR FASTENERS. (SEE FIGURE 62)

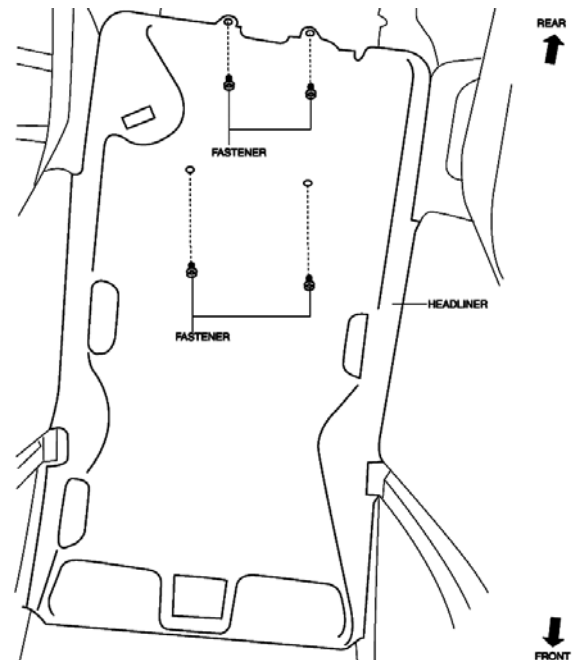


FIGURE 62

- 11.) CONNECT THE ROOF WIRING HARNESS CONNECTOR AND ATTACH THE ROOF WIRING HARNESS CONNECTOR CLIP TO THE BODY. (SEE FIGURE 63)
- 12.) CONNECT THE REAR WASHER HOSE. (SEE FIGURE 63)
- 13.) CONNECT THE REAR ANTENNA FEEDER NO. 2. (SEE FIGURE 63)
- 14.) TIGHTEN THE FRONT AND REAR METAL BRACKETS BY CAREFULLY SECURING THE TABS IN THE MOONROOF OPENING.
- 15.) INSTALL MOONROOF TRIM RING INTO THE HEADLINER OPENING.

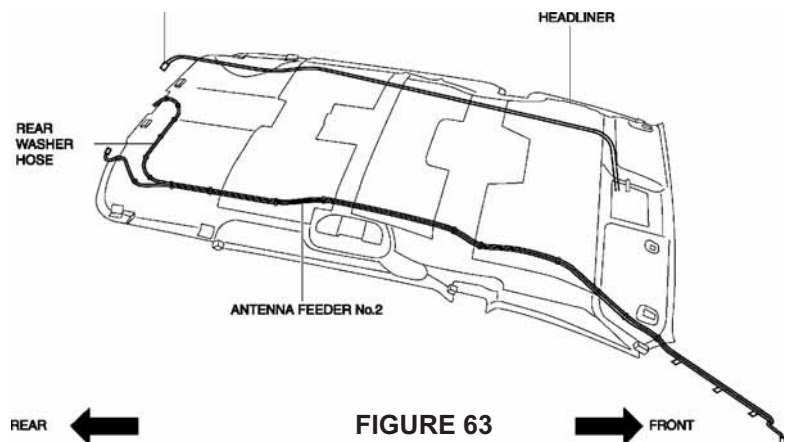


FIGURE 63

5 ROUTE THE DVD MAIN WIRING HARNESS (CONTINUED)

- 12.) CONTINUE ROUTING THE DVD MAIN WIRING HARNESS FROM THE TOP OF THE A-PILLAR (1) DOWN TO THE GLOVE BOX AREA AND SECURE USING THREE PIECES OF FOAM TAPE (2). (SEE FIGURE 64)

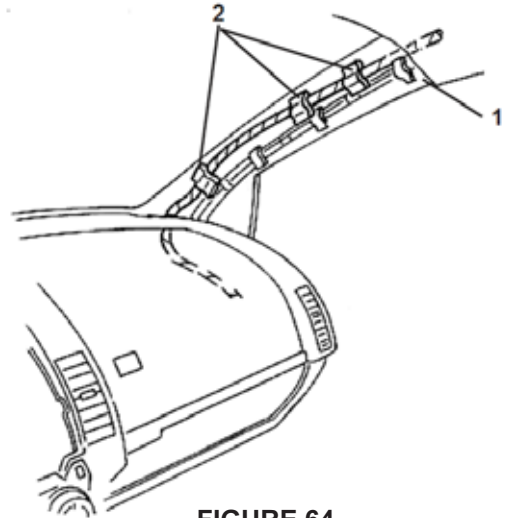


FIGURE 64

- 13.) CONNECT THE FEMALE CONNECTOR ON THE DVD DOME LIGHT HARNESS (1) TO THE MALE CONNECTOR ON THE VEHICLE MAP LIGHT HARNESS (2) AND CONNECT THE MALE DVD DOME LIGHT CONNECTOR TO THE VEHICLE MAP LIGHT. (SEE FIGURE 65)

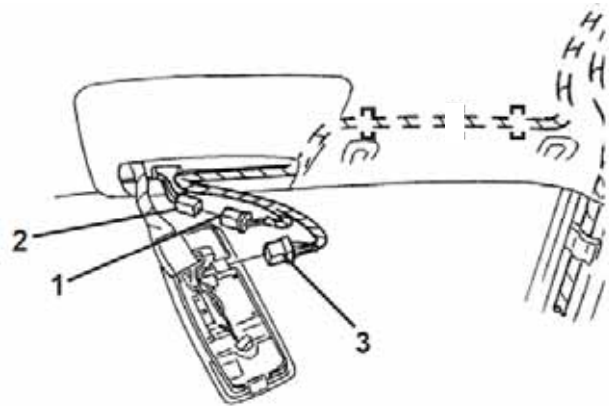


FIGURE 65

- 14.) BEING CAREFUL OF SHARP METAL, ROUTE THE REMAINING HARNESS THROUGH THE BOTTOM OF THE A-PILLAR, THROUGH THE GLOVE BOX OPENING AND INTO THE RADIO OPENING. SECURE THE HARNESS USING FOUR TIE WRAPS (1) IN THE LOCATIONS INDICATED. (SEE FIGURE 66)

NOTE:

ROUTE THE HARNESS CLEAR OF ANY EXPOSED HVAC MODE DOOR LEVERS AND ACTUATORS.

NOTE:

BE SURE TO TRIM ALL TIE WRAPS.

- 15.) CONNECT THE DIODE HARNESS TWO PIN CONNECTOR TO THE TWO PIN CONNECTOR ON THE MAIN HARNESS. CONNECT THE POWER HARNESS TWO PIN CONNECTOR TO THE TWO PIN CONNECTOR ON THE DIODE HARNESS.

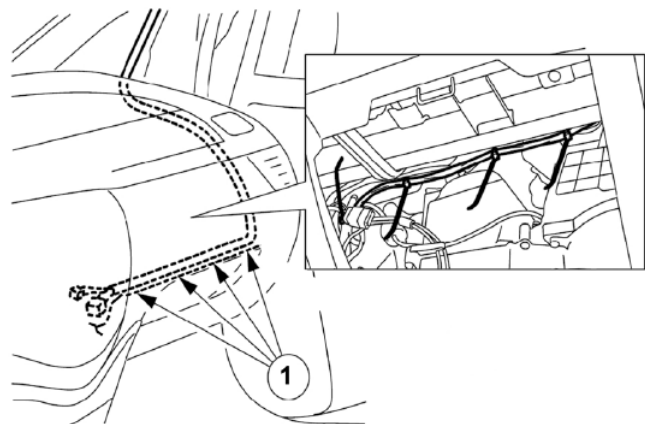


FIGURE 66

6 INSTALLING THE AUDIO INTERFACE RELAY

- 1.) CONNECT THE 6 PIN CONNECTOR ON THE DVD MAIN HARNESS TO THE 6 PIN CONNECTOR ON THE AUDIO INTERFACE RELAY. (SEE FIGURE 67)

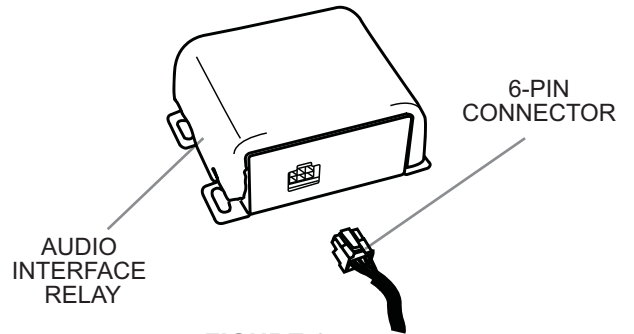


FIGURE 67

- 2.) CONNECT THE 10 PIN CONNECTOR ON THE T-HARNESS TO THE 10 PIN CONNECTOR ON THE AUDIO INTERFACE RELAY. (SEE FIGURE 68)

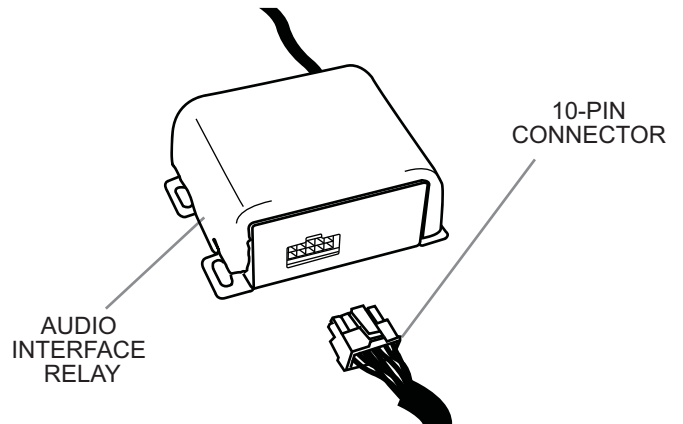


FIGURE 68

- 3.) SECURE THE AUDIO INTERFACE RELAY IN THE GLOVE BOX AREA USING 2 WIRE TIES (1). (SEE FIGURE 69)
- 4.) ROUTE THE T-HARNESS TO THE RADIO OPENING.

NOTE:

- ROUTE THE HARNESS CLEAR OF ANY EXPOSED HVAC MODE DOOR LEVERS AND ACTUATORS.
- KEEP CLEAR AND DO NOT ATTACH TO ANY YELLOW AIR BAG HARNESS.
- BE SURE TO TRIM ALL TIE WRAPS.

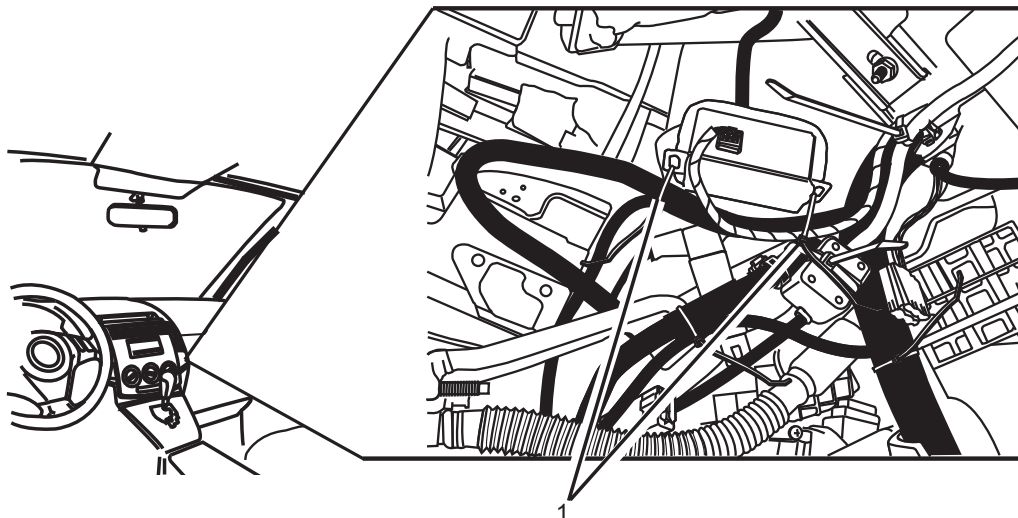


FIGURE 69

MAKING POWER HARNESS AND AUX T-HARNESS CONNECTIONS

- 1.) USING PLIERS, ATTACH ONE SUPPLIED 3M CRIMP LOCK TO THE 12 VDC POWER SOURCE BLUE/BLACK WIRE AND ANOTHER ONE TO THE BLACK WIRE APPROXIMATELY 10 TO 20 MM FROM THE HARNESS BREAKOUT. PLACING THE 3M CRIMPS IN THIS LOCATION WILL FACILITATE RE-ASSEMBLY. (SEE FIGURES 70 AND 71)

NOTE:

BE SURE THE 3M CRIMP LOCK IS PROPERLY AND SECURELY INSTALLED.

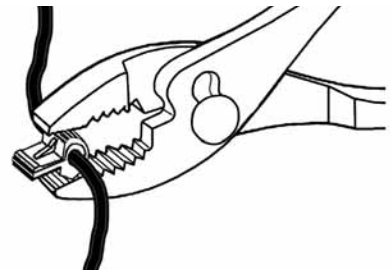


FIGURE 70

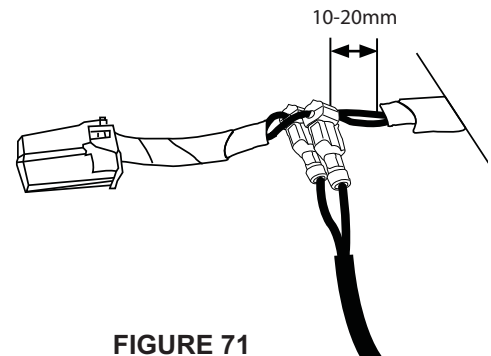


FIGURE 71

- 2.) CONNECT THE POWER HARNESS RED WIRE TO THE 3M CRIMP LOCK ON THE VEHICLE BLUE/BLACK WIRE. ATTACH THE BLACK WIRE TO THE 3M CRIMP LOCK ON THE VEHICLE BLACK WIRE. (SEE FIGURE 72)
- 3.) SECURE THE POWER HARNESS TO THE VEHICLE AUDIO HARNESS USING FOUR TIE WRAPS (1). (SEE FIGURE 72)

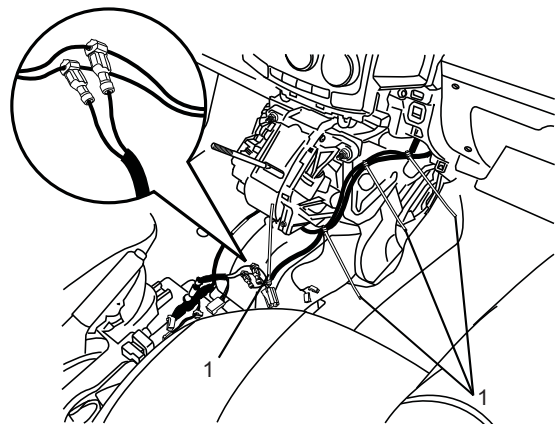


FIGURE 72

- 4.) LOCATE THE AUX/USB JACK CONNECTORS (1) IN THE RADIO OPENING AND REMOVE THE TAPE AND DISCONNECT THE CONNECTORS (SEE FIGURE 73).

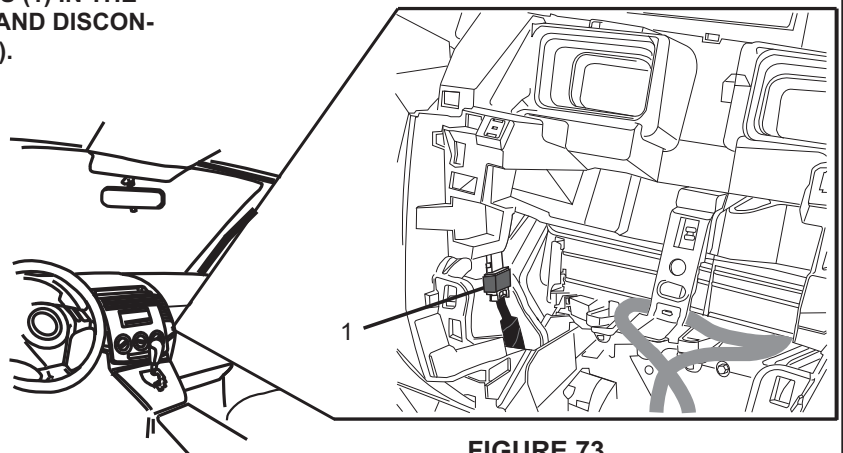
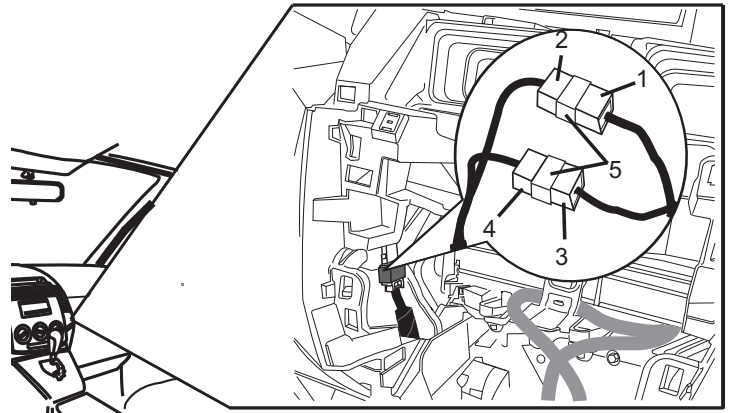



FIGURE 73

7**MAKING POWER HARNESS AND AUX T-HARNESS CONNECTIONS**

- 5.) CONNECT THE AUDIO T-HARNESS FEMALE CONNECTOR (1) TO THE VEHICLE'S AUX INPUT MALE CONNECTOR (2). (SEE FIGURE 74)
- 6.) CONNECT THE AUDIO T-HARNESS MALE CONNECTOR (3) TO THE VEHICLE HARNESS AUDIO INTERFACE HARNESS FEMALE CONNECTOR (4). (SEE FIGURE 74)
- 7.) WRAP THE CONNECTORS WITH FOAM TAPE (5). (SEE FIGURE 74)

**FIGURE 74**

- 8.) USING TWO WIRE TIES (1), SECURE THE AUX CONNECTORS AND T-HARNESS TO THE VEHICLE HARNESS IN THE RADIO OPENING. (SEE FIGURE 75)

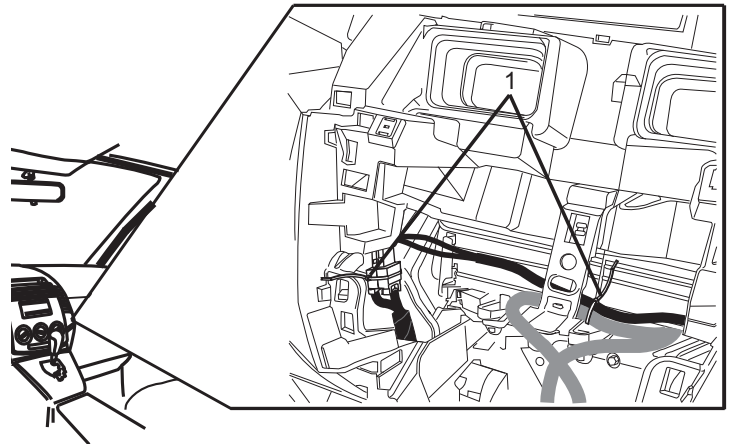**FIGURE 75**

8

ATTACH THE TRIM RING TO THE DVD ASSEMBLY

- 1.) ON THE DVD ASSEMBLY, USING A SCREWDRIVER, REMOVE THE SCREWS LOCATED IN THE B LOCATIONS SHOWN IN THE FIGURE BELOW. THE SCREWS CAN BE DISCARDED AS NEW ONES ARE SUPPLIED IN THE HARDWARE KIT.
- 2.) ATTACH THE DVD ASSEMBLY TO THE TRIM RING USING A SCREWDRIVER AND THE 9 TRIM RING SCREWS. (SEE FIGURE 76)

NOTE: TIGHTEN TRIM RING SCREWS TO $0.28 \text{ N-m} \pm 0.10 \text{ N-m}$.

CAUTION: OVER TIGHTENED SCREWS WILL CAUSE THREADS TO STRIP, DO NOT OVER TORQUE!

USE THE SUPPLIED SCREWS LISTED BELOW TO INSTALL THE TRIM RING TO THE DVD ASSEMBLY.

- A) #4 X 5/16 SELF TAPPING SCREW (QTY 1)
- B) #4 X 7/16 SELF TAPPING SCREWS (QTY 3)
- C) SCREWS ISO 3 X 8MM (QTY 5)

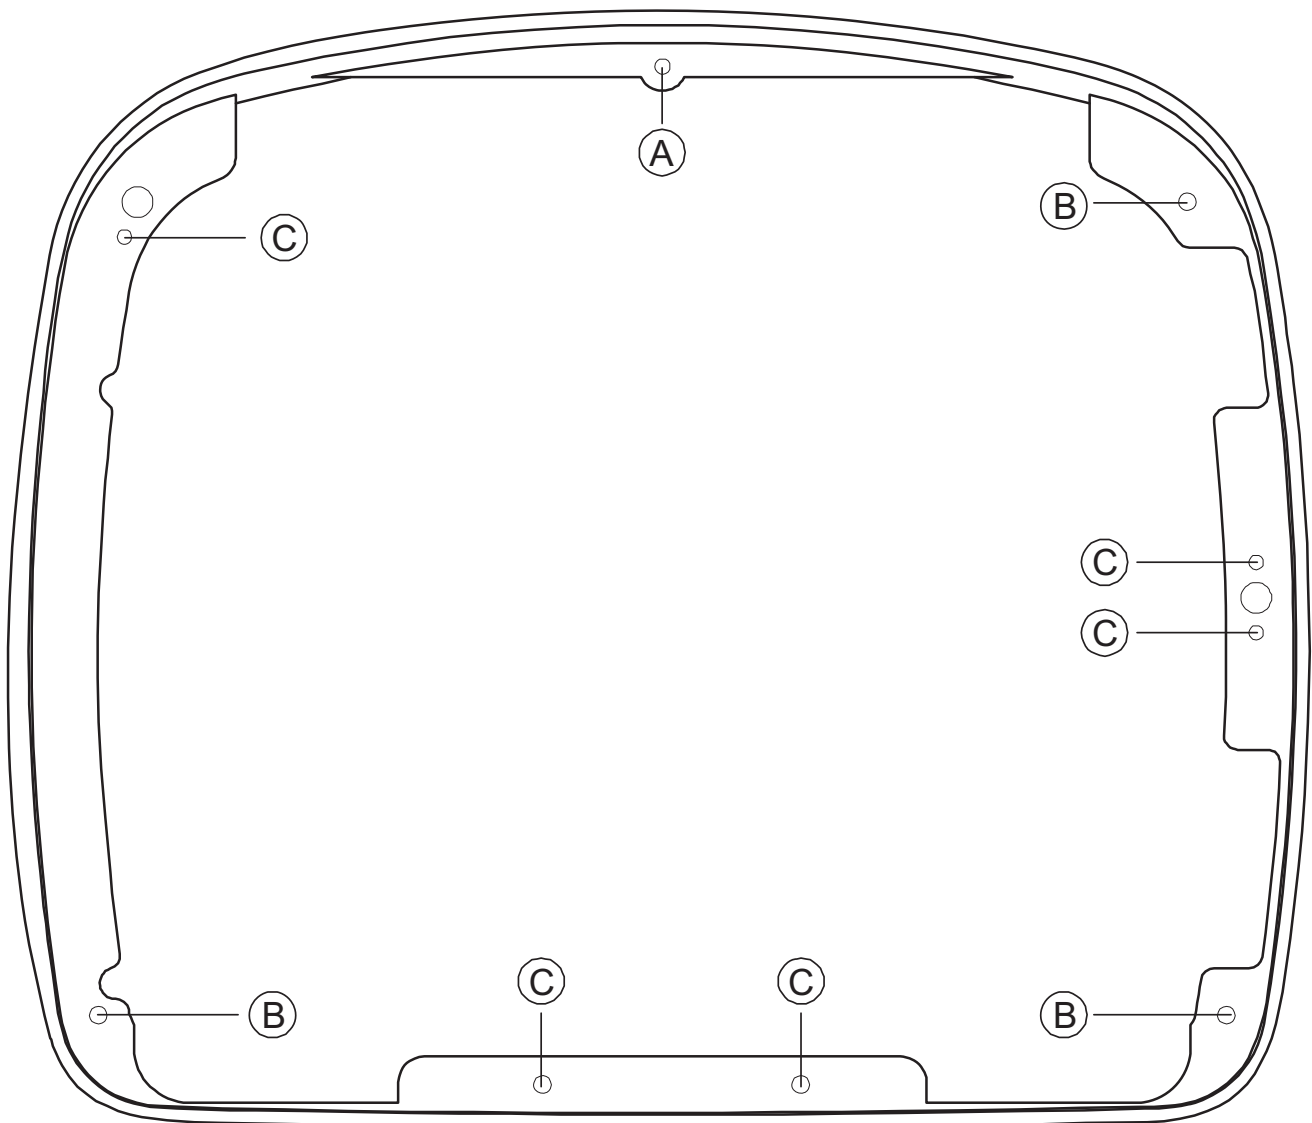


FIGURE 76

9

MOUNT THE DVD ASSEMBLY TO THE MOUNTING BRACKET


- 1.) USE TWO STRIPS OF FOAM TAPE (1) TO HOLD THE ANTENNA WIRE (2) IN PLACE. (SEE FIGURE 77)
- 2.) CONNECT THE DVD MAIN HARNESS CONNECTOR (3) (SEE FIGURE 72) TO THE DVD ASSEMBLY CONNECTOR (4). (SEE FIGURE 77)
- 3.) MOUNT THE DVD ASSEMBLY TO THE BRACKET USING A PHILLIPS SCREWDRIVER AND THE FOUR DVD ASSEMBLY MOUNTING SCREWS (5). (SEE FIGURE 77)

NOTE:

TIGHTEN MOUNTING SCREWS TO 2.3 N-m ± 0.20 N-m.

NOTE:

BE CAREFUL NOT TO TRAP THE HARNESS BETWEEN THE DVD ASSEMBLY AND THE MOUNTING BRACKET.

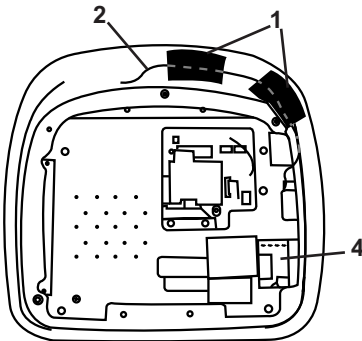

CAUTION:
OVER TIGHTENED SCREWS WILL CAUSE THREADS TO STRIP AND OR CAUSE DAMAGE TO THE DVD ASSEMBLY, DO NOT OVER TORQUE!

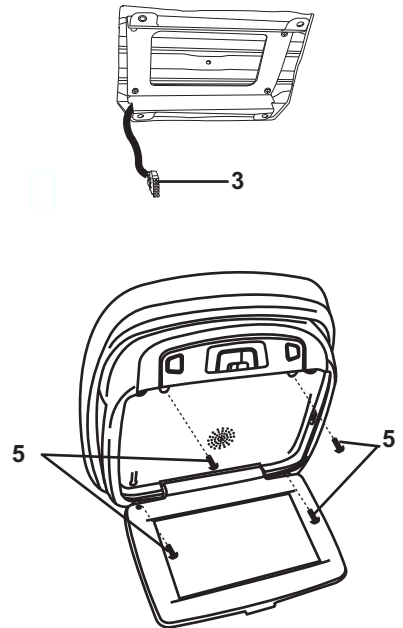


FIGURE 77

10

TESTING THE SYSTEM

- 1.) RECONNECT THE NEGATIVE BATTERY CABLE.
- 2.) THE REMOTE CONTROL HAS A BATTERY INSTALLED WITH A PULL TAB TO PREVENT BATTERY DISCHARGE. REMOVE THE PULL TAB BEFORE USING. INSTALL 2 BATTERIES INTO EACH OF THE HEADPHONES.
- 3.) TURN THE IGNITION SWITCH TO THE ACC OR ON POSITION AND VERIFY THAT THE POWER BUTTON ILLUMINATES RED.
- 4.) TURN THE VEHICLE RADIO ON.
- 5.) PRESS THE [POWER] BUTTON ON THE DVD PLAYER. VERIFY THAT THE BACKLIGHTING ILLUMINATES AND THE POWER BUTTON IS NO LONGER ILLUMINATED.
- 6.) INSERT A DVD INTO THE DVD PLAYER AND VERIFY THAT THE DVD STARTS ROTATING.
- 7.) PRESS THE [PLAY] BUTTON ON THE DVD PLAYER. VERIFY THAT DVD VIDEO IS DISPLAYED ON THE SCREEN.
- 8.) PRESS THE AUX BUTTON ON THE VEHICLE RADIO. VERIFY THAT AUDIO FROM THE DVD CAN BE HEARD THROUGH THE VEHICLE SPEAKERS.
- 9.) PRESS THE FMM ON/OFF BUTTON ON THE REMOTE CONTROL AND VERIFY THAT THE LCD PANEL DISPLAYS FMM OFF.
- 10.) ON THE HEADPHONES, PRESS AND RELEASE THE "POWER" BUTTON TO TURN THE HEADPHONES ON.
- 11.) LISTEN TO THE DVD THROUGH THE HEADPHONES.
- 12.) PRESS THE [STOP] BUTTON ON THE DVD PLAYER AND VERIFY THAT THE DVD STOPS PLAYING.
- 13.) CHECK THE DVD DOME LIGHT OPERATION.
 - VERIFY THE LIGHTS REMAIN OFF AT ALL TIMES WHEN THE DVD DOME LIGHT SWITCH IS IN THE OFF POSITION.
 - VERIFY THE LIGHTS REMAIN ON AT ALL TIMES WHEN THE DVD DOME LIGHT SWITCH IS IN THE ON POSITION.
 - VERIFY THE LIGHTS REMAIN ON ONLY WHEN THE INTERIOR LIGHTS ARE ON WHEN THE SWITCH IS IN THE AUTO POSITION.

NOTE: DO NOT LEAVE THE VEHICLE UNATTENDED WITH THE DOME LIGHT SWITCH IN THE ON POSITION, AS THIS COULD RESULT IN A DISCHARGED BATTERY.

11

INSTALLATION OF REMOVED COMPONENTS

- 1.) TRIM EXCESS OFF ALL TIE WRAPS.
- 2.) REINSTALL IN REVERSE ORDER ALL TRIM PIECES REMOVED DURING INSTALLATION.
- 3.) PLACE USER GUIDE IN VEHICLE GLOVE BOX.
- 4.) REPROGRAM RADIO PRESETS.
- 5.) VERIFY EACH REINSTALLED COMPONENT FOR PROPER FIT AND FUNCTION.
- 6.) USING RUBBING ALCOHOL, REMOVE FINGERPRINTS, SMUDGES, DIRT, ETC. FROM DVD PLAYER.

12 REINSTALLATION OF VEHICLE PARTS

CAUTION:

- WHEN THE NEGATIVE BATTERY CABLE IS CONNECTED DURING OPERATION, IT MAY CAUSE ELECTRIC SHOCK OR OTHER PERSONAL INJURIES. DISCONNECT THE NEGATIVE BATTERY CABLE BEFORE REMOVAL / INSTALLATION.
1. INSTALL ALL VEHICLE COMPONENTS IN THE REVERSE ORDER OF "SECTION 2. REMOVE VEHICLE COMPONENTS".

CAUTION:

- AFTER INSTALLING THE VEHICLE PARTS, CHECK FOR DIRT. CLEAN PARTS AS NEEDED.
2. PERFORM THE INSPECTION INDICATED IN SECTION 13 OF THESE INSTALLATION INSTRUCTIONS.

NOTE:

AFTER COMPLETING THE INSTALLATION, REFER TO THE OWNER'S MANUAL FOR INSTRUCTIONS ON HOW TO RESET THE CLOCK AND PRESET RADIO STATIONS, AND RECORD THE TRIP METER NUMBERS ON THE CHECK SHEET.

CAUTION:

- DISCONNECTING THE BATTERY CAUSES THE "DSC" INDICATOR LIGHT TO BECOME INOPERABLE. (AT THIS POINT, THE "DSC OFF" INDICATOR LIGHT FLASHES AND THE "TCS/DSC" INDICATOR LIGHT IS ILLUMINATED.)
- TO RESTORE THE "DSC" TO AN OPERABLE CONDITION, PERFORM THE FOLLOWING PROCEDURES:
 1. TURN THE IGNITION SWITCH TO THE "ON" POSITION.
 2. TURN THE STEERING WHEEL COMPLETELY TO THE RIGHT AND THEN COMPLETELY TO THE LEFT.
 3. VERIFY THAT THE "DSC OFF" INDICATOR LIGHT GOES OUT.
 4. TURN THE IGNITION SWITCH "OFF" THEN TURN IT TO THE "ON" POSITION AGAIN.
 5. VERIFY THAT THE "TCS/DSC" INDICATOR LIGHT GOES OUT.IF THE "TCS/DSC" INDICATOR LIGHTS DO NOT GO OUT AFTER TURNING THE IGNITION SWITCH TO THE "ON" POSITION, CONSULT YOUR MAZDA DEALER.
- WHEN THE BATTERY IS DISCONNECTED, THE WINDOWS MAY NOT OPEN AND CLOSE AUTOMATICALLY.
 1. TURN THE IGNITION SWITCH TO THE "ON" POSITION.
 2. PRESS THE SWITCH AND FULLY OPEN THE WINDOW.
 3. PULL UP THE SWITCH AND CONTINUE HOLDING FOR ABOUT 2 SECONDS TO FULLY CLOSE THE WINDOW.
 4. IF THE FUNCTION DOES NOT OPERATE EVEN AFTER THE IGNITION SWITCH IS TURNED OFF, CONTACT AN AUTHORIZED MAZDA DEALER.

INSPECTION (CONTINUED)

- INSPECT THE INSTALLED / REINSTALLED PARTS FOR THE FOLLOWING ITEMS.
- SOME INSPECTION PARTS MAY DIFFER.

Inspection Items (O)				
Inspection Parts	Clearance / Fit	Scratches / Dirt / Harness Interference	Installation / Tightening / Engagement	Operation Check
DRIVER AND PASSENGER SIDE SUNVISOR	O	O	O	O
FRONT MAP LIGHT	O	O	O	O
DRIVER SIDE AND PASSENGER SIDE A-PILLAR TRIM	O	O	O	
DRIVER SIDE AND PASSENGER SIDE A-PILLAR TRIM CLIP A AND GROMMET "B" REPLACED			O	
GLOVE COMPARTMENT LID	O	O	O	O
PASSENGER SIDE PANEL	O	O	O	
FRONT CONSOLE	O	O	O	
DRIVER AND PASSENGER CENTER CONSOLE SIDE WALL PANELS	O	O	O	
CENTER CONSOLE	O	O	O	
SWITCH PANEL	O	O	O	O
CLIMATE CONTROL UNIT	O	O	O	O
AUDIO UNIT	O	O	O	O
FRONT CONSOLE PLATE	O	O	O	
FRONT DRIVER AND PASSENGER SIDE SCUFF PLATES (INNER)	O	O	O	
DRIVER AND PASSENGER SIDE FRONT AND REAR ASSIST HANDLES	O	O	O	O
REAR DRIVER AND PASSENGER SIDE DOOR SCUFF PLATES	O	O	O	
DRIVER AND PASSENGER SIDE B-PILLAR LOWER TRIMS	O	O	O	
DRIVER AND PASSENGER SIDE B-PILLAR SEAT BELT ADJUSTER ANCHORS	O	O	O	O
DRIVER AND PASSENGER SIDE B-PILLAR UPPER TRIM	O	O	O	
MOONROOF TRIM	O	O	O	
POWER AUTO WINDOW FEATURE				O
AUX INPUT				O
CIGARETTE LIGHTER				O

O: APPLICABLE.

NOTE: INSPECTIONS ARE CONTINUED ON THE NEXT PAGE.

THE TERM OF VALIDITY FOR THIS SHEET: 3 MONTHS

13 INSPECTION (CONTINUED)

IMPORTANT CHECK ITEMS.

· INSPECT THE INSTALLED / REINSTALLED PARTS FOR THE FOLLOWING ITEMS

Page No.	Part name	Tightening torque	Check & write the tightening torque	Person in charge
AUDIO UNIT REMOVAL – (SEC. 2, PG. 7)	BOLT	9 – 12 N-m (92 – 120 kgf-cm 80 – 106 ft-lbf)		
AUDIO UNIT REMOVAL– (SEC. 2, PG. 7)	SCREW	9 – 12 N-m (92 – 120 kgf-cm 80 – 106 ft-lbf)		
B-PILLAR SEAT BELT ADJUSTER ANCHORS, DRIVER AND PASSENGER SIDE – (SEC. 2, PG. 14)	BOLT	38.3 – 78.4 N-m (3.9 – 8 kg-m 28.3 – 57.8 FT-LBS)		
THIRD ROW SEAT REMOVAL – (SEC. 2, PG. 15)	BOLT	36.3 – 54.0 N-m (3.71 – 5.51 kg-m 26.8 – 39.8 FT-LBS)		
TRUNK SIDE TRIM REMOVAL– (SEC. 2, PG. 17)	BOLT	0.9 – 1.3 N-m 9.2 – 13 kgf-cm 8.0 – 11 lbf		
DVD ASSY BRACKET, TOP – (SEC. 4, PG. 20)	SELF DRILLING SCREW	1.10 N-m +/- 0.10 N-m		
DVD ASSY BRACKET, BOTTOM – (SEC. 4, PG. 20)	M5 NUT	2.7N-m +/- 0.10 N-m		
TRIM RING TO DVD ASSY – (SEC.8, PG. 27)	#4 X 5/16 SELF TAPPING SCREW	0.28 N-m +/- 0.10 N-m		
TRIM RING TO DVD ASSY – (SEC. 8, PG. 27)	#4 X 7/16 SELF TAPPING SCREW	0.28 N-m +/- 0.10 N-m		
TRIM RING TO DVD ASSY – (SEC. 8, PG. 27)	SCREW ISO 3 X 8MM	0.28 N-m +/- 0.10 N-m		
DVD ASSEMBLY TO THE MOUNTING BRACKET– (SEC. 9, PG. 28)	SCREWS M5 X 20MM	2.3 N-m +/- 0.20 N-m		

. RESET ALL RADIO / SATELLITE PRESETS

AM (Up To 6 Channels)

1.	2.	3.	4.	5.	6.
----	----	----	----	----	----

FM (Up To 12 Channels)

1.	2.	3.	4.	5.	6.
7.	8.	9.	10.	11.	12.

SAT (Up To 18 Channels)

1.	2.	3.	4.	5.	6.
7.	8.	9.	10.	11.	12.
13.	14.	15.	16.	17.	18.



Date. , ,				
Vehicle.				
VIN.				
Approved		Checked		Person in charge

THE TERM OF VALIDITY FOR THIS SHEET: 3 MONTHS






TROUBLESHOOTING GUIDE

SYMPTOM	PROBABLE CAUSE	FIX
<p>SYSTEM WILL NOT OPERATE.</p> <p>HOME LIGHTS WILL NOT OPERATE IN ANY MODE.</p> <p>HOME LIGHTS DO NOT OPERATE WHEN THE INTERIOR LIGHTS ARE ON.</p> <p>ONE OR MORE DVD HOME LIGHTS DO NOT ILLUMINATE.</p> <p>DVD AUDIO IS NOT HEARD ON THE VEHICLE AUDIO SYSTEM.</p>	<p>SYSTEM NOT RECEIVING POWER.</p> <p>SYSTEM NOT RECEIVING GROUND.</p> <p>DVD UNIT DEFECTIVE.</p> <p>HOME LIGHTS NOT RECEIVING POWER.</p> <p>HOME LIGHTS NOT RECEIVING GROUND.</p> <p>FAULTY YELLOW WIRE CONNECTION.</p> <p>FAULTY BULB(S).</p> <p>VEHICLE HEAD UNIT IS NOT IN AUX MODE.</p> <p>AN EXTERNAL DEVICE IS CONNECTED TO THE VEHICLE AUX INPUT.</p> <p>AUDIO T-HARNESS NOT CONNECTED PROPERLY.</p> <p>DVD MAIN HARNESS NOT CONNECTED.</p> <p>AUDIO INTERFACE RELAY NOT RECEIVING POWER.</p>	<p>CHECK THE BLUE/BLACK WIRE AT THE CIGARETTE LIGHTER FOR +12VDC WITH THE IGNITION IN THE ACC POSITION.</p> <p>CHECK THE BLACK WIRE AT THE CIGARETTE LIGHTER FOR GOOD GROUND CONNECTION.</p> <p>REPLACE DVD UNIT.</p> <p>CHECK THE RED WIRE AT HOME LIGHT CONNECTION FOR +12VDC.</p> <p>CHECK THE BLUE WIRE AT HOME LIGHT CONNECTOR FOR GOOD GROUND CONNECTION.</p> <p>CHECK THE YELLOW WIRE HOME LIGHT CONNECTION FOR GROUND WHEN THE VEHICLE COURTESY LIGHTS ON.</p> <p>REPLACE THE BULB(S).</p> <p>PRESS THE AUX BUTTON ON THE RADIO.</p> <p>DISCONNECT THE EXTERNAL DEVICE FROM THE VEHICLE AUX INPUT.</p> <p>VERIFY ALL AUDIO T-HARNESS CONNECTIONS TO THE INTERFACE RELAY AND VEHICLE AUDIO HARNESS.</p> <p>VERIFY THAT THE DVD MAIN HARNESS 6-PIN CONNECTOR IS CONNECTED TO THE AUDIO INTERFACE RELAY.</p> <p>CHECK FOR +12VDC AND GROUND BETWEEN PINS 1 AND 4 ON THE 6-PIN CONNECTOR P4 ON THE DVD MAIN HARNESS.</p> <div data-bbox="1039 1396 1380 1627" style="text-align: center;"> <p>PIN 3 ——— PIN 1</p> <p>PIN 6 ——— PIN 4</p> <p>CONNECTOR P4</p> </div>

TROUBLESHOOTING GUIDE (cont)

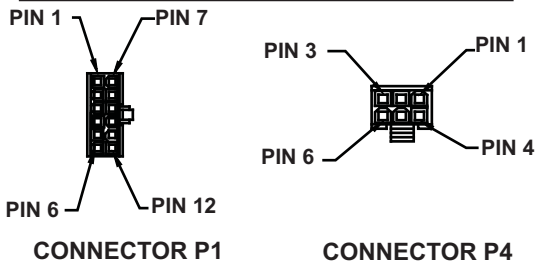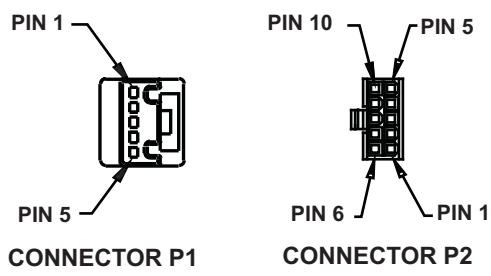SYMPTOM	PROBABLE CAUSE	FIX																				
<p>DVD AUDIO IS NOT HEARD ON THE VEHICLE AUDIO SYSTEM. (CONTINUED)</p>	<p>AUDIO INTERFACE RELAY NOT RECEIVING AUDIO FROM DVD UNIT.</p>	<p>CHECK FOR CONTINUITY BETWEEN THE FOLLOWING CONNECTORS AND PINS ON THE DVD MAIN HARNESS.</p> <table border="1" data-bbox="958 346 1453 514"> <thead> <tr> <th>Connector P1</th> <th>Connector P4</th> </tr> </thead> <tbody> <tr> <td>Pin 5</td> <td>Pin 5</td> </tr> <tr> <td>Pin 4</td> <td>Pin 3</td> </tr> <tr> <td>Pin 11</td> <td>Pin 4</td> </tr> </tbody> </table> <div data-bbox="941 514 1477 777">  <p>The diagram shows two connectors. Connector P1 is a 12-pin connector with labels for PIN 1, PIN 7, PIN 6, and PIN 12. Connector P4 is a 6-pin connector with labels for PIN 3, PIN 1, PIN 6, and PIN 4.</p> </div> <p>CHECK FOR CONTINUITY BETWEEN THE FOLLOWING CONNECTORS AND PINS ON THE AUDIO T-HARNESS.</p> <table border="1" data-bbox="958 913 1485 1165"> <thead> <tr> <th>Connector P1</th> <th>Connector P2</th> </tr> </thead> <tbody> <tr> <td>Pin 1</td> <td>Pin 1</td> </tr> <tr> <td>Pin 2</td> <td>Pin 2</td> </tr> <tr> <td>Pin 3</td> <td>Pin 3</td> </tr> <tr> <td>Pin 4</td> <td>Pin 4</td> </tr> <tr> <td>Pin 5</td> <td>Pin 5</td> </tr> </tbody> </table> <div data-bbox="998 1176 1485 1449">  <p>The diagram shows two connectors. Connector P1 is a 5-pin connector with labels for PIN 1 and PIN 5. Connector P2 is a 10-pin connector with labels for PIN 10, PIN 5, PIN 6, and PIN 1.</p> </div>	Connector P1	Connector P4	Pin 5	Pin 5	Pin 4	Pin 3	Pin 11	Pin 4	Connector P1	Connector P2	Pin 1	Pin 1	Pin 2	Pin 2	Pin 3	Pin 3	Pin 4	Pin 4	Pin 5	Pin 5
Connector P1	Connector P4																					
Pin 5	Pin 5																					
Pin 4	Pin 3																					
Pin 11	Pin 4																					
Connector P1	Connector P2																					
Pin 1	Pin 1																					
Pin 2	Pin 2																					
Pin 3	Pin 3																					
Pin 4	Pin 4																					
Pin 5	Pin 5																					
<p>AUDIO FROM AN EXTERNAL DEVICE IS NOT HEARD ON THE VEHICLE AUDIO SYSTEM.</p>	<p>AUDIO INTERFACE RELAY IS DEFECTIVE.</p> <p>DVD UNIT IS DEFECTIVE.</p> <p>VEHICLE RADIO NOT IN AUX MODE.</p> <p>AUDIO T-HARNESS NOT CONNECTED PROPERLY.</p> <p>DVD MAIN HARNESS NOT CONNECTED.</p>	<p>REPLACE AUDIO INTERFACE RELAY.</p> <p>REPLACE DVD UNIT.</p> <p>PRESS THE AUX BUTTON ON THE VEHICLE RADIO.</p> <p>VERIFY ALL AUDIO T-HARNESS CONNECTIONS TO THE INTERFACE RELAY, VEHICLE AUX JACK CONNECTOR AND VEHICLE AUDIO HARNESS.</p> <p>VERIFY THAT THE DVD MAIN HARNESS 6-PIN CONNECTOR IS CONNECTED TO THE AUDIO INTERFACE RELAY.</p>																				

TROUBLESHOOTING GUIDE (cont)

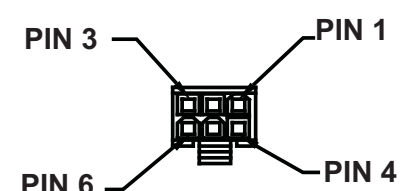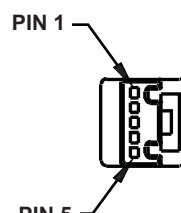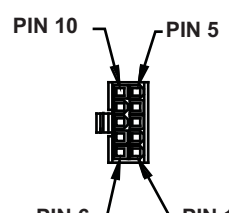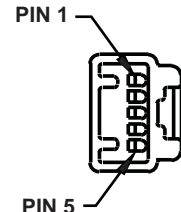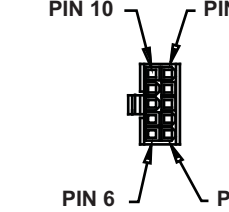SYMPTOM	PROBABLE CAUSE	FIX												
<p>AUDIO FROM AN EXTERNAL DEVICE IS NOT HEARD ON THE VEHICLE AUDIO SYSTEM. (CONTINUED)</p>	<p>AUDIO INTERFACE RELAY NOT RECEIVING POWER.</p>	<p>CHECK FOR +12VDC AND GROUND BETWEEN PINS 1 AND 4 ON THE 6-PIN CONNECTOR ON THE DVD MAIN HARNESS.</p>  <p style="text-align: center;">CONNECTOR P4</p>												
	<p>AUDIO INTERFACE RELAY NOT RECEIVING AUDIO FROM THE EXTERNAL DEVICE.</p>	<p>CHECK FOR CONTINUITY BETWEEN THE FOLLOWING CONNECTORS AND PINS ON THE AUDIO T-HARNESS.</p> <table border="1" data-bbox="950 651 1477 903"> <thead> <tr> <th>Connector P1</th> <th>Connector P2</th> </tr> </thead> <tbody> <tr> <td>Pin 1</td> <td>Pin 1</td> </tr> <tr> <td>Pin 2</td> <td>Pin 2</td> </tr> <tr> <td>Pin 3</td> <td>Pin 3</td> </tr> <tr> <td>Pin 4</td> <td>Pin 4</td> </tr> <tr> <td>Pin 5</td> <td>Pin 5</td> </tr> </tbody> </table>   <p style="text-align: center;">CONNECTOR P1 CONNECTOR P2</p>	Connector P1	Connector P2	Pin 1	Pin 1	Pin 2	Pin 2	Pin 3	Pin 3	Pin 4	Pin 4	Pin 5	Pin 5
	Connector P1	Connector P2												
Pin 1	Pin 1													
Pin 2	Pin 2													
Pin 3	Pin 3													
Pin 4	Pin 4													
Pin 5	Pin 5													
<p>AUDIO T-HARNESS NOT OUTPUTTING AUDIO TO THE RADIO.</p>	<p>CHECK FOR CONTINUITY BETWEEN THE FOLLOWING CONNECTORS AND PINS ON THE AUDIO T-HARNESS.</p> <table border="1" data-bbox="950 1270 1477 1522"> <thead> <tr> <th>Connector J1</th> <th>Connector P2</th> </tr> </thead> <tbody> <tr> <td>Pin 1</td> <td>Pin 6</td> </tr> <tr> <td>Pin 2</td> <td>Pin 7</td> </tr> <tr> <td>Pin 3</td> <td>Pin 8</td> </tr> <tr> <td>Pin 4</td> <td>Pin 9</td> </tr> <tr> <td>Pin 5</td> <td>Pin 10</td> </tr> </tbody> </table>   <p style="text-align: center;">CONNECTOR J1 CONNECTOR P2</p> <p>REPLACE AUDIO INTERFACE RELAY.</p> <p>REPLACE DVD UNIT.</p>	Connector J1	Connector P2	Pin 1	Pin 6	Pin 2	Pin 7	Pin 3	Pin 8	Pin 4	Pin 9	Pin 5	Pin 10	
Connector J1	Connector P2													
Pin 1	Pin 6													
Pin 2	Pin 7													
Pin 3	Pin 8													
Pin 4	Pin 9													
Pin 5	Pin 10													
	<p>AUDIO INTERFACE RELAY IS DEFECTIVE.</p> <p>DVD UNIT IS DEFECTIVE.</p>													