



GENUINE ACCESSORIES


INSTALLATION INSTRUCTIONS

LANCER 2008 -

Hood Protector

PART NUMBER: MZ313956

APPLICATION

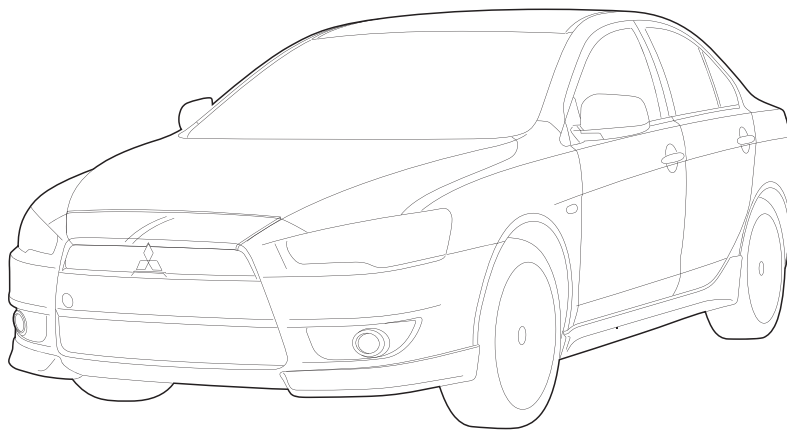


LANCER


TOOLS REQUIRED



BILL OF MATERIALS

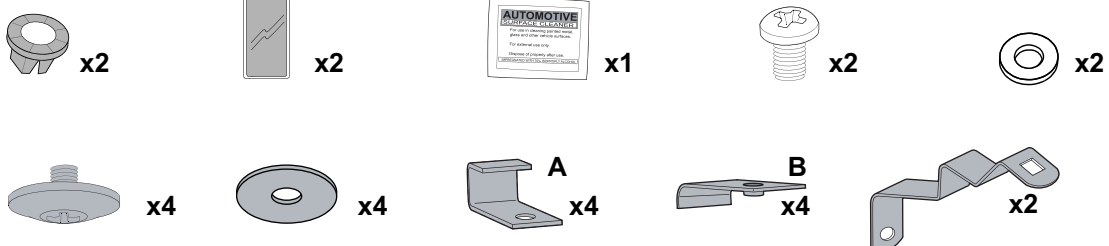


1.

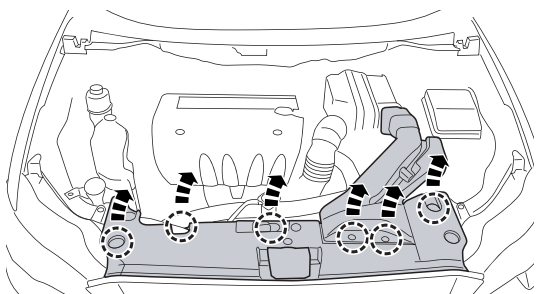


Wash and dry the front of the vehicle thoroughly, open the hood. Remove the air intake, then the front end upper cover by removing the plastic push rivets, as shown. Retain the push rivets for reinstallation of the cover and air intake after Hood Protector installation.

2.

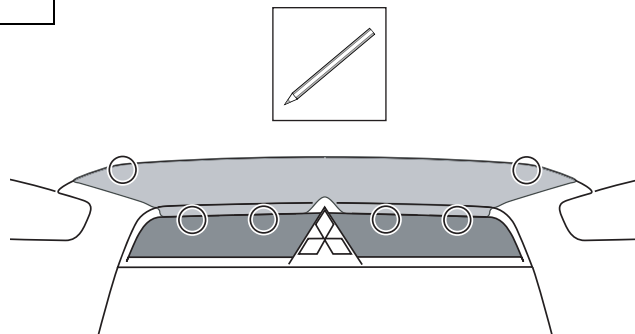


Trial fit Hood Protector centrally on vehicle. With a non-permanent marker or pencil, note and mark the holes in the grille corresponding to the four slots in the Hood Protector.

3.

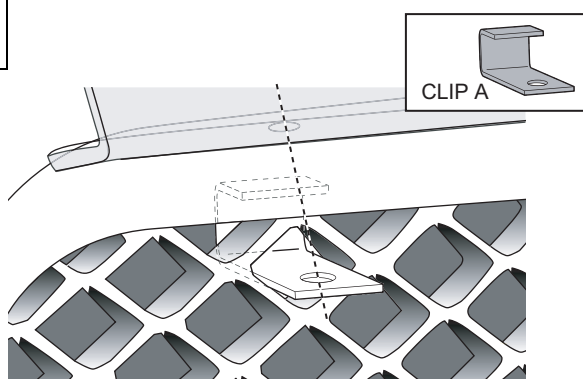


At the previously marked grille holes, insert Clips "A" into the grille, as shown. The clip is to be pushed in and up, then pulled forward to catch the upper grille edge.

4.

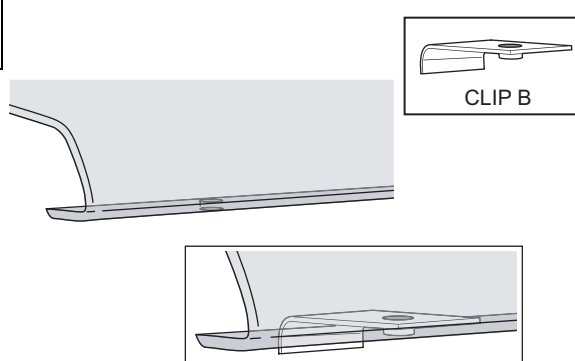


Attach Clips "B" to the inside of the previously noted holes in Hood Protector.

5.

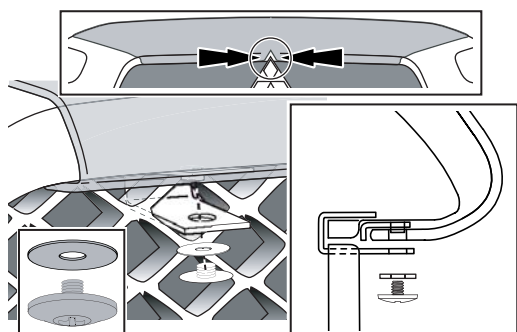


Fit the Hood Protector centrally, aligning Clip A with Clip B, then join the clips loosely with the large screws and large washers provided. Ensure the Hood Protector is aligned centrally before tightening screws. DO NOT OVERTIGHTEN.

6.

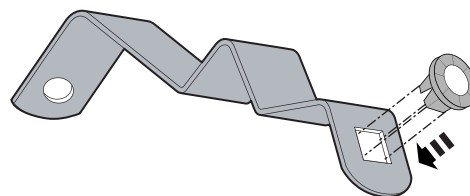


Attach the plastic nut inserts into the square holes in the top of the metal clips, as shown. Ensure the legs of the nut inserts engage completely with the metal clips.

7.

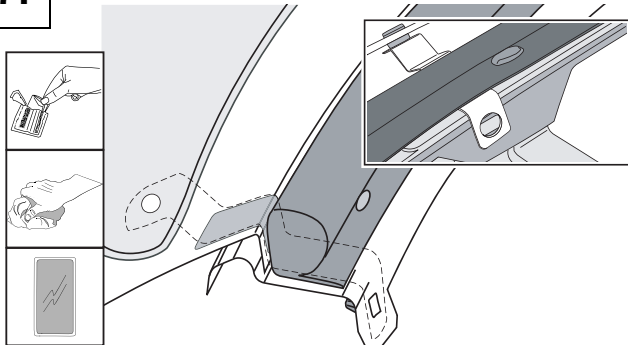


Trial-fit the metal clips. Gently lift the rubber seal shown and position clips between the rubber seal and the vehicle, aligning with cover pin holes. Note where the clips contact the vehicle and clean this area with the alcohol wipe provided. Wipe away any residue with a clean dry cloth. Adhere the abrasive resistant tape strips to these locations, as shown.

8.

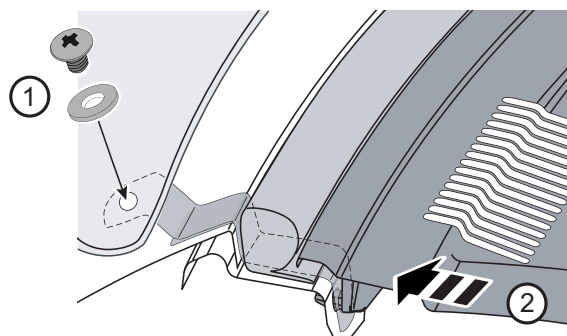

Loosely secure the Hood Protector to metal clips with the small screws and small washers provided. Gently lift the rubber seal & re-fit the metal clips over the abrasive resistant tape, then reinstall the cover and air intake duct, ensuring the tabs on the cover locate through the holes in the metal clips. Secure the cover and air intake duct with the previously removed clips.


9.

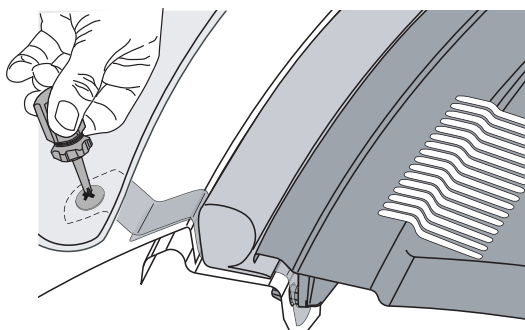

Finally, tighten the small screws, securing the Hood Protector firmly. **DO NOT OVERTIGHTEN.**

To Remove: Reverse above procedure.

NOTE: Check tension of part periodically, and tighten screws if required.

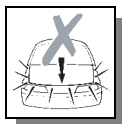

Do not slam hood.



Clean Hood Protector with a mild detergent and water solution.



Do not use abrasive cleaners.