 


MITSUBISHI MOTORS  
GENUINE PARTS

# LANCER (RALLIART Edition) SHIFT KNOB (Aluminum) MZ525639EX


## INSTALLATION AND HANDLING INSTRUCTIONS

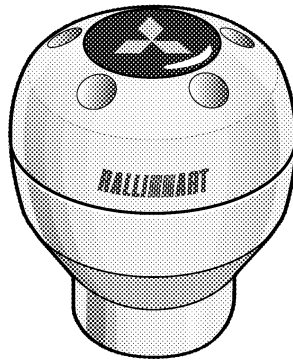


Thank you for purchasing the Mitsubishi Genuine Accessory.  
To install and use the product correctly with proper knowledge of it, read this publication carefully.  
Keep this publication for reference when maintenance is required.

### Attention

- This publication gives precautionary instructions in the boxes titled as follows.  
Read through these instructions thoroughly.

 **Caution** Describes precautions that should be observed in order to prevent injury or damage to the vehicle or its components, which may occur if sufficient care is not taken.

 **Note** Provides additional information that facilitates installation work.

- Failure to follow these instructions not only prevents the product from working properly but may lead to trouble with the vehicle. Be sure to follow all instructions carefully.
- If there is anything unclear about the installation, handling and/or usage of the product, contact your Mitsubishi Motors dealer for clarification.
- Mitsubishi Motors Corporation is not responsible for any defects or difficulties caused by or resulting from the failure to follow given instructions.
- We recommend you to have the installation performed at an authorized Mitsubishi Motors dealer.

To the dealer:  
Be sure that the customer receives this publication.

 
B027-001-0806  
(08B1237)

■ **TOOLS** (Make the following tools ready for use.)


No tool is needed.

■ **COMPONENTS** (Make sure that all of the following components were included in the kit.)

① Shift knob: 1

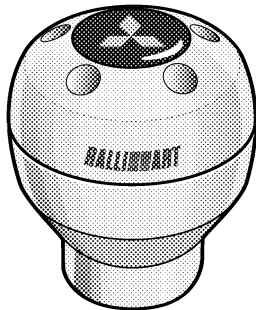

 ② Installation and Handling Instructions: 1 (this document)

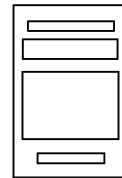


■ **PRECAUTIONS**

- Be sure to apply the parking brake securely. Remove the ignition key from the key cylinder.
- Apply chocks to the wheels.
- Set the shift lever in "P" (parking) position.

**INSTALLATION PROCEDURES**

 
**A. REMOVING THE STANDARD SHIFT KNOB**

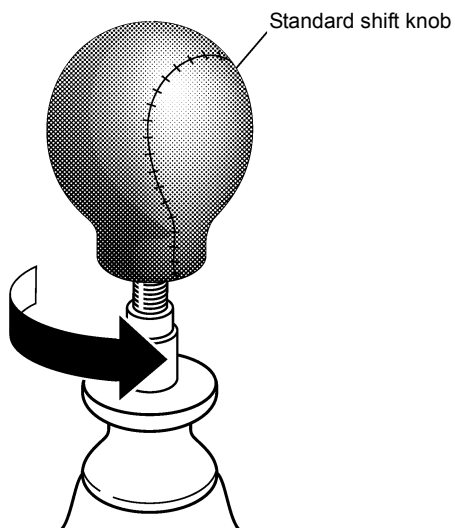

- 1) Turn the standard shift knob counterclockwise and remove it.

Check


## B. INSTALLING THE ALUMINUM SHIFT KNOB

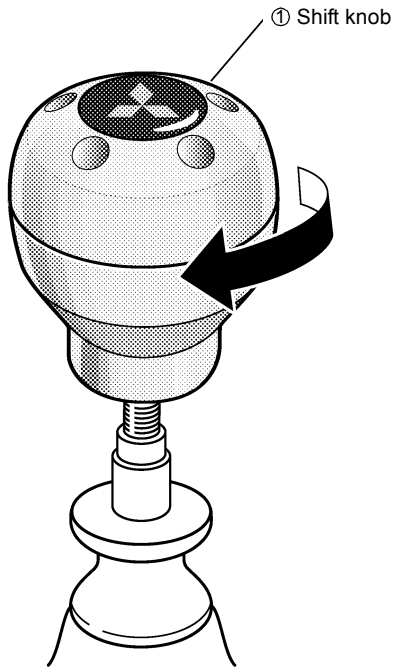 

- 1) Screw in the aluminum shift knob ① clockwise. When it becomes hard to turn, position the logo on the knob toward the rear of the vehicle.

### Note

 When the shift knob is tightened sufficiently, the clearance under the shift knob should be as indicated in the drawing as a reference.

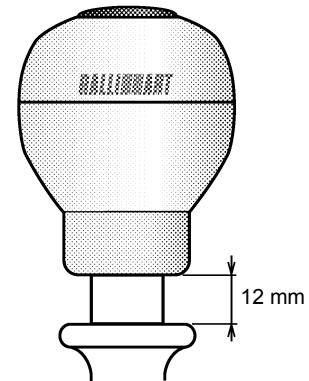

Check	<input type="checkbox"/>
-------	--------------------------

## C. CHECKING AFTER INSTALLATION

- Firmly depress the brake pedal. With the ignition switch set in the "ON" position, move the shift lever and check if there is no looseness.
- Confirm that the shift lever functions correctly.

Check	<input type="checkbox"/>
-------	--------------------------

## REINSTALLATION OF STANDARD SHIFT KNOB

- 1) Unscrew and remove the aluminum shift knob.
- 2) Screw in the standard shift knob.
- 3) Check the shift knob for looseness.

## CARE AND HANDLING

### Caution

This aluminum shift knob may become hot in accordance with the temperature increase in the cabin.

- Before driving, check that the shift knob is securely tightened.
- To clean this product, wipe with a dry and clean soft cloth. Do not use any solvents or abrasive.