



## **GENUINE PARTS**

## **INSTALLATION INSTRUCTIONS**

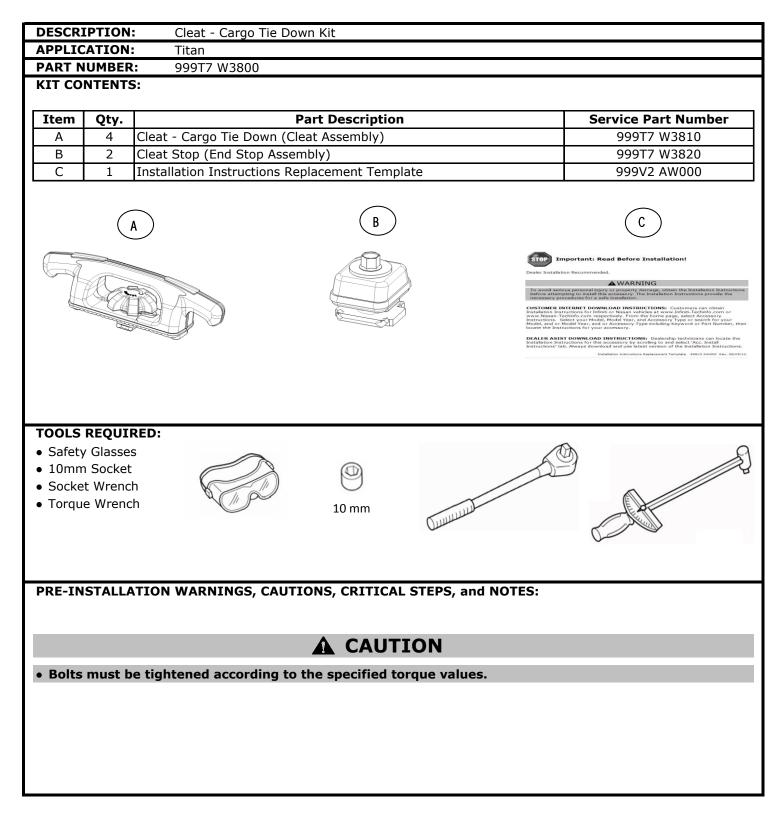

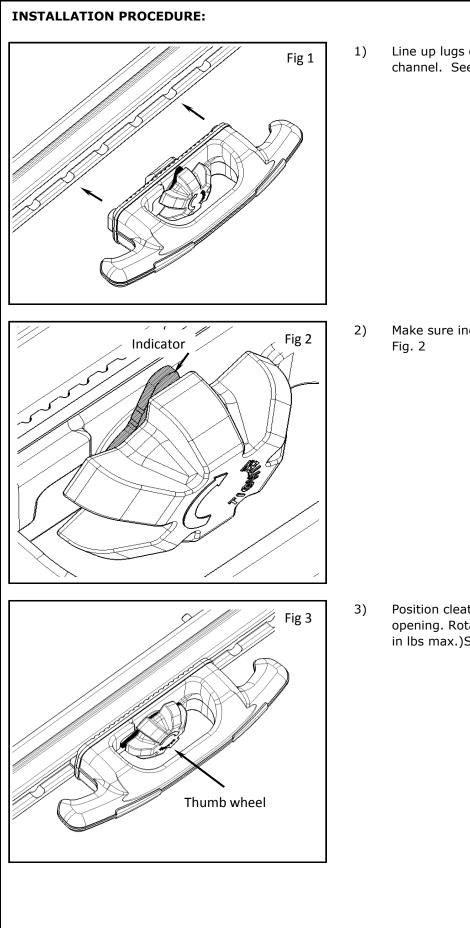

 Line up lugs on underside of cleat with notches in the channel. See Fig. 1

Make sure indicator is in the unlocked position. See Fig. 2

Position cleat into channel until flush with channel opening. Rotate thumb wheel clock-wise until tight (22 in lbs max.)See Fig. 3


## **INSTALLATION PROCEDURE:** Fig 4 Indicator Fig 5 В А Fig 6 Notch Lug

4) Indicator should be in locked position as shown. See fig. 4

5) Slide endstop into channel opening. Channel to be positioned between body (A) and plate (B). See Fig. 5

6) Align lugs on body (F) to notches on channel (G) in desired location. See Fig. 6

## **INSTALLATION PROCEDURE:**

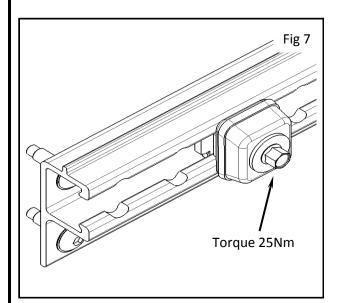

7) Torque bolt to 25Nm using 10mm socket wrench. See Fig. 6