




Part Number	Issue	Date		Page
H451SAL000	1	6/10/2014	SUBARU OF AMERICA	1/6



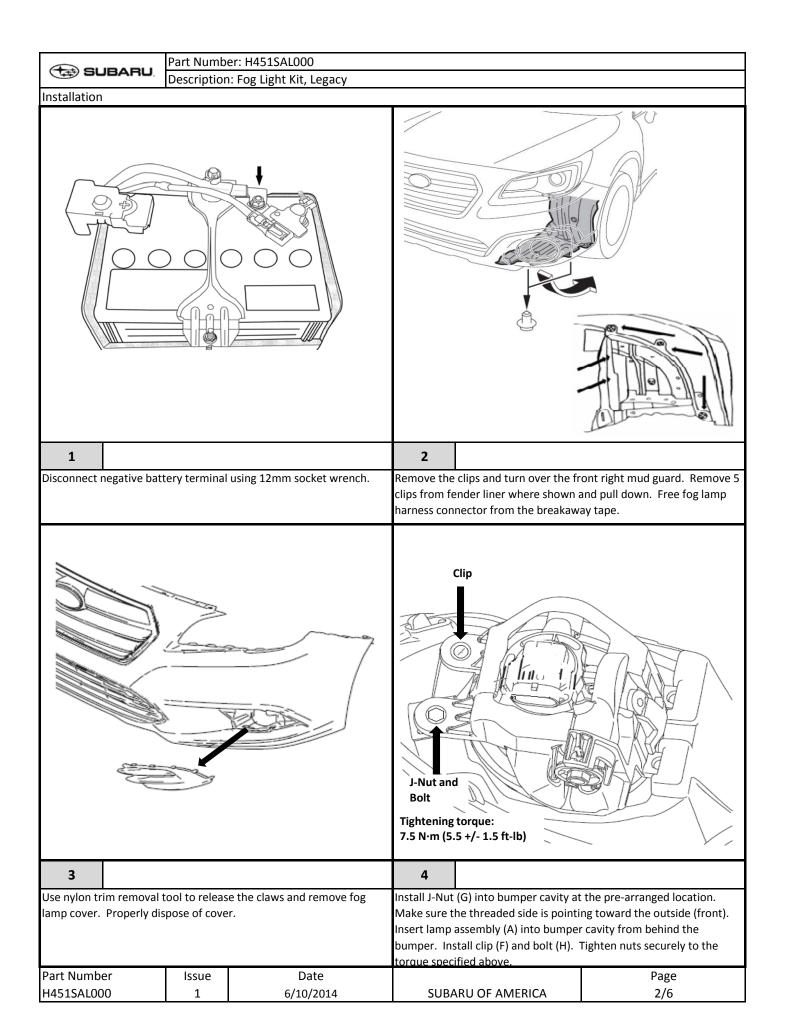

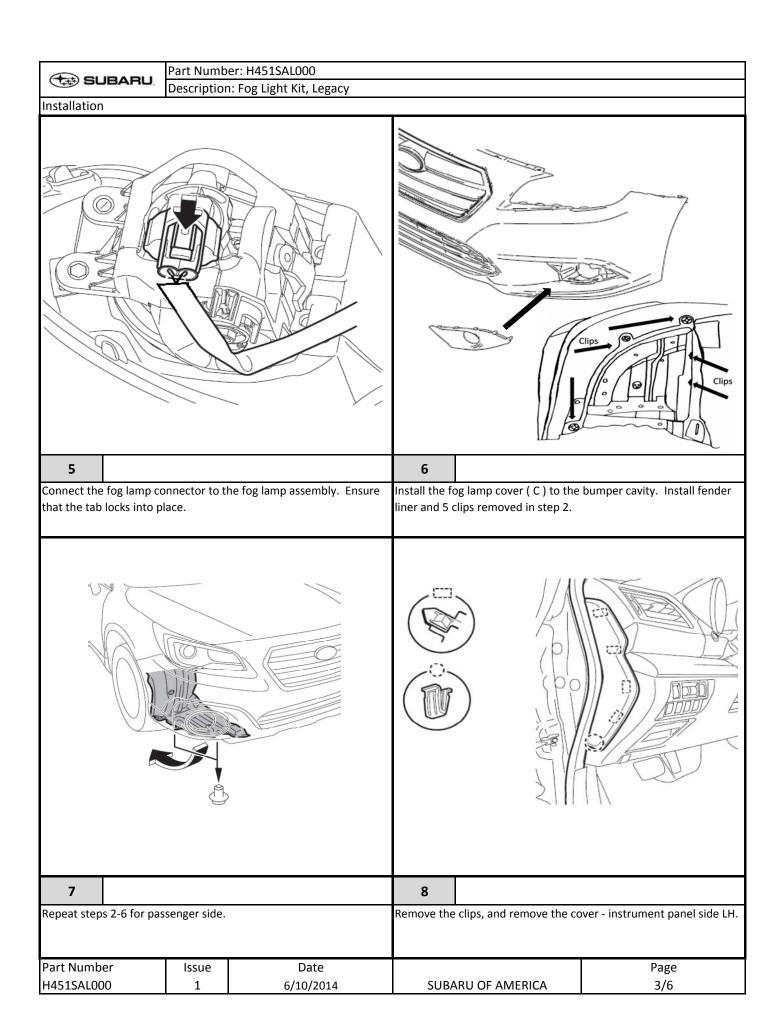


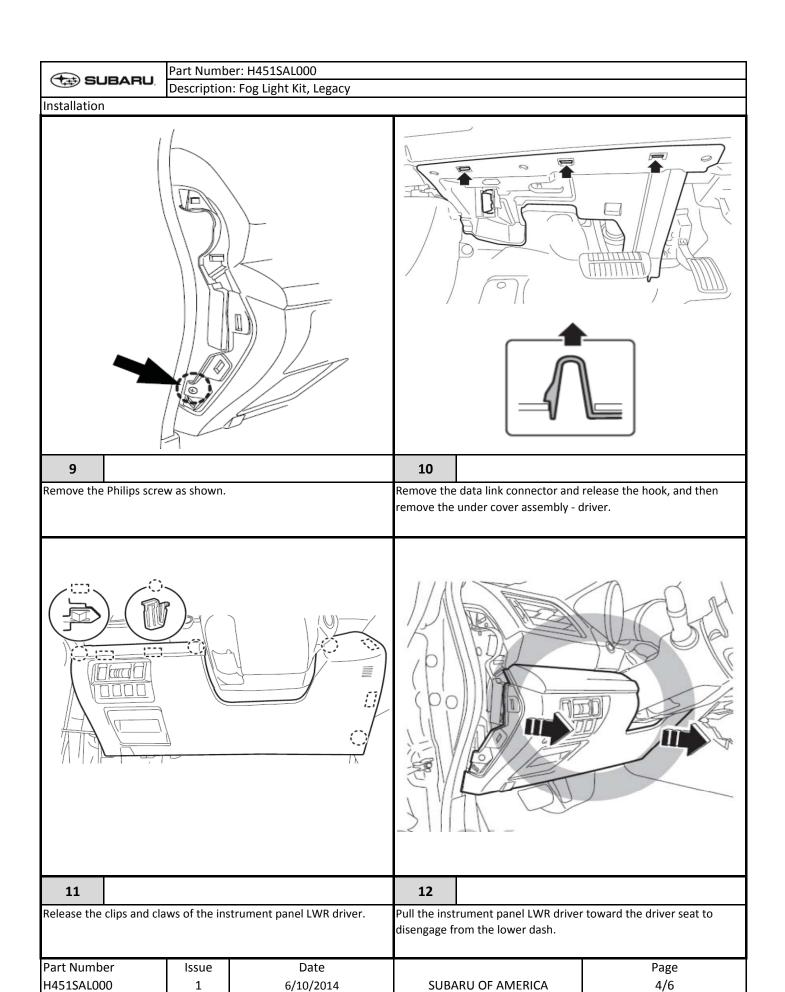


Part Number: H451SAL000

Description: Fog Light Kit, Legacy

Installation

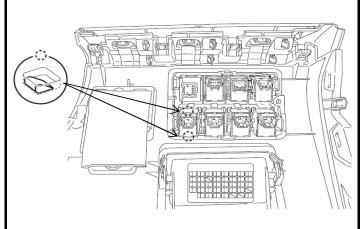

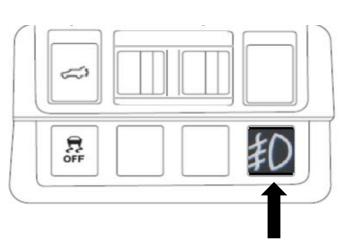



13

Disengage the pre-arranged fog lamp switch connector from the switch blank. Release the claws and remove the switch blank at the bottom right of the switch panel.

(Rear of lower instrument panel shown)

Insert the fog lamp switch (E) into the switch panel. Make sure the switch is inserted in the correct orientation in the bottom right opening on the switch panel and is locked in place. Wrap the supplied foam tape around the connectors to prevent rattles.

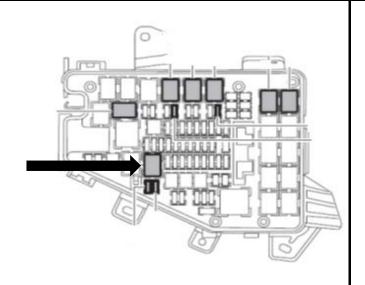

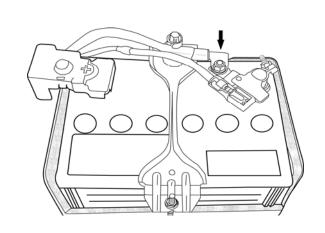

15

Open main fuse box in engine bay. Insert relay (D) in position shown by arrow. Replace fuse box cover.

Reconnect negative terminal to battery. Tighten with 12mm socket wrench.

 Part Number
 Issue
 Date
 Page

 H451SAL000
 1
 6/10/2014
 SUBARU OF AMERICA
 5/6

16

14




Part Number: H451SAL000

Description: Fog Light Kit, Legacy

Fog Lamp Aiming Procedure

- 1) Before checking fog light beam level, confirm the following:
- Body area around fog light has not sustained any damage or other type of deformation.
- Vehicle is parked on a level surface.
- Inflation pressure of tires is correct.
- Vehicle fuel tank is fully filled.
- 2) Bounce vehicle several times to normalize suspension.
- 3) Make certain someone is seated in the driver's seat.
- 4) Park vehicle with front end facing wall.

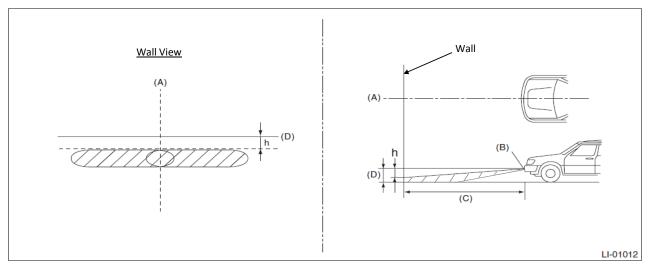

(A) Vehicle center

Bulb center marking

(C) 3 m (10 ft)

(D) Height of fog light center

h mm	(in)	at	3	m	(10	ft
	40	(1.	.5	8)		

Part Number	Issue	Date		Page
H451SAL000	1	6/10/2014	SUBARU OF AMERICA	6/6