

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31414344 Version 1.0 Part. No. 31359328


Electric engine heater, 110 V






Volvo Car Corporation Gothenburg, Sweden


Materials	
Designation	Part number
Grease	1161761

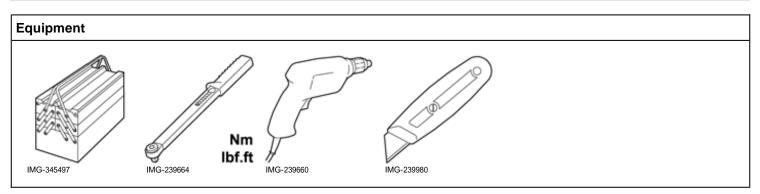

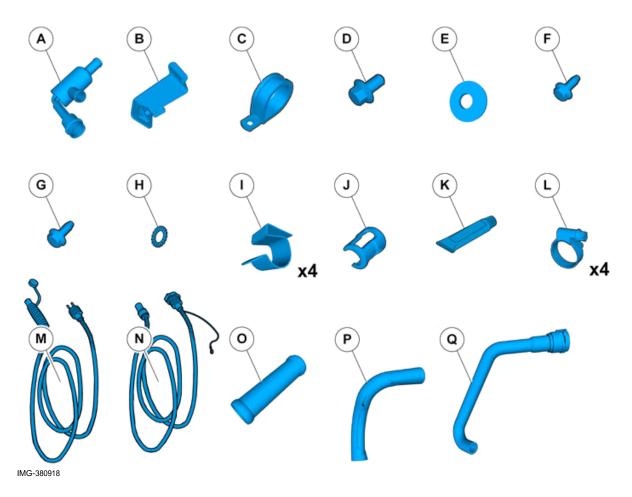



 Volvo Car Corporation Gothenburg, Sweden





Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Conditions
2	When installing, the car must retain a temperature of 20 degrees C.
	Color symbols
3	
(1) (3) (5)	Note! This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.
	 Used for focused component, the component with which you will do something.
	Used as extra colors when you need to show or differentiate additional parts.
2	 Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
IMG-363036	 Used when the component is not fully removed from the vehicle but only hung to the side.
	5. Used for standard tools and special tools.
	6. Used as background color for vehicle components.


Removal





Volvo Car Corporation Gothenburg, Sweden

1

Set the ignition key to position 0.

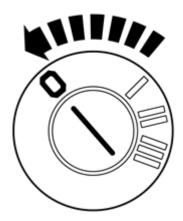

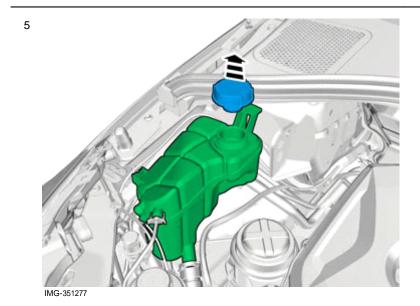


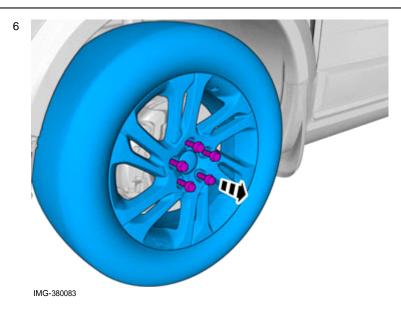




Volvo Car Corporation Gothenburg, Sweden

7

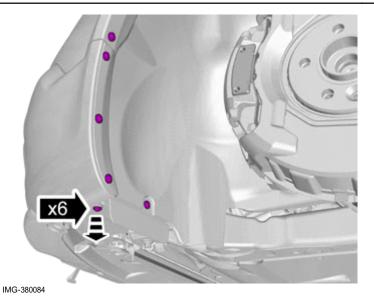


Remove the screws.

8

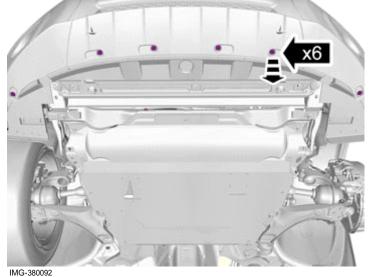

Remove the screws.


9

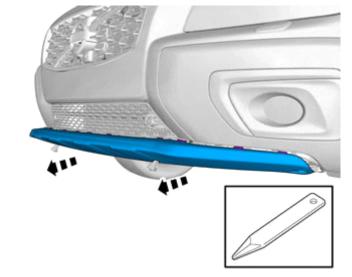

IMG-380086 © Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden

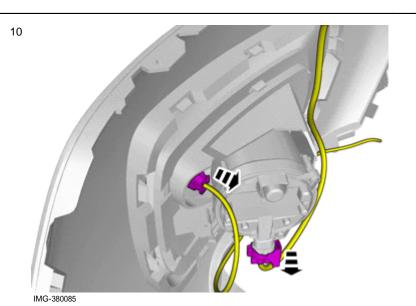

Disconnect the connector for the fog lamp.

Disconnect the connector.




Remove the panel.



Volvo Car Corporation Gothenburg, Sweden

12

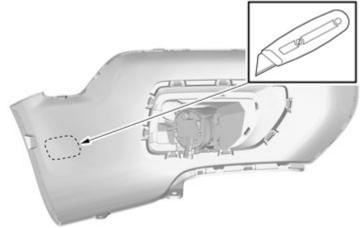


Caution!

Cut carefully to avoid unintentional damage or personal injury.


Locate relevant marking.

IMG-380088

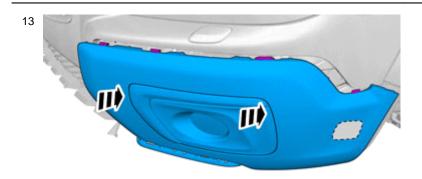

Install the panel.

IMG-380090

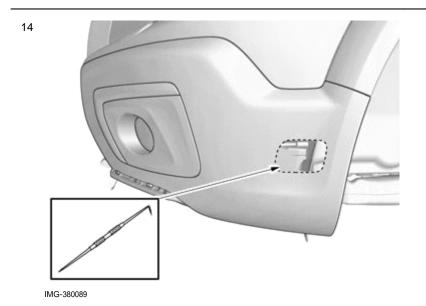

Scribe/mark up




Volvo Car Corporation Gothenburg, Sweden



IMG-380087



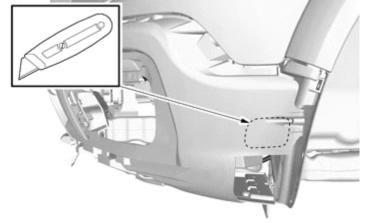

Caution!

Cut carefully to avoid unintentional damage or personal injury.









Volvo Car Corporation Gothenburg, Sweden

Accessory installation

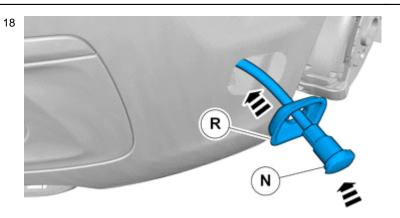


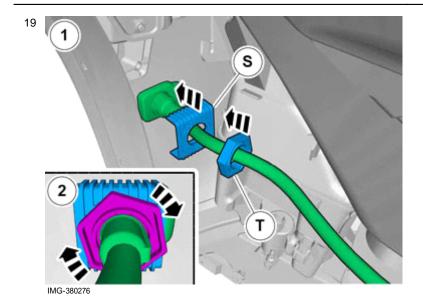




Volvo Car Corporation Gothenburg, Sweden

20

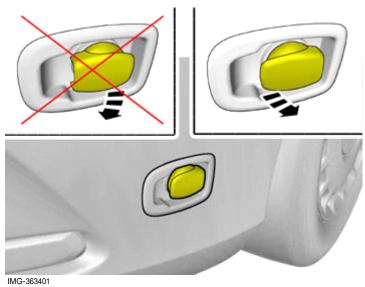

Removal

21

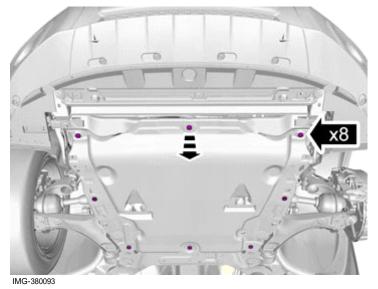


Remove the screws.




Volvo Car Corporation Gothenburg, Sweden

22

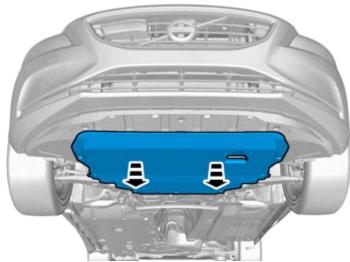

IMG-358531

IMG-341914

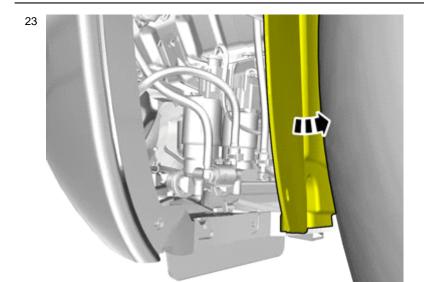


Fold the wing liner to one side.

Accessory installation



Volvo Car Corporation Gothenburg, Sweden


24

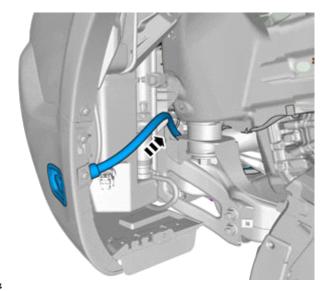


Caution!

Ensure that the wire or wiring harness cannot rub against adjacent components.

IMG-380094

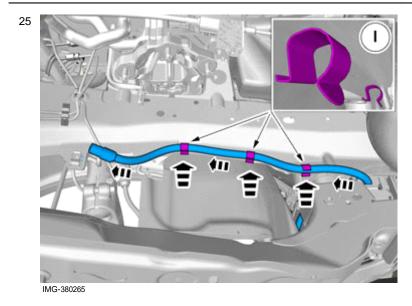

26

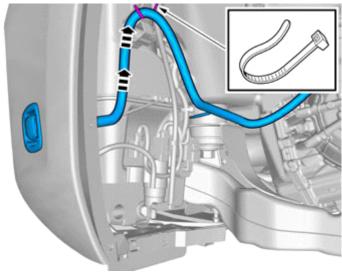


Attach any excess wire to the wiring harness.



Volvo Car Corporation Gothenburg, Sweden


27

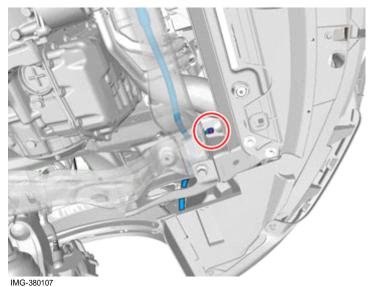

Note!

Orientation view

28

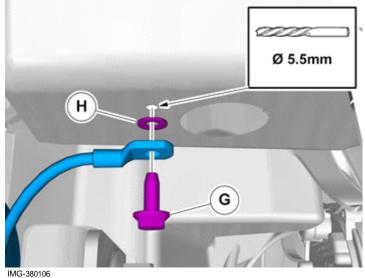


Removal



Volvo Car Corporation Gothenburg, Sweden

29

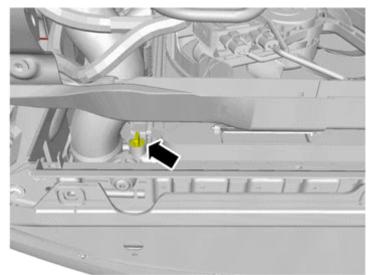

Place a container under the car.

Drain the coolant.


IMG-316303

30



Note!

Orientation view

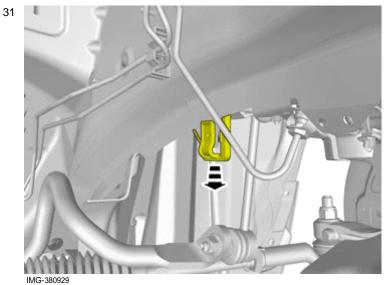


Loosen the clip.

© Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

Accessory installation

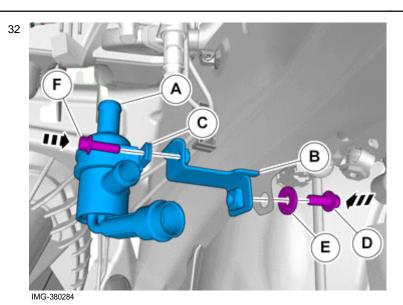

Installation

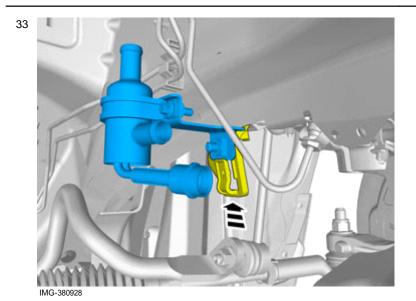


Install the clip(s).

Removal



Volvo Car Corporation Gothenburg, Sweden

34

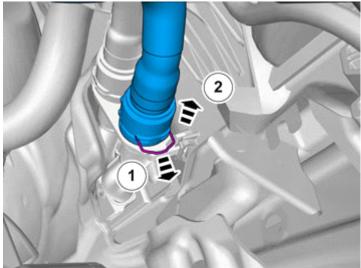


IMG-380706

Warning!

Be prepared to collect escaping fluid.

Loosen the clip.

Remove the hose.

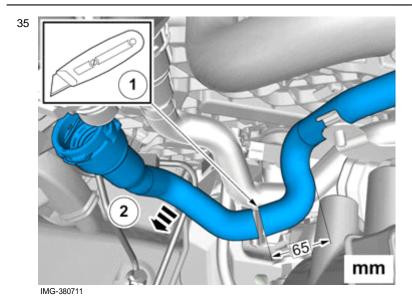

Remove the hose.


The part is not to be reused.

Accessory installation



Volvo Car Corporation Gothenburg, Sweden


36

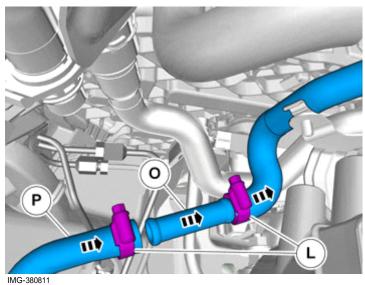

Install the hose.


Tighten the hose clamps.

37

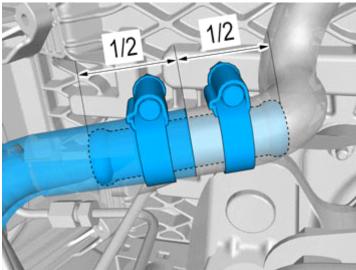

IMG-381572

38

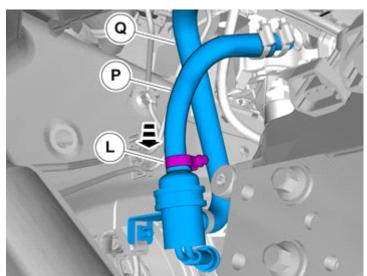


IMG-380813

Install the hose.

Tighten the hose clamp.



Volvo Car Corporation Gothenburg, Sweden

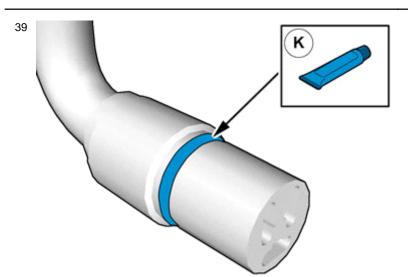


Caution!

No grease on contact surfaces.

Lubricate the O-ring.

Use: 1161761, Grease

IMG-362914

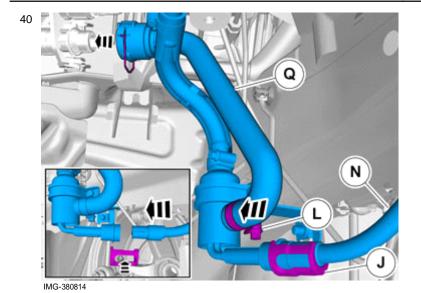

Install the hose.

Tighten the hose clamp.


Connect the prerouted cable.

Install the catch.

Installation



Volvo Car Corporation Gothenburg, Sweden

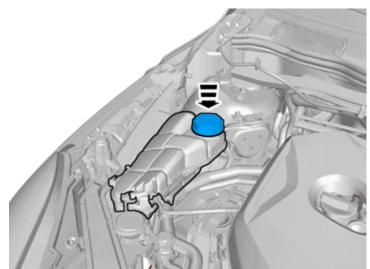


Reinstall the removed parts in reverse order.

Fill with coolant and run the engine to operating temperature.

Vent the cooling system and check for leakage.

Post-fill the cooling system if necessary.

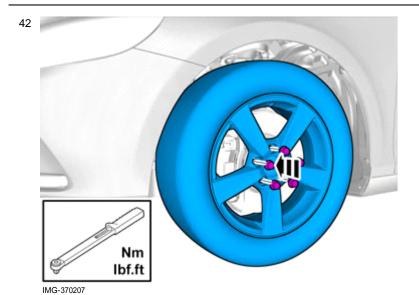

Tightening torque: Wheel to wheel hub

Stage 1: 20 Nm Stage 2: 140 Nm