

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31316486 Version

Part. No.

1.6


30756607, 31316446, 31330933, 31390471, 31369832, 31369831, 31369830, 31373333


# Steering wheel





Volvo Car Corporation Gothenburg, Sweden

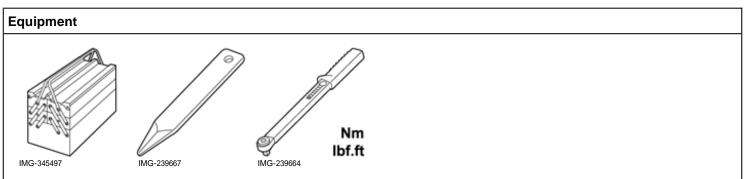

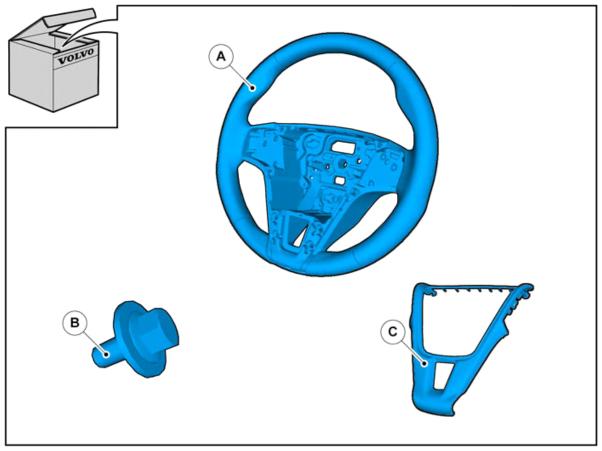

IMG-344716



Volvo Car Corporation Gothenburg, Sweden

#### Information

1

Read through all of the instructions before starting installation.


Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

#### Conditions

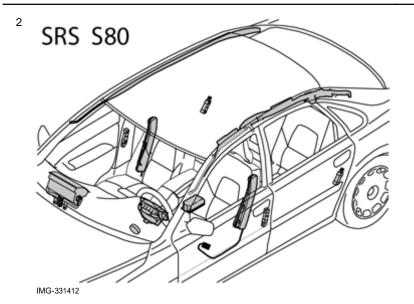


#### Warning!

The supplemental restraint system (SRS) is active for a certain length of time after the power supply has been disconnected. Wait for a minimum of 30 seconds before disconnecting or removing any SRS components.




Volvo Car Corporation Gothenburg, Sweden

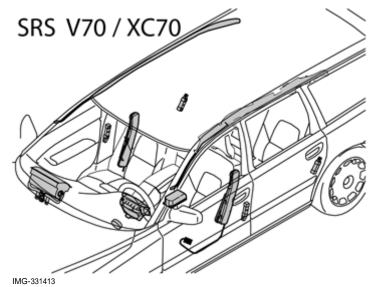

#### Removal

4

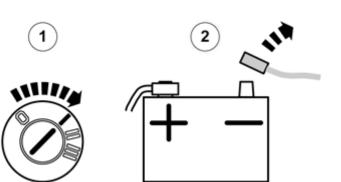


Set the ignition key to position I.

Remove the battery's negative cable.

IMG-332180




Volvo Car Corporation Gothenburg, Sweden

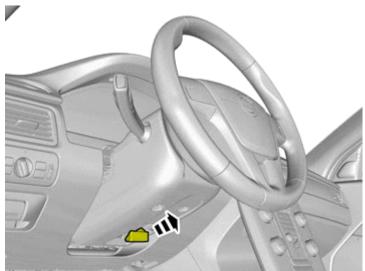

IMG-344717



IMG-344721

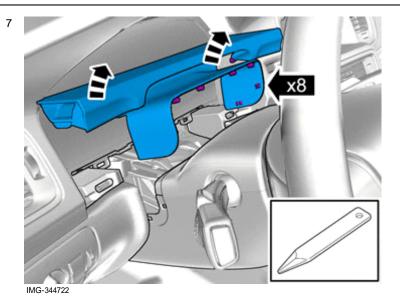


Remove the panel.




Volvo Car Corporation Gothenburg, Sweden



Remove the panel.

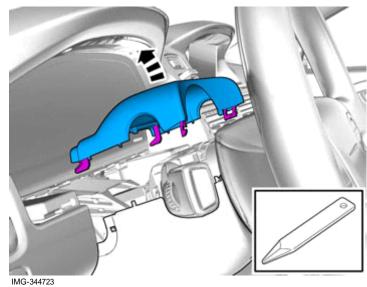




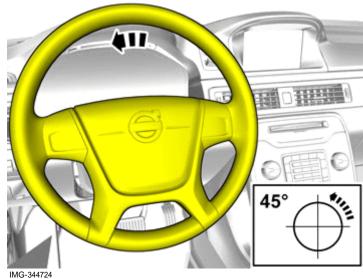


10


mm

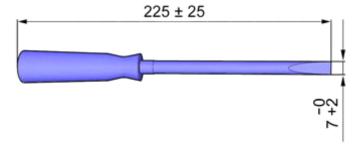



Volvo Car Corporation Gothenburg, Sweden

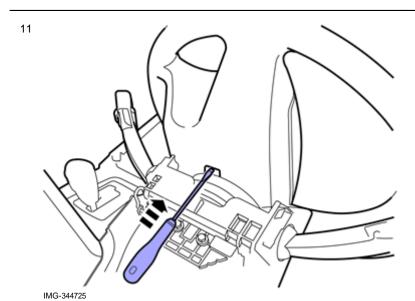

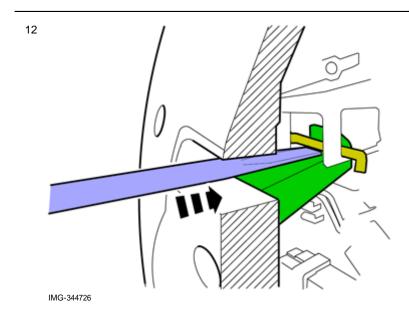






13

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

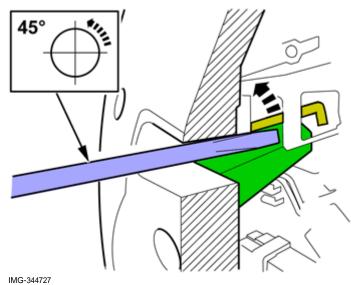

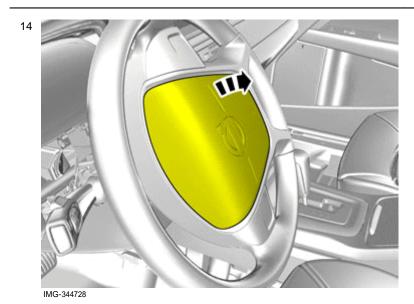

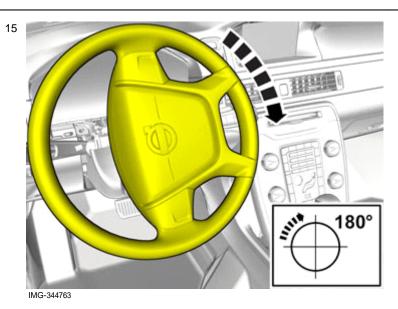

© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden


16

Repeat the steps when removing on opposite side.

17



Turn the steering wheel into neutral position.

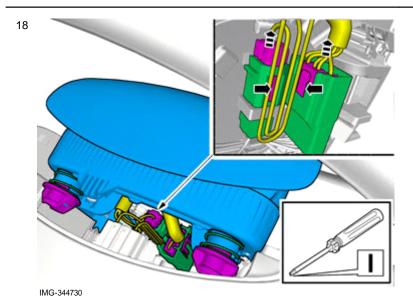


Disconnect the connectors.



Volvo Car Corporation Gothenburg, Sweden


19

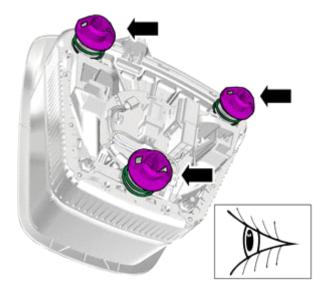

#### Warning!


Place the airbag module with the front side facing up in a safe storage area during work.

IMG-344731

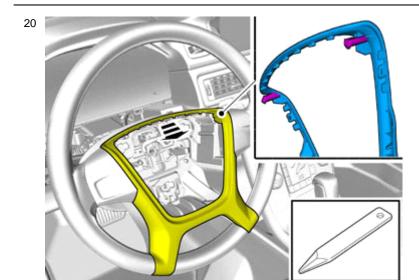

#### Note

This step requires considerable force.

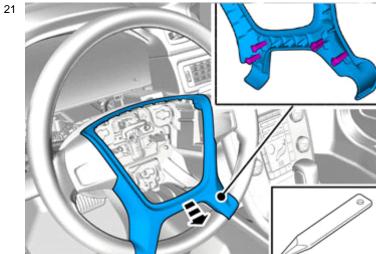

N.

IMG-344732

#### Note!

This step requires considerable force.


© Volvo Car Corporation Steering wheel- 31316486 - V1.6

Page 10 / 19




Volvo Car Corporation Gothenburg, Sweden

22

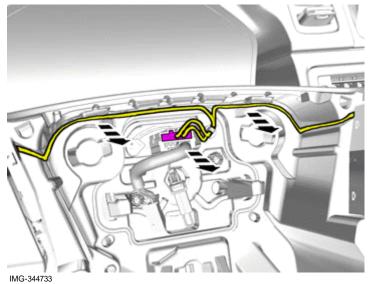

Disconnect the connector.

23

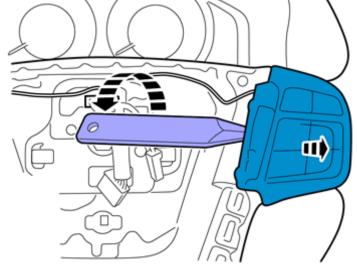


#### Note!

This step requires considerable force.

Repeat on the other side.

IMG-344734

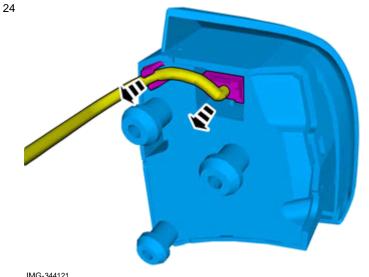

#### Note!

The number of connectors, cables and cable ties can vary depending on the vehicle's equipment level.

Repeat on the other side.


IMG-344121 © Volvo Car Corporation

Steering wheel- 31316486 - V1.6




Volvo Car Corporation Gothenburg, Sweden

25

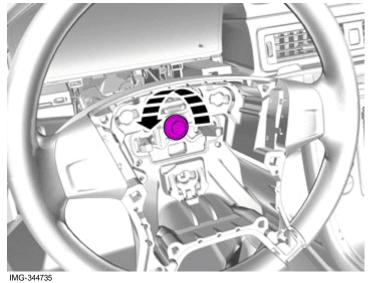

Note


Do not loosen the bolt more than 4 turns.

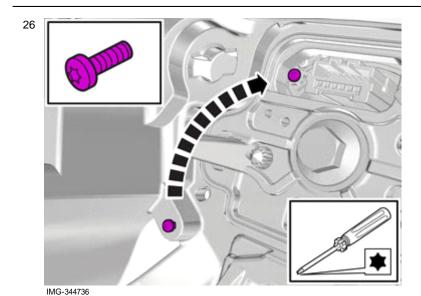



Volvo Car Corporation Gothenburg, Sweden



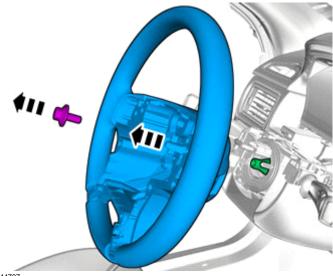




IMG-344738





 

Remove the clip.


#### Installation




IMG-344740

### Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

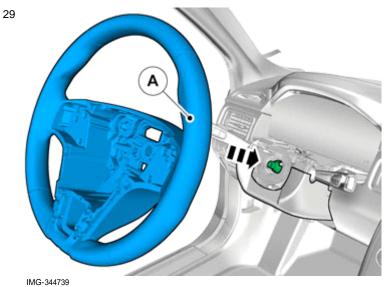

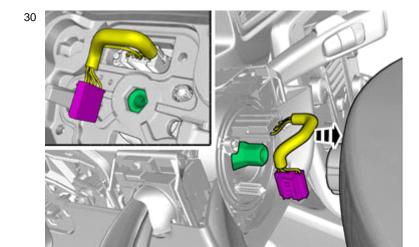

#### Caution!

Make sure that no part of the wiring harness is trapped.

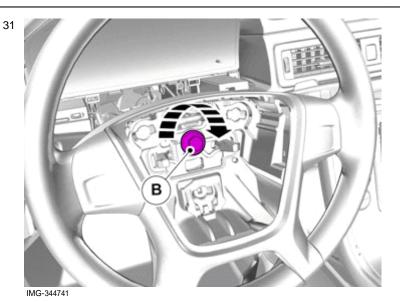


#### Note


Only tighten the nut finger tight at this stage.




Volvo Car Corporation Gothenburg, Sweden

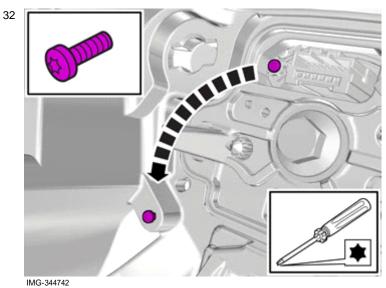

11110 01111

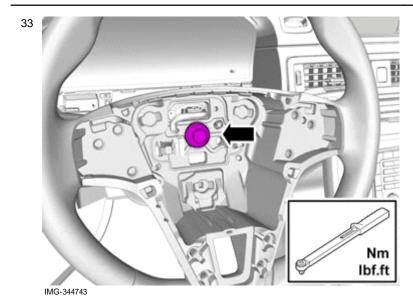

Tightening torque: M10, 50 Nm

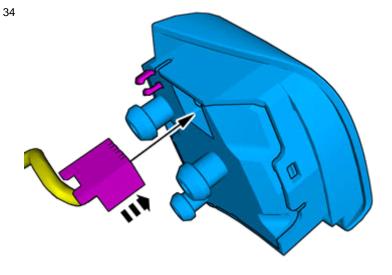


Repeat on the other side.

IMG-344744 © Volvo Car Corporation


Steering wheel- 31316486 - V1.6



Volvo Car Corporation Gothenburg, Sweden

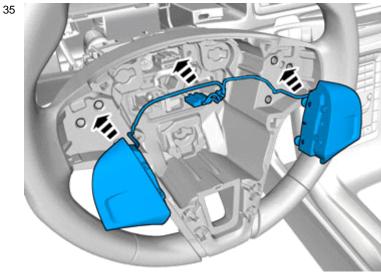

IMG-344745

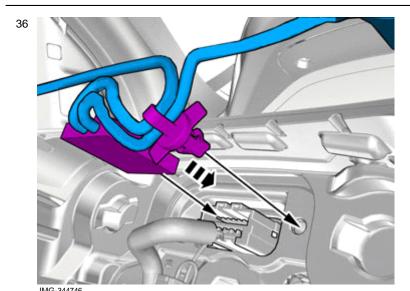


Connect the connector.

Install the clips as illustrated.



Volvo Car Corporation Gothenburg, Sweden

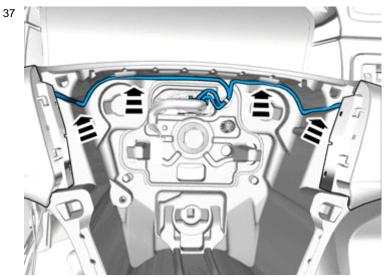

.....






IMG-339675

IMG-344748




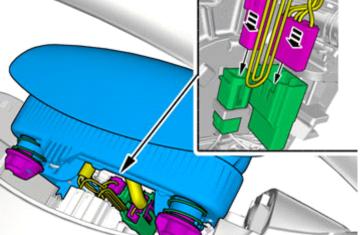


Connect the connectors.




Volvo Car Corporation Gothenburg, Sweden

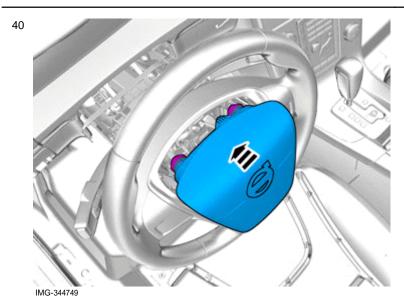

41

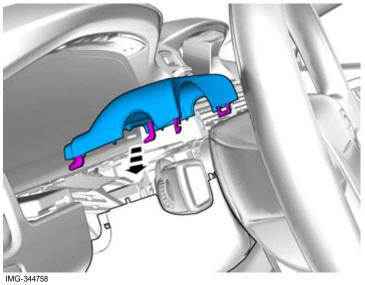

Install the panel.

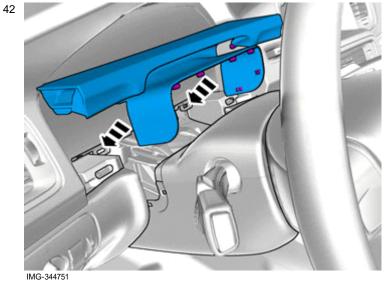

Install the panel.


© Volvo Car Corporation

Steering wheel- 31316486 - V1.6



Volvo Car Corporation Gothenburg, Sweden

43

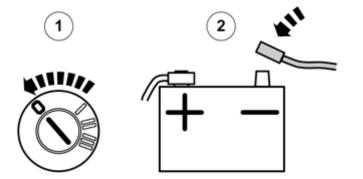


#### Note

Make sure that the ignition key is in the OFF position.

Reinstall the battery's negative cable.

IMG-337646

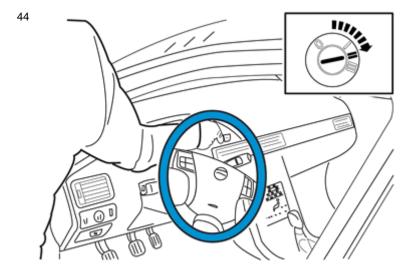

#### Warning!

When switching the ignition on for the first time after a battery disconnect and connect, make sure to stand outside the vehicle and only reach into the vehicle keeping clear of the air bag deployment areas.

IMG-336904