

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31390250 Version

Part. No.


1.0


31373747, 31399101

Steering wheel, leather, heated and paddles



Volvo Car Corporation Gothenburg, Sweden

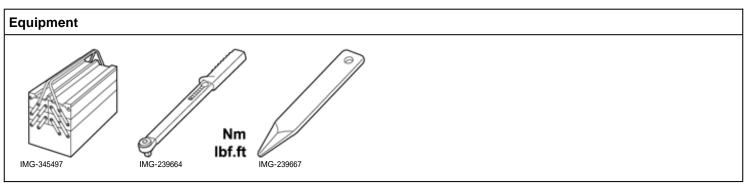

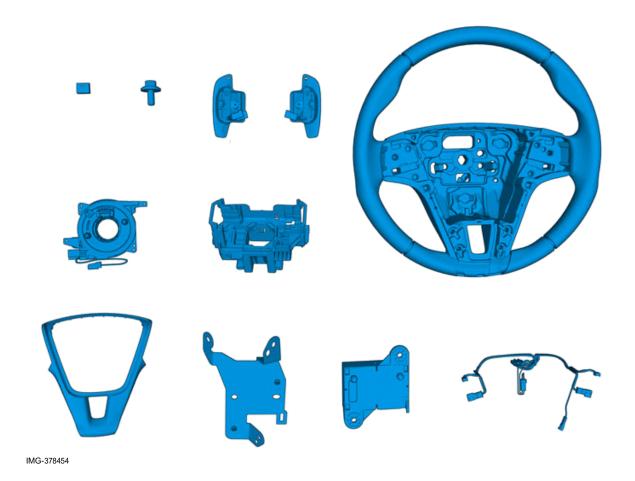




Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Further information
2	These installation instructions show installation on left hand drive cars.
	When installing on right-hand drive cars, perform the procedures on the opposite side and/or mirrored.
	Where the procedure differs, the right-hand version is also shown with text and image.
	Color symbols

3

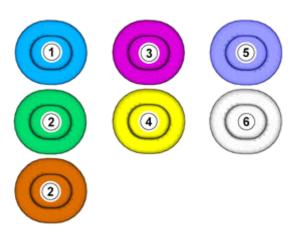

IMG-363036

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- Used as background color for vehicle components.
 Steering wheel, leather, heated and paddles- 31390250 V1.0


© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden

Removal

4

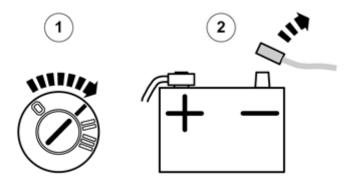

Warning!


The supplemental restraint system (SRS) is active for a certain length of time after the power supply has been disconnected. Wait for a minimum of 30 seconds before disconnecting or removing any SRS components.

- 1. Turn on the ignition.
- 2. Remove the battery's negative cable.

IMG-332180

Left hand drive vehicles

5

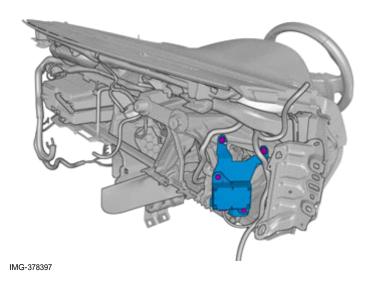


Note!

Orientation view




Volvo Car Corporation Gothenburg, Sweden

6

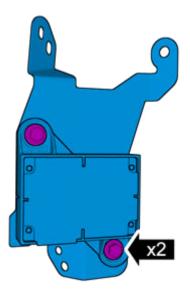


IMG-378605

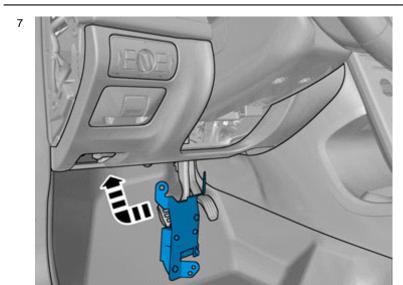

IMG-378398



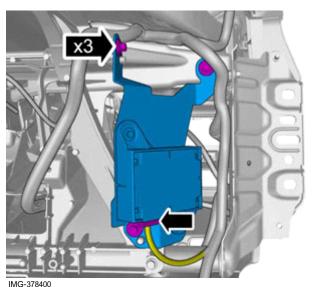

Install the screws.

Locate the pre-routed connector.


Connect the connector.



Volvo Car Corporation Gothenburg, Sweden


Right-hand drive vehicles

9

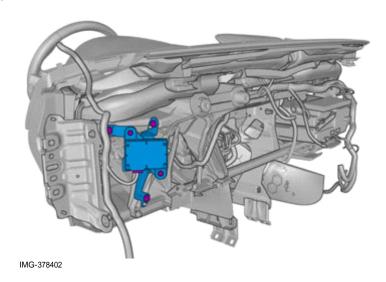

Note!

Orientation view

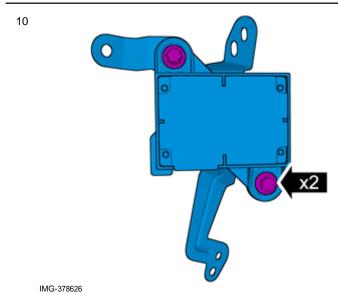




Volvo Car Corporation Gothenburg, Sweden

11



IMG-378403

12

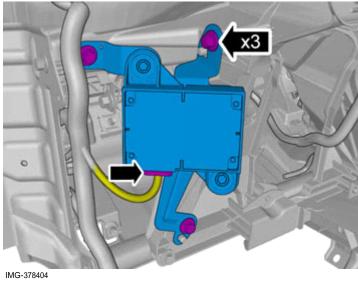

Install the screws.

Locate the pre-routed connector.


Connect the connector.

All vehicles



Volvo Car Corporation Gothenburg, Sweden



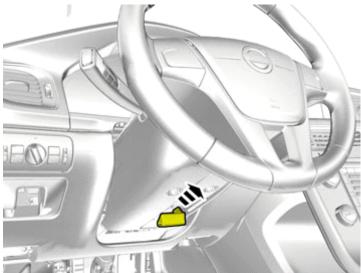






IMG-345553



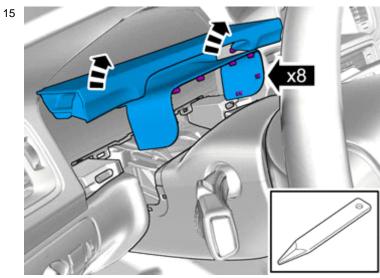

Remove the panel.

© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden



Remove the panel.


17

IMG-345554




18


mm

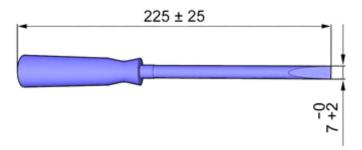



Volvo Car Corporation Gothenburg, Sweden

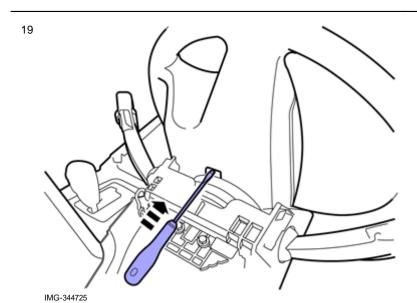

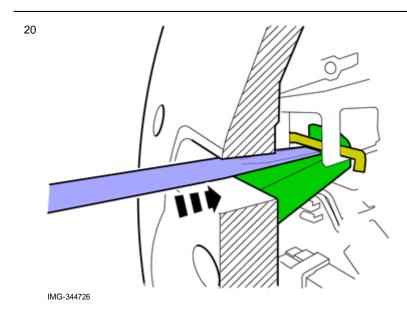




21


Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

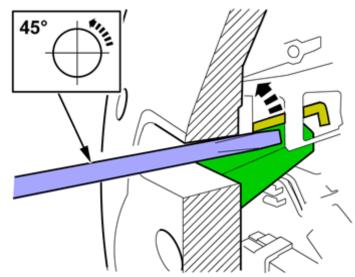

IMG-344727



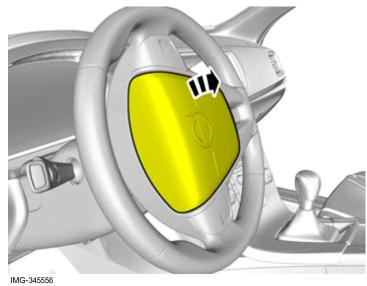





Repeat on the other side.

© Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

24



Repeat the steps when removing on opposite side.


Turn the steering wheel into neutral position.

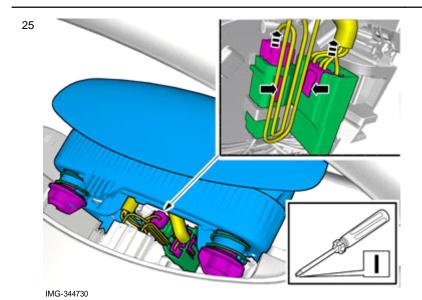

Release the connector's catch.

Disconnect the connectors.

26

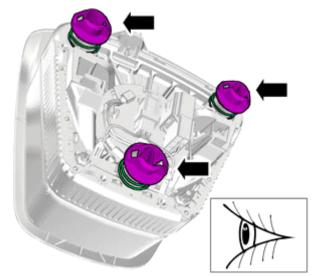

IMG-344731 © Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

27

Warning!

Place the airbag module with the front side facing up in a safe storage area during work.



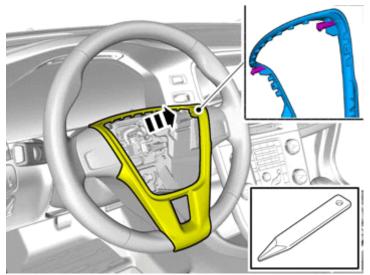

Note!

This step requires considerable force.

Detach the panel.

IMG-345559



Note!

This step requires considerable force.


Remove the panel.

© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden

30

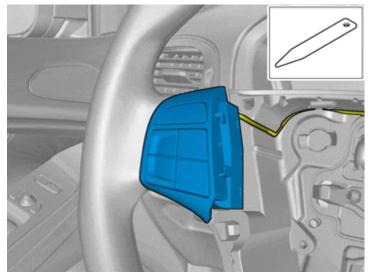

Note!

This step requires considerable force.

Repeat on the other side.

IMG-373323



Disconnect the connector.




IMG-373322



Disconnect the connector.


Repeat on the other side.

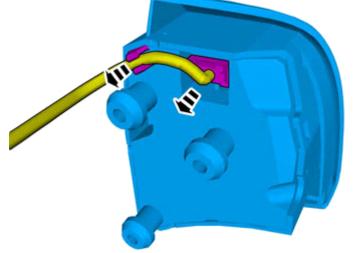




Volvo Car Corporation Gothenburg, Sweden

33

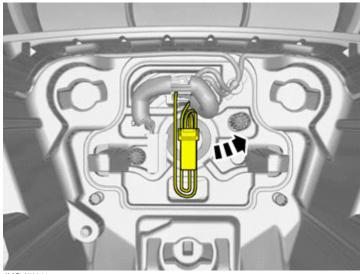


IMG-373344

34

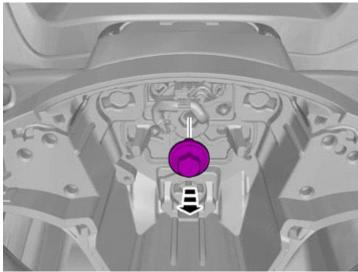

IMG-373345

35

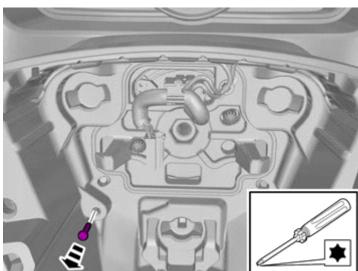

IMG-373339


© Volvo Car Corporation

Remove the screws.



Volvo Car Corporation Gothenburg, Sweden

36

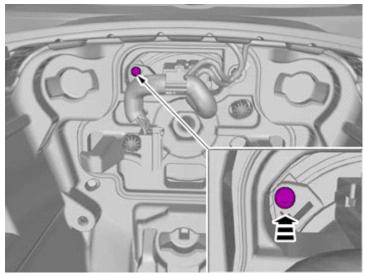

Reinstall the screw.

Use hands only.

IMG-373341

37




Remove the part carefully

© Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

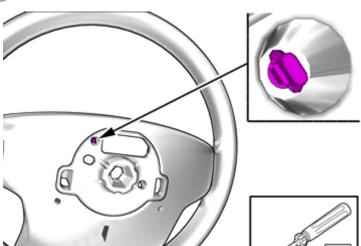

Remove the cable harness clips.




IMG-344511

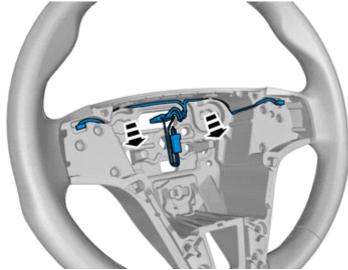

IMG-373349



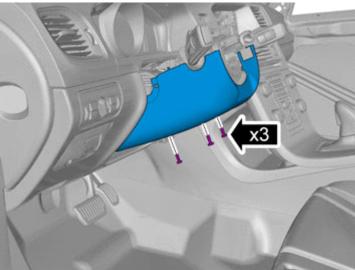


IMG-378827

Remove the screws.




Volvo Car Corporation Gothenburg, Sweden

41

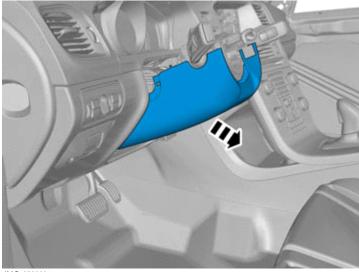

IMG-378828


42

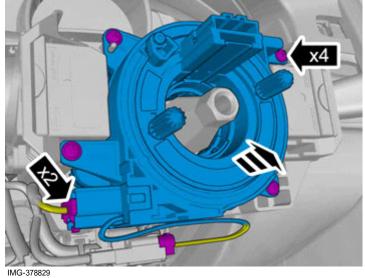

Remove the screws.

Disconnect the connectors.

43

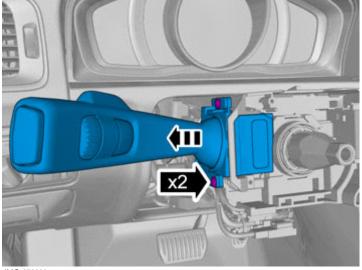

Remove the screws.

Repeat on the other side.

IMG-378830


© Volvo Car Corporation

Steering wheel, leather, heated and paddles- 31390250 - V1.0




Volvo Car Corporation Gothenburg, Sweden

44

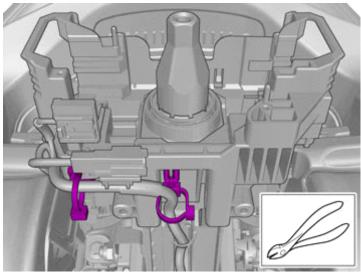

IMG-378831

45

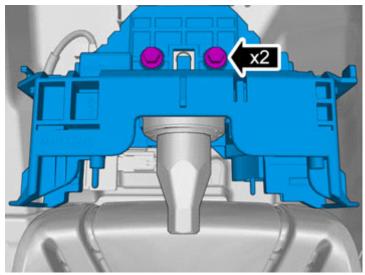


Remove the screws.



Volvo Car Corporation Gothenburg, Sweden

46

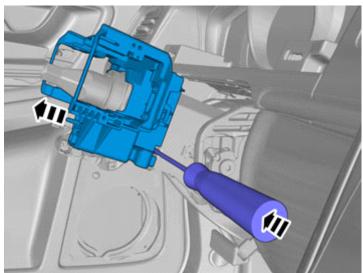


Release the lock.

IMG-378832


Accessory installation



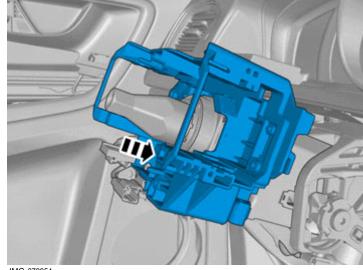





Volvo Car Corporation Gothenburg, Sweden

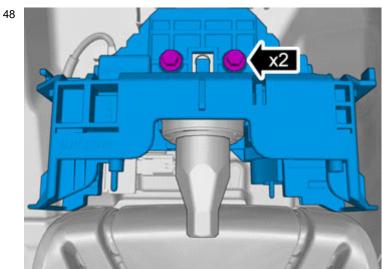

IMG-378855

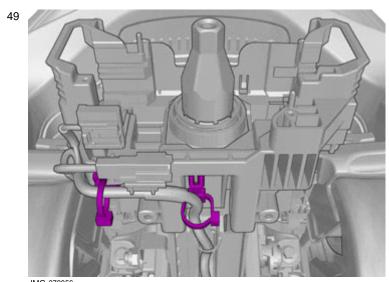

IMG-378856

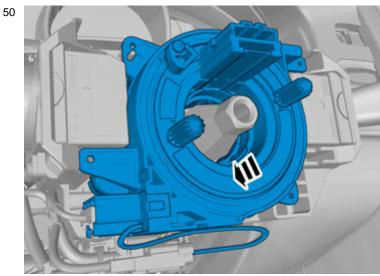

IMG-378878




Volvo Car Corporation Gothenburg, Sweden

51

Connect the connectors.

IMG-37885

52

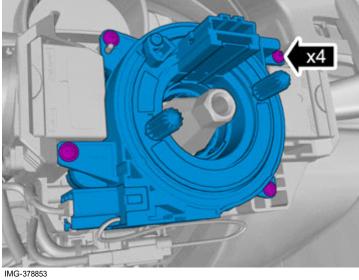

Install the screws.

Installation




Volvo Car Corporation Gothenburg, Sweden

53

Reinstall the removed parts in reverse order.

IMG-377070

Accessory installation

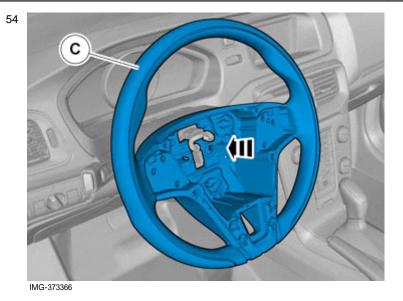



Volvo Car Corporation Gothenburg, Sweden

55



Install the screw.

IMG-373383

56



Remove the screw.

IMG-373392

57



Install the screw.



Volvo Car Corporation Gothenburg, Sweden


58




Tightening torque: Steering wheel to steering column (center screw), 48 Nm

59

IMG-373623

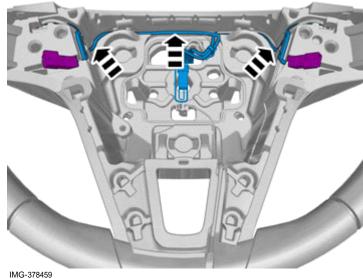

60

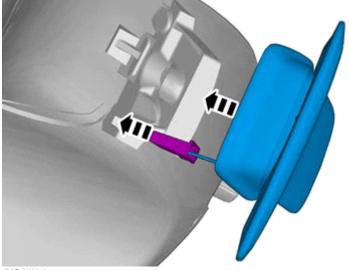


Repeat on the other side.


IMG-378449 © Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden

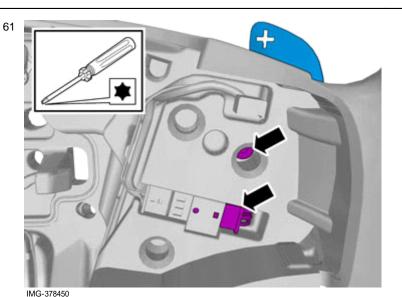

Repeat on the other side.

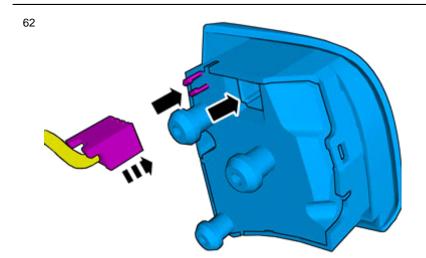


Repeat on the other side.




Volvo Car Corporation Gothenburg, Sweden

63

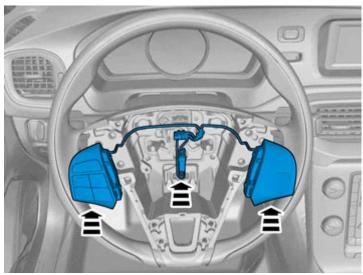

IMG-373385

64

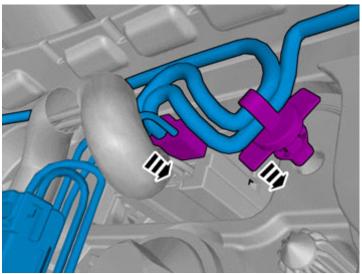


Connect the connector.

Install the clip(s).



65

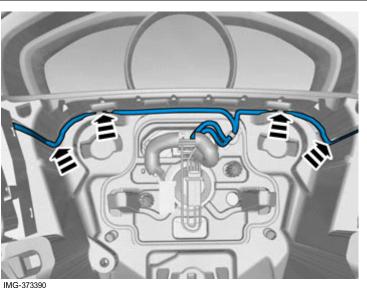

Install the cable.

© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden

66




Install the panel.

IMG-373388

67

Connect the connectors.

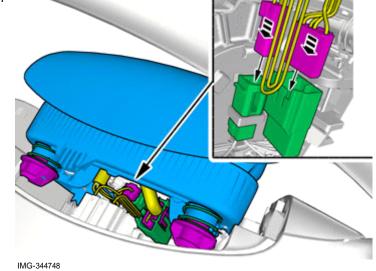


Installation



IMG-349387

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

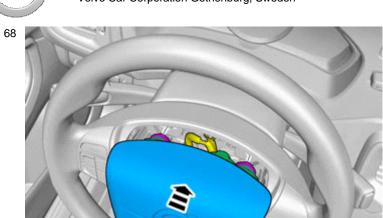

Caution!

Make sure that no part of the wiring harness is trapped.

Reinstall the removed parts in reverse order.

Removal


69

Remove the panel.



Volvo Car Corporation Gothenburg, Sweden


70

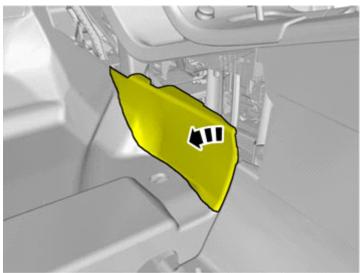

Fold the carpet to the side.

IMG-292806

71

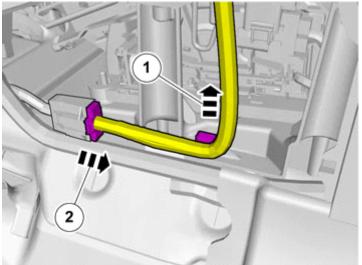


Unhook the cable harness clips.

Disconnect the connector.

IMG-292823

72

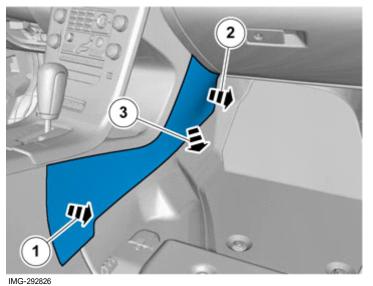

Remove the panel.

© Volvo Car Corporation

Steering wheel, leather, heated and paddles- 31390250 - V1.0



Volvo Car Corporation Gothenburg, Sweden

73


IMG-292827

Disconnect the connector, if applicable.

74



75

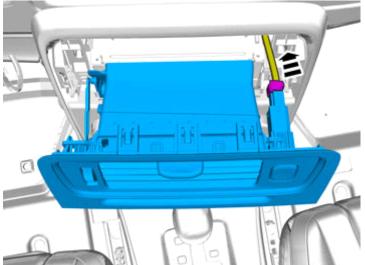

© Volvo Car Corporation

Disconnect the connector.




Volvo Car Corporation Gothenburg, Sweden

76

Remove the screws.

77

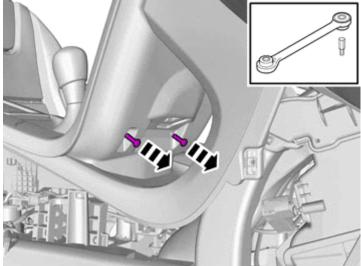

Remove the screws.


IMG-355818

Cars with automatic transmissions




Volvo Car Corporation Gothenburg, Sweden



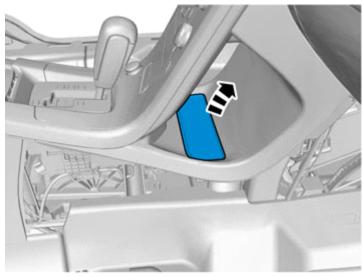


IMG-293006



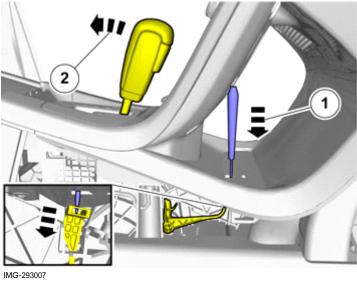


Release the shift-lock function.




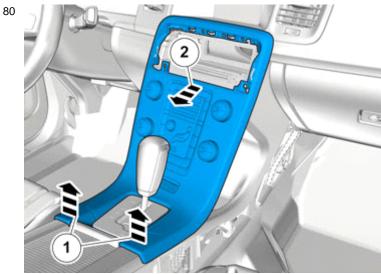



Volvo Car Corporation Gothenburg, Sweden

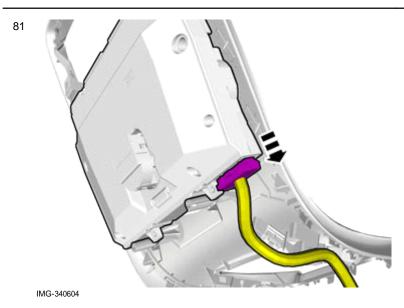

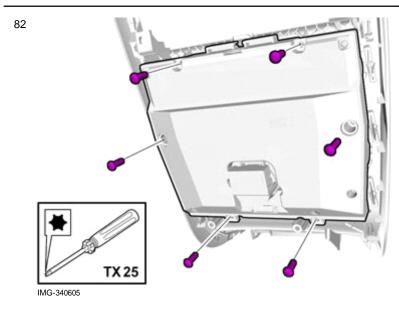


83





Volvo Car Corporation Gothenburg, Sweden

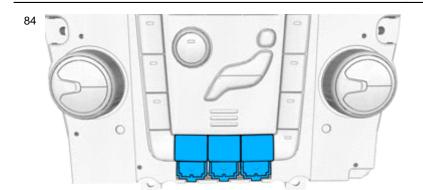


Note!

Orientation view

Select the first free position closest to the driver.


IMG-381763

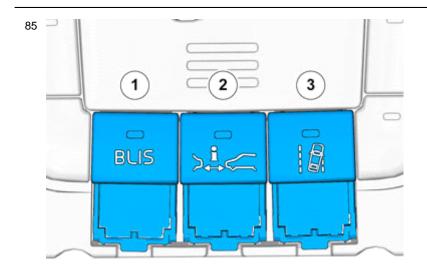

If all locations for the switch are occupied a switch with function must be removed in priority order as illustrated.




Volvo Car Corporation Gothenburg, Sweden

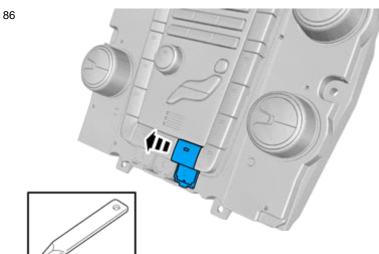

IMG-380450

Accessory installation

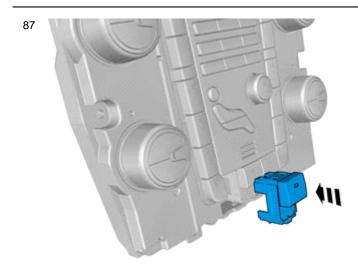


IMG-382543


All vehicles




Volvo Car Corporation Gothenburg, Sweden

 88



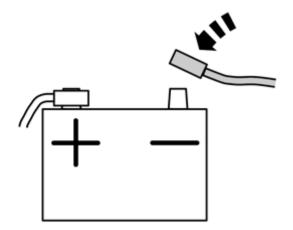

IMG-336901

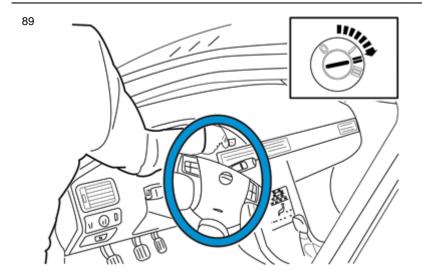

Warning!

When switching the ignition on for the first time after a battery disconnect and connect, make sure to stand outside the vehicle and only reach into the vehicle keeping clear of the air bag deployment areas.

IMG-336904


90





Volvo Car Corporation Gothenburg, Sweden

91

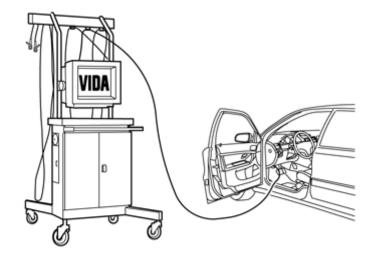

Download software (application) for the accessory's function according to the service information in VIDA.

Order and download software according to: 31275377


IMG-242268

92



IMG-275777

93

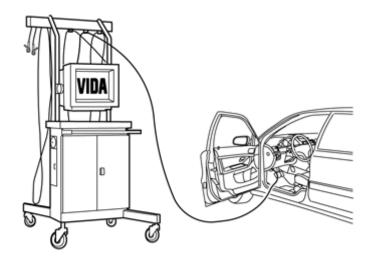

Download software (application) for the accessory's function according to the service information in VIDA.

Order and download software according to: 31373842

IMG-242268 © Volvo Car Corporation

Steering wheel, leather, heated and paddles- 31390250 - V1.0



Volvo Car Corporation Gothenburg, Sweden