

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31316486

1.6

Version Part. No.


30756607, 31316446, 31330933, 31390471, 31369832, 31369831, 31369830, 31373333

Steering wheel



Volvo Car Corporation Gothenburg, Sweden

OLVO

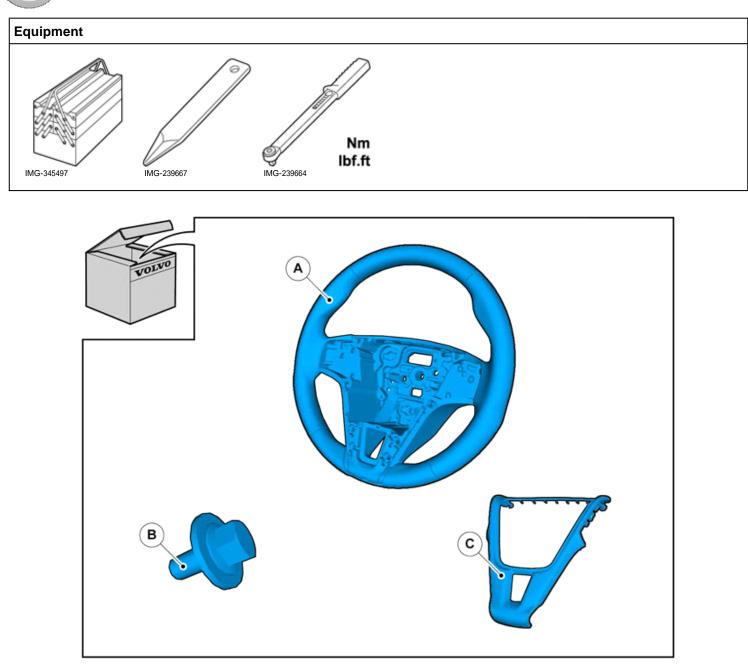



1

Volvo Car Corporation Gothenburg, Sweden

Information

Read through all of the instructions before starting installation.


Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.


In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Conditions

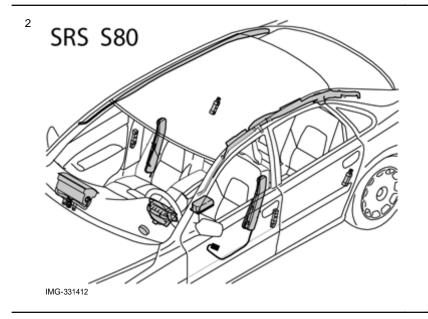


Warning!

The supplemental restraint system (SRS) is active for a certain length of time after the power supply has been disconnected. Wait for a minimum of 30 seconds before disconnecting or removing any SRS components.

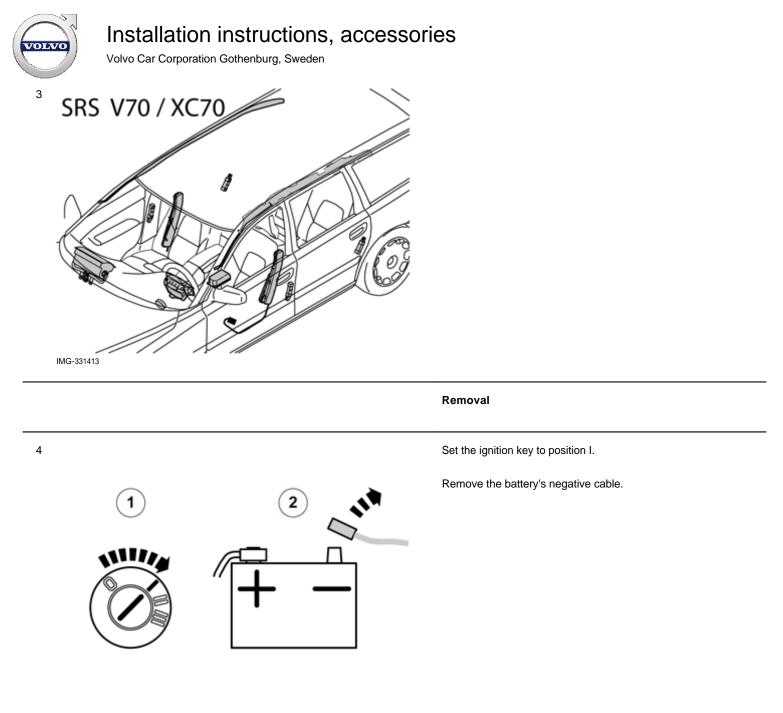




Volvo Car Corporation Gothenburg, Sweden

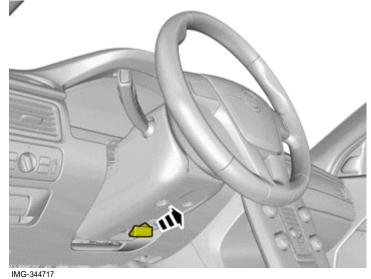



IMG-344721

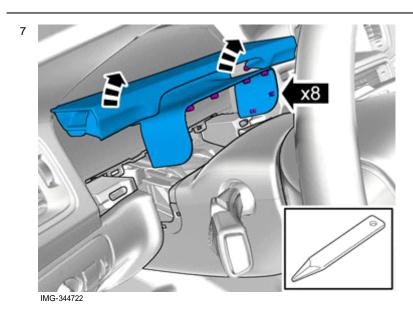



Remove the panel.




Remove the panel.

Volvo Car Corporation Gothenburg, Sweden

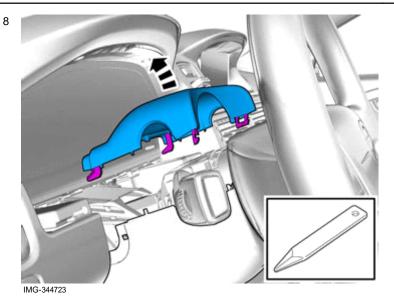

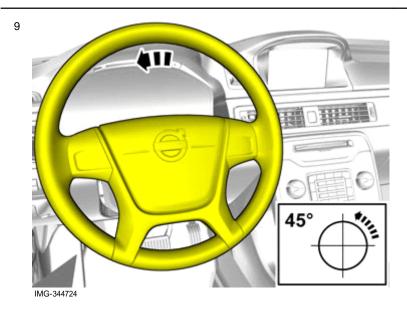


¹⁰ mm

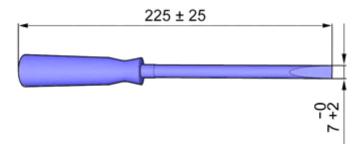



IMG-337683 © Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

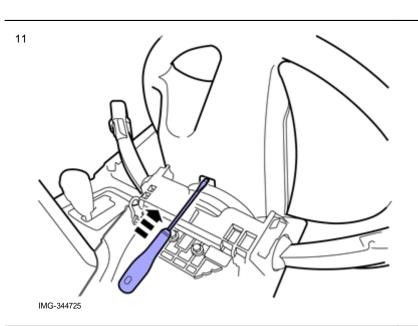

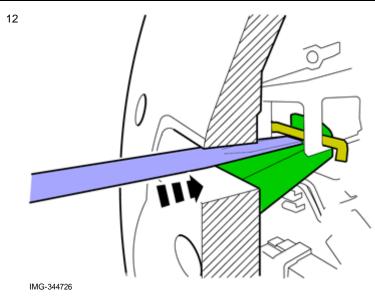

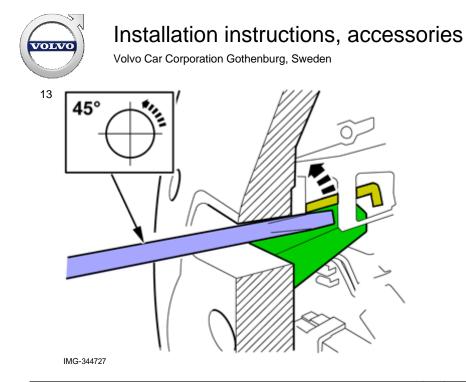



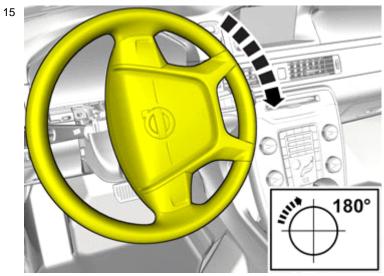

IMG-344763



Volvo Car Corporation Gothenburg, Sweden

16

17

IMG-345493

Repeat the steps when removing on opposite side.


Turn the steering wheel into neutral position.

18 IMG-344730

Disconnect the connectors.




Volvo Car Corporation Gothenburg, Sweden

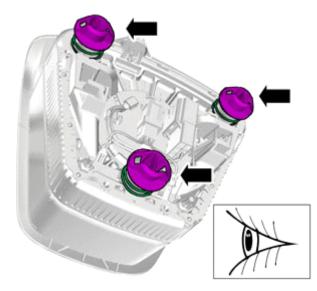

Warning!


Place the airbag module with the front side facing up in a safe storage area during work.

IMG-344731

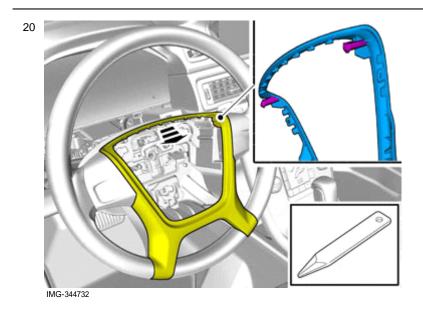

Note!

This step requires considerable force.

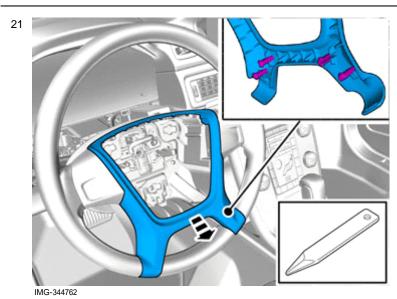


Note!


This step requires considerable force.



Volvo Car Corporation Gothenburg, Sweden

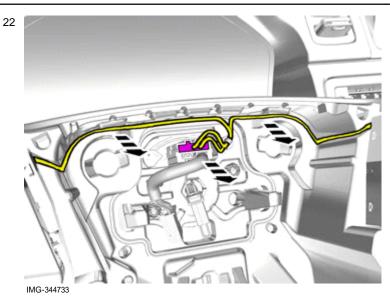

IMG-344734

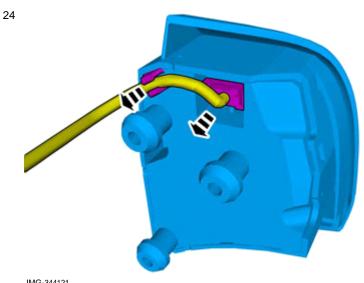

IMG-344121 © Volvo Car Corporation Disconnect the connector.

Note!

This step requires considerable force.

Repeat on the other side.


Note!

The number of connectors, cables and cable ties can vary depending on the vehicle's equipment level.

Repeat on the other side.





Volvo Car Corporation Gothenburg, Sweden

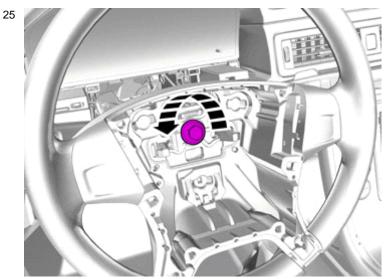

Note!

Do not loosen the bolt more than 4 turns.

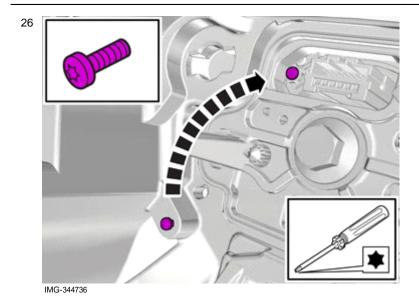


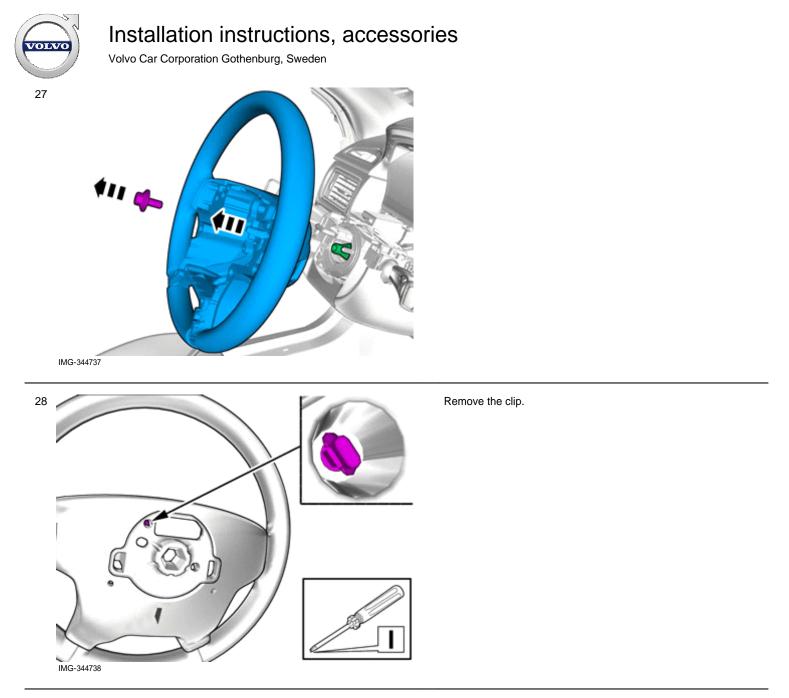

Installation



IMG-344740

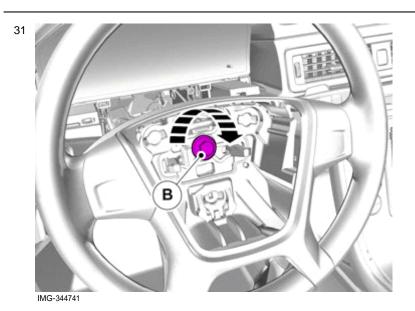

Caution!


Make sure that no part of the wiring harness is trapped.


Note!

Only tighten the nut finger tight at this stage.




Volvo Car Corporation Gothenburg, Sweden

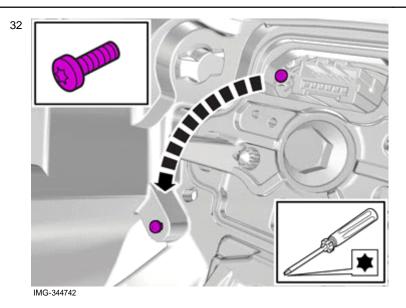

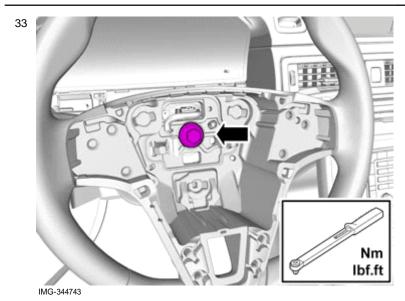


Tightening torque: M10, 50 Nm

Repeat on the other side.

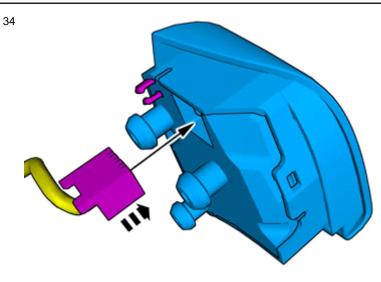




Volvo Car Corporation Gothenburg, Sweden

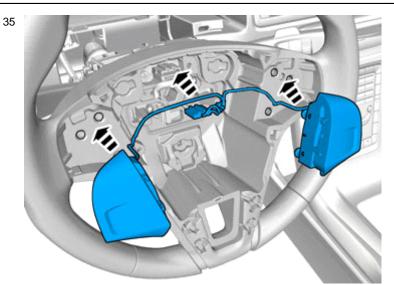

IMG-344745

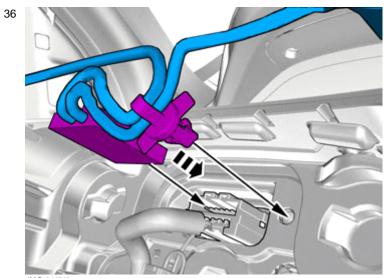



Connect the connector.

Install the clips as illustrated.



Volvo Car Corporation Gothenburg, Sweden

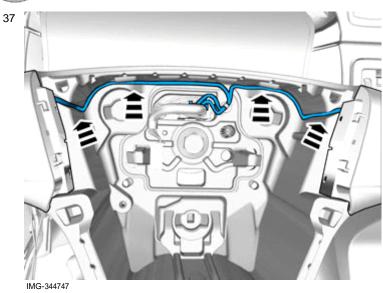

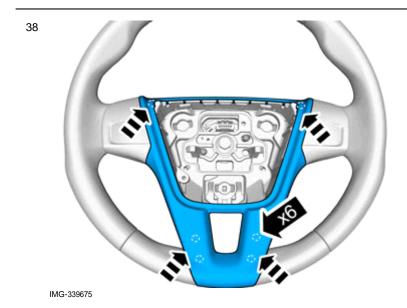



IMG-344748

Connect the connectors.



Volvo Car Corporation Gothenburg, Sweden

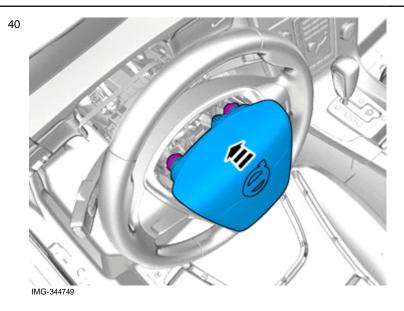

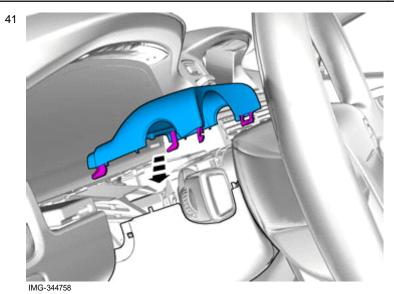


IMG-344751 © Volvo Car Corporation Install the panel.

Install the panel.



Volvo Car Corporation Gothenburg, Sweden

43

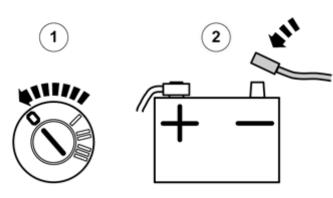


Note!

Make sure that the ignition key is in the OFF position.

Reinstall the battery's negative cable.

IMG-337646

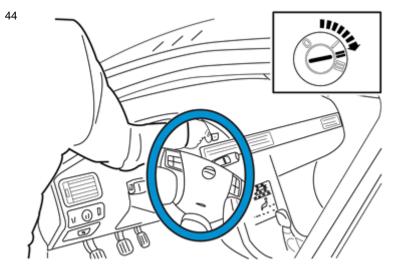

Warning!

When switching the ignition on for the first time after a battery disconnect and connect, make sure to stand outside the vehicle and only reach into the vehicle keeping clear of the air bag deployment areas.