


Volvo Car Corporation Gothenburg, Sweden


Instruction No 31399384 Version 1.1 Part. No. 31373747

Steering wheel, leather, heated and paddles



Volvo Car Corporation Gothenburg, Sweden

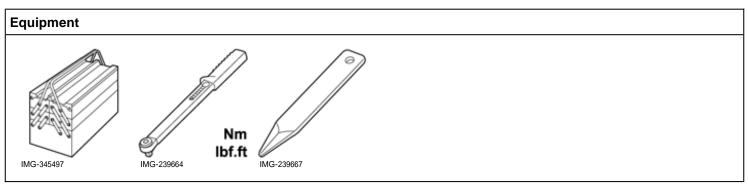

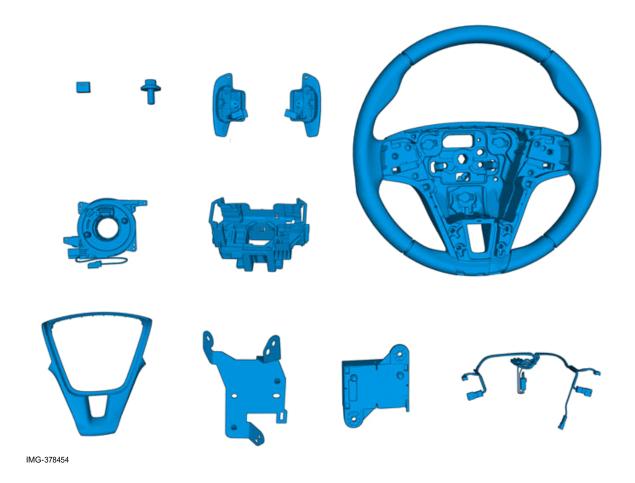



Volvo Car Corporation Gothenburg, Sweden

Inf	orm	ation

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Further information

2


These installation instructions show installation on left hand drive cars.

When installing on right-hand drive cars, perform the procedures on the opposite side and/or mirrored.

Where the procedure differs, the right-hand version is also shown with text and image.

Color symbols

3

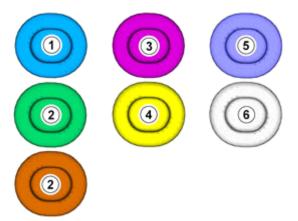

IMG-363036

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.


- Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- Used as background color for vehicle components.
 Steering wheel, leather, heated and paddles- 31399384 V1.1



Volvo Car Corporation Gothenburg, Sweden

Removal

4

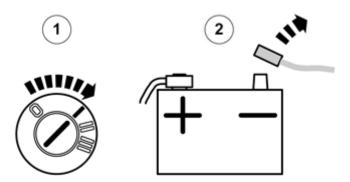

Warning!


The supplemental restraint system (SRS) is active for a certain length of time after the power supply has been disconnected. Wait for a minimum of 30 seconds before disconnecting or removing any SRS components.

- 1. Turn on the ignition.
- 2. Remove the battery's negative cable.

IMG-332180

Left hand drive vehicles

5

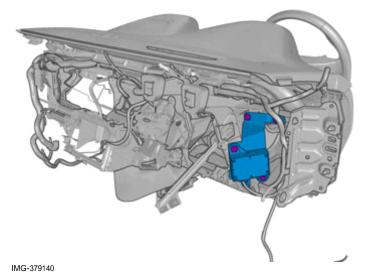


Note!

Orientation view




Volvo Car Corporation Gothenburg, Sweden

6

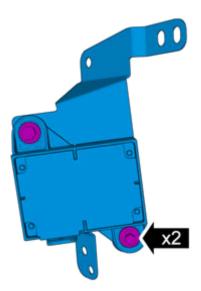

IMG-379141

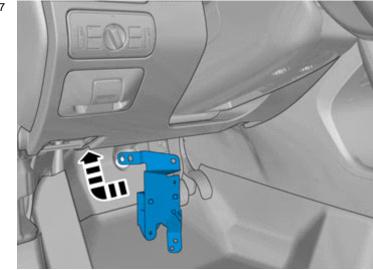

IMG-379142

8



IMG-379143

Install the screws.

Locate the pre-routed connector.


Connect the connector.



Volvo Car Corporation Gothenburg, Sweden


Right-hand drive vehicles

9

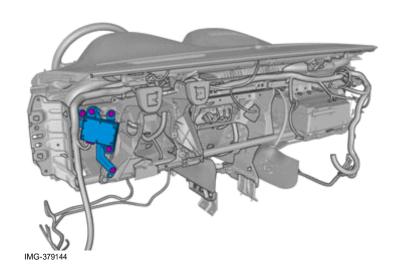

Note!


Orientation view

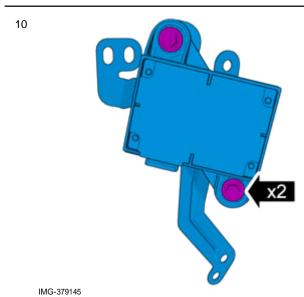




Volvo Car Corporation Gothenburg, Sweden

11

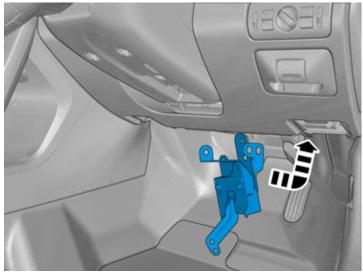

IMG-379146



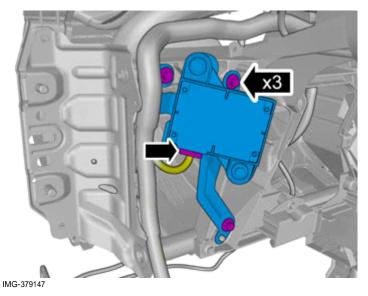

Install the screws.

Locate the pre-routed connector.


Connect the connector.

All vehicles



Volvo Car Corporation Gothenburg, Sweden



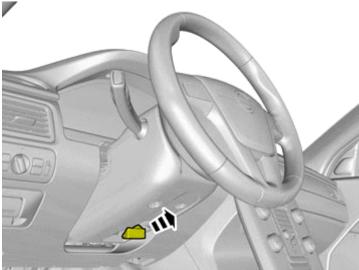


IMG-344717





....



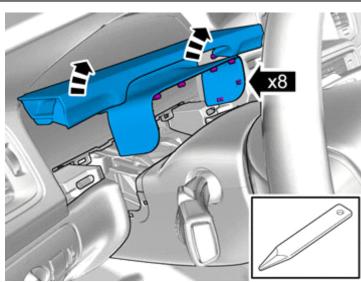

Remove the panel.

© Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

16

Remove the panel.


IMG-344723

17

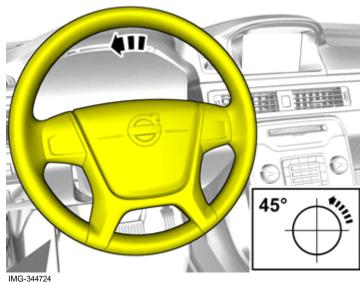


18


mm

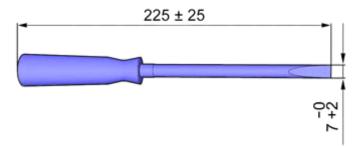



Volvo Car Corporation Gothenburg, Sweden

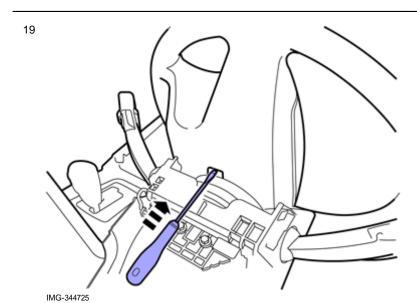

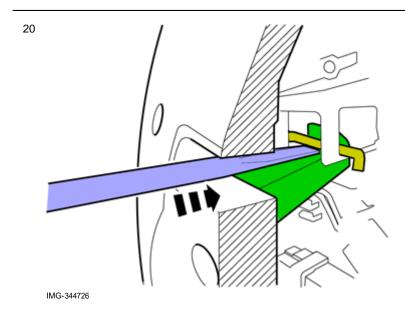





21

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

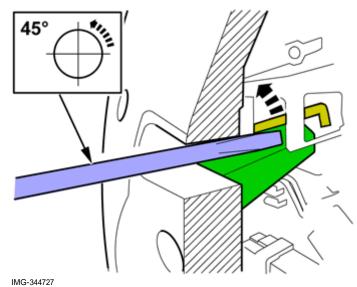



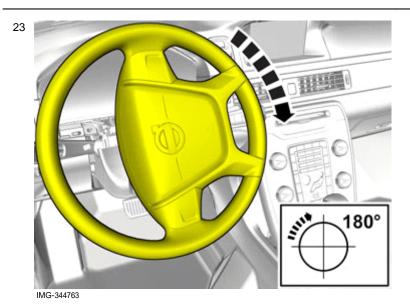



Volvo Car Corporation Gothenburg, Sweden


24

Repeat the steps when removing on opposite side.

25



Turn the steering wheel into neutral position.

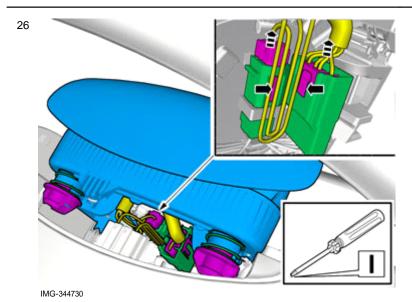


Disconnect the connectors.



Volvo Car Corporation Gothenburg, Sweden

27

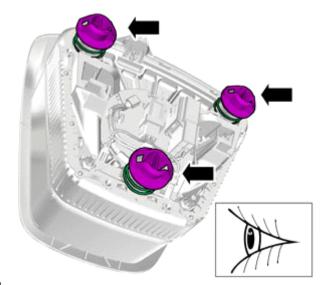


Warning!

Place the airbag module with the front side facing up in a safe storage area during work.


IMG-344731

IMG-344732

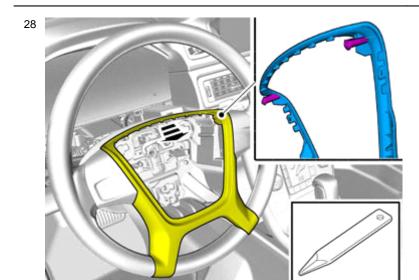

Note!

This step requires considerable force.

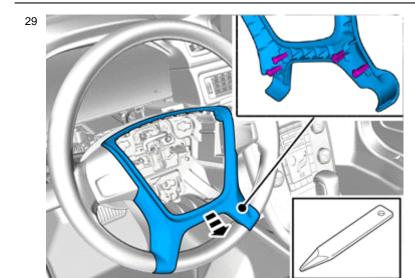

Note!

This step requires considerable force.

© Volvo Car Corporation

IMG-344762

Steering wheel, leather, heated and paddles- 31399384 - V1.1




Volvo Car Corporation Gothenburg, Sweden

30

IMG-344733


Disconnect the connector.

31

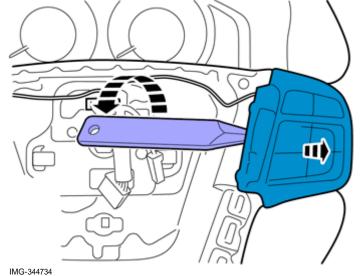

Note!

This step requires considerable force.

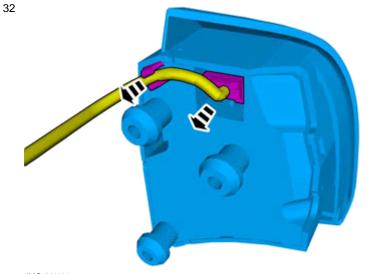

Note!

The number of connectors, cables and cable ties can vary depending on the vehicle's equipment level.

Repeat on the other side.

IMG-344121 © Volvo Car Corporation


Steering wheel, leather, heated and paddles- 31399384 - V1.1



Volvo Car Corporation Gothenburg, Sweden


33

IMG-344735

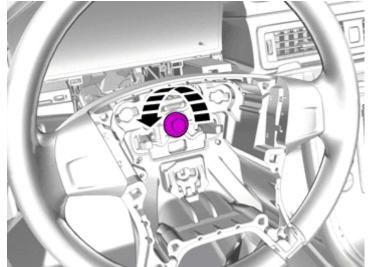

Note

Do not loosen the bolt more than 4 turns.

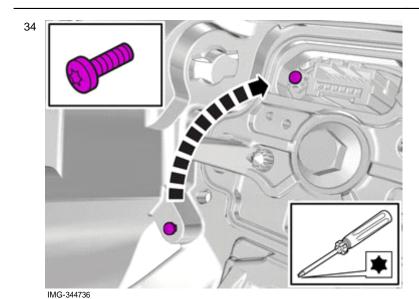





IMG-344737


Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

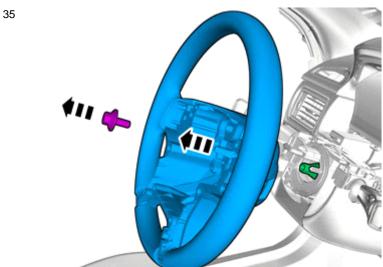

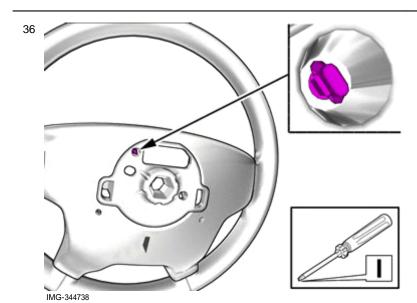

Remove the clip.

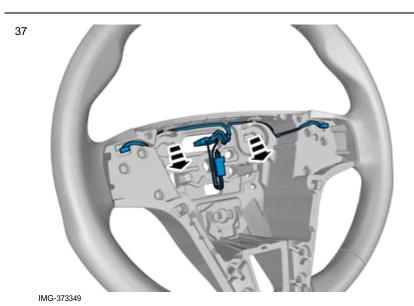


© Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

38

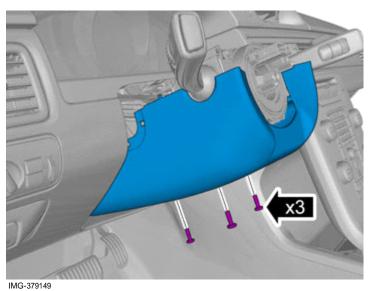


Remove the screws.

39

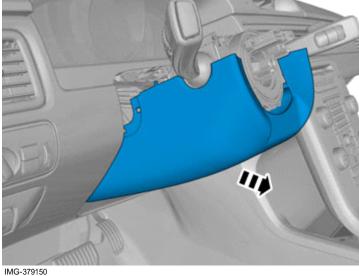

IMG-3/915

40

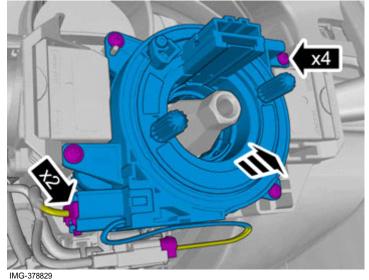

Remove the screws.

Disconnect the connectors.


© Volvo Car Corporation

Steering wheel, leather, heated and paddles- 31399384 - V1.1



Volvo Car Corporation Gothenburg, Sweden


41

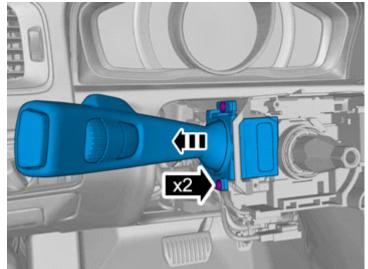

Remove the screws.

Repeat on the other side.




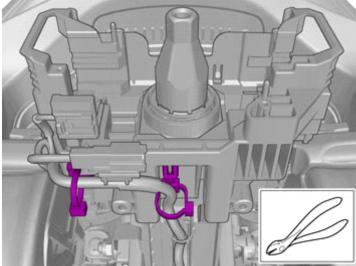



Volvo Car Corporation Gothenburg, Sweden


43

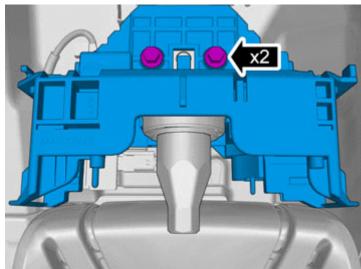

Remove the screws.

IMG-378855

44

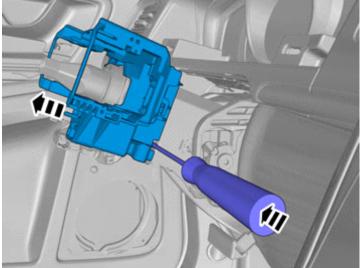


Release the lock.

IMG-378832


Accessory installation




Volvo Car Corporation Gothenburg, Sweden

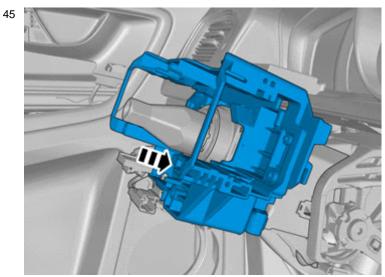

IMG-378854

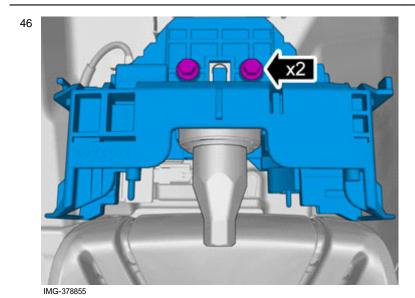



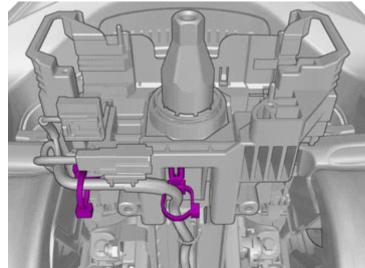


IMG-378856




Volvo Car Corporation Gothenburg, Sweden

48

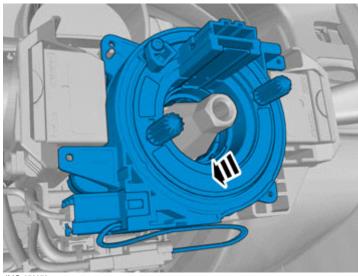


IMG-378878

49

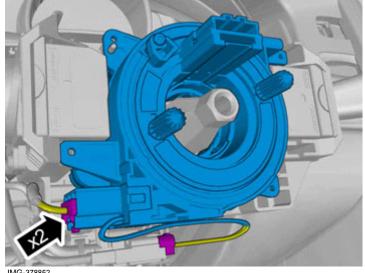

Connect the connectors.

50

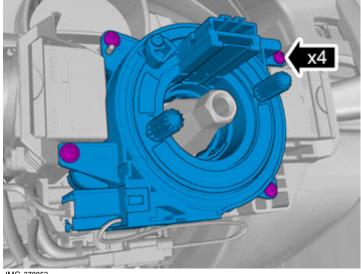

Install the screws.

IMG-378853 © Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden


Installation

51

Reinstall the removed parts in reverse order.

IMG-377070

Accessory installation

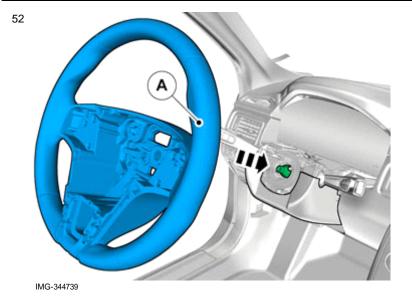




53

Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

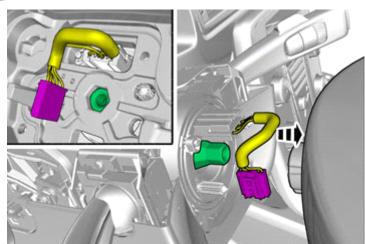

Caution!


Make sure that no part of the wiring harness is trapped.



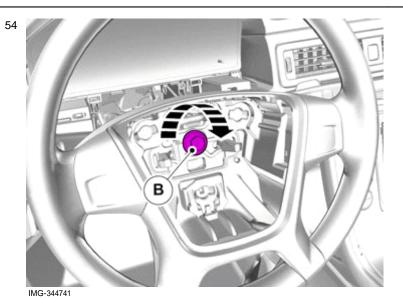

Note!

Only tighten the nut finger tight at this stage.

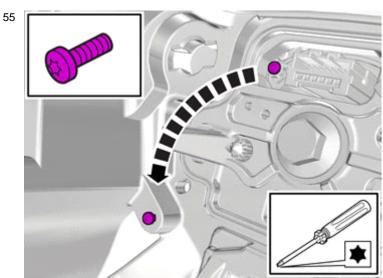


IMG-344742




Volvo Car Corporation Gothenburg, Sweden

56

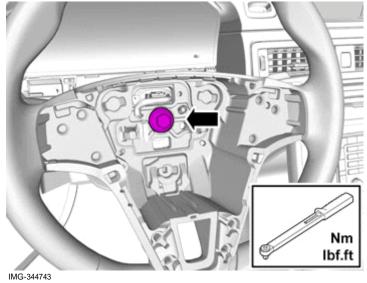


Tightening torque:,

57

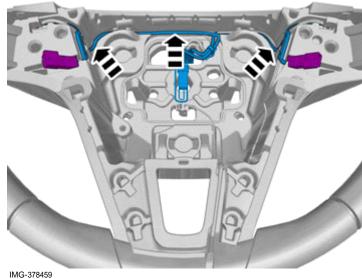


58

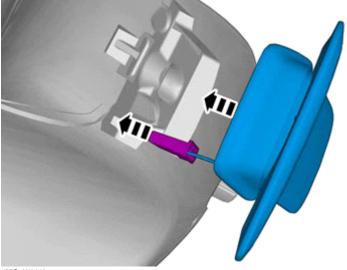


Repeat on the other side.



Volvo Car Corporation Gothenburg, Sweden

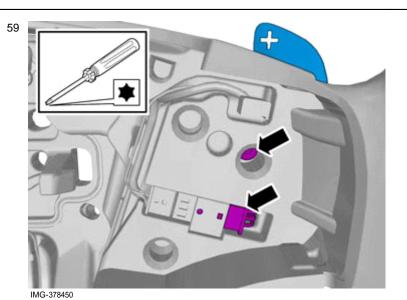

Repeat on the other side.

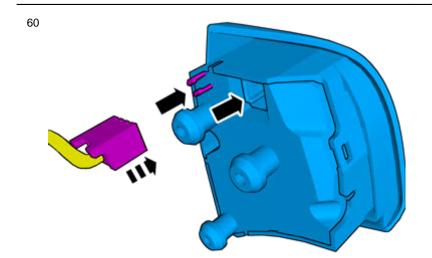


Repeat on the other side.




Volvo Car Corporation Gothenburg, Sweden

61

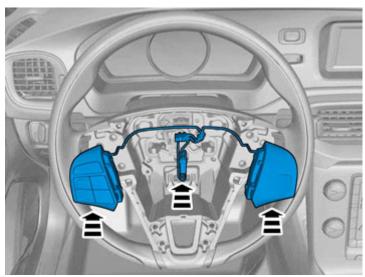

IMG-373385

62

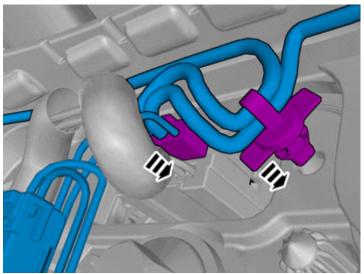


Connect the connector.

Install the clip(s).



63

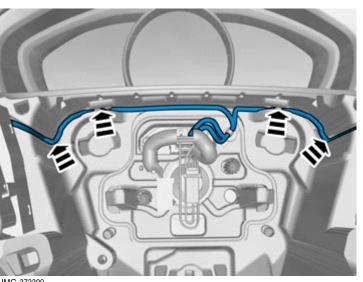

Install the cable.

© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden


64




65



Connect the connectors.

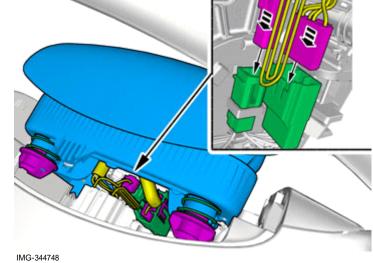



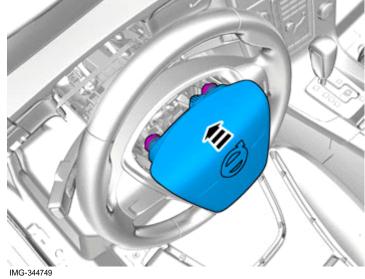

© Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

67

Install the panel.

IMG-344758

IMG-344751

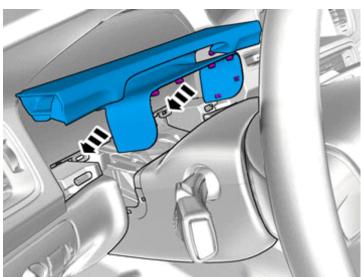


Install the panel.

Removal



Volvo Car Corporation Gothenburg, Sweden


69

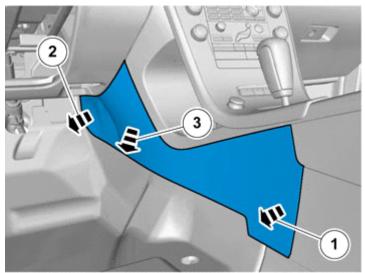

Remove the panel.


IMG-292804

70

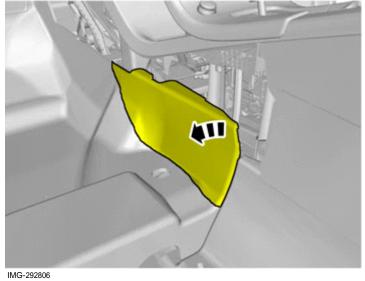

Fold the carpet to the side.

71

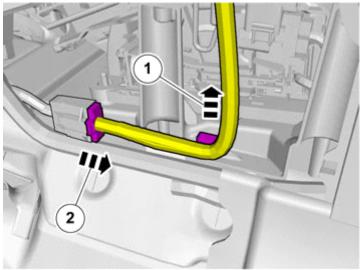


Unhook the cable harness clips.

Disconnect the connector.




Volvo Car Corporation Gothenburg, Sweden

72

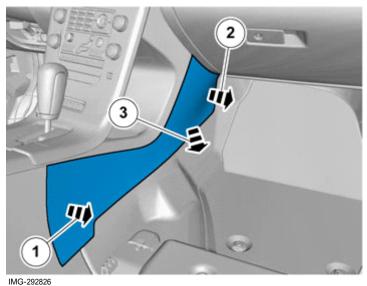


Remove the panel.

73

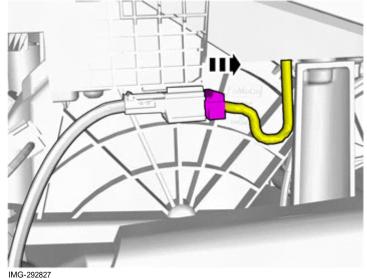

Disconnect the connector, if applicable.

74

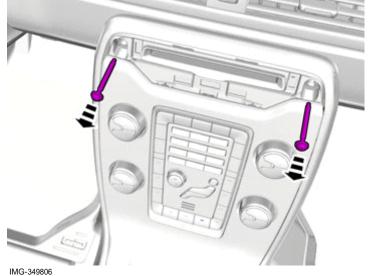


Remove the screws.

© Volvo Car Corporation

Steering wheel, leather, heated and paddles- 31399384 - V1.1




Volvo Car Corporation Gothenburg, Sweden

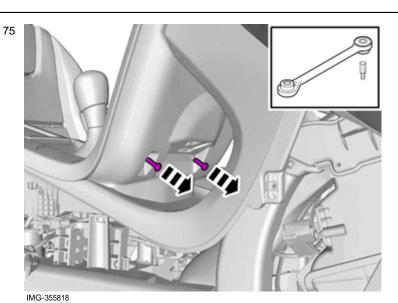

Remove the screws.

Cars with automatic transmissions

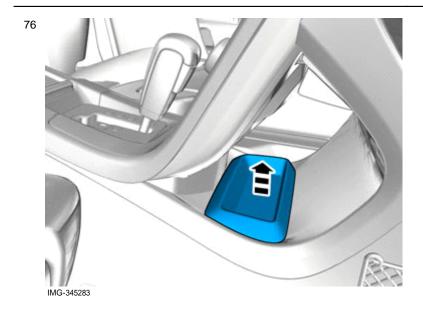





Volvo Car Corporation Gothenburg, Sweden



Release the shift-lock function.

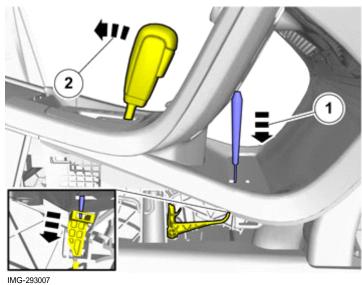

All vehicles

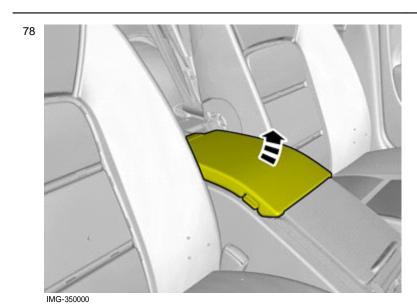




Volvo Car Corporation Gothenburg, Sweden


79


Remove the screws.

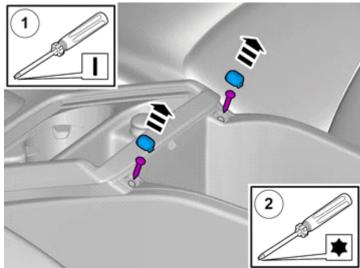

IMG-349811




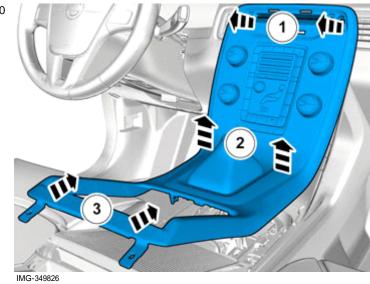

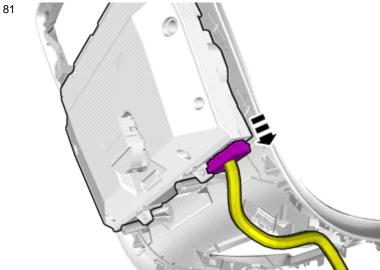



Volvo Car Corporation Gothenburg, Sweden

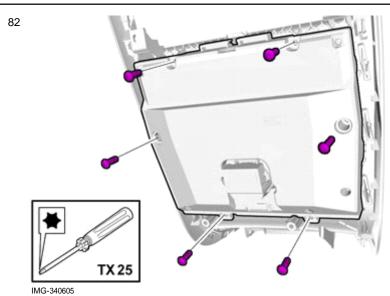

83



IMG-340607




Note!


Orientation view

Select the first free position closest to the driver.



Volvo Car Corporation Gothenburg, Sweden

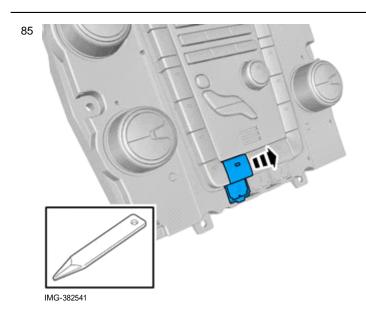

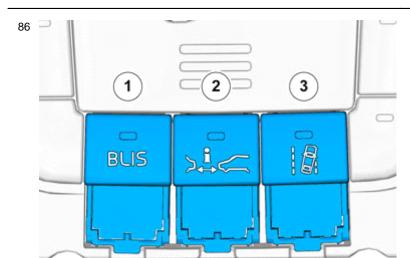

If all locations for the switch are occupied a switch with function must be removed in priority order as illustrated.


IMG-382076

Accessory installation



Volvo Car Corporation Gothenburg, Sweden


87

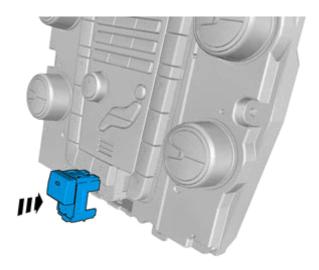

IMG-382542

Installation

 
88



Reinstall the battery's negative cable.



Volvo Car Corporation Gothenburg, Sweden

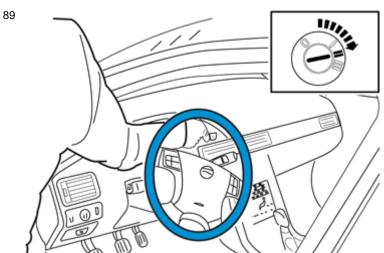

Warning!

When switching the ignition on for the first time after a battery disconnect and connect, make sure to stand outside the vehicle and only reach into the vehicle keeping clear of the air bag deployment areas.


IMG-336904

90

VIDA

IMG-275777



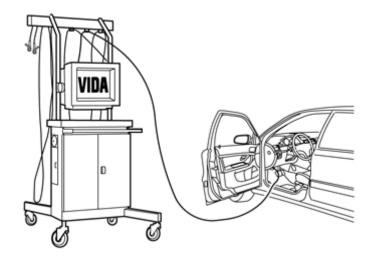

Download software (application) for the accessory's function according to the service information in VIDA.

Order and download software according to: 30773417


Volvo Car Corporation Gothenburg, Sweden

92

VIDA

IMG-275777



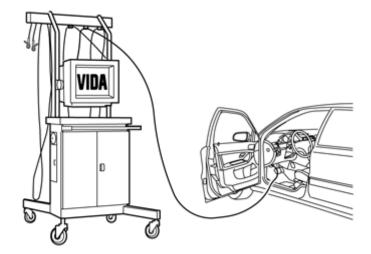

Download software (application) for the accessory's function according to the service information in VIDA.

Order and download software according to: 31373844