

Volvo Car Corporation Gothenburg, Sweden

Instruction NoVersion314147971.0


n Part. No.

39842097, 39842096, 39842095, 39842094, 31414792, 31414793, 31414794, 31414791

Steering wheel



Volvo Car Corporation Gothenburg, Sweden

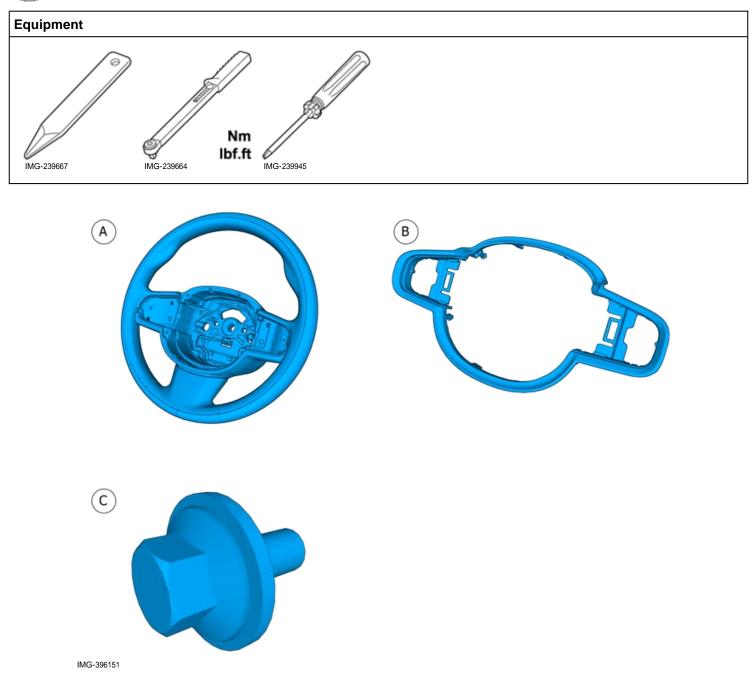



Volvo Car Corporation Gothenburg, Sweden


		Information
1		Read through all of the instructions before starting installation.
		Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
		Ensure that all tools stated in the instructions are available before starting installation.
		Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
		In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
		Color symbols
2		
	(5)	Note! This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.
		Used for focused component, the component with which you will do something.
		Used as extra colors when you need to show or differentiate additional parts.
		Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
IMG-363036		Used when the component is not fully removed from the vehicle but only hung to the side.
		Used for standard tools and special tools.
		Used as background color for vehicle components.
		Removal




Volvo Car Corporation Gothenburg, Sweden



IMG-394535

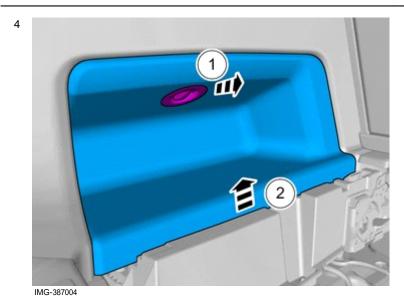

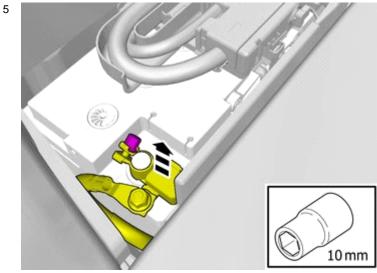



Remove the battery's negative cable.

IMG-394520




Volvo Car Corporation Gothenburg, Sweden

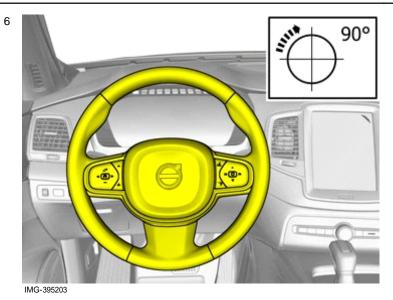

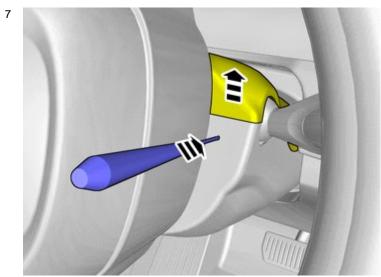

IMG-395231

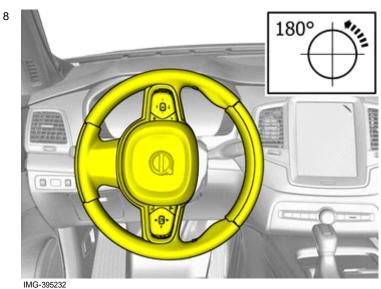


© Volvo Car Corporation

Release the lock.




Release the lock.

Volvo Car Corporation Gothenburg, Sweden

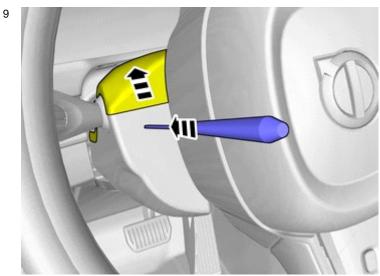


IMG-395236

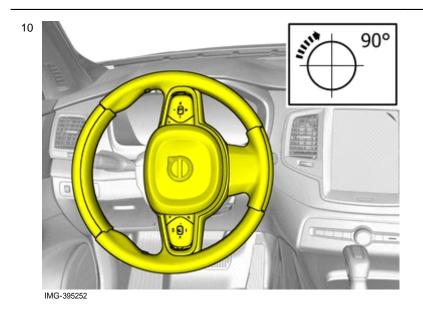




Volvo Car Corporation Gothenburg, Sweden

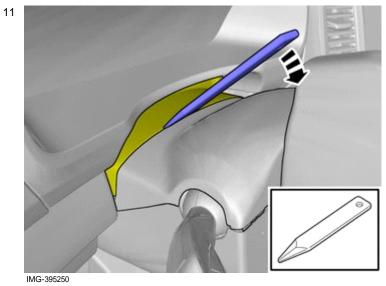


Detach the panel.

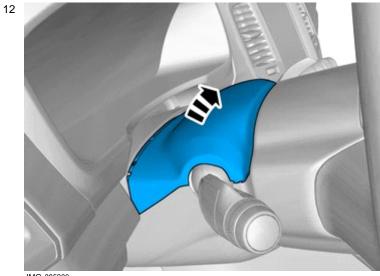

Remove the marked part.


IMG-395260

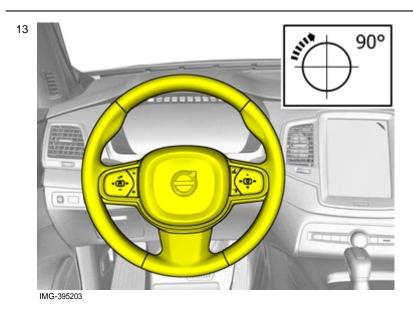

© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden

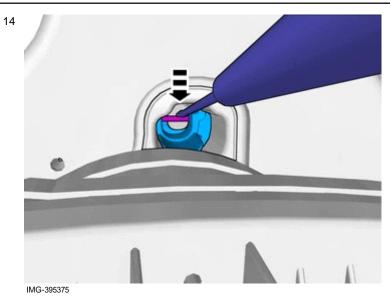

<image>

IMG-395232



© Volvo Car Corporation

Release the lock.

Release the lock.



Volvo Car Corporation Gothenburg, Sweden




Warning!

When temporarily storing a pyrotechnical component, it must always be positioned with its active part (e.g. air bag front or equivalent) facing up.

Remove the marked part.



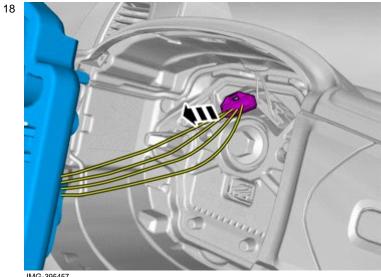


Disconnect the connector.

IMG-395457




Volvo Car Corporation Gothenburg, Sweden

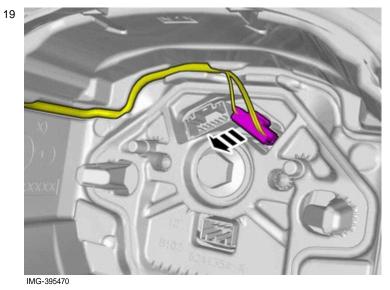

Disconnect the connector.




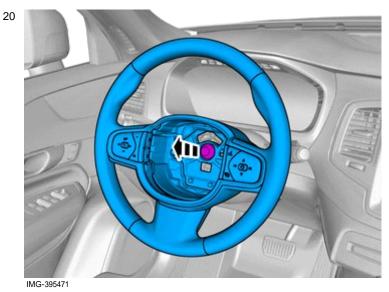

Remove the screw.




21

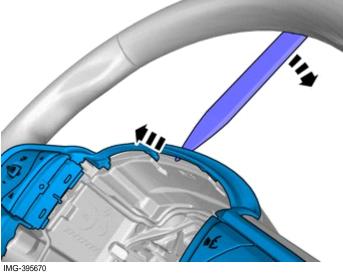


Use: Interior trim remover




Volvo Car Corporation Gothenburg, Sweden

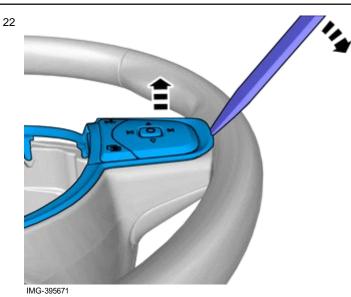

Use: Interior trim remover

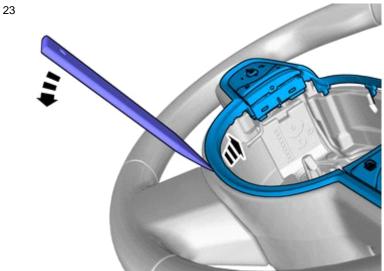

IMG-395681

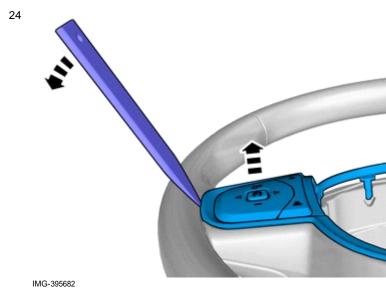

IMG-395682 © Volvo Car Corporation

Use: Interior trim remover

Use: Interior trim remover

Steering wheel- 31414797 - V1.0



Volvo Car Corporation Gothenburg, Sweden

25

Remove the marked part.




IMG-395680

26

Remove the marked part.

Repeat on the other side.

The part is to be reused.

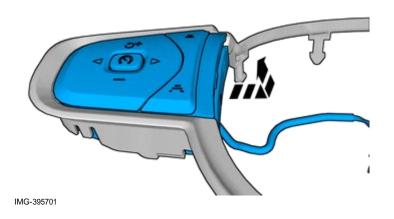

Accessory installation




Volvo Car Corporation Gothenburg, Sweden

27

Reuse existing parts.


Repeated on the right-hand side.

Repeated on the right-hand side.

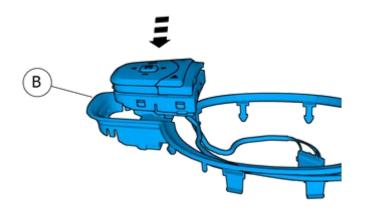

IMG-395805



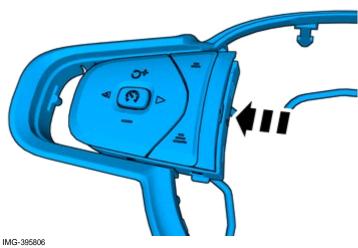

29 A


IMG-395811

Install component that comes with the accessory kit.




Volvo Car Corporation Gothenburg, Sweden



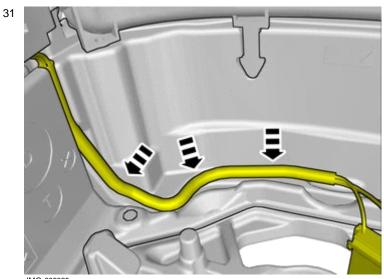

IMG-395825

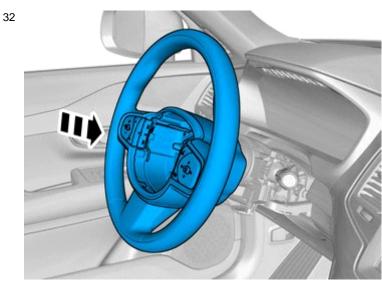


IMG-395945 © Volvo Car Corporation

Install component that comes with the accessory kit.



Volvo Car Corporation Gothenburg, Sweden

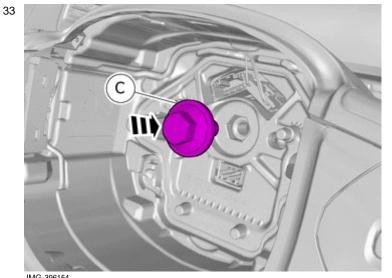


Install component that comes with the accessory kit.

Tighten the screw.

Tightening torque: Steering wheel to steering column (center screw), 60 Nm

IMG-396154

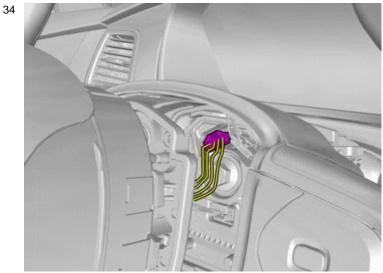

IMG-396035

Connect the connector.



Volvo Car Corporation Gothenburg, Sweden



Reuse existing parts.

A click confirms that the component is in the correct position.


Installation

36 WG-394580 Reinstall the battery's negative cable.

Tightening torque: Battery cable for battery , 6 Nm



Volvo Car Corporation Gothenburg, Sweden

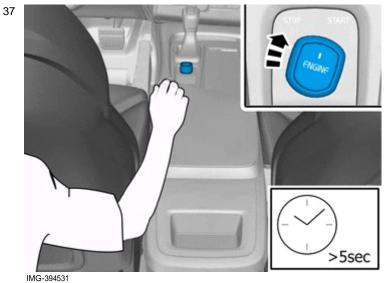

Warning!

The first time the vehicle is activated after the battery has been disconnected, this must be performed from the rear seat, avoid the work area for the air bags.

38	When removing on right-hand drive cars, perform the procedures on the opposite side and/or mirrored.
39	When installing on right-hand drive cars, perform the procedures on the opposite side and/or mirrored.