

		2013 ILX	BII 13535 Issue Date MAY 2012
(Ja)	Hex wr 19 mm 10 mm Ratche Extens Torque <i>The fol</i>	Open end wrench Socket et ion wrench <i>lowing tool is available throu</i>	igh the Honda Tool and
0	Equipment Program. On the IN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857. Rivet Nut Tool, 6 mm (T/N 07AAE-000A100) INSTALLATION Client Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."		
۲			
•	 Be d This the I (sold 	careful not to damage the bo instruction shows a cargo h left side of the vehicle. An a d separately) can be installe	nook being installed on dditional cargo hook
		19 mm 10 mm Ratche Extens Torque The fol Equipm Service the null Rivet N INSTA Client instruct technic "do-it- NOTE: • Be c • This (sold)	 the number under "Search". Or, can Rivet Nut Tool, 6 mm (T/N 07AAE-INSTALLATION INSTALLATION Client Information: The information is intended for use only technicians who have the proper training to correctly and safely ad vehicle. These procedures should "do-it-yourselfers." NOTE: Be careful not to damage the boot and the proper training to context of the proper training to context of the proper training to correctly and safely ad vehicle. These procedures should "do-it-yourselfers."

1. Thread the rivet nut onto the mandrel of the rivet nut tool as shown.

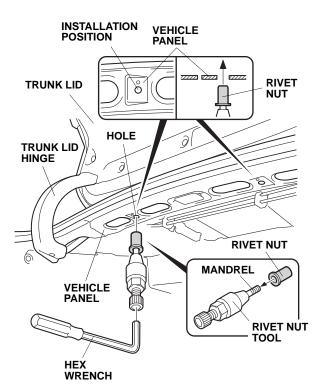

2. Open the trunk. Insert the rivet nut into the hole in the vehicle panel, and install the hex wrench on the rivet nut tool.

3. While holding the rivet nut tool with the hex wrench, turn the 19 mm open end wrench clockwise to install the rivet nut to the vehicle panel.

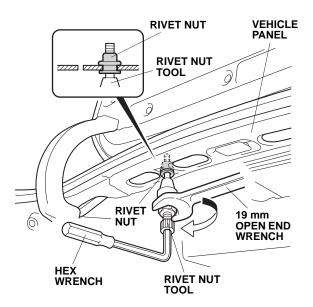

- 4. Remove the rivet nut tool from the rivet nut by turning the hex wrench counterclockwise.
- 5. Align the cargo hook pin with the hole in the vehicle panel, and secure the cargo hook to the vehicle panel using the bolt, small washer, and spring washer. Torque the bolt to 4.0 N·m (3.0 lbf·ft).

