



# INSTALLATION INSTRUCTIONS

Accessory  
**ILLUMINATED DOOR  
SILL TRIMS**  
P/N 08E12-TY2-200A

Application  
**2016 RLX**

Publications No.  
**VERSION 1**  
Issue Date  
**JAN 2015**

## PARTS LIST

Left front illuminated door sill trim



Right front illuminated door sill trim




Left rear illuminated door sill trim




Right rear illuminated door sill trim



Door sill trim harness

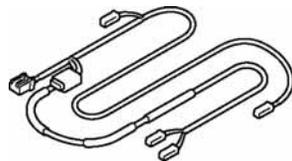

Subharness

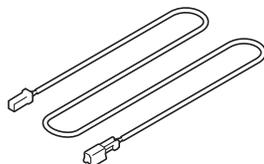

Fuse label



27 Wire ties



2 Aluminum tapes



## TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Ratchet

10 mm Socket

10 mm Open end wrench

Diagonal cutters

Tape

Isopropyl alcohol


Shop towel

Scissors

*The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.*

- Trim Tool Set (T/N SOJATP2014)

**Illustration of the Illuminated Door Sill Trims in the Vehicle**

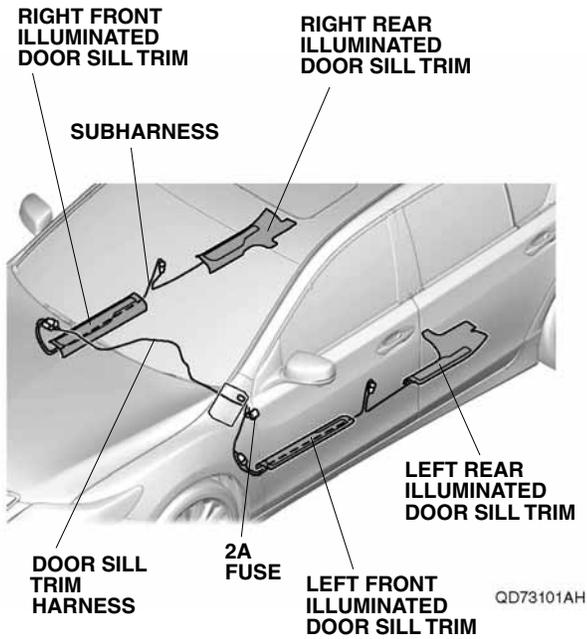

**INSTALLATION**

**Client Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

1. Press the engine start/stop (power) button to select the ON mode.
2. If the vehicle has a shift lever, move the shift lever to the neutral (N) position.
3. Press the engine start/stop (power) button to select the OFF mode.
4. Disconnect the negative cable from the battery.

5. Apply tape to the center console panel and the driver’s and passenger’s console side trims as shown. If the vehicle has a shift lever, wrap a shop towel around the shift lever.


**With shift lever models**




**Without shift lever models**




- Remove the center lower trim and unplug the vehicle connectors.

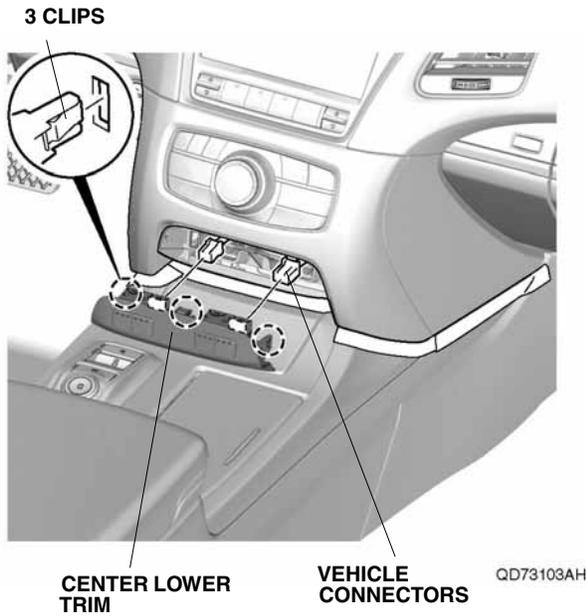


- Remove the center lower panel and unplug the vehicle connectors.

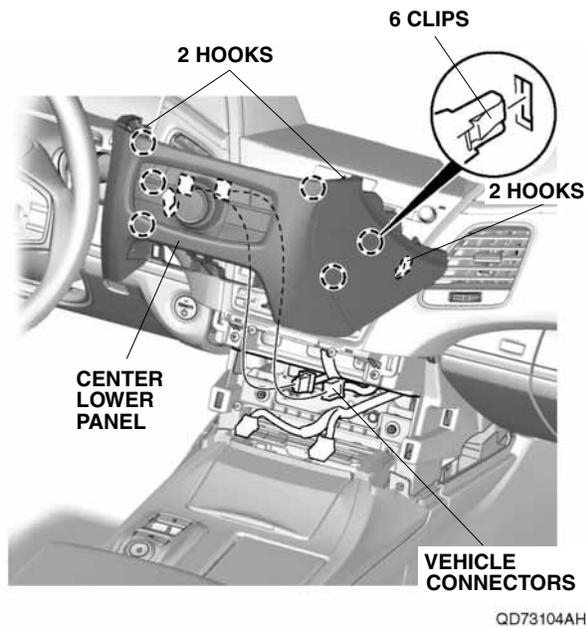

- Open the glove box. Pull away the door opening seal, and remove the passenger's dashboard side lid.

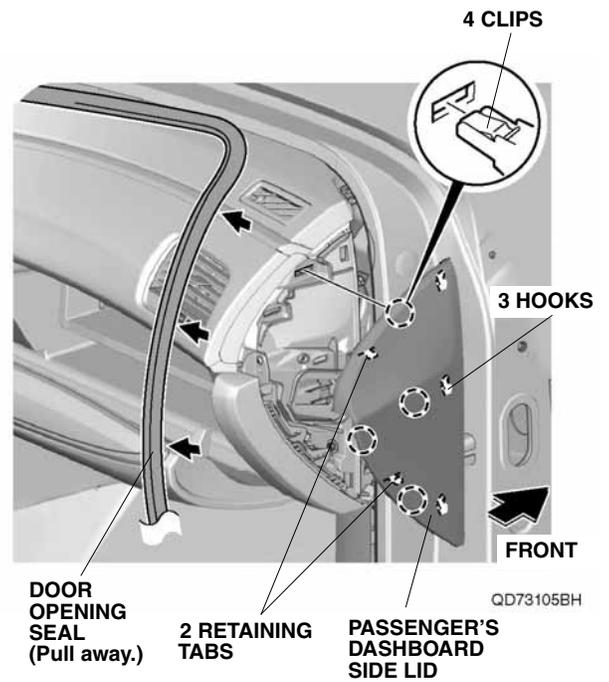


- Remove the passenger's dashboard upper cover and unplug the vehicle connector.

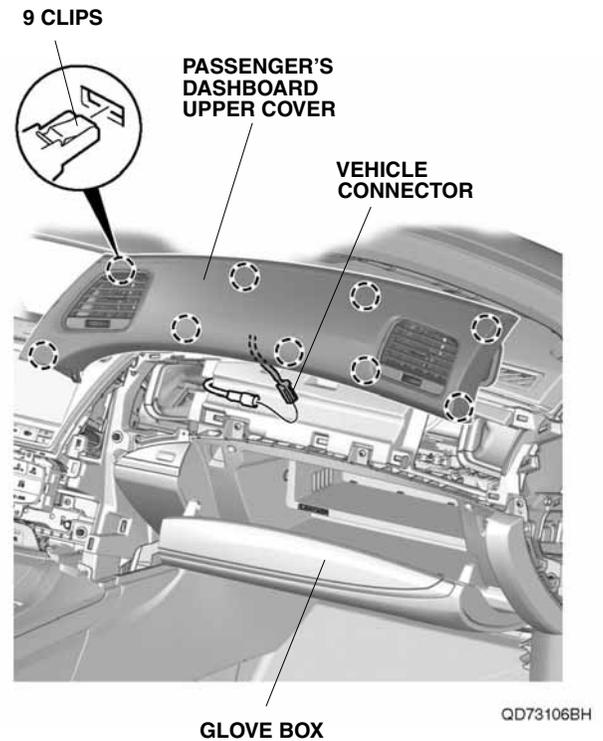


- Close the glove box.

11. Remove the passenger's dashboard lower cover and unplug the vehicle connector.

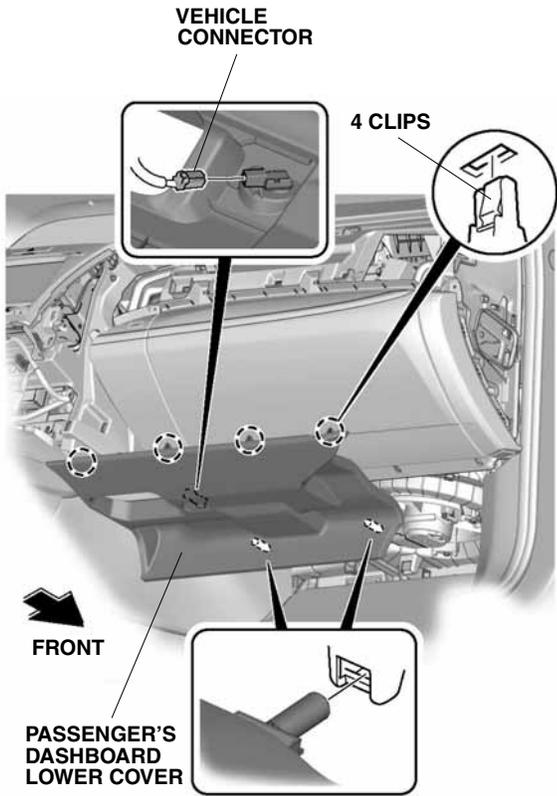


QD73107AH

12. Remove the two bolts from the bottom of the glove box.

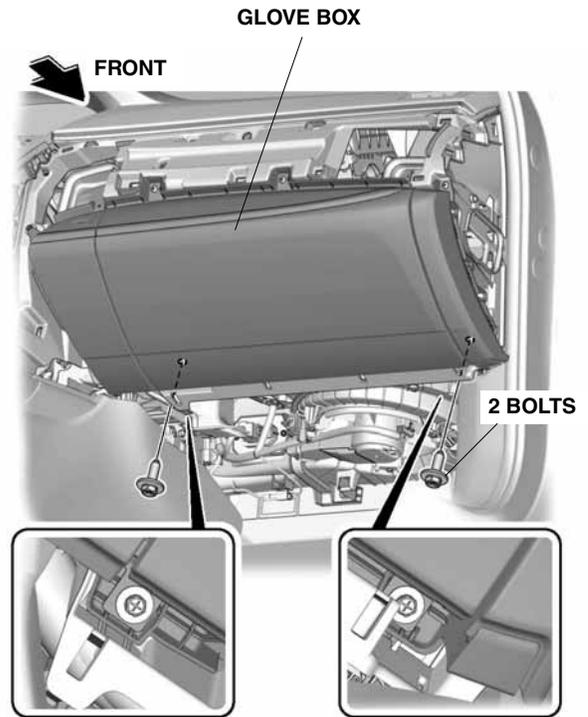


QD73108AH


13. Remove the glove box and unplug the vehicle connectors.

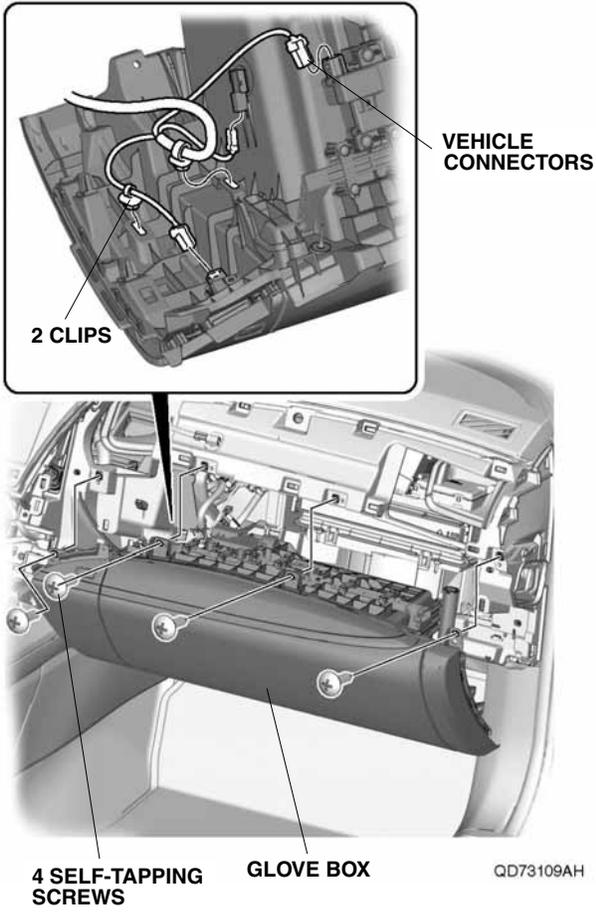


14. Remove the passenger's front door sill trim.

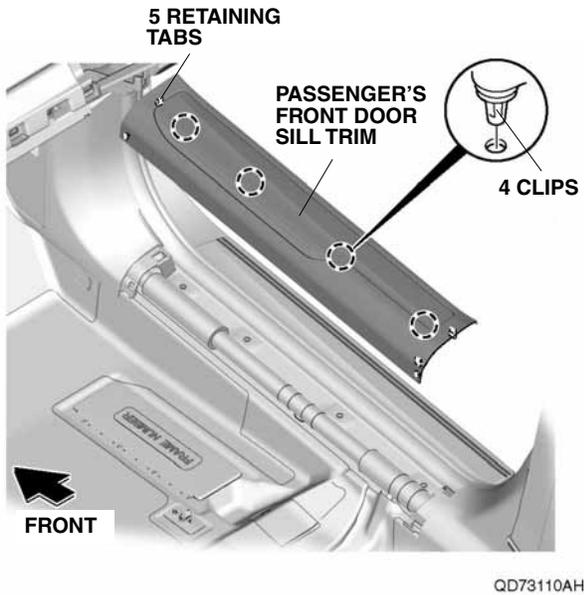


15. Pull away the door opening seal, and remove the passenger's kick panel.

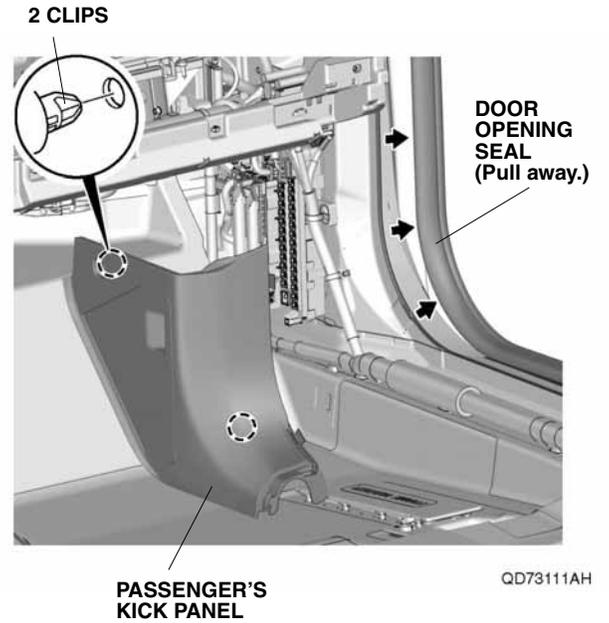


16. Pull away the door opening seal, and remove the driver's dashboard side lid.

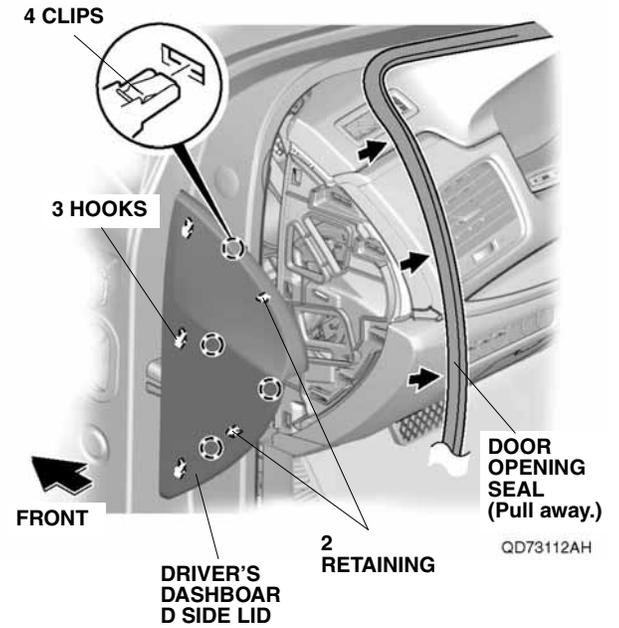


- Remove the driver's dashboard lower cover. Unplug the vehicle connectors and aspirator hose, then remove the plate.

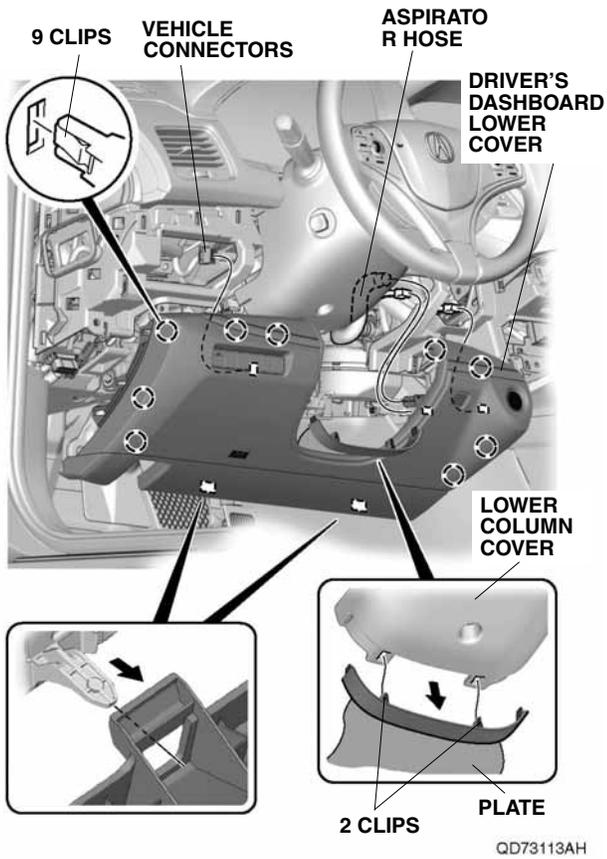


- Turn the knob, and remove the driver's dashboard under cover and unplug the vehicle connector.

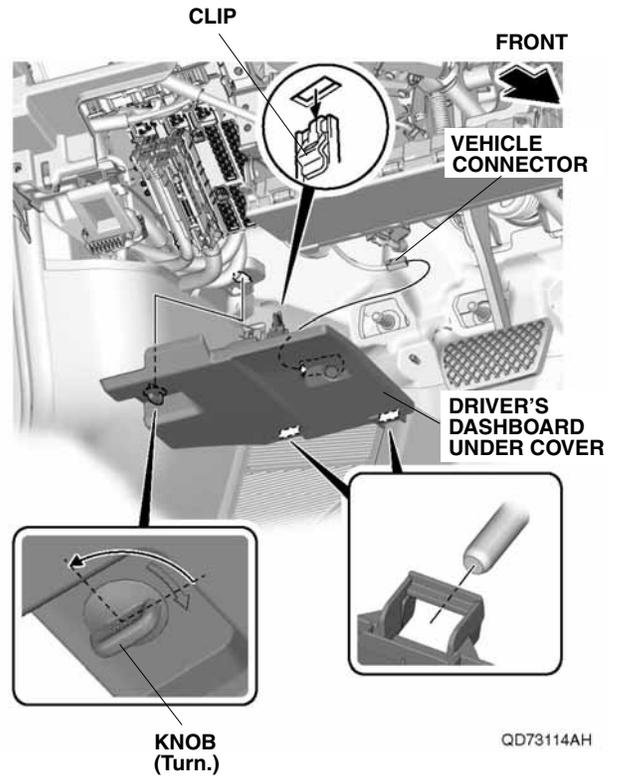


- Remove the driver's front door sill trim.

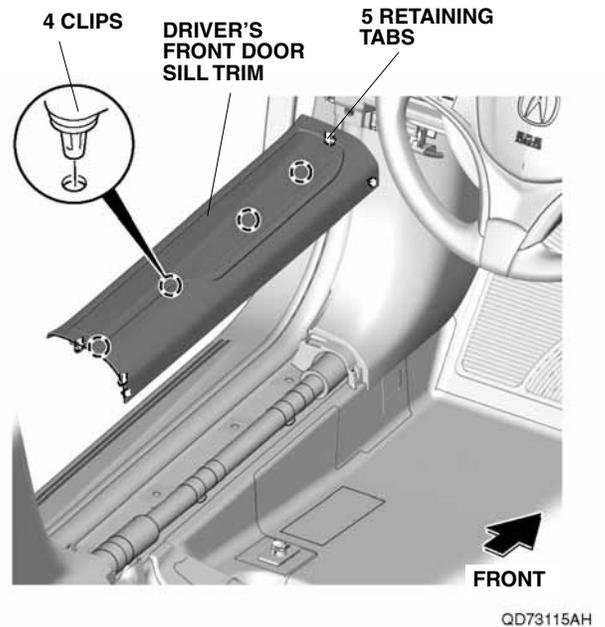


20. Pull away the door opening seal, and remove the driver's kick panel.

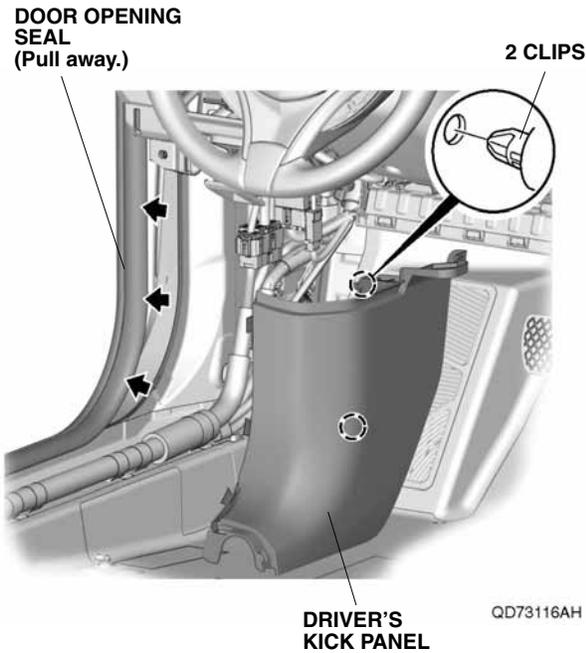


21. Release the rear seat cushion.

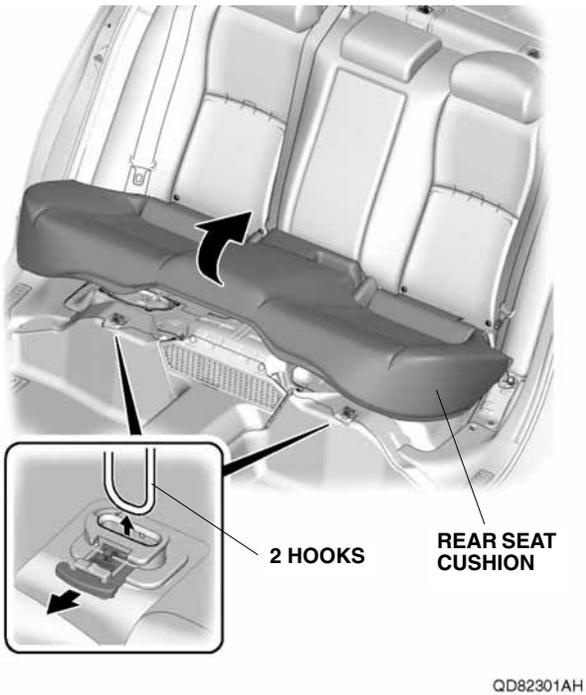

22. Remove the right rear door sill trim.

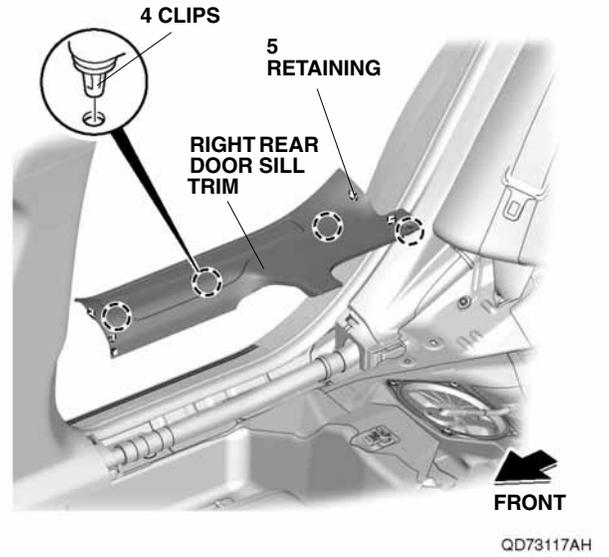


23. Remove the right center pillar lower trim.

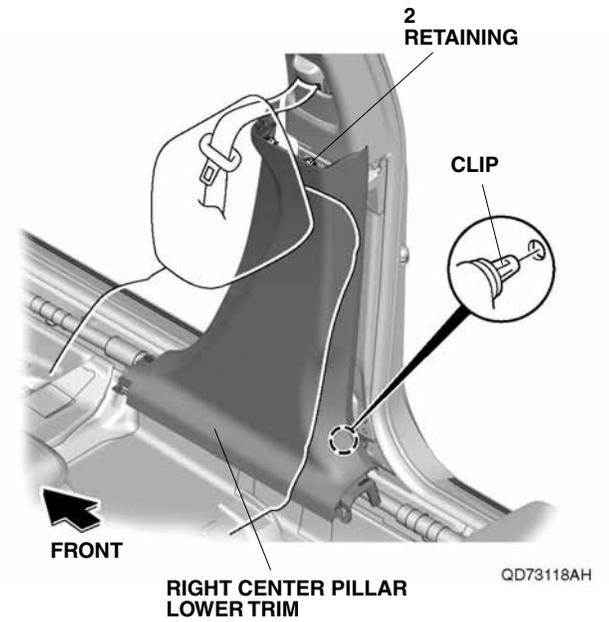


24. Repeat steps 22 and 23 on left side of the vehicle.

25. Carefully remove the insulator from the driver's front door sill trim. Do not damage the insulator.

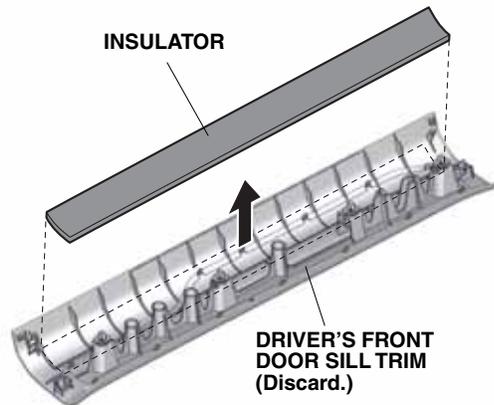


QD22708AH

26. Align the edge of the insulator with the rib on the left front illuminated door sill trim.

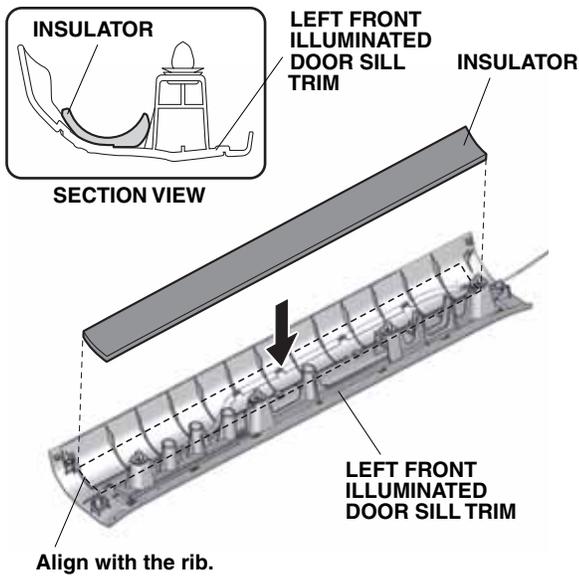

QD22709AH


27. Using isopropyl alcohol on a shop towel, thoroughly clean the left front illuminated door sill trim where the aluminum tape will attach.

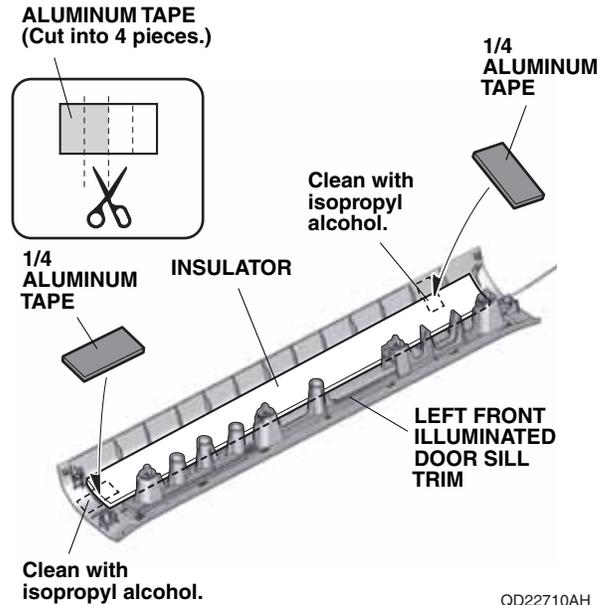

QD22710AH


28. Using scissors, cut one aluminum tape into four equal pieces. Secure the insulator to the left front illuminated door sill trim with two pieces of aluminum tape.

29. Carefully remove the insulator from the left rear door sill trim. Do not damage the insulator.

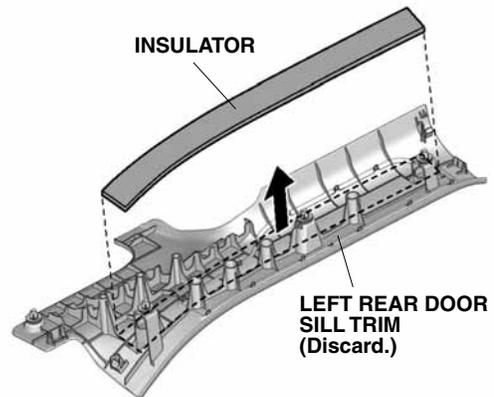


QD22711BH

30. Align the edge of the insulator with the rib on the left rear illuminated door sill trim.

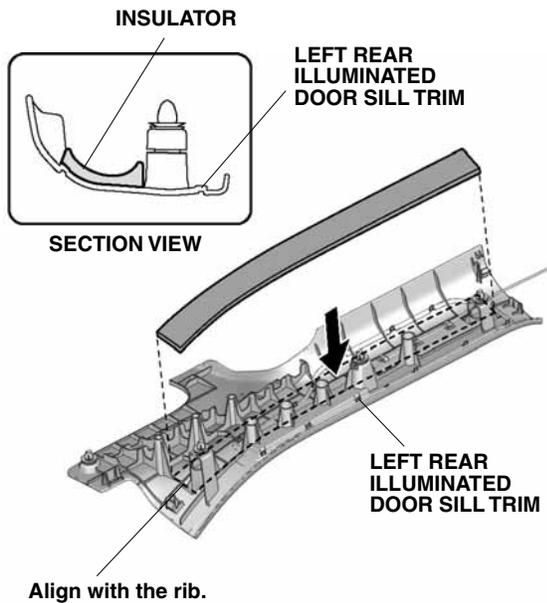

QD22712BH


31. Using isopropyl alcohol on a shop towel, thoroughly clean the left rear illuminated door sill trim where the aluminum tape will attach.

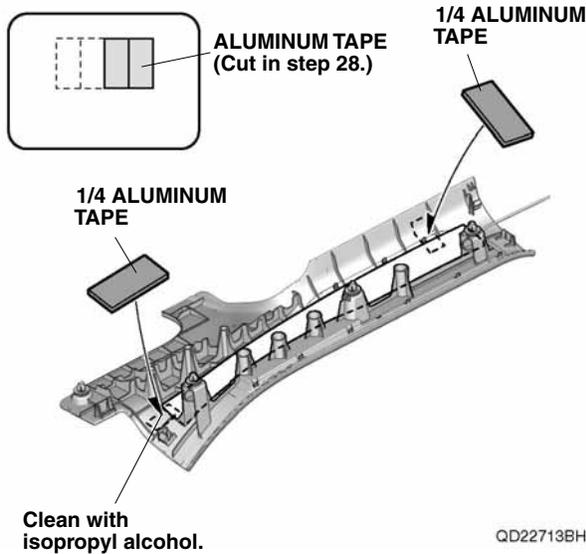

QD22713BH

32. Secure the insulator to the left rear illuminated door sill trim with two pieces of aluminum tape.  
 33. Repeat steps 25 through 32 to install the insulator on the right front and rear illuminated door sill trims.

34. Using isopropyl alcohol on a shop towel, thoroughly clean the door sill trim harness fuse case where the fuse label will attach.

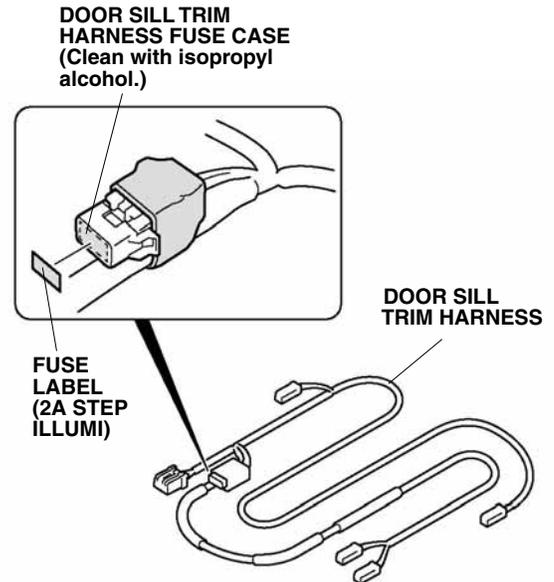


QD73120BH

35. Attach the fuse label to the door sill trim harness fuse case.

### Without Other Accessory Harness 12-pin Connector


36. Plug the door sill trim harness 12-pin connector into the fuse box. Go to step 38.

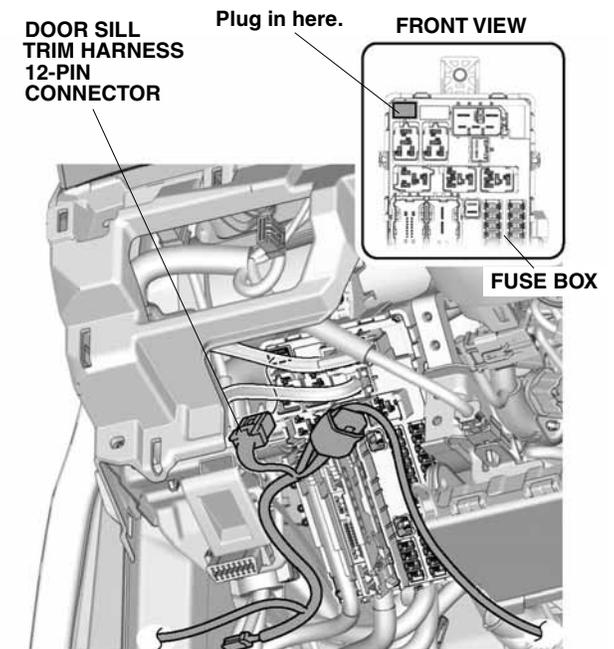


QD73122BH

## With Other Accessory Harness 12-pin Connector


37. If the 12-pin connector is already used by other accessory, locate the 12-pin connector taped to the other accessory harness. Remove the dummy connector from other accessory harness 12-pin connector, and plug the door sill trim harness 12-pin connector into the other accessory harness 12-pin connector.

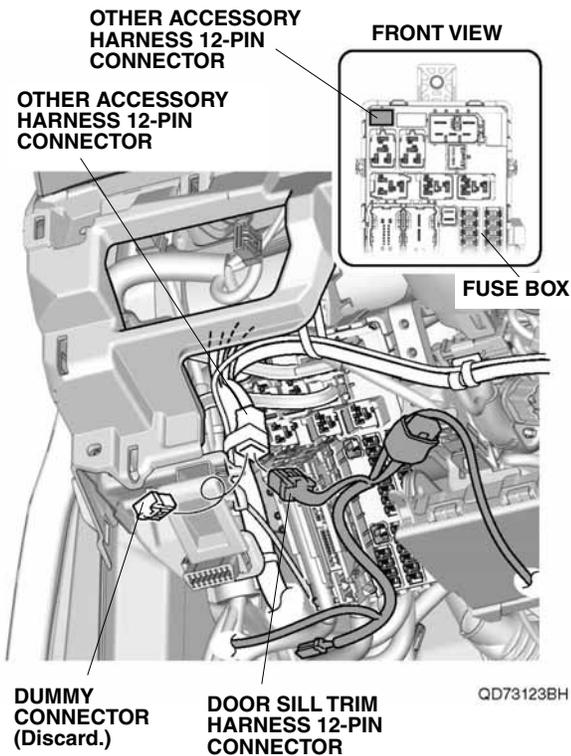


38. Secure the door sill trim harness to the vehicle harness with two wire ties.

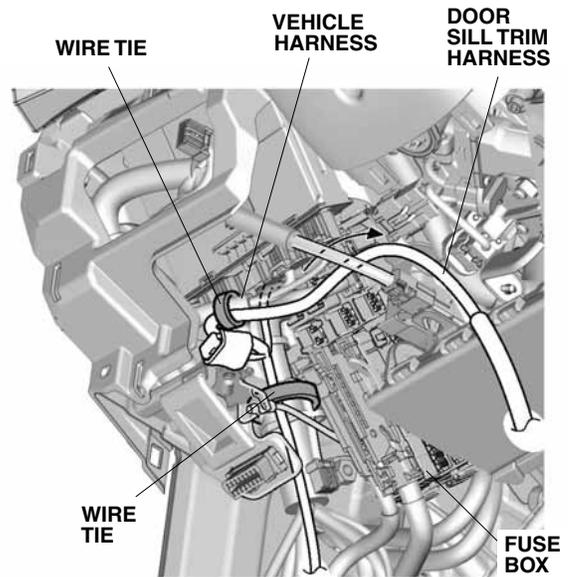

39. Route the door sill trim harness as shown. Align the green tape on the door sill trim harness with the vehicle harness as shown, and secure the door sill trim harness to the vehicle harness with one wire tie.

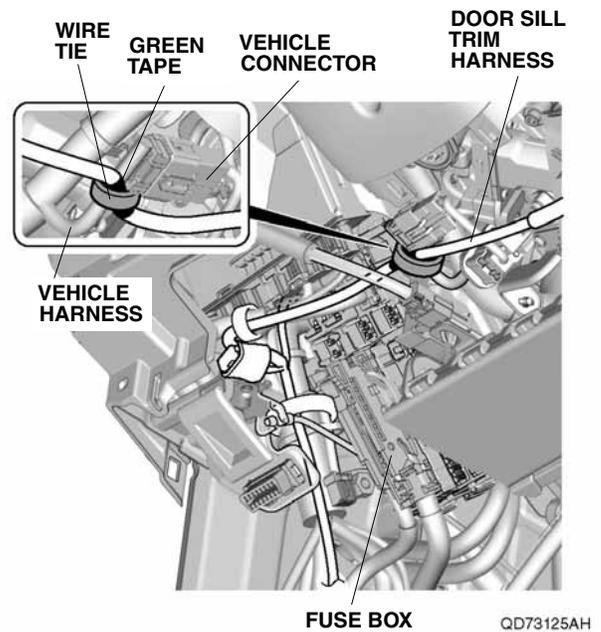


40. Route the door sill trim harness as shown.

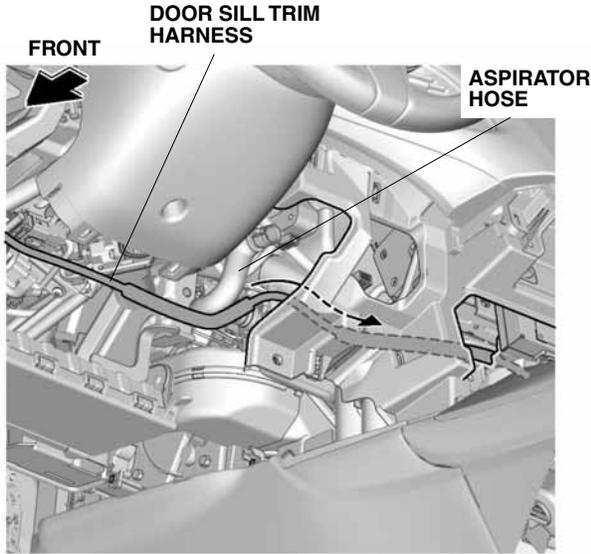


QD73126AH

41. Align the green tape on the door sill trim harness with the vehicle clip, and secure the door sill trim harness to the vehicle harness with one wire tie.

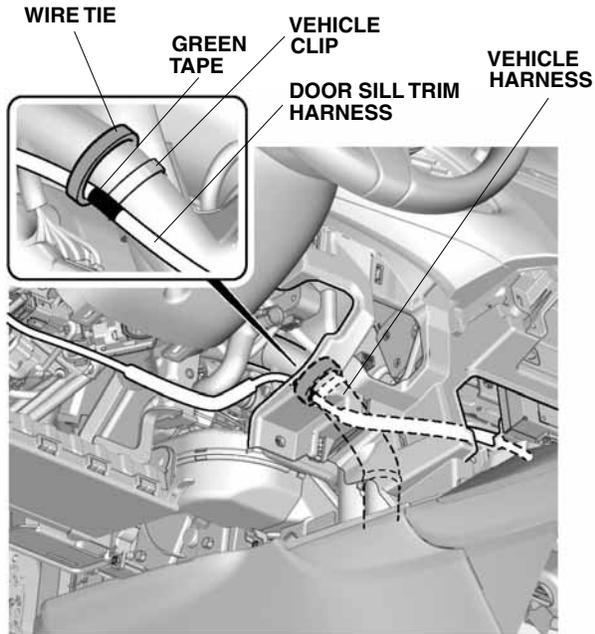


QD73127AH

42. Route the door sill trim harness as shown.

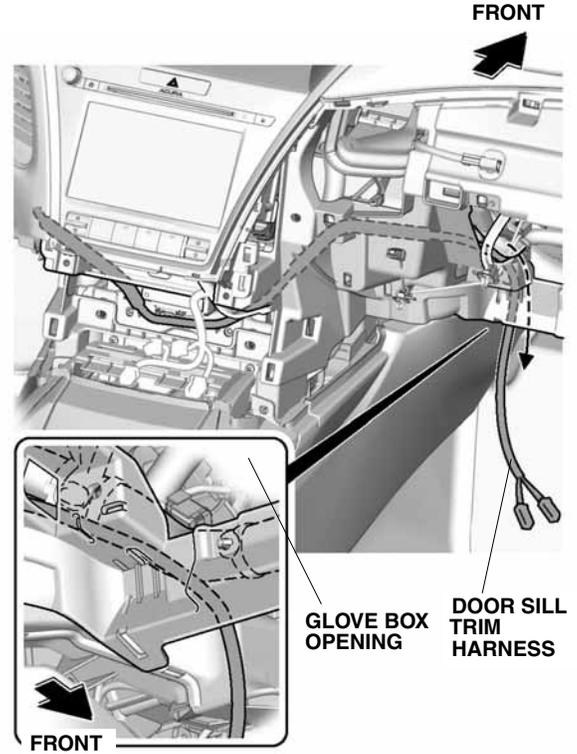


QD73128AH

43. Secure the door sill trim harness to the vehicle harness with one wire tie.

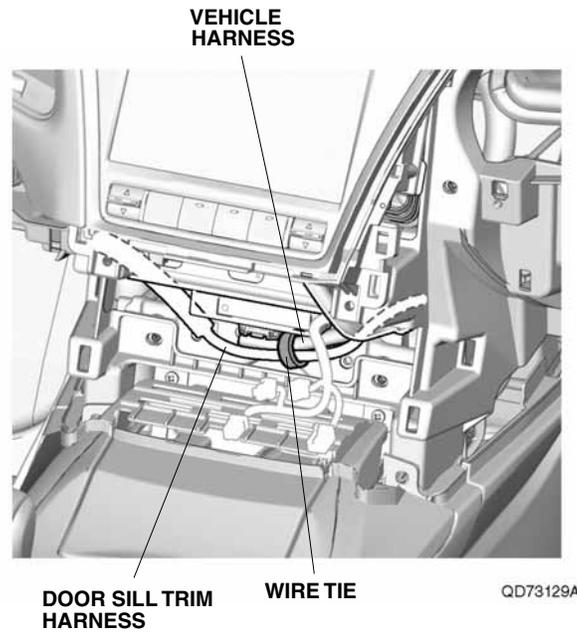


QD73129AH


44. Align the green tape on the door sill trim harness with the vehicle clip, and secure the door sill trim harness to the vehicle harness with one wire tie.

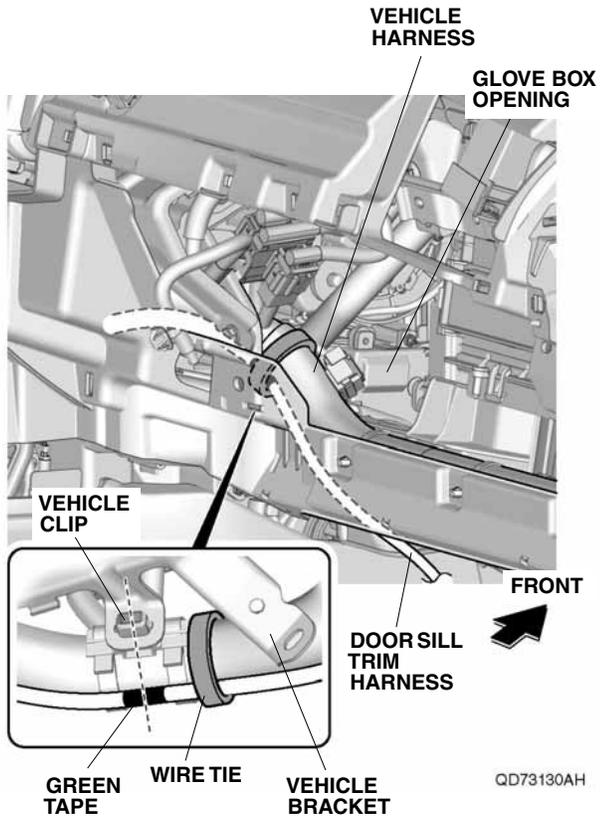


45. Secure the door sill trim harness to the vehicle harness with two wire ties.

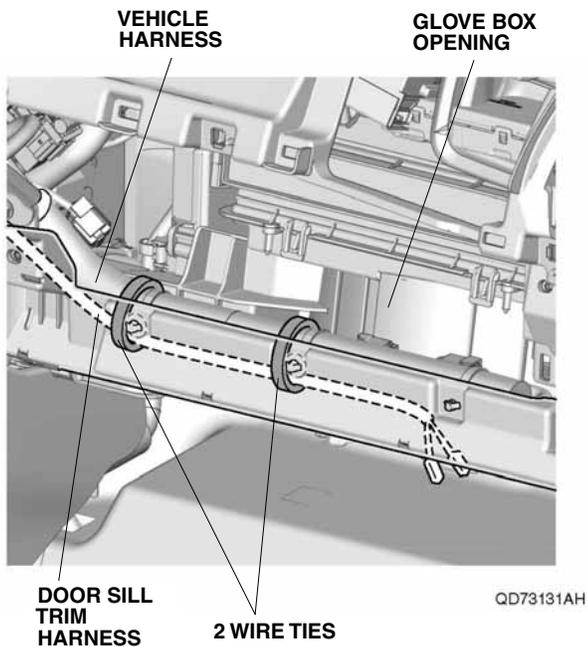

46. Plug the two door sill trim harness 2-pin connectors into the right front illuminated door sill trim 2-pin connector and subharness 2-pin connector.

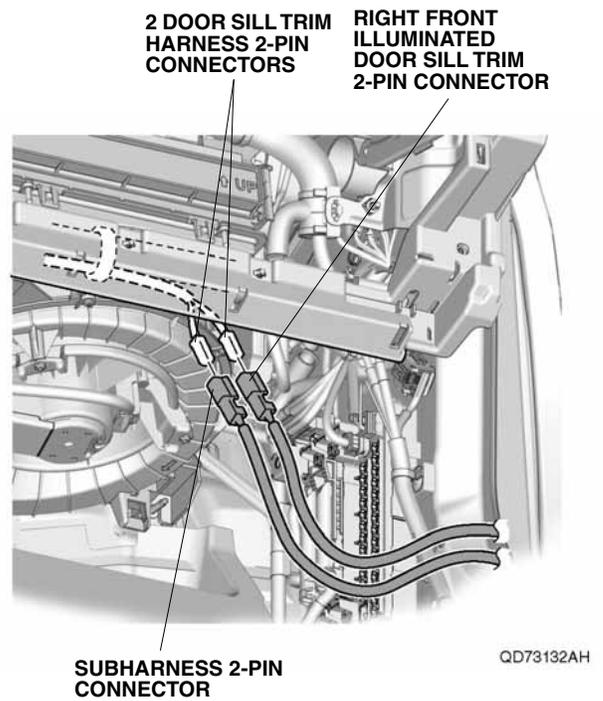


- Secure the right front illuminated door sill trim harness, subharness, and 2-pin connectors to the vehicle harness with two wire ties.

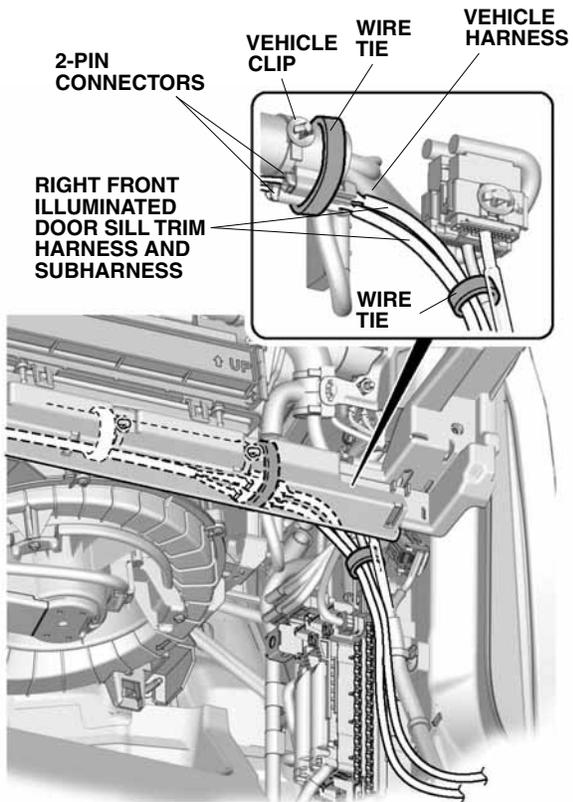


QD73133AH

- Position the right front illuminated door sill trim to the vehicle panel as shown.

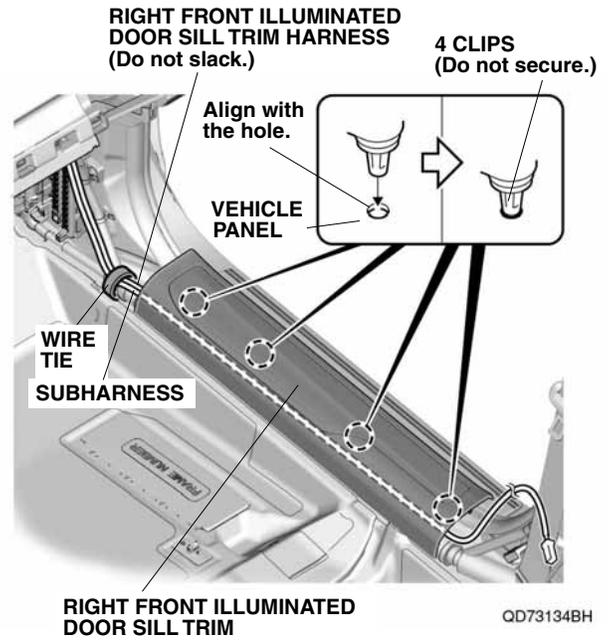


QD73134BH

- Secure the right front illuminated door sill trim harness and subharness to the vehicle harness with one wire tie.
- Remove the right front illuminated door sill trim.

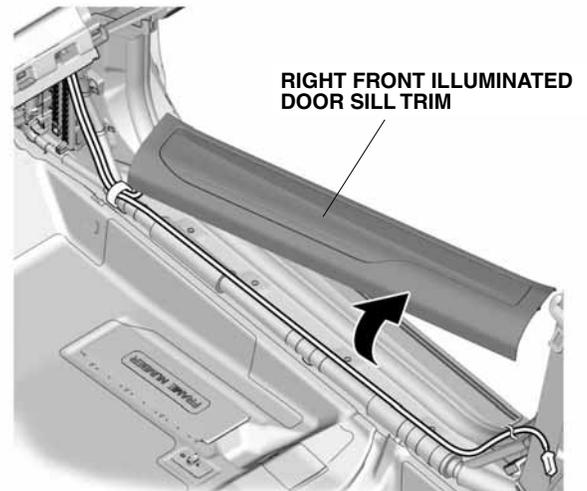


QD73135BH


51. Secure the subharness to the vehicle harness with three wire ties.

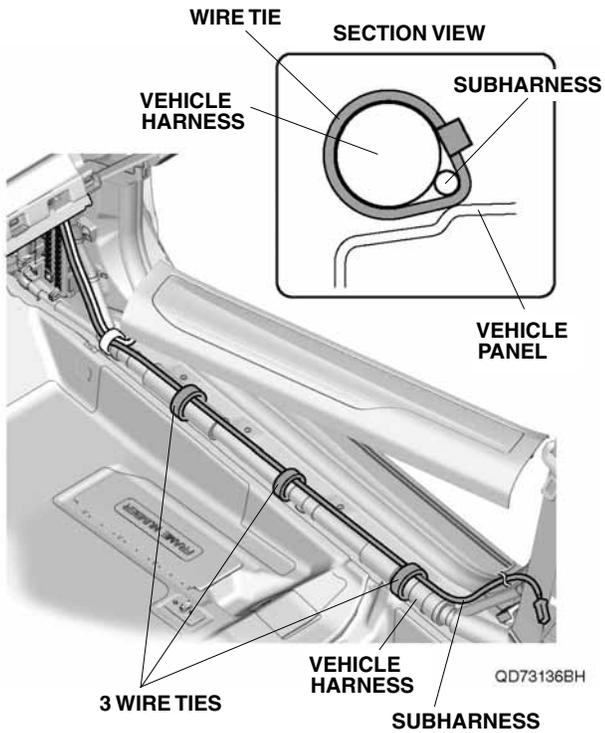


52. Plug the subharness 2-pin connectors into the right rear illuminated door sill trim 2-pin connector.

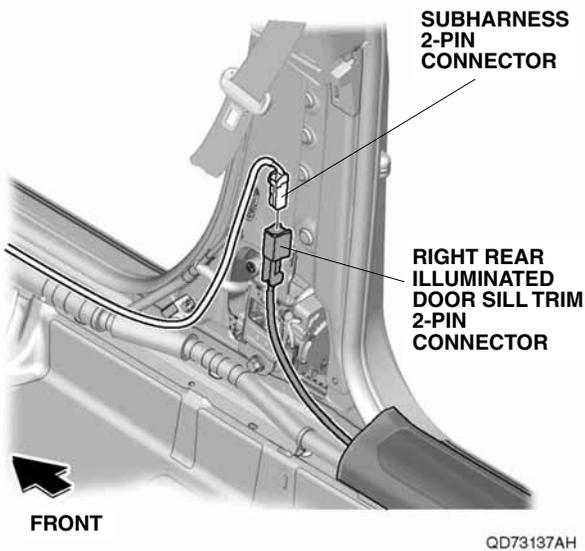

53. Secure the subharness and 2-pin connectors to the vehicle harness with two wire ties.

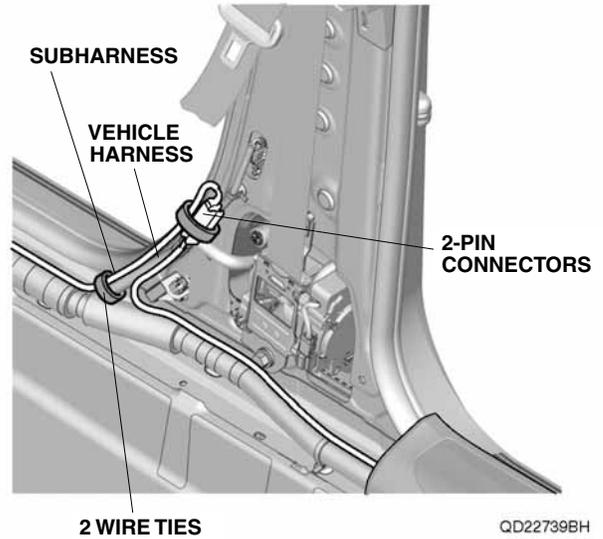


54. Position the right rear illuminated door sill trim to the vehicle panel as shown.

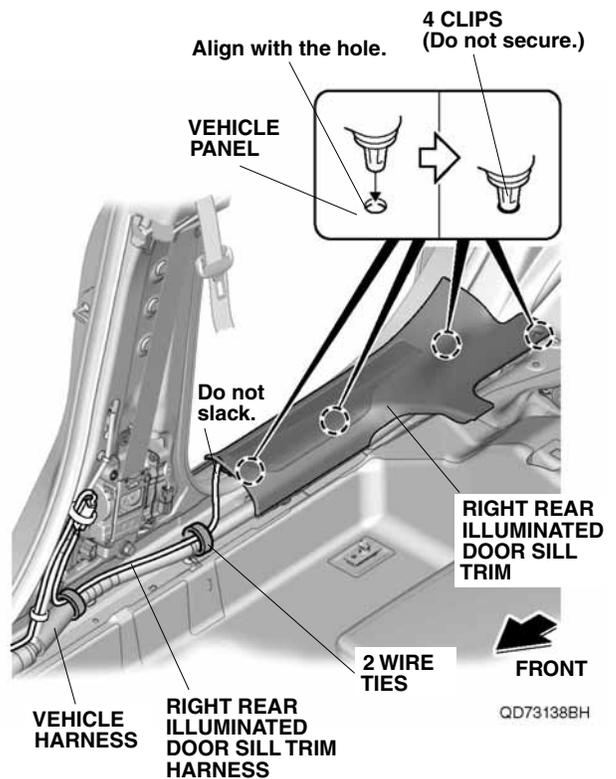


55. Secure the right rear illuminated door sill trim harness to the vehicle harness with two wire ties.

56. Remove the right rear illuminated door sill trim.

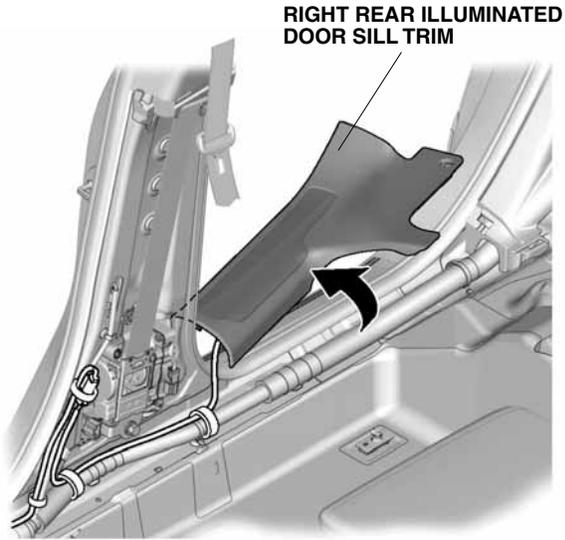


QD22741BH

57. Reinstall the right center pillar lower trim, and install the right rear illuminated door sill trim.

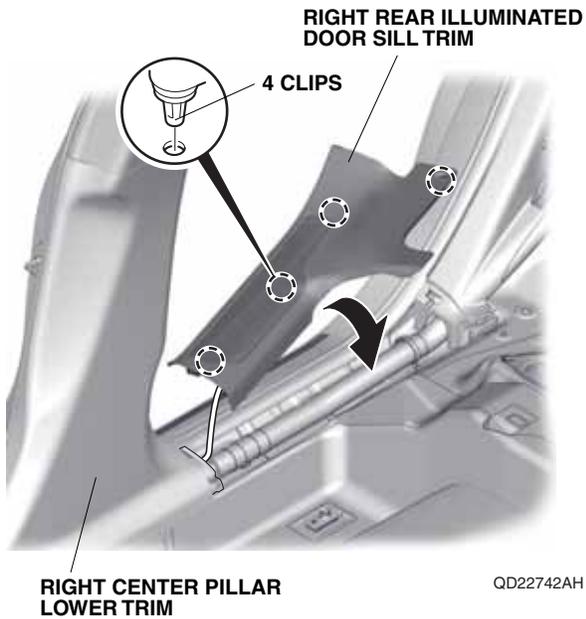


QD22742AH

58. Reinstall the passenger's kick panel, and install the right front illuminated door sill trim.

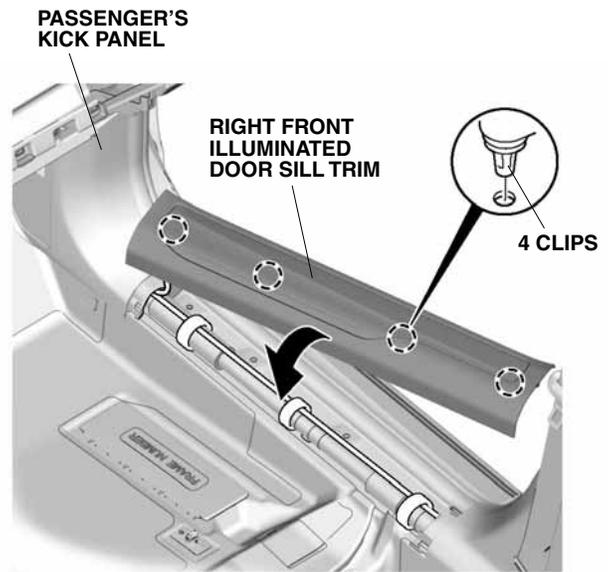


QD73139AH

59. Plug the door sill trim harness 2-pin connector into the left front illuminated door sill trim 2-pin connector.

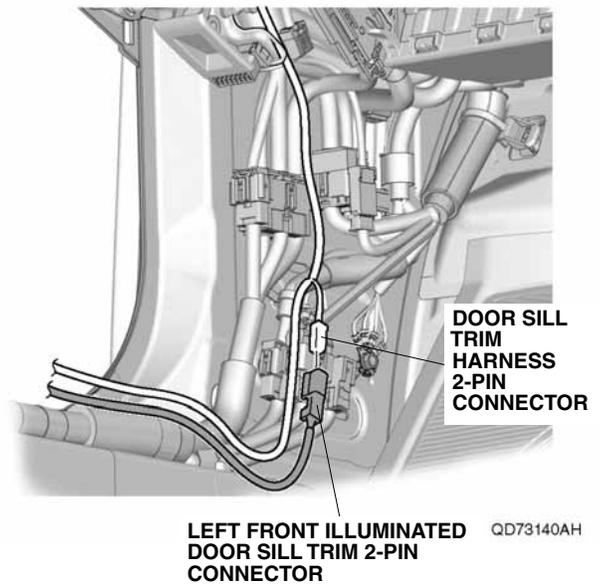


QD73140AH

60. Position the left front illuminated door sill trim to the vehicle panel as shown.

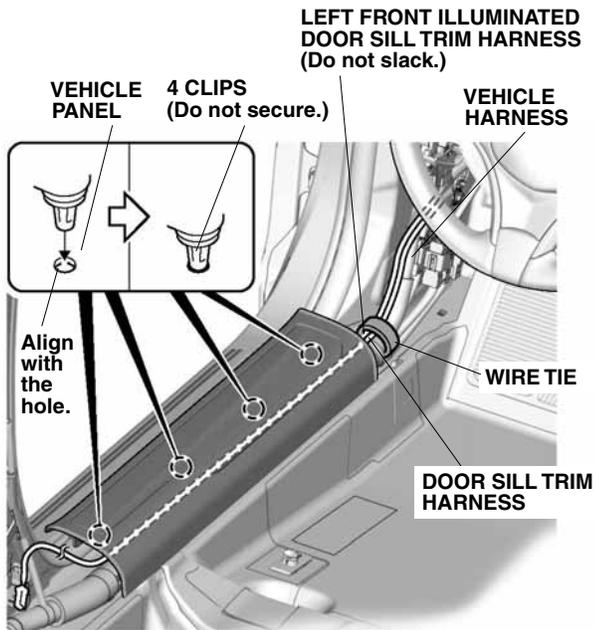


QD73141AH

61. Secure the left front illuminated door sill trim harness and door sill trim harness to the vehicle harness with one wire tie.
62. Bundle up the excess left front illuminated door sill trim harness, and secure it to the vehicle harness with one wire tie.

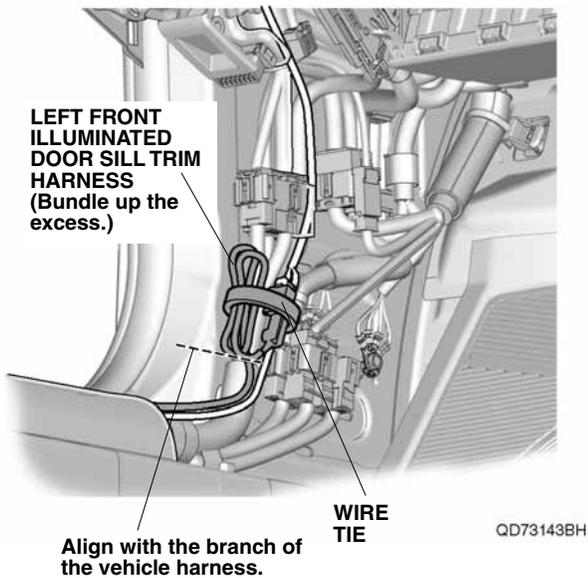


QD73143BH

63. Remove the left front illuminated door sill trim.

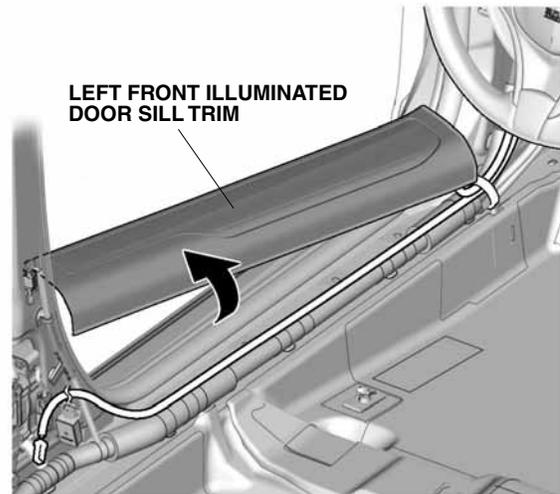


QD73144AH

64. Secure the door sill trim harness to the vehicle harness with three wire ties.

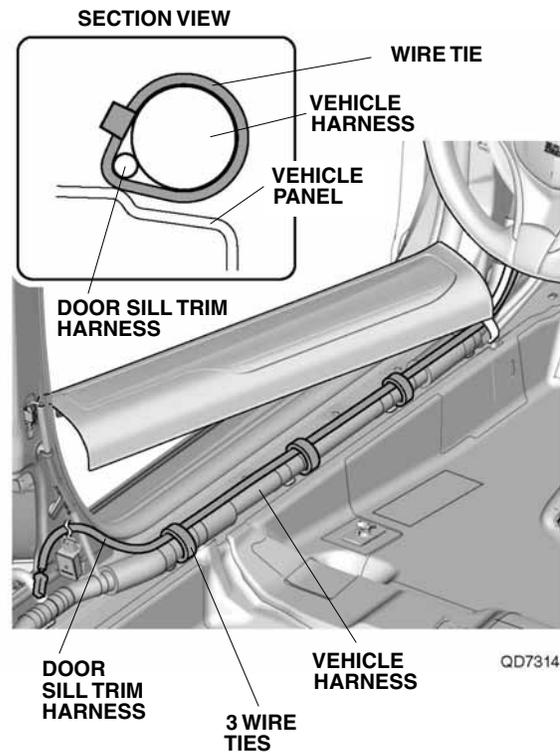


QD73145AH


65. Plug the door sill trim harness 2-pin connector into the left rear illuminated door sill trim 2-pin connector.

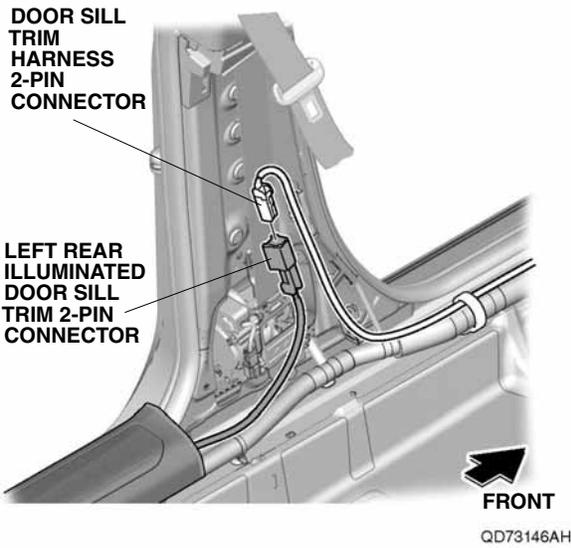


66. Secure the door sill trim harness, left rear illuminated door sill trim harness, and 2-pin connectors to the vehicle harness with two wire ties.

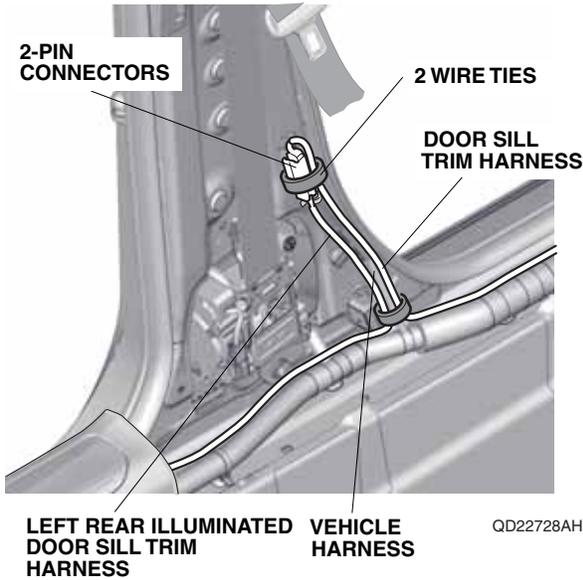


67. Position the left rear illuminated door sill trim to the vehicle panel as shown.

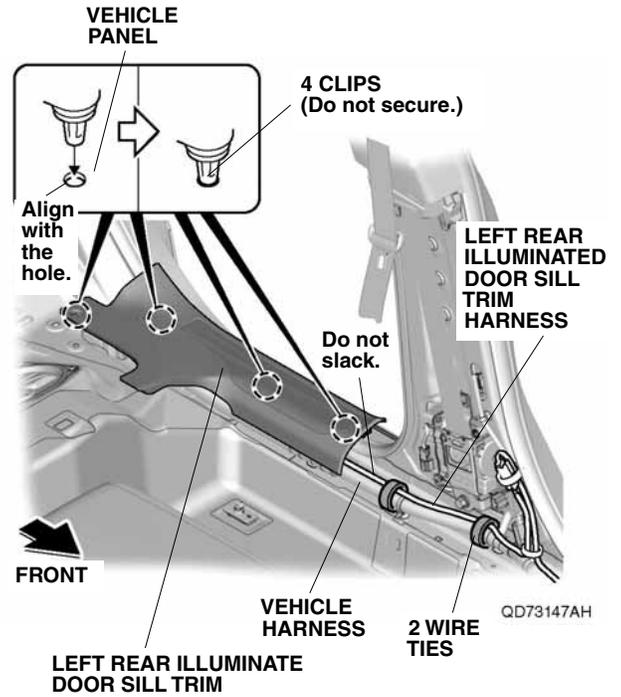


68. Secure the left rear illuminated door sill trim harness to the vehicle harness with two wire ties.
69. Remove the left rear illuminated door sill trim.

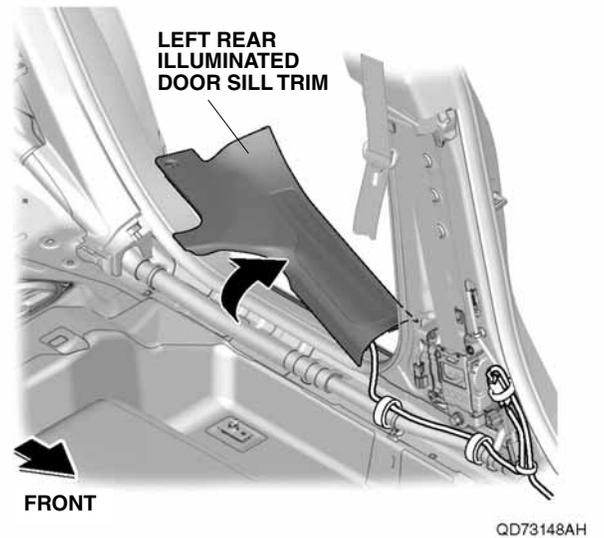

70. Reinstall the left center pillar lower trim, and install the left rear illuminated door sill trim.

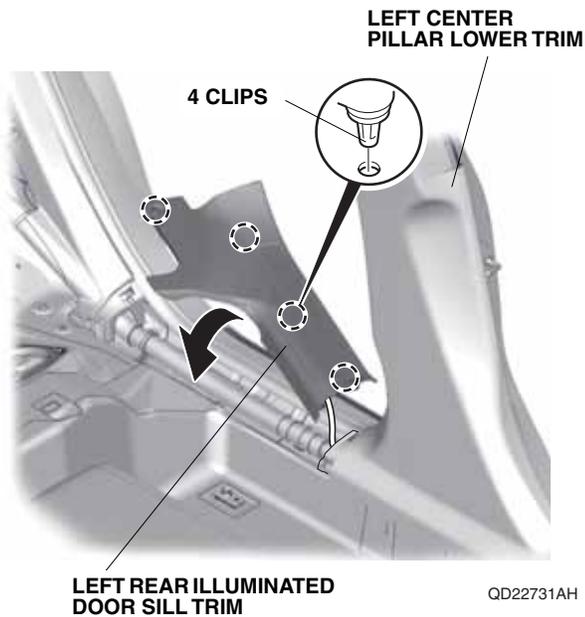

71. Reinstall the driver's kick panel, and install the left front illuminated door sill trim.

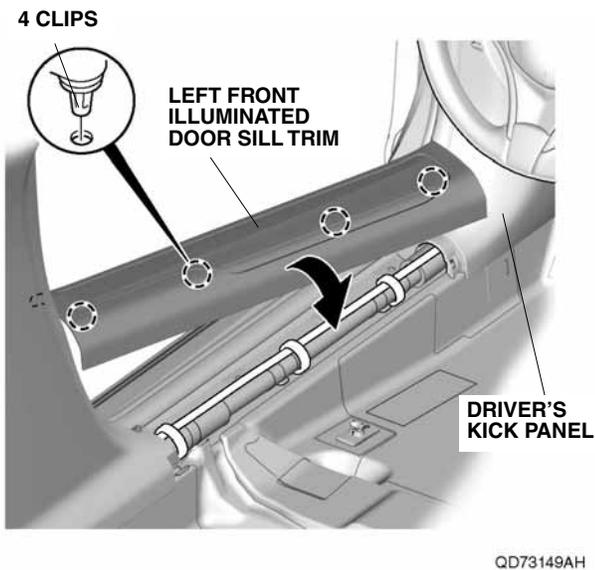

72. Check that all wire harnesses are routed properly and all connectors are plugged in.
73. Reinstall all removed parts.
74. Reconnect the negative cable to the battery.
75. Press and hold the radio power button for two seconds to restore the radio and navi (if equipped) system functions.
76. Reset the clock.
77. Make sure the light comes on when you open each door.
78. Restore the systems back to normal operation as described in the Service Manual if necessary.