



INSTALLATION INSTRUCTIONS

Accessory
ILLUMINATED
DOOR SILL TRIMS
P/N 08E12-TZ3-200

Application
2016 TLX

Publications No.
VERSION 1
Issue Date
SEP 2015

PARTS LIST


Left illuminated door sill trim



Right illuminated door sill trim



2 Door sill trim harnesses

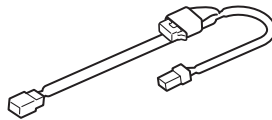

14 Wire ties



2 Fuse labels



TOOLS AND SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel

Diagonal cutters

10 mm Open end wrench


Ruler

Masking tape

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)

Illustration of the Illuminated Door Sill Trims in the Vehicle

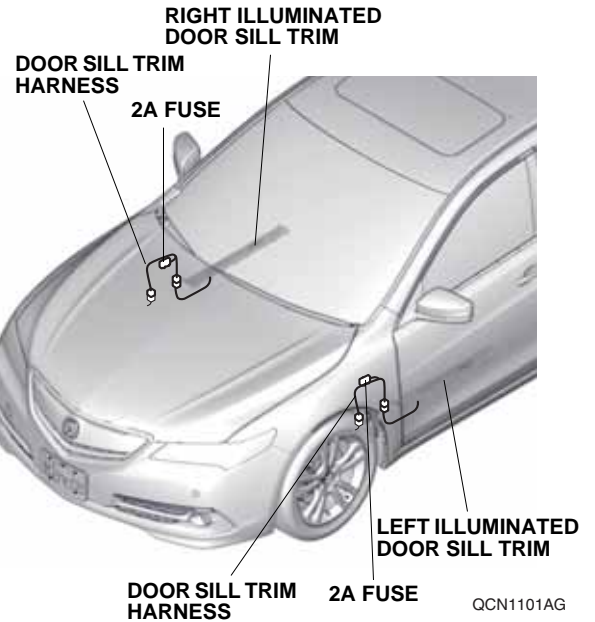


INSTALLATION


Client Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery.


- Remove the passenger's dashboard under cover.

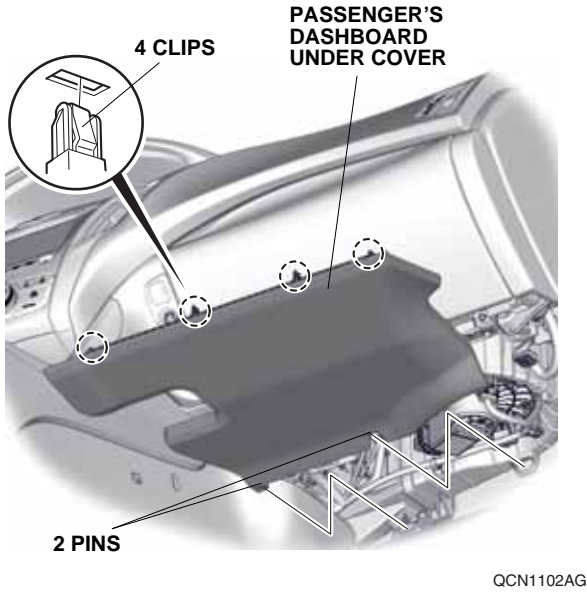


- Remove the passenger's front door sill trim.
NOTE: Make sure to remove the foam grommets from the vehicle panel.

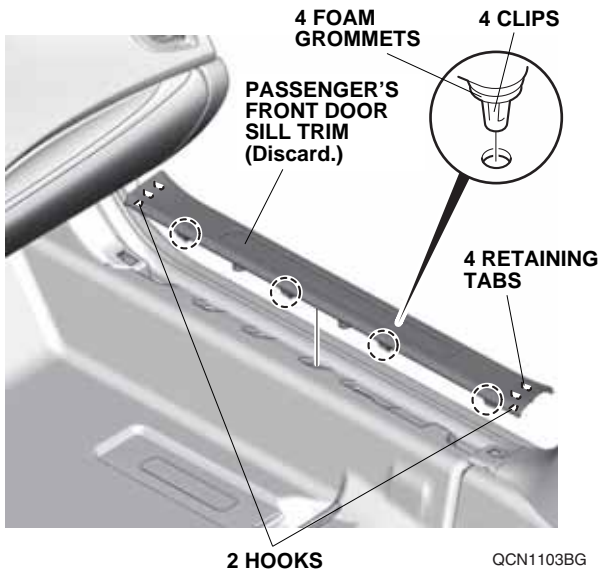


- Pull back the door opening seal, and remove the passenger's kick panel.

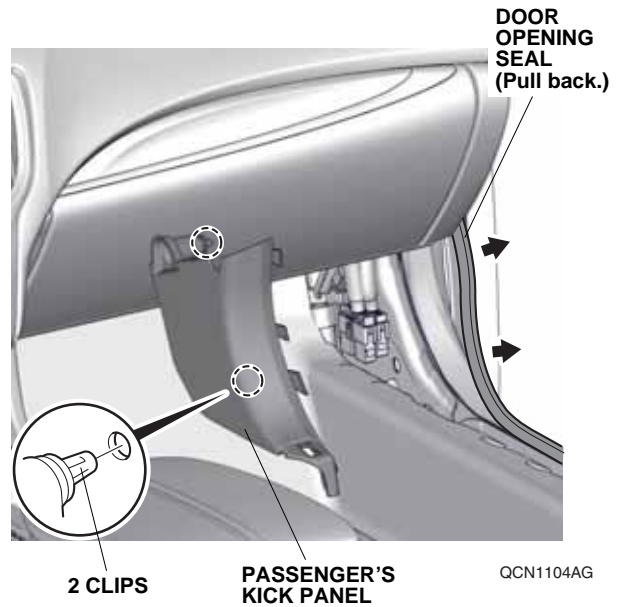


- Remove the driver's front door sill trim.
NOTE: Make sure to remove the foam grommets from the vehicle panel.

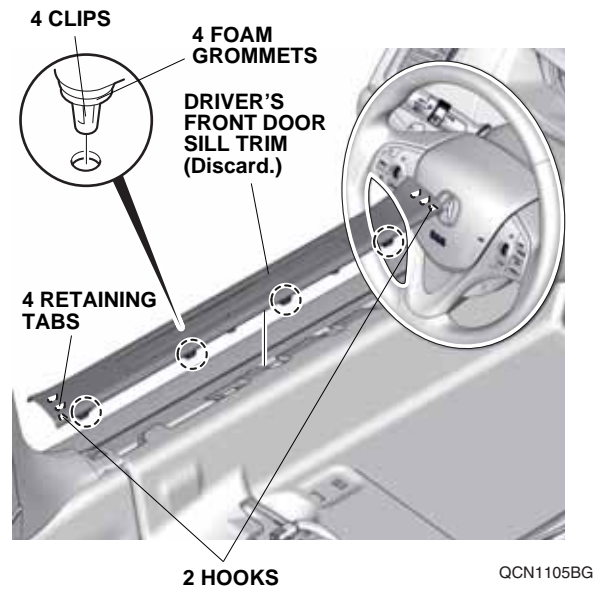


- Pull back the door opening seal, and remove the driver's kick panel.

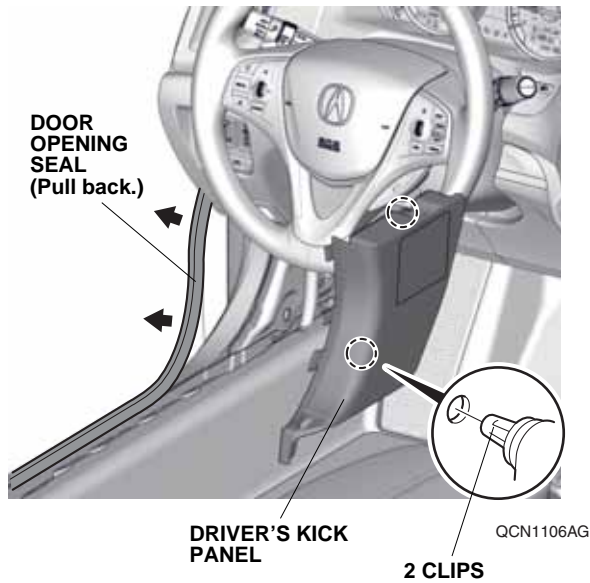

- Mark the left illuminated door sill trim harness with masking tape as shown.

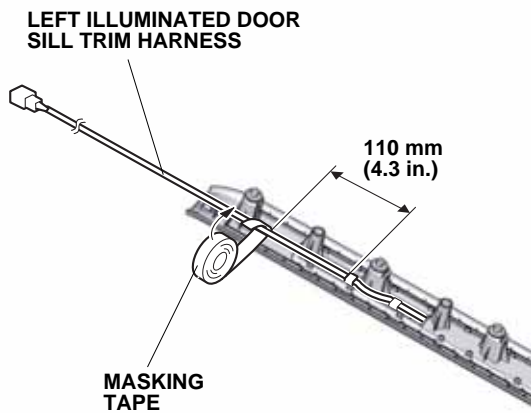


- Position the left illuminated door sill trim on the vehicle panel.
NOTE: If your illuminated door sill trim kit has green clips, remove them and re-use the yellow clips from the original door sill trim.

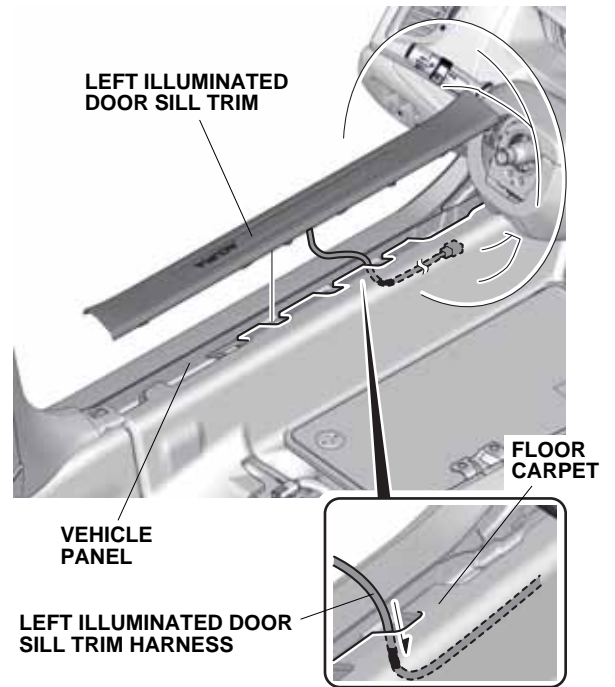


- Route the left illuminated door sill trim harness along the vehicle harness.


- Secure the left illuminated door sill trim harness to the vehicle harness with two wire ties as shown.

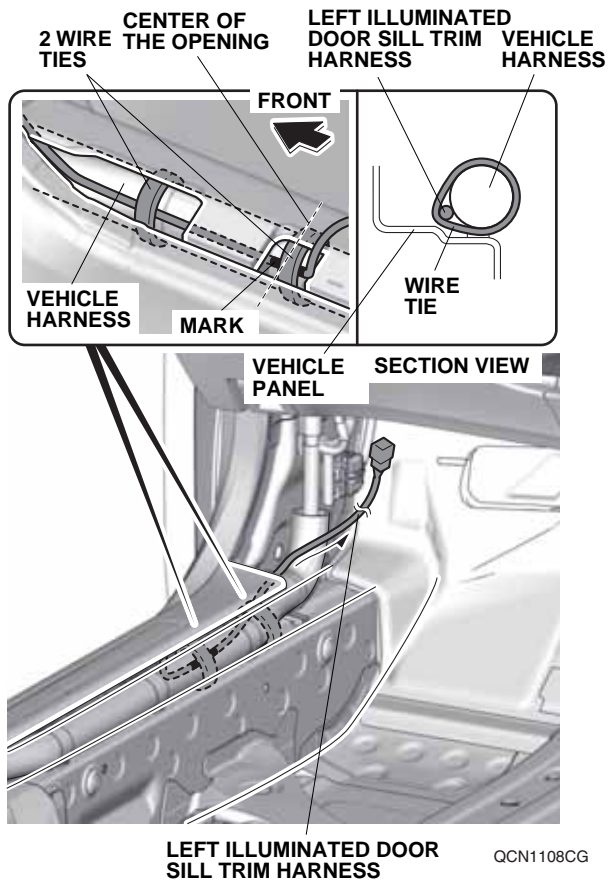


- Using isopropyl alcohol on a shop towel, thoroughly clean the fuse case where the fuse label will attach. Attach the fuse label (2A STEP ILLUMI) to the fuse case on the door sill trim harness.

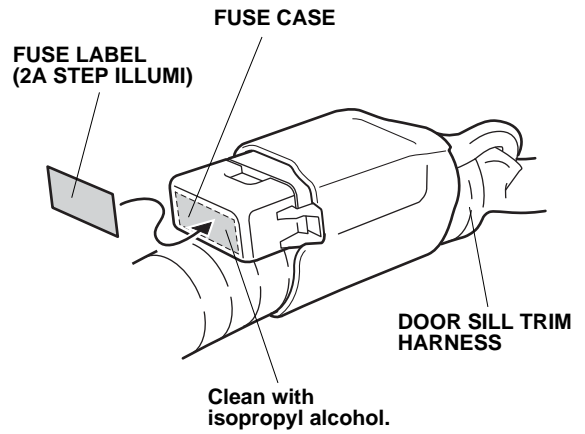


- Locate the vehicle 2-pin connector. Remove the tape and disconnect the dummy connector.

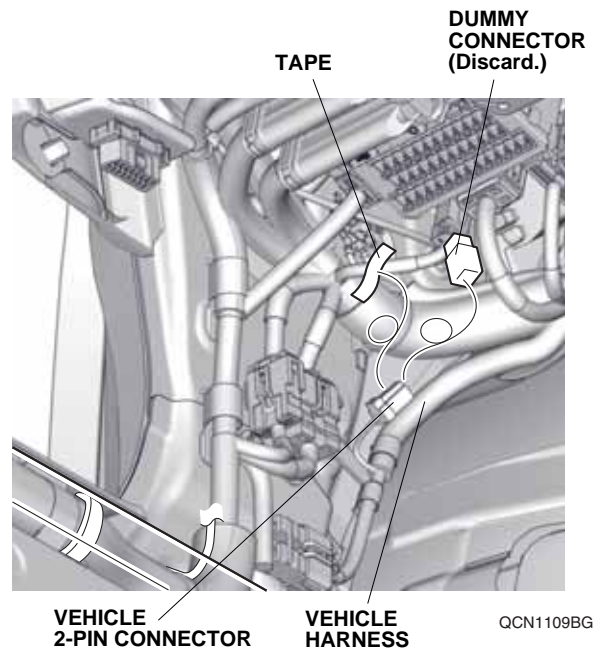

- Plug the vehicle 2-pin connector into the door sill trim harness 2-pin connector.

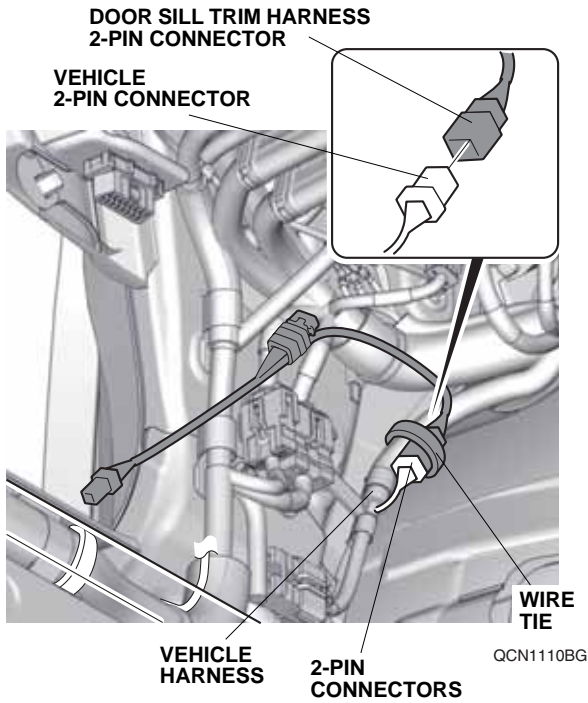


- Secure the 2-pin connectors to the vehicle harness with one wire tie.
- Route the door sill trim harness along the vehicle harness.

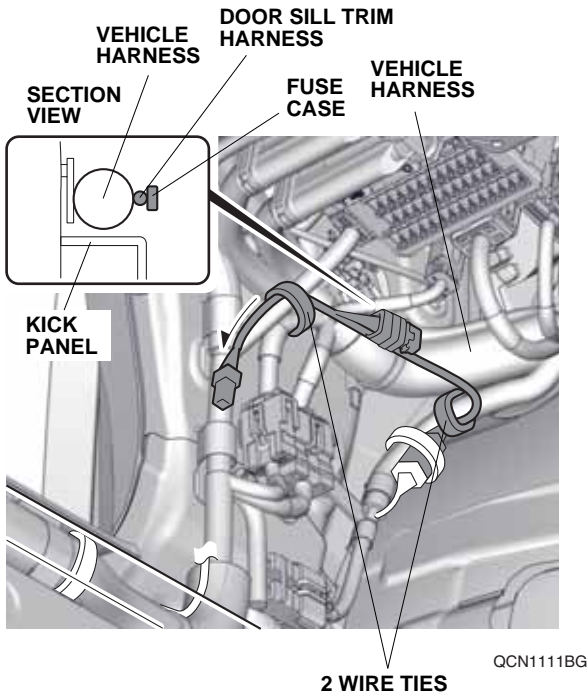


- Secure the door sill trim harness to the vehicle harness with two wire ties.


- Plug the door sill trim harness 2-pin connector into the left illuminated door sill trim harness 2-pin connector.

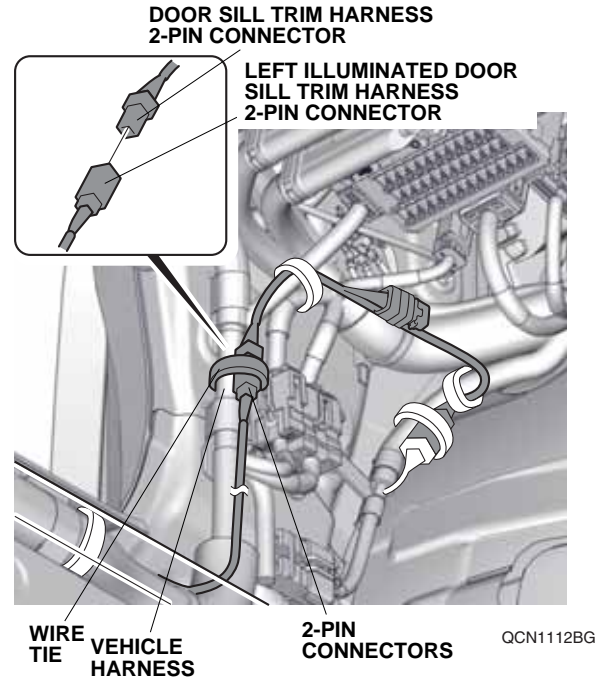

- Secure the 2-pin connectors to the vehicle harness with one wire tie.
- Bundle up the excess left illuminated door sill trim harness, and secure it to the vehicle harness with one wire tie.

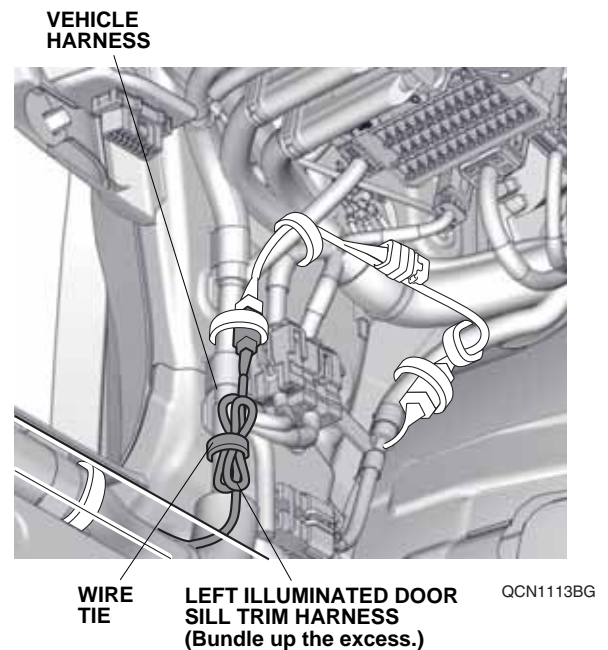


20. Reinstall the driver's kick panel.

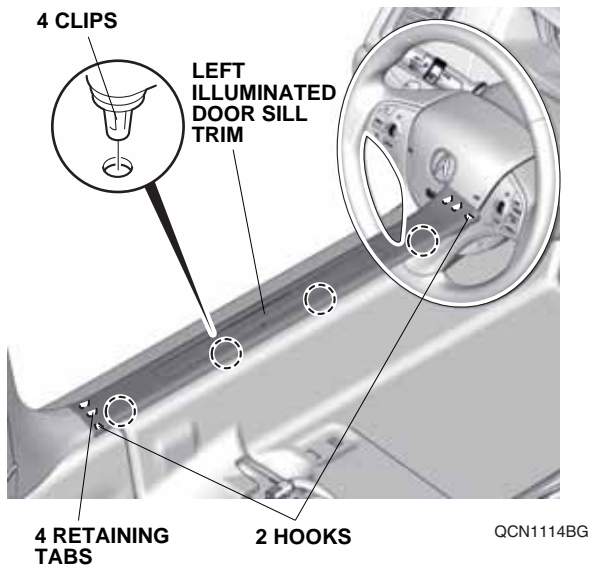


21. Install the left illuminated door sill trim.


22. Mark the right illuminated door sill trim harness with masking tape as shown.

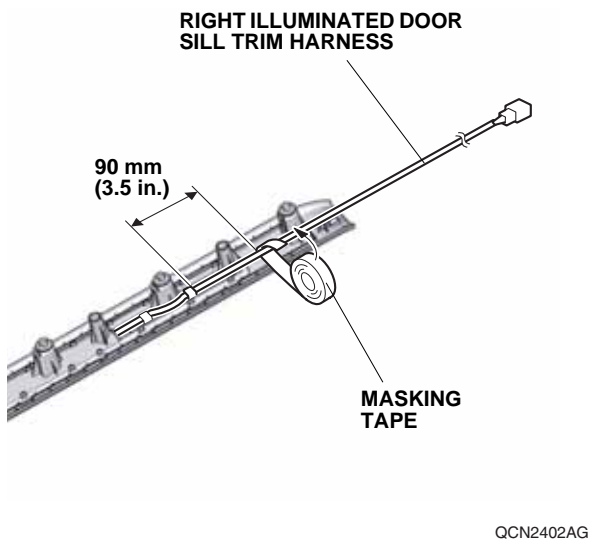

23. Position the right illuminated door sill trim to the vehicle panel.

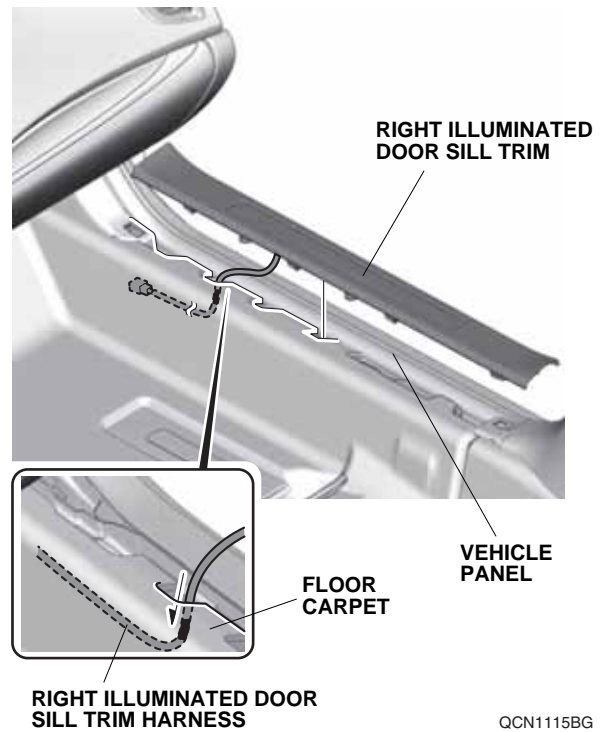


24. Route the right illuminated door sill trim harness along the vehicle harness.

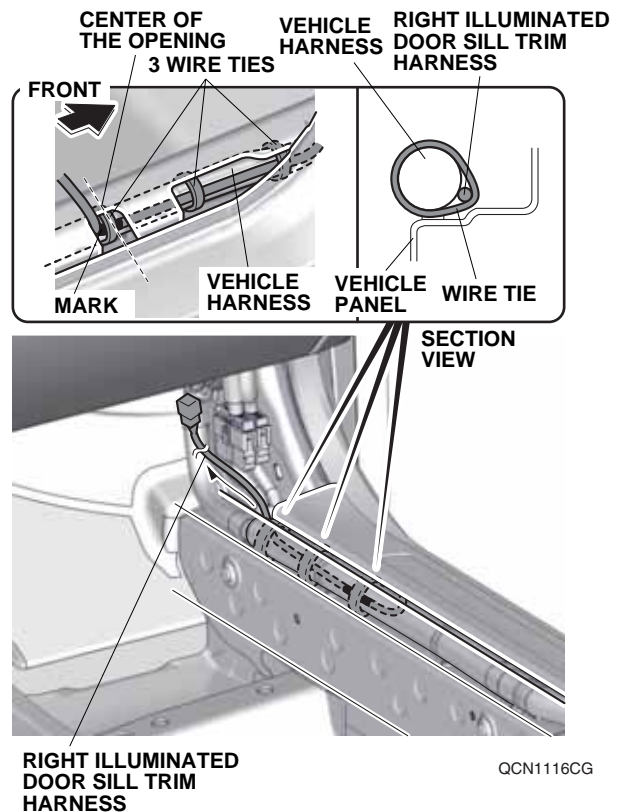


25. Secure the right illuminated door sill trim harness to the vehicle harness with three wire ties as shown.

- Using isopropyl alcohol on a shop towel, thoroughly clean the fuse case where the fuse label will attach. Attach the fuse label (2A STEP ILLUMI) to the fuse case on the door sill trim harness.

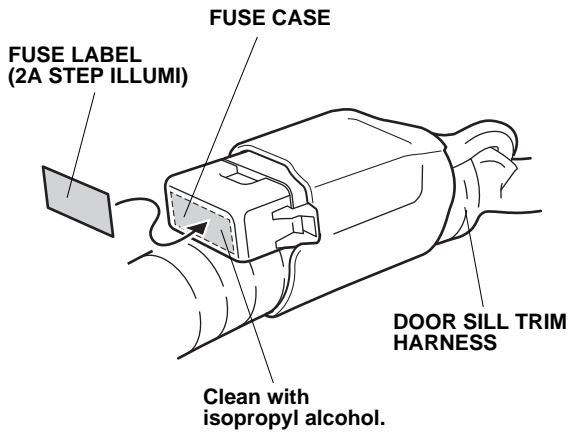


QB02621AJ

- Locate the vehicle 2-pin connector. Remove the tape and disconnect the dummy connector.

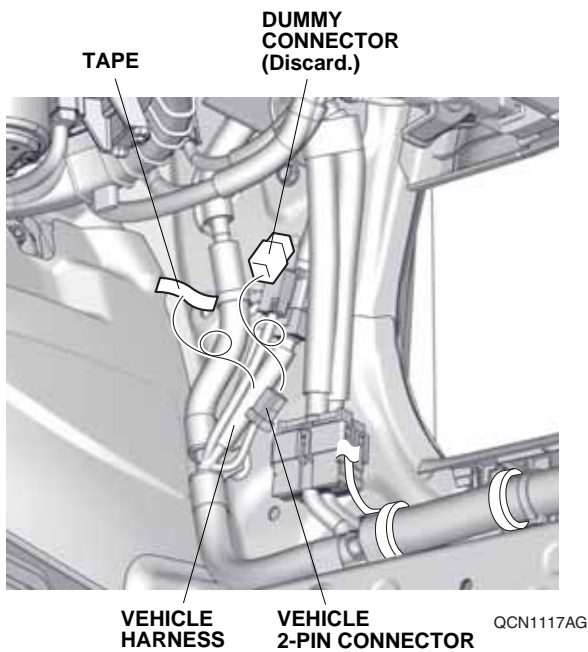

QCN1117AG


- Plug the vehicle 2-pin connector into the door sill trim harness 2-pin connector.

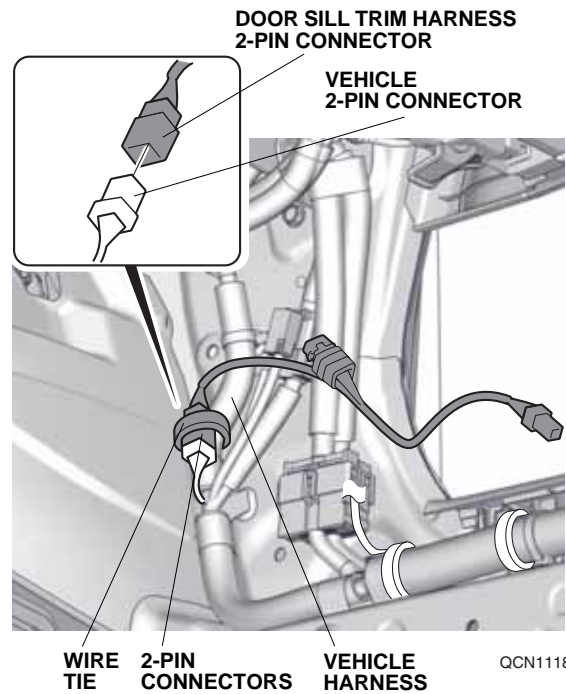

QCN1118AG

- Secure the 2-pin connectors to the vehicle harness with one wire tie.


- Route the door sill trim harness as shown.

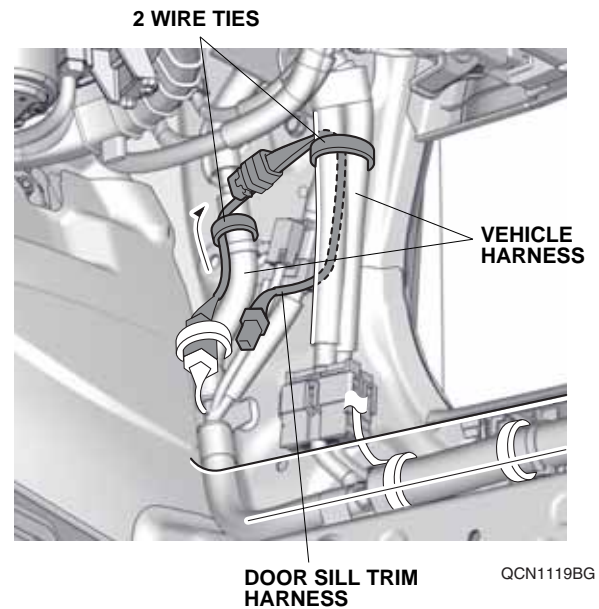


QCN1119BG

- Secure the door sill trim harness to the vehicle harness with two wire ties.

32. Plug the door sill trim harness 2-pin connector into the right illuminated door sill trim harness 2-pin connector.

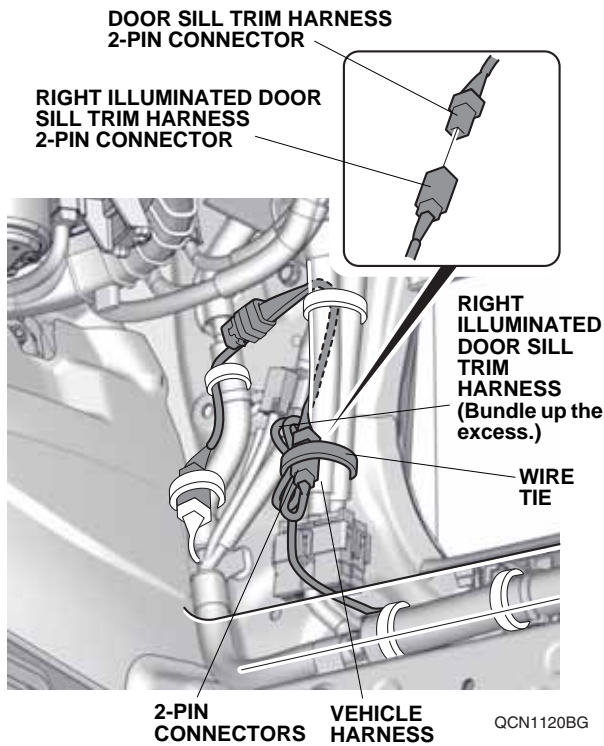

33. Bundle up the excess right illuminated door sill trim harness, and secure it and 2-pin connectors to the vehicle harness with one wire tie.
34. Install the passenger's kick panel.

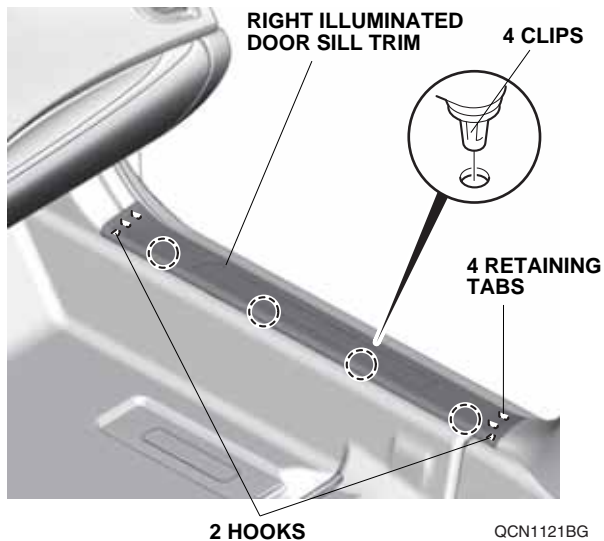

35. Install the right illuminated door sill trim.

36. Check that all wire harnesses are routed properly and all connectors are plugged in.
37. Install all removed parts.
38. Connect the negative cable to the battery.
39. Press and hold the audio unit power button for two seconds to restore the audio and navi (if equipped) system functions.
40. Reset the clock (vehicles without navigation).

Check the Operation of the Illuminated Door Sill Trims

41. Make sure the light comes on when you open each door.