



INSTALLATION INSTRUCTIONS


Accessory
REAR BUMPER APPLIQUE
P/N 08P48-SZT-100

Application
CR-Z


Publications No.
All) \$) '\$
Issue Date
SEP 2013

PARTS LIST


Rear Bumper Applique

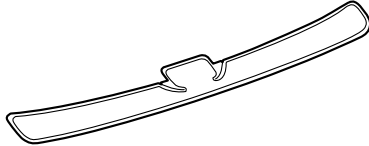


Applicator

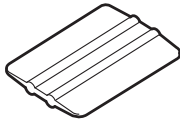

Soft sleeve

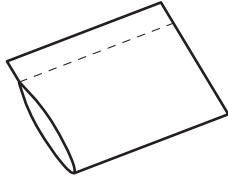

Alcohol wipe

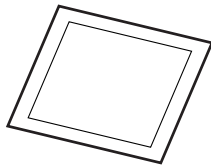


TOOLS AND SUPPLIES REQUIRED

Shop towel

Spray bottle

3M Protective tape application solution

Illustration of the Rear Bumper Applique on the Vehicle

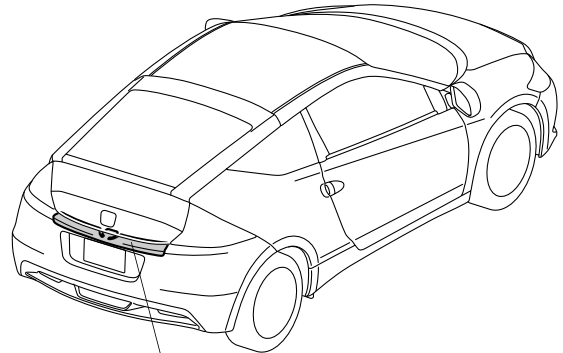

REAR BUMPER APPLIQUE


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- Do not damage the vehicle paint finish.
- This kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.
- Wash your hands thoroughly with soap and water before handling the rear bumper applique.

1. Open the hatch. Using the alcohol wipe, thoroughly clean the bumper where the rear bumper applique will attach.

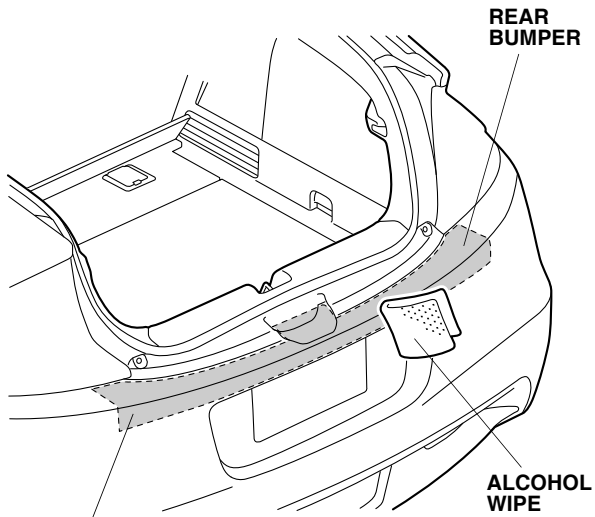


Clean with an alcohol swab.

2. Using a spray bottle with 3M protective tape application solution, spray the area where the rear bumper applique will attach.

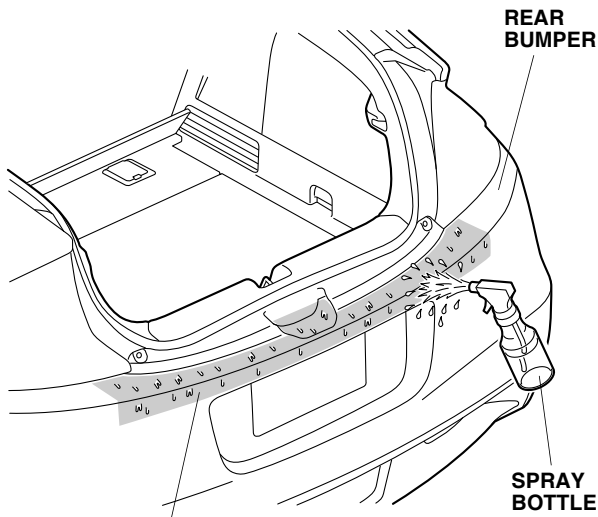


Spray with 3M protective tape application solution.

3. Remove the adhesive backing (the side marked 3M) from the rear bumper applique.

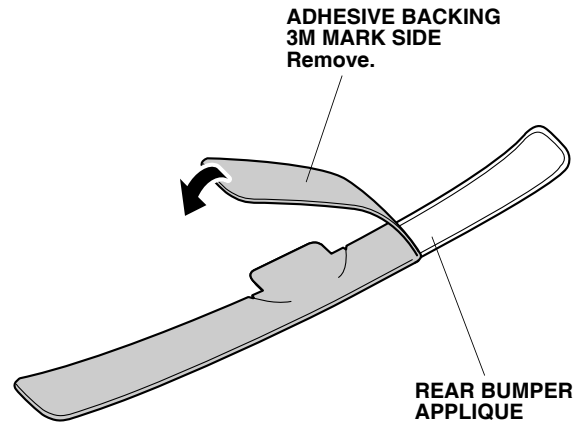


4. Spray the rear bumper applique with 3M protective tape application solution.

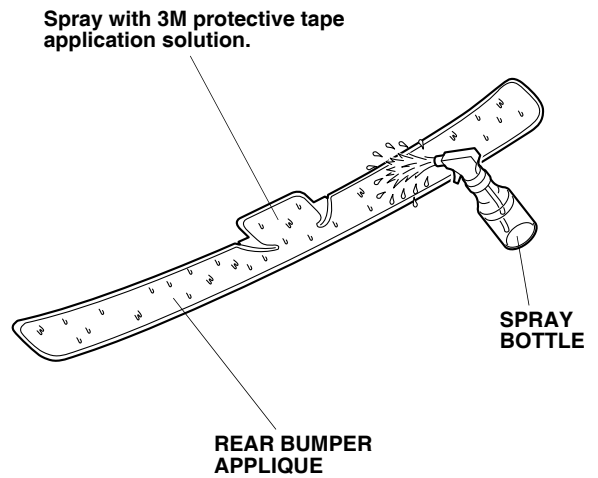


Spray with 3M protective tape application solution.


- Align the edge of the rear bumper applique to the character line, and attach it to the rear bumper.

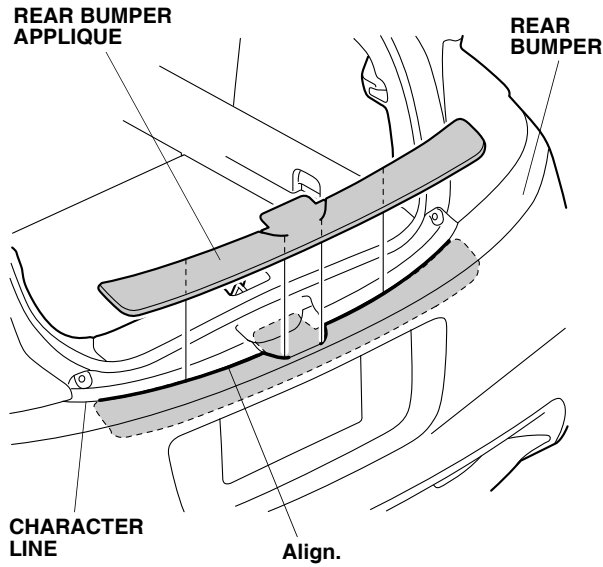


- Insert the applicator into the soft sleeve. Starting from the middle and working outward, use the soft sleeve to smooth out the curved section of the rear bumper applique against the rear bumper. Move the soft sleeve in one direction only. Do not smooth the upper and lower sections at this time. If you see an air bubble, stop and gently peel up that section to work out the bubble. Work slowly and keep pressure against the rear bumper applique.

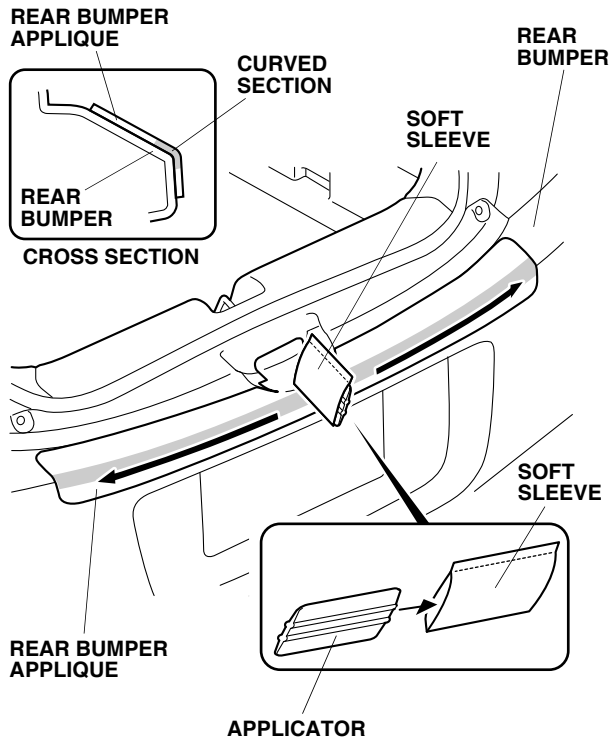


- Using the soft sleeve, adhere the upper middle section and the upper side section of the rear bumper applique the same way.

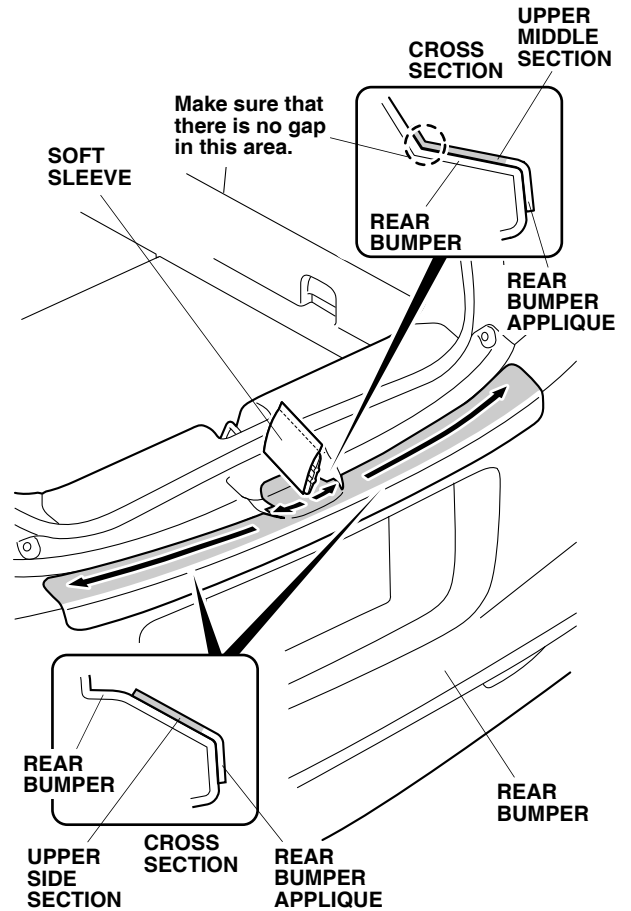

8. Slowly and carefully remove the protective film from the rear bumper applique.
NOTE: Do not pull up on the protective film.

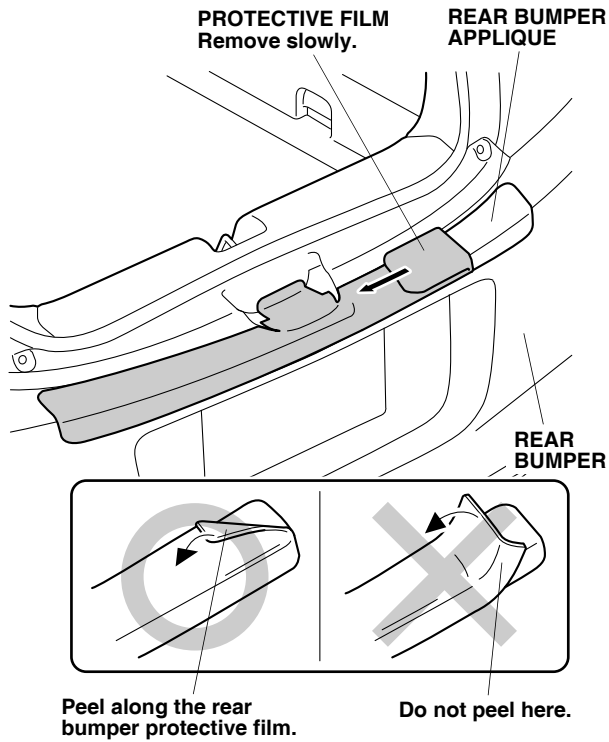

10. Using a shop towel, wipe the excess 3M protective tape application solution from the rear bumper applique. Allow the rear bumper applique to dry thoroughly.

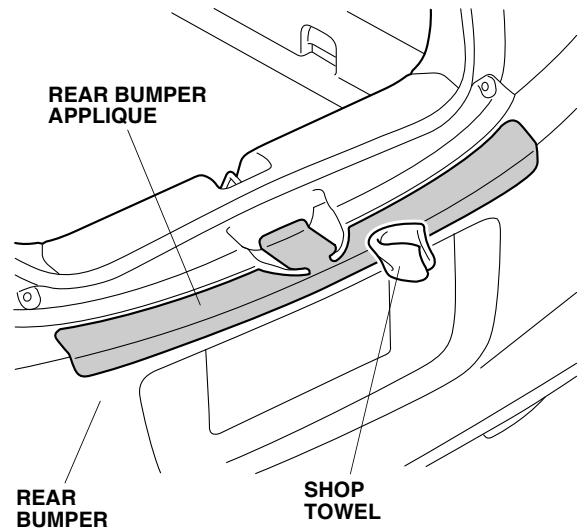

9. Once the flat surface is completely smooth with no bubbles, use the applicator with soft sleeve to apply the rear bumper applique to the rounded rear edge of the bumper.

