



INSTALLATION INSTRUCTIONS


Accessory
**ILLUMINATED DOOR
SILL TRIM**
P/N 08E12-TP6-100

Application
2015 CROSSTOUR


Publications No.
VERSION 1
Issue Date
AUG 2014

PARTS LIST


2 Front illuminated door sill trims

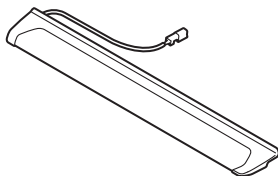


2 Rear door sill trims




2 Door sill trim harnesses

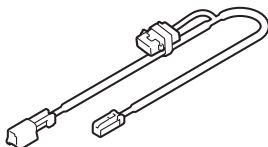

2 Fuse labels

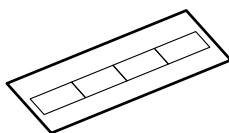


Protective tape




2 Protective clips



11 Wire ties

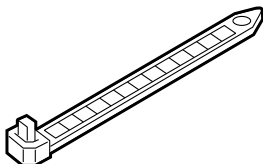

2 Alcohol swabs

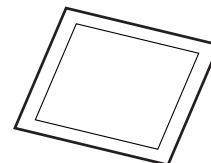

TOOLS AND SUPPLIES REQUIRED

Ruler

10 mm Combination wrench

Diagonal cutters

Utility knife

Masking tape

Isopropyl alcohol


Shop towel

Felt-tip pen

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)


Illustration of the Illuminated Door Sill Trim in the Vehicle

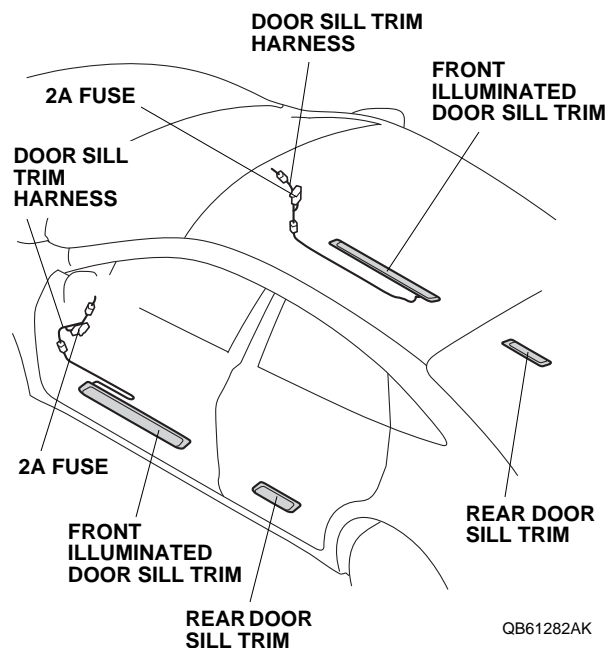

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

1. Make sure you have the anti-theft codes for the audio and navigation system (if equipped), then write down the radio station presets.
2. Disconnect the negative cable from the battery.
3. Remove the passenger's dashboard under cover (three clips and two pins).

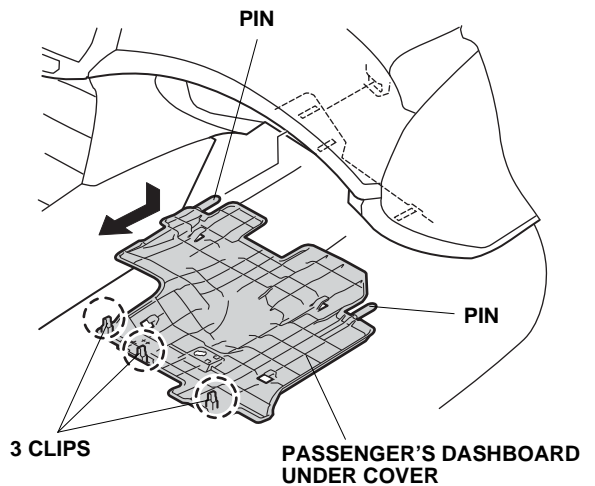


730101A

4. Remove the passenger's front door sill trim (four clips, two retaining tabs, and two hooks).

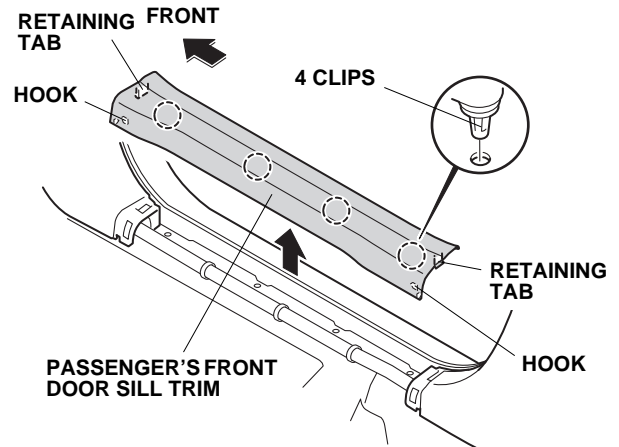


QB61250AK

5. Pull away the right front door opening seal, and remove the passenger's kick panel (two clips).

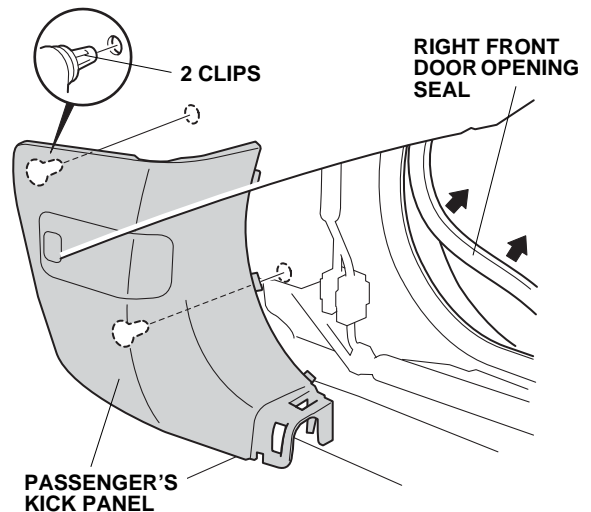


QB61251AK

6. Remove the driver's front door sill trim (four clips, two retaining tabs, and two hooks).

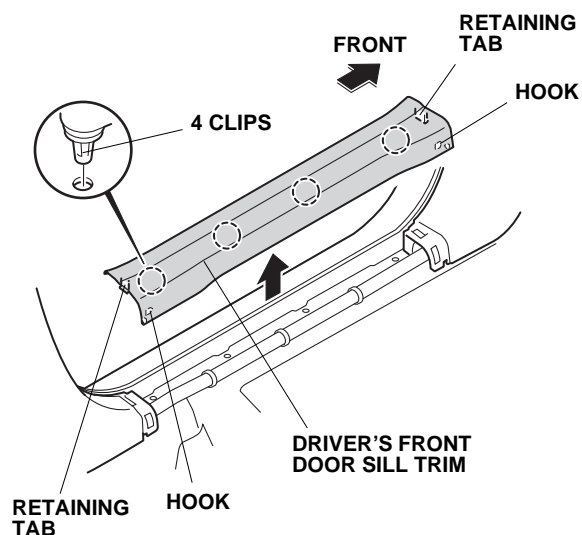


QB61252AK

7. Pull away the left front door opening seal, and remove the driver's kick panel (two clips).

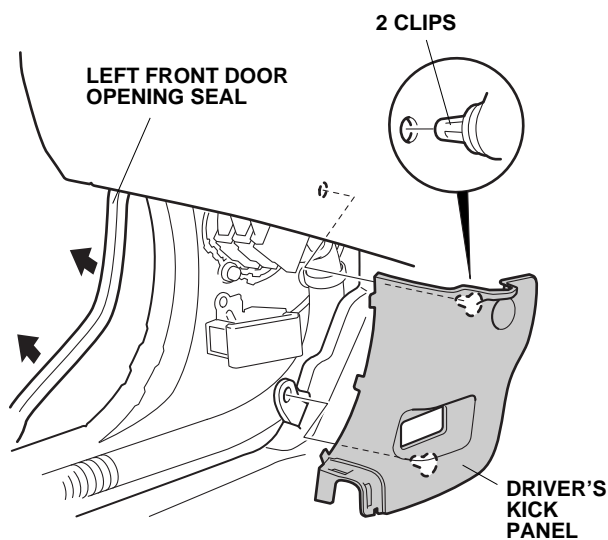


932503AS

8. Pull away the left front door opening seal.

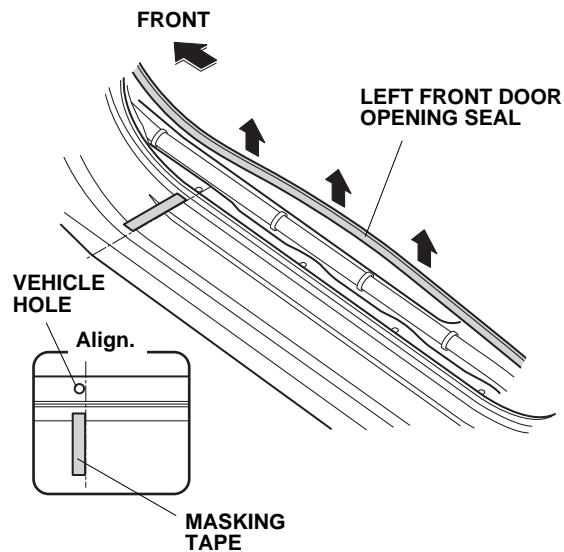


QB61253AK

9. Attach masking tape to the vehicle panel as shown.
10. Position the front illuminated door sill trim with the masking tape.

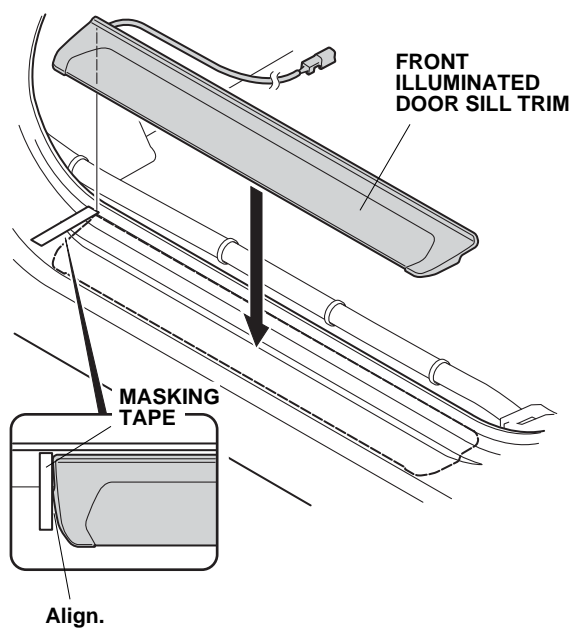


QB61254AK

- Using a utility knife, cut the protective tape at the measurements shown.

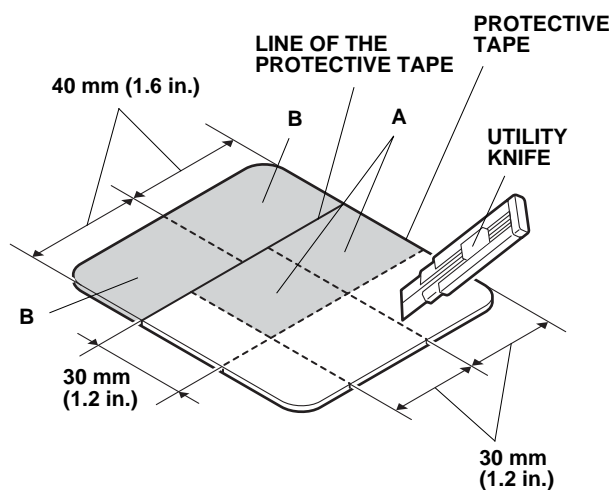

7D1509BR


- Using isopropyl alcohol on a shop towel, thoroughly clean the area where the protective tape will attach.

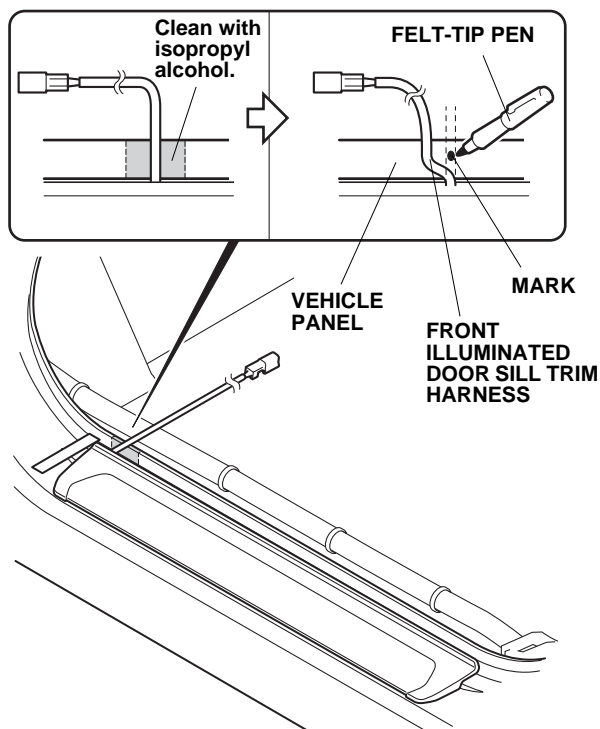

QB61255AK


- Using a felt-tip pen, mark the vehicle panel as shown.

- Attach one piece of protective tape A over the mark on the vehicle panel and install the protective clip to the protective tape A on the vehicle panel.

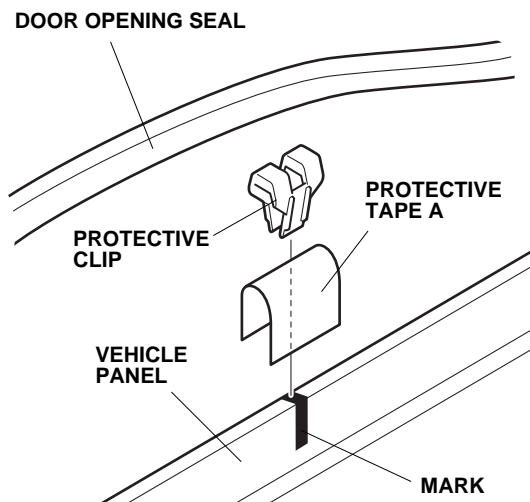

AD1512AH


- Peel back the ends of two adhesive backings on the front illuminated door sill trim and attach them to the front of the trim with masking tape.

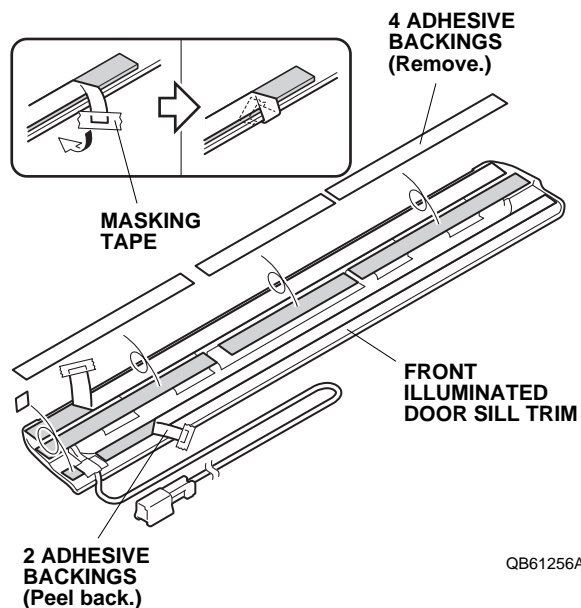


QB61256AK

- Remove four adhesive backings.


17. Using an alcohol swab, thoroughly clean the area where the front illuminated door sill trim will attach.

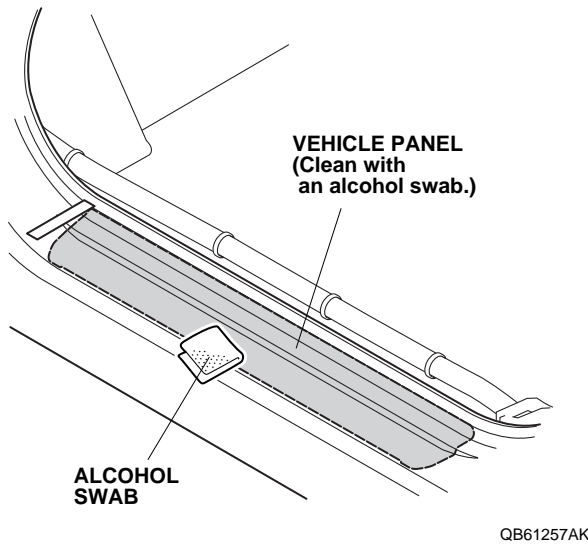


18. Position the front illuminated door sill trim with the masking tape.

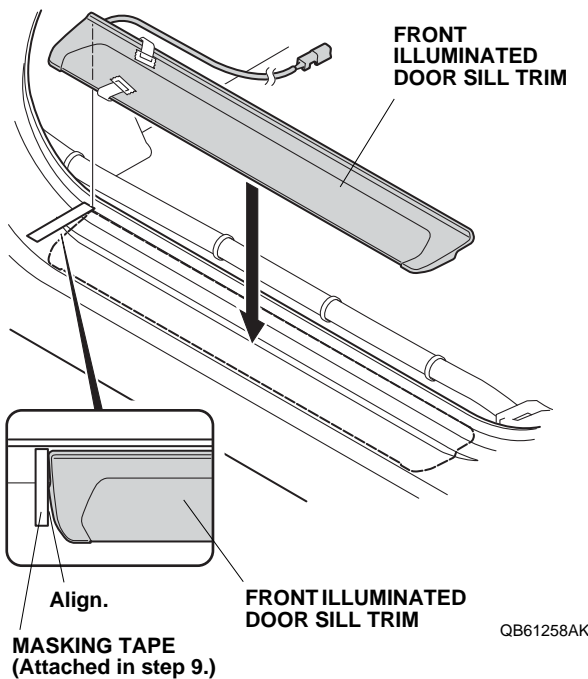


19. Attach the front illuminated door sill trim to the vehicle panel by removing the two adhesive backings and pressing on the trim firmly with your hands.

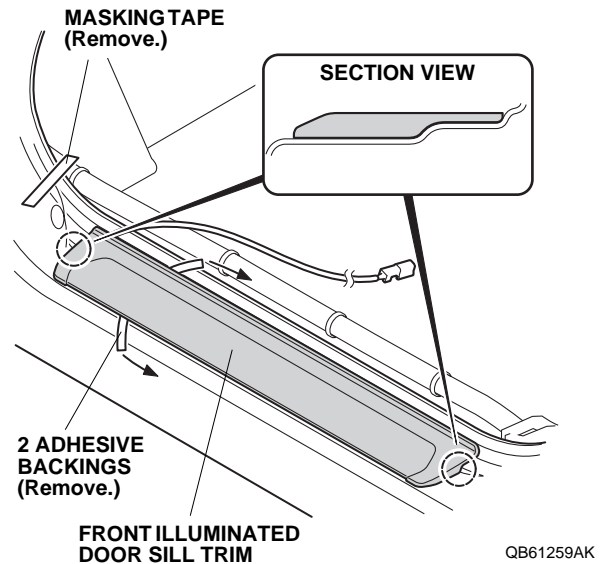

20. Remove the masking tape.
21. Align and route the front illuminated door sill trim harness over the protective clip as shown. Attach one piece of protective tape B to the protective clip.

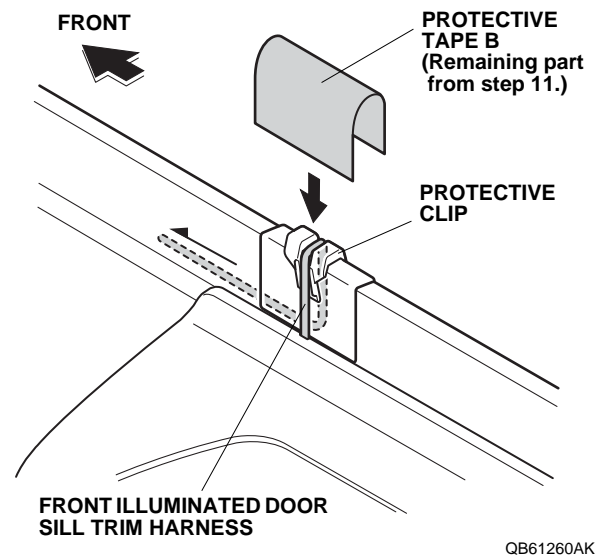


22. Pull away the right front door opening seal.

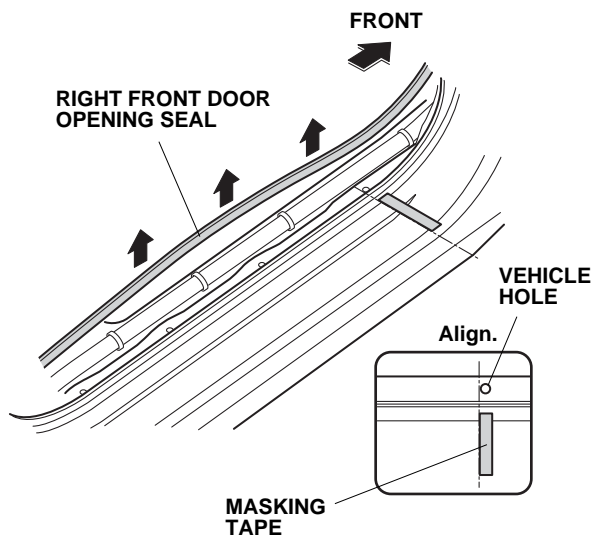


QB61261AK

23. Attach masking tape to the vehicle panel as shown.
24. Position the front illuminated door sill trim with the masking tape.

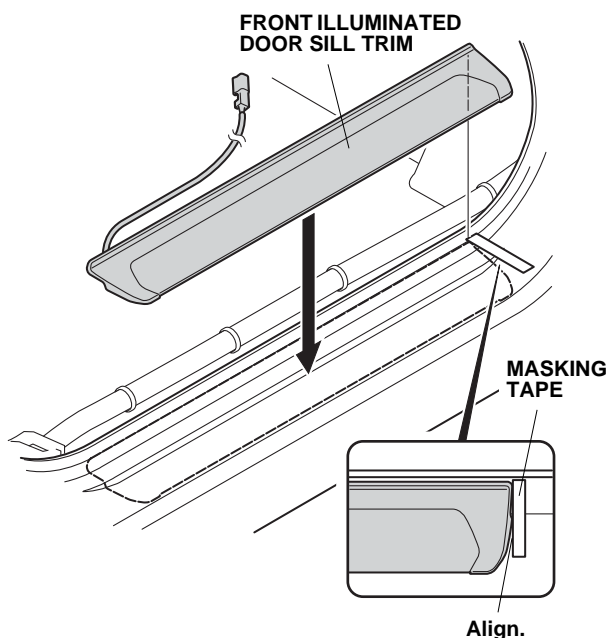


QB61262AK

25. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the protective tape will attach.

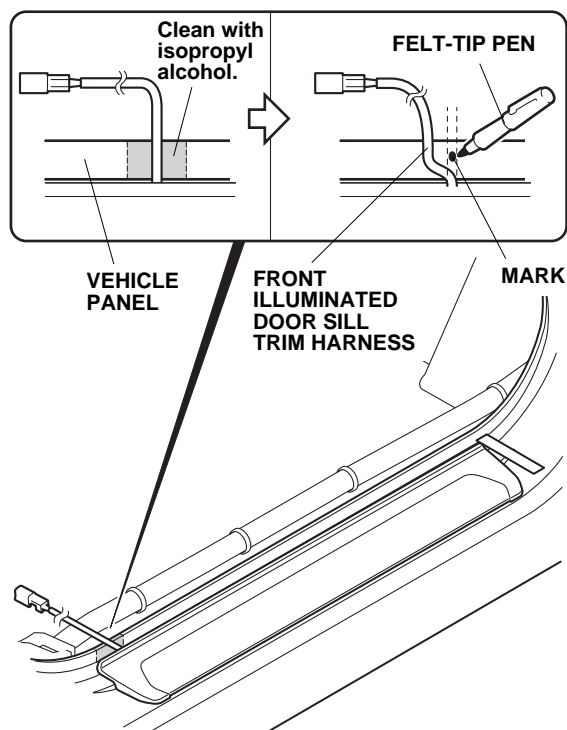


QB61263AK

26. Using a felt-tip pen, mark the vehicle panel as shown.
27. Attach one piece of protective tape A over the mark on the vehicle panel and install the protective clip to the protective tape A on the vehicle panel.

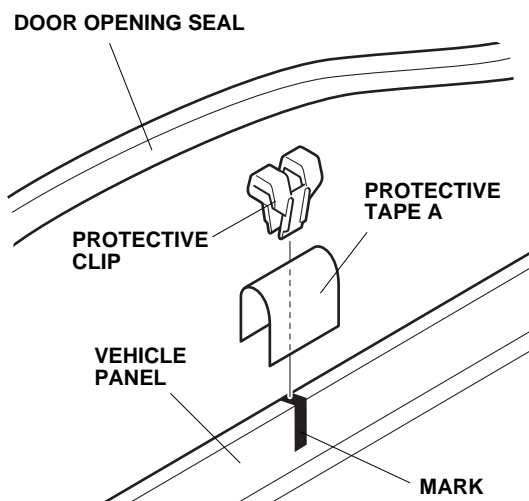


AD1512AH


28. Peel back the ends of two adhesive backings on the front illuminated door sill trim and attach them to the front of the trim with masking tape.

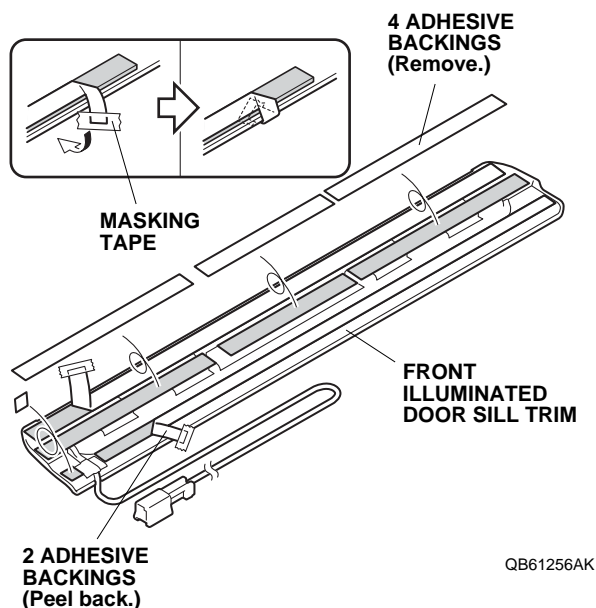


29. Remove four adhesive backings.
30. Using an alcohol swab, thoroughly clean the area where the front illuminated door sill trim will attach.

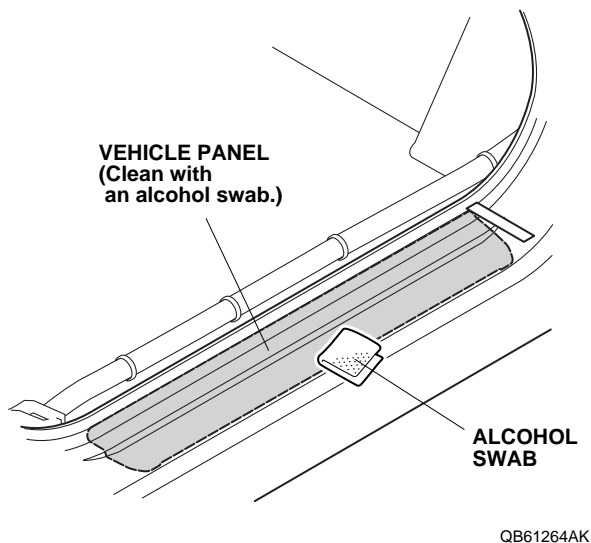

31. Position the front illuminated door sill trim with the masking tape.

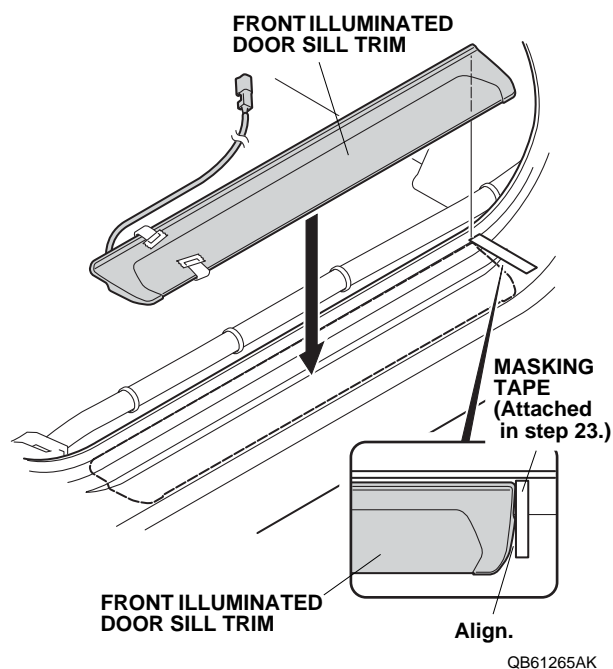


32. Attach the front illuminated door sill trim to the vehicle panel by removing the two adhesive backings and pressing on the trim firmly with your hands.

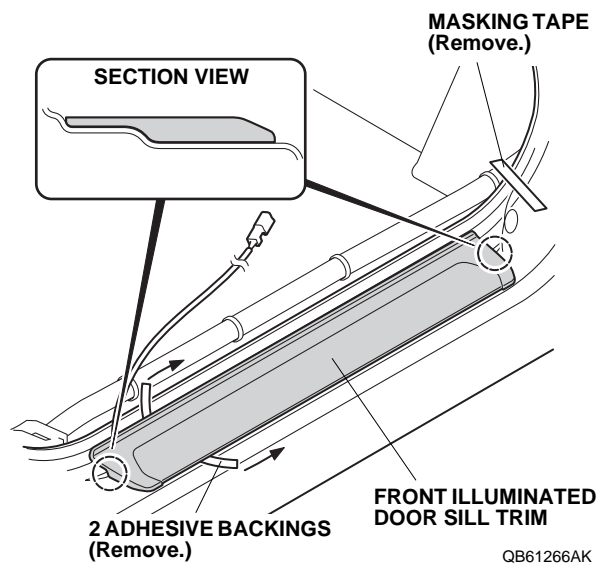


33. Remove the masking tape.

34. Align and route the front illuminated door sill trim harness over the protective clip as shown. Attach one piece of protective tape B to the protective clip.

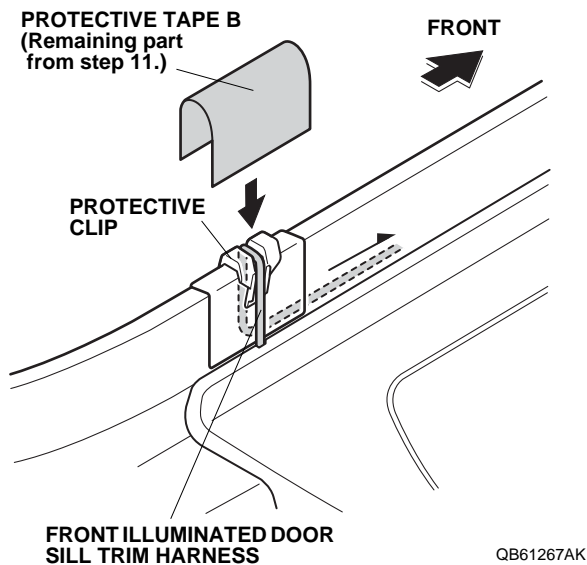


35. Using isopropyl alcohol on a shop towel, thoroughly clean the area where each fuse label will attach.

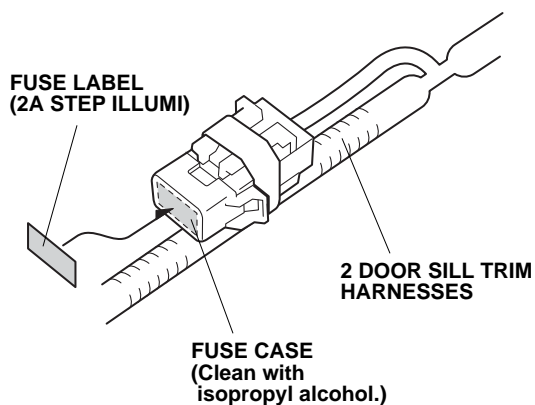


36. Attach the fuse label to each door sill trim harness fuse case.


37. Remove the black tape from the vehicle 2-pin connector and remove the dummy connector from the vehicle 2-pin connector.

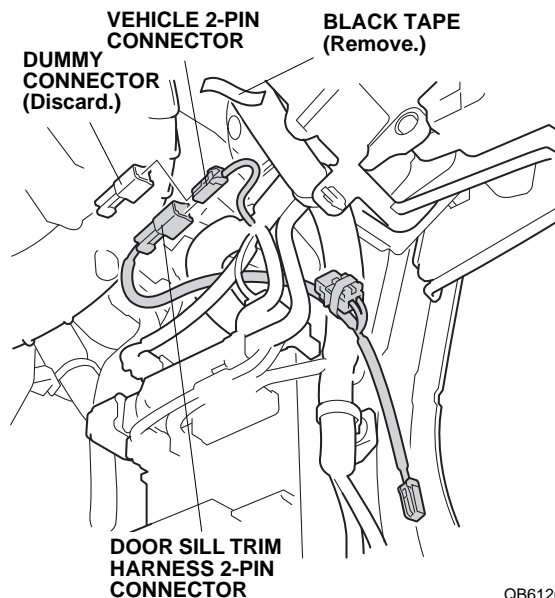


38. Plug the vehicle 2-pin connector to the door sill trim harness 2-pin connector.
39. Using two wire ties, secure the door sill trim harness 2-pin connector and door sill trim harness to the vehicle harness.

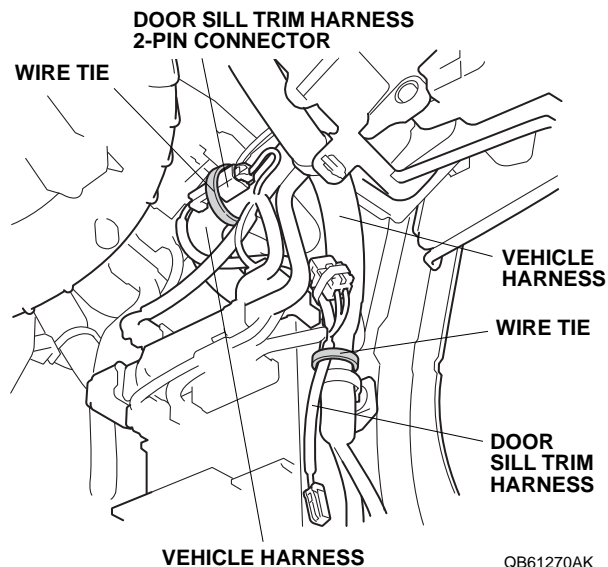


40. Plug the door sill trim harness 2-pin connector to the front illuminated door sill trim 2-pin connector.

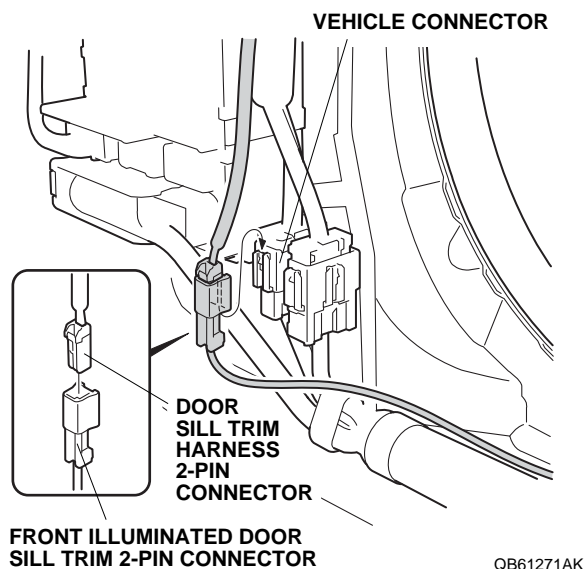


41. Attach the front illuminated door sill trim 2-pin connector to the vehicle connector as shown.
42. Using three wire ties, secure the front illuminated door sill trim harness to the vehicle harness.

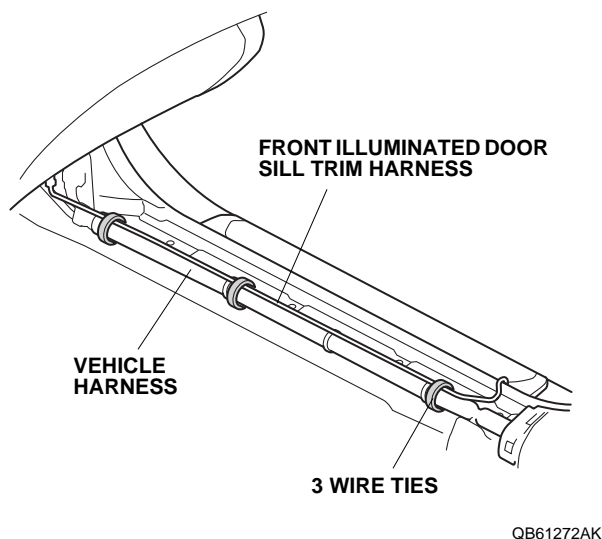


43. Remove the black tape from the vehicle 2-pin connector and remove the dummy connector from the vehicle 2-pin connector.

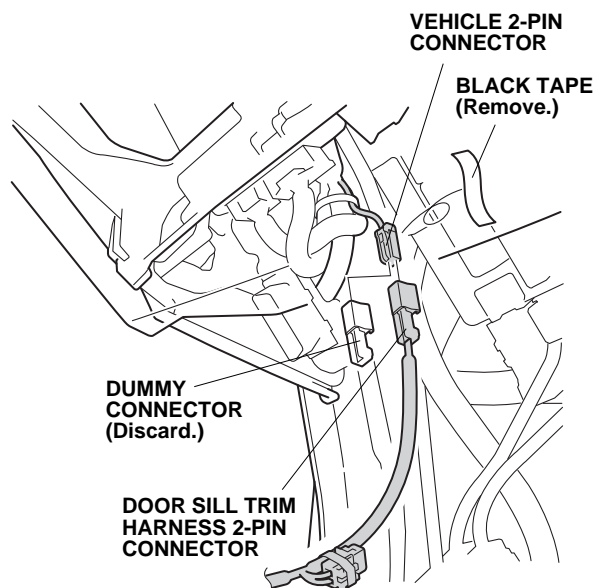

44. Plug the vehicle 2-pin connector to the door sill trim harness 2-pin connector.
45. Using two wire ties, secure the door sill trim harness 2-pin connector and door sill trim harness to the vehicle harness.

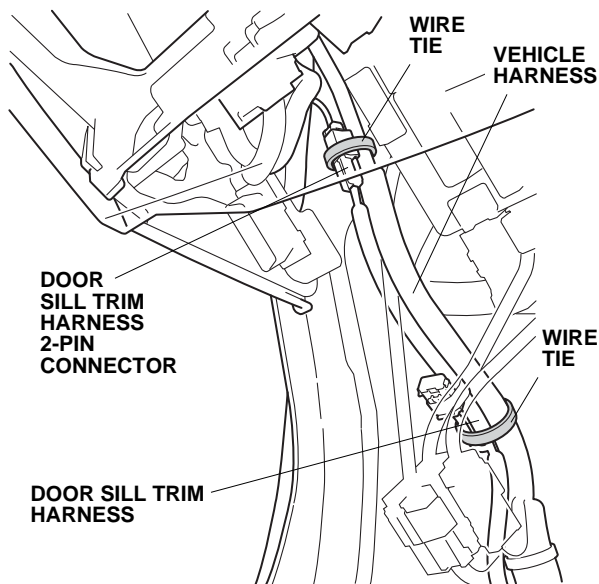


46. Route the front illuminated door sill trim harness as shown.

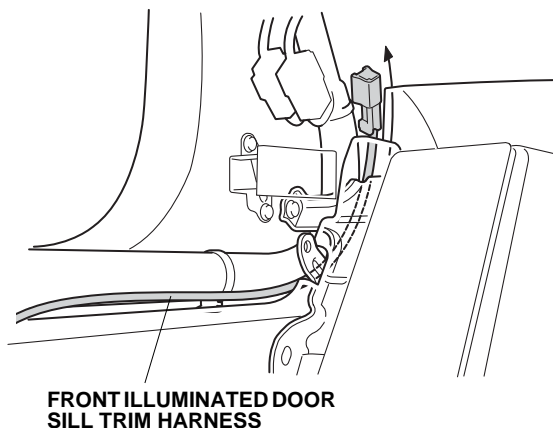

QB61275AK


47. Plug the door sill trim harness 2-pin connector to the front illuminated door sill trim 2-pin connector.

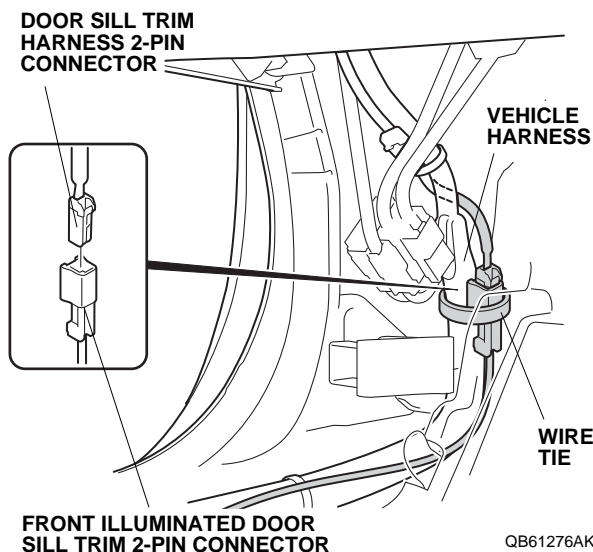

QB61276AK


48. Using one wire tie, secure the front illuminated door sill trim 2-pin connector to the vehicle harness.

49. Using three wire ties, secure the front illuminated door sill trim harness to the vehicle harness.

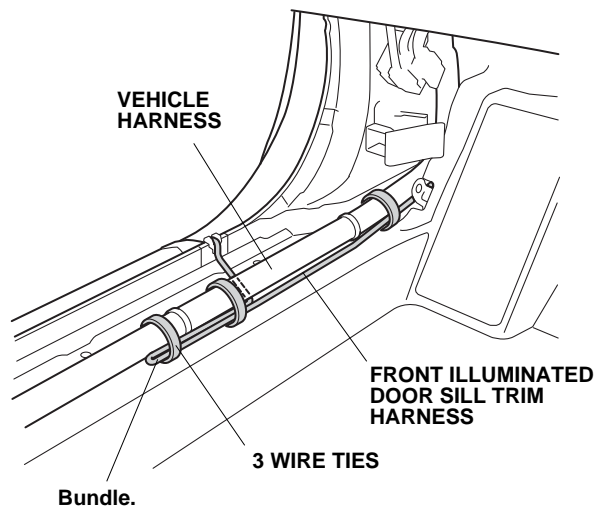

QB61277AK


50. Open the left rear door.

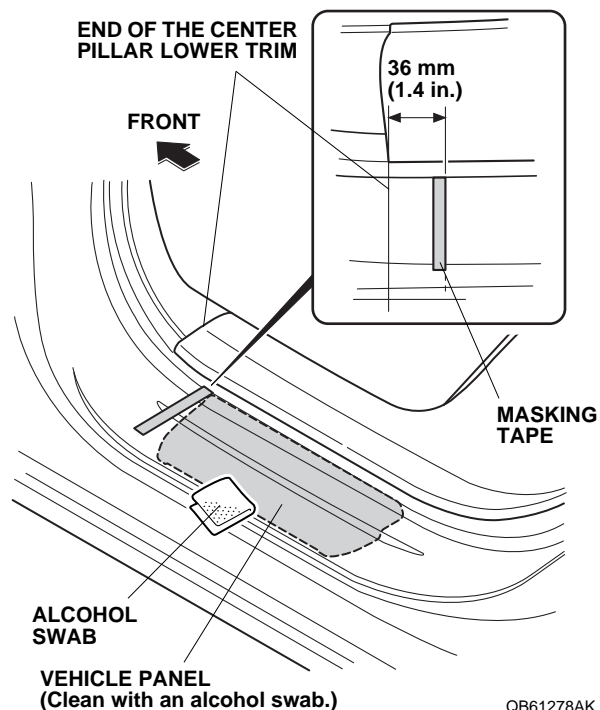


QB61278AK

51. Attach masking tape to the vehicle panel at the measurement shown.
52. Using an alcohol swab, thoroughly clean the area where the rear door sill trim will attach.


53. Peel back the ends of two adhesive backings on the rear door sill trim and attach them to the front of the trim with masking tape.

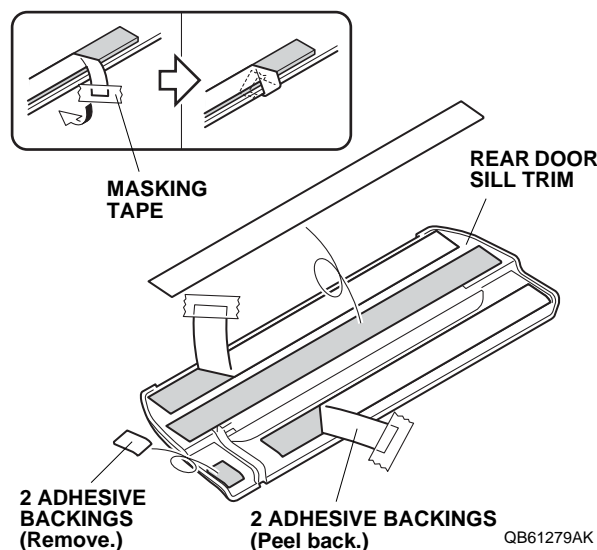

54. Remove two adhesive backings.
55. Position the rear door sill trim with the masking tape.

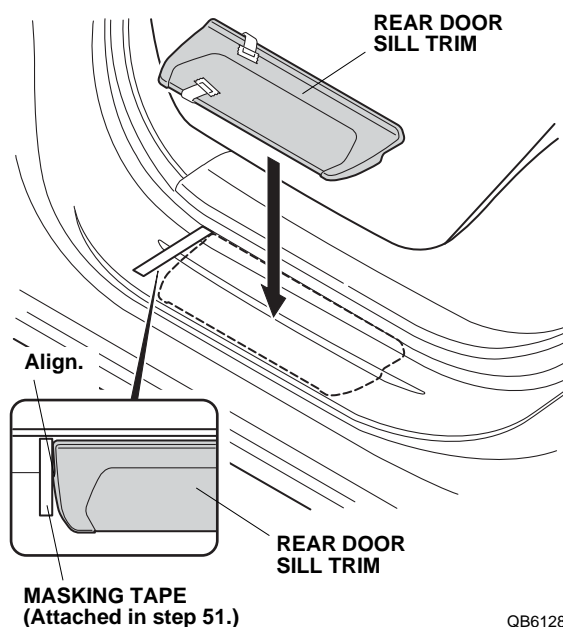

56. Attach the rear door sill trim to the vehicle panel by removing the two adhesive backings and pressing on the trim firmly with your hands.

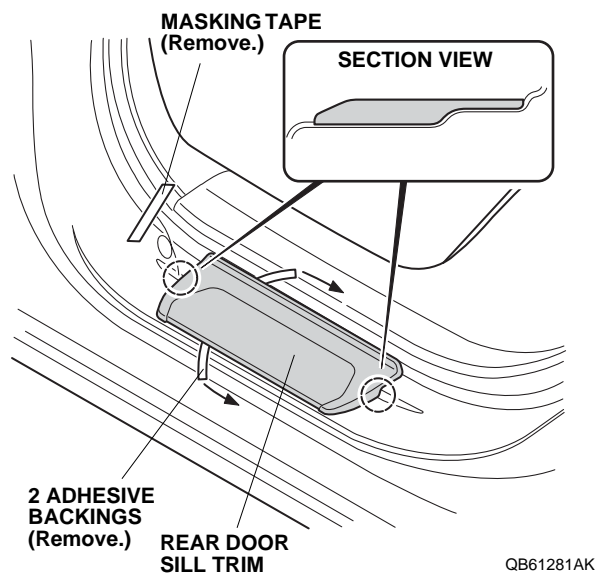

57. Remove the masking tape.
58. Repeat steps 50 through 57 to install the rear door sill trim on the right side of the vehicle.
59. Check that all wire harnesses are routed properly and all connectors are plugged in.
60. Reinstall all removed parts.
61. Reconnect the negative cable to the battery and check the operation of all lights and electrical accessories.
62. Enter the anti-theft codes for the radio and navigation systems, then enter the customer's radio presets.
63. Reset the clock.

HOW TO OPERATE

- Make sure the light comes on when you open each door.
- If the lights do not come on, check the fuse and all the connectors.