

Genuine Accessories



Vehicle Model: **G80**

Model Year 2017-
 Part No. B1031 ADU01 (FOR DIO)
B1031 ADUP1 (FOR PIO)
 Language English
 Rev. Date 8/10/2016

Accessory **Bumper Applique**

Difficulty **B**

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:

- (A) Customer
- (B) Dealer Technician
- (C) Master Technician

Instructional Symbols / Definitions

| | | | | | |
|--|---|----------------------------|--|--|--------------------|
| | Denotes warnings that may lead to serious physical injury or vehicle damage | | Denotes quality processes to be check prior to moving to the next step | Denotes personal protective equipment (PPEs) may be required for a step. Examples of safety equipment icons noted below: | |
| | Denotes cautions to be take to avoid physical injury or electronic component damage | | Denotes specific tools that are necessary to complete a step | | |
| | Denotes cautions to be take to avoid vehicle and component damage | N O T E | Denotes important information to be reviewed during the step | | |
| | | | | Glasses | Gloves |
| | | | | Mask | Hearing Protection |

Basic Required Hand Tools

| | | |
|--|--|-------------------------|
| | | |
| 50/50 Isopropyl Alcohol (70%) & Water | Alcohol, Shampoo & Water (SLIP Mixture) | Microfiber Cloth |

Part Weight (Gross)

| | |
|-------------|------|
| 0.05 | lbs. |
| 0.02 | kg |

FMVSS 110 Compliance Information


All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.
- 6 After installation, do not wash vehicle for 24 hours.
- 7 **Alcohol, Water & Shampoo:** Mix 8oz Alcohol (70% isopropyl), 8oz of water, and 1ml of baby shampoo in a trigger type spray bottle marked "Slip". **Note:** The above listed solution has been formulated for use where ambient + vehicle surface temperature are within a range of 65°F to 90°F. If temperatures exceed this range, add additional shampoo in increments of 1ml.
- 8 This product should be installed with proper installation tools.
- 9 Install this product while observing all warnings and precautions stated in the instruction instructions.
- 10 **VERY IMPORTANT:** Thoroughly wash vehicle with soap and water where accessory will be applied.
- 11 **VERY IMPORTANT:** Sleeve must be installed on plastic/nylon Squeegee throughout the entire installation process.
- 12 **VERY IMPORTANT:** Ambient temperature of the accessory and vehicle must be between 65°F to 90°F at the time of installation and for two hours after.
- 13 Parts storage should be flat at room temperature and in a clean dry place. **Care should be taken to avoid a dusty environment.**
- 14 Place a large towel or pad on the ground to catch wetting mixture.
- 15 Make sure you have a clean, flat table/work area to use.

Genuine Accessories

Kit Overview

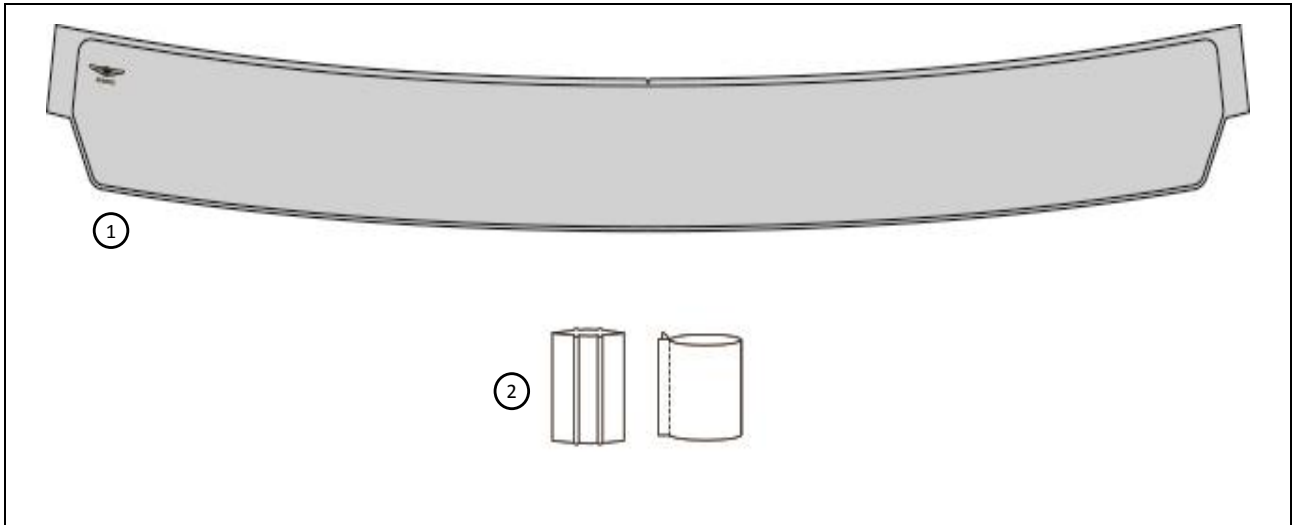

| No. | Qty | Description |
|-----|-----|----------------------|
| 1 | 1 | Bumper Applique |
| 2 | 1 | Squeegee with Sleeve |

Genuine Accessories

| | | |
|------------------|---|--|
| 1 | | Isopropyl Alcohol (70%) & Water and a Microfiber Cloth. |
| | | |
| N O T E | <ol style="list-style-type: none"> 1. Thoroughly clean the bumper area using Isopropyl Alcohol & Water Mixture and a Microfiber Cloth. | |
| | Make sure bumper is completely clean and dried. Inspect bumper surface for contaminants. | |

| | | |
|------------------|---|--|
| 2 | | |
| | | |
| N O T E | <ol style="list-style-type: none"> 1. Dry fit Bumper Applique to become familiar with the fit. 2. Position the Bumper Applique onto the bumper by visually aligning the center notch to trunk striker and the edges of the premask to the bumper features as shown. | |
| | Pay special attention to alignment. | |

| | | |
|------------------|---|---------------------|
| 3 | | Slip Mixture |
| | | |
| N O T E | <ol style="list-style-type: none"> 1. Hold the part with the liner toward you. 2. Grasp only the handling tab and remove the liner from the Bumper Applique by rolling it downward 180° against itself. 3. Discard the liner. 4. Lightly and evenly mist the exposed adhesive and the area of installation on the bumper with the Slip Mixture. | |
| | Pay special attention to not get any fingerprints or dirt on the Bumper Applique. | |

| | | |
|------------------|--|--|
| 4 | | Slip Mixture and Squeegee with Sleeve |
| | | |
| N O T E | <ol style="list-style-type: none"> 1. With the installation area still wet with the Slip Mixture, lay the Bumper Applique back into position. 2. Spray premask surface with the Slip Mixture to aid in a smooth squeegee stroke. 3. Starting in the center, squeegee the Bumper Applique to the top surface of the bumper using firm, overlapping squeegee strokes. 4. Continue to squeegee the edge of the bumper as shown above. | |
| | Do not squeegee the vertical surface at this time. Make sure the sleeve is installed on squeegee. | |
| | Inspect for bubbles. If bubbles are found, follow procedure in the Visual Check to remove the bubbles. | |

Genuine Accessories






| | | |
|--|---|--|
| 5 | | Slip Mixture and Squeegee with Sleeve |
| <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center; margin: 0;">Squeegee Sequence:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>3) Angled Face of Bumper</p> </div> <div style="text-align: center;"> <p>4) Angled Edge of Bumper</p> </div> </div> </div> | | |
| N O T E | <ol style="list-style-type: none"> 1. Spray the partially applied Bumper Applique with the Slip Mixture and squeegee the angled face portion starting in the center, using firm, overlapping squeegee strokes as shown above. 2. Continue to squeegee the angled edge of the bumper as shown above. | |
| | Inspect for bubbles. If bubbles are found, follow procedure in the Visual Check to remove the bubbles. | |

| | | |
|---|---|--|
| 6 | | Slip Mixture and Squeegee with Sleeve |
| <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center; margin: 0;">Squeegee Sequence:</p> <div style="text-align: center;"> <p>5) Vertical Face of Bumper</p> </div> </div> | | |
| N O T E | <ol style="list-style-type: none"> 1. Spray the partially applied Bumper Applique with the Slip Mixture and squeegee the vertical face portion of the Bumper Applique to the bumper as shown. 2. Continue this squeegee stroke pattern from the center, working outwards to complete the installation. 3. Re-squeegee the entire Bumper Applique including any edges that may have lifted. | |
| | Inspect for bubbles. If bubbles are found, follow procedure in the Visual Check to remove the bubbles. | |

| | | |
|------------------|---|-------------------------|
| 7 | | Microfiber Cloth |
| | | |
| N O T E | <ol style="list-style-type: none"> 1. Carefully remove the premask at 180° from the Bumper Applique as shown above. 2. Wipe Bumper Applique clean with a Microfiber Cloth and visually inspect. | |
| | Do not pull premask straight up, this could lift Bumper Applique. | |
| | Inspect for bubbles. If bubbles are found, follow procedure in the Visual Check to remove the bubbles. | |

Genuine Accessories

Visual Check

| Item to be Checked | | Result | |
|---|---|--|--|
|  | Use only the handling tabs when handling the Bumper Applique. Pay special attention to not get any fingerprints or dirt on the Bumper Applique. | No dirt or fingerprints on Bumper Applique. | |
|  | Check for bubbles. If bubbles are found, re-wet Bumper Applique with Slip Mixture and using a Squeegee with Sleeve, push/pull/remove bubbles to the closest edge of the Bumper Applique. | No bubbles present. | |
|  | Make sure Bumper Applique is fully adhered. | Bumper Applique is not lifting and is fully adhered. Take special care to make sure all edges are fully adhered. | |
|  | Make sure Bumper Applique is free of any remaining premask adhesive after installation. Clean the Bumper Applique with soap and water if necessary. | No premask adhesive remaining on Bumper Applique. | |
|  | If an installation error occurs, i.e. scratched / marred film, dirt / debris under Bumper Applique, crooked installation, etc., installer should remove, discard and replace the Bumper Applique. | Bumper Applique is installed correctly. | |