

Genuine Accessories



Vehicle Model Multiple

Model Year 2017~
 Part No. B1F72 AU000
 Language English
 Rev. Date 8/10/2016

Accessory: Roadside Assistance Kit

Difficulty: (A)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage		Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
	Denotes cautions to be taken to avoid physical injury or electronic component damage		Denotes specific tools that are necessary to complete a step		
	Denotes cautions to be taken to avoid vehicle and component damage	N O T E	Denotes important information to be reviewed during the step		
				Glasses	Gloves
				Mask	Hearing Protection

Basic Required Tools

None

Part Weight (Gross)

5.02	lbs
2.28	kg

FMVSS 110 Compliance Information


All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
Load Label Part Number: NP070 - 09003

Notes to the installer:

- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

Genuine Accessories

Kit Overview

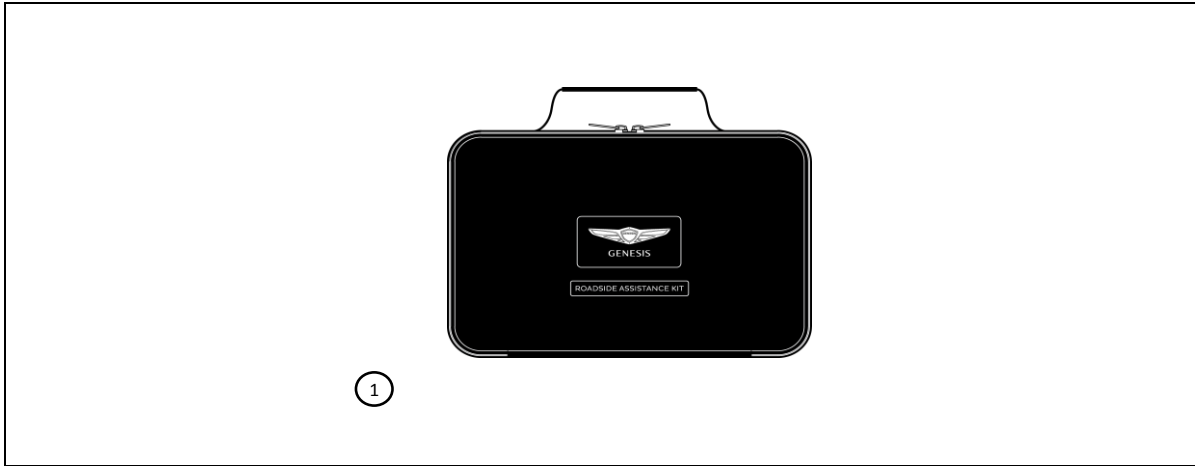

1

No.	Qty	Description
1	1	Roadside Assistance Kit

1		
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>G80</p> </div> <div style="text-align: center;"> <p>G90</p> </div> </div>		
N O T E	<ol style="list-style-type: none"> On G80 models, the Roadside Assistance Kit can be installed horizontally to either the Left or Right Storage Areas. On G90 models, the Roadside Assistance Kit can be installed vertically to the Left Storage Area or horizontally to the Right Storage Area. If the Roadside Assistance Kit is installed to the Right Side Storage Area, the kit must be slid as far forward as allowed to minimize catching the Fuse Panel Cover with Hook-End Fastener. Press and rotate the Roadside Assistance Kit firmly to adhere the Hook-End Fastener to the Trunk Wall. Ensure the Roadside Assistance Kit is securely attached to the Trunk Wall. 	
	<p>CAUTION Install Roadside Assistance Kit per instructions to avoid sliding and shifting. In a sudden stop or collision unsecured cargo could cause personal injury.</p>	

Visual Check

	Item to be Checked	Result
	Use care when handling and placing the Roadside Assistance Kit to avoid dirt.	No dirt or fingerprints on the Roadside Assistance Kit.
	Confirm proper placement of the Roadside Assistance Kit.	The Roadside Assistance Kit should be in a secured position with the Genesis logo facing the Installer.

Genuine Accessories

Care & Cleaning

Put this page in the customer's glovebox, for future reference.

Cleaning Instructions for:

Multiple

Roadside Assistance Kit

Spot clean with a damp cloth as needed (do not use chemical based cleaners).