




# GENUINE PARTS


## INSTALLATION INSTRUCTIONS

<b>DESCRIPTION:</b>	Trunk Net
<b>APPLICATION:</b>	Q50 SEDAN
<b>PART NUMBER:</b>	999C1 J2000 (Without spare) / 999C1 J2002 (With spare)
<b>KIT CONTENTS:</b>	

Item	Qty.	Part Description	Service Part Number
A	1	Trunk Net	999C1 J2000 / 999C1 J2002
B	1	Installation Instruction Replacement Template	999V2 AW000

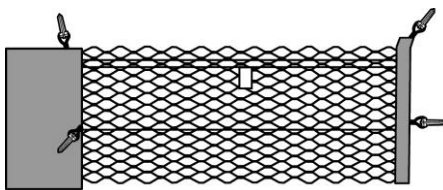

A (Without spare)

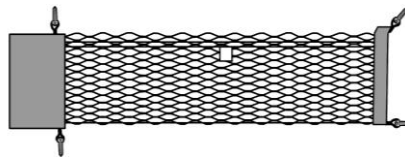

A (With Spare)



B

### TOOLS REQUIRED:

### PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that net is securely attached so items do not fall out during transit.
- Keep this installation instruction sheet with the Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

### INSTALLATION PROCEDURE:

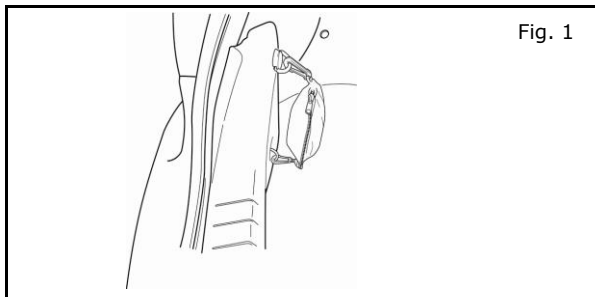


Fig. 1

- 1) Position pouch so clips are toward rear of vehicle and attach to driver side D hooks.  
Note: Zipper should be facing passenger side.

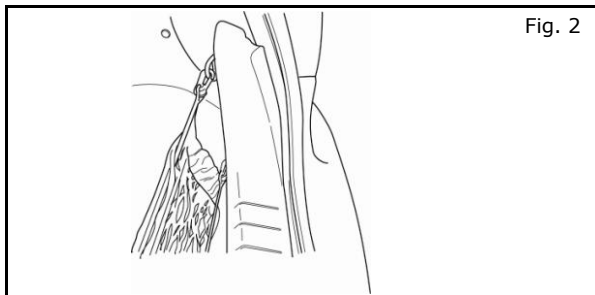


Fig. 2

- 2) Unzip trunk net pouch and attach clips to passenger side D hooks.
- 3) To store trunk net in pouch, leave drivers side trunk net loops attached, detach passenger side loops, roll net into pouch and zip closed.