





GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION: Cargo Net Hide-Away Kit		
APPLICATION: QX30		
PART NUMBER: T99C1-5DC0A		
KIT CONTENTS:		
Item	Qty.	Part Description
A	1	Cargo Net
B	1	Installation Instruction Replacement Template

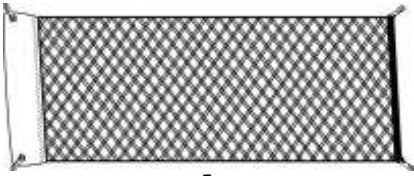

A



B

TOOLS REQUIRED:

- No tools required

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that net is securely attached so cargo does not fall out during transit.
- Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

INSTALLATION PROCEDURE:

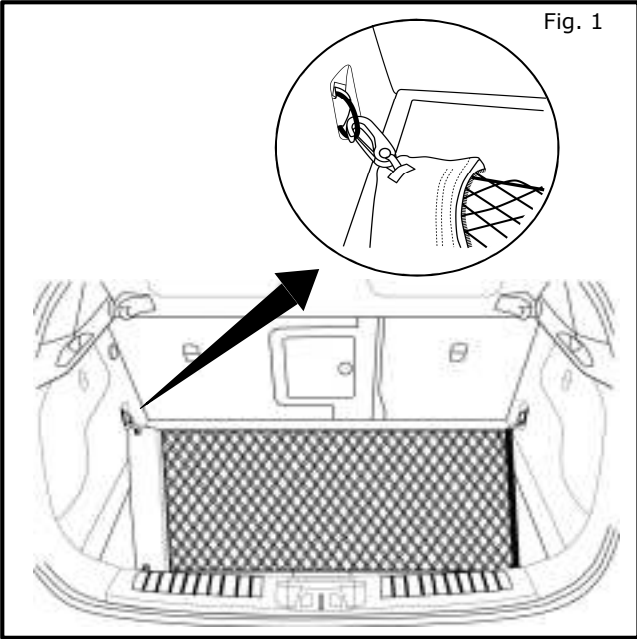


Fig. 1

- 1) Place pouch in cargo area on driver side with hooks facing up and attach to D-Rings.
- 2) Un-zip pouch, un-roll net and attach hooks to passenger side D-Rings.
- 3) To store cargo net in pouch, detach passenger hooks, fold cargo net into hide-away pouch and zip closed.