



GENUINE PARTS

INSTALLATION INSTRUCTIONS

| | | |
|----|----------------------|------------------------|
| 1. | DESCRIPTION: | Front Splash Guard Kit |
| 2. | APPLICATION: | QX70 |
| 3. | PART NUMBER: | 999J2 EV003 |
| 4. | KIT CONTENTS: | |

| Item | QTY | Description | Part Number |
|------|-----|--|-------------|
| A | 1 | Splash Guard – Front RH | --- |
| B | 1 | Splash Guard – Front LH | --- |
| C | 2 | Push Pin | 15-53 05323 |
| D | 4 | M5 x 20mm Screw | 14-51 00891 |
| E | 1 | Installation Instructions Replacement Template | 999V2 AW000 |



A



B



C



D

STOP Important: Read Before Installation!

Customer Protection Recommendation.

WARNING:
To avoid serious personal injury or property damage, read the installation instructions before attempting to install this assembly. The installation instructions provide the necessary information for a safe installation.

CUSTOMER INTERNET DOWNLOAD INSTRUCTIONS: Customers can obtain installation instructions for their vehicle online at www.infinite.com or www.infinite.com/usa. From the home page, click on "Vehicle Publications" and select "Accessories". Select your model and model year. Then locate the Bulletin Area for your accessory.

DEALER ASSIST DOWNLOAD INSTRUCTIONS: Customers can obtain the installation instructions for this accessory at www.infinite.com. Read, download and use latest version of the installation instructions.


Customer Protection Recommendation. 999V2 AW000 Rev. 04/13/13

E


| | | |
|----|------------------------|--|
| 5. | TOOLS REQUIRED: | <ul style="list-style-type: none"> ● clean rag ● #2 phillips screwdriver ● drill ● marking tool (awl) ● 8mm (5/16") drill bit ● 10mm socket w/ ratchet |
|----|------------------------|--|

| | | |
|----|--------------------------------|---|
| 6. | PRE-INSTALLATION NOTES: | <ul style="list-style-type: none"> ● These installation instructions are for the left side of the vehicle; the same procedure applies to the right side. |
|----|--------------------------------|---|

7. INSTALLATION PROCEDURE:

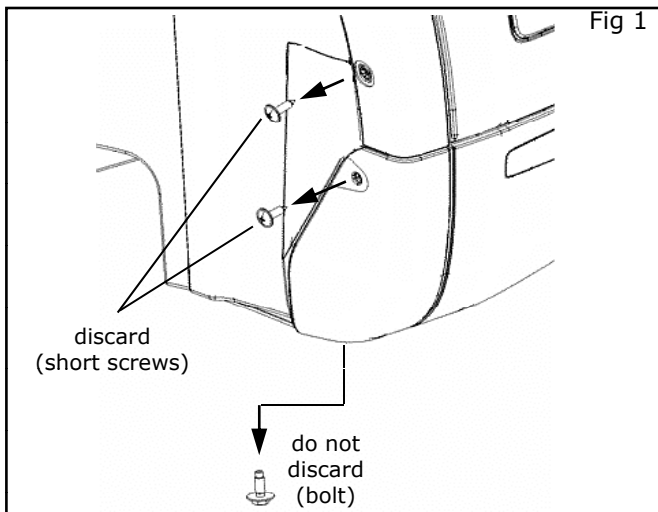

- 1) Remove existing fasteners.
 - a) Remove 1 underside bolt. **DO NOT DISCARD.**
 - b) Remove and discard 2 short (15mm) screws.
 - c) Clean installation surface.

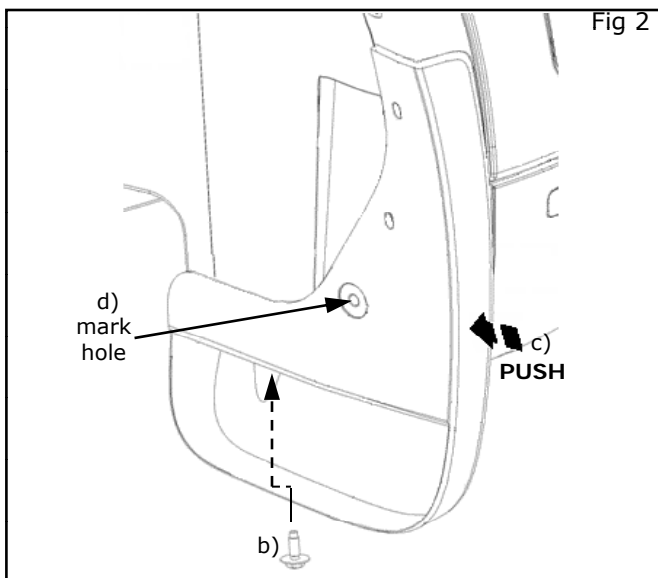


- 2) Mark push pin hole.
 - a) Align splash guard to vehicle.
 - b) Temporarily reinstall underside bolt (few turns) to help locate splash guard.
 - c) Push inward and upward to ensure there are no gaps.
 - d) Mark hole center with awl.

NOTE:

HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE MARKING HOLE TO ENSURE NO GAP OCCURS BETWEEN VEHICLE AND SPLASH GUARD.

- 3) Remove splash guard and drill an 8mm (5/16") hole at the marked location.

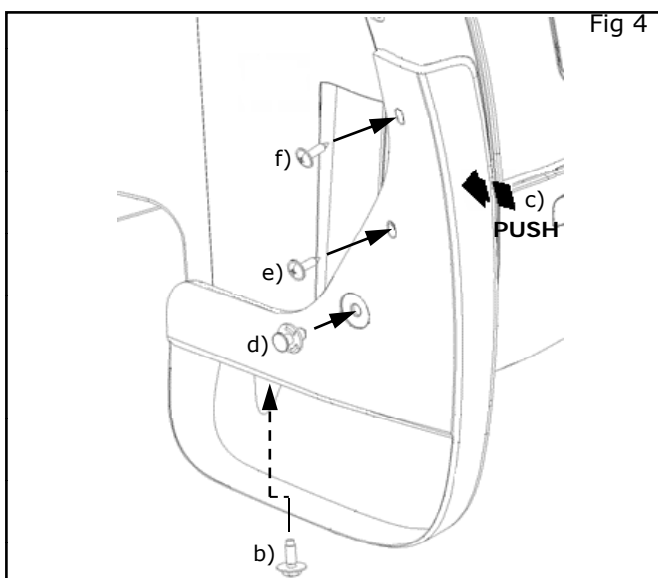

- 4) Install front splash guard.
 - a) Align splash guard to vehicle.
 - b) Install bolt through hole in tab.
 - c) Push inward and upward.
 - d) Install push pin.
 - e) Install new lower screw.
 - f) Install new upper screw.

NOTE:

HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE INSTALLING SCREWS TO ENSURE NO GAP OCCURS BETWEEN VEHICLE AND SPLASH GUARD.