



## GENUINE PARTS

### INSTALLATION INSTRUCTIONS

1. **DESCRIPTION:** Chrome mirror cover
2. **APPLICATION:** QX80
3. **PART NUMBER:** K6350-1L000
4. **KIT CONTENTS:**

Item	Qty.	Description	Part Number
A	1	Chrome mirror cover RH	---
B	1	Chrome mirror cover LH	---
C	1	Installation Instructions	---



A



B



C


5. **TOOLS REQUIRED:**
  - Flat Tip screwdriver
  - Masking Tape

6. **PRE-INSTALLATION CAUTIONS/NOTES:**

### NOTE



- These instructions are for the right side of the vehicle; the same procedure applies to the left side.

7. **INSTALLATION PROCEDURE:**

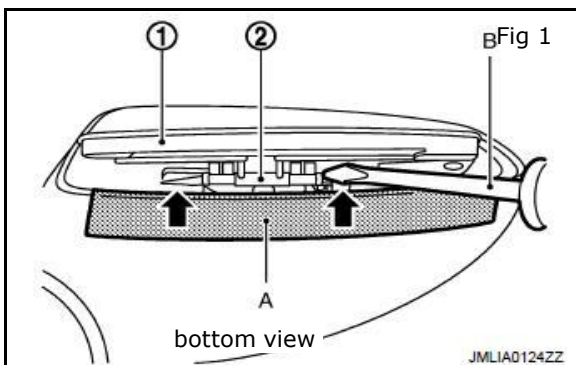

1. Preparation for installation
  - a) Place the glass mirror upward.
  - b) Put a strip of protective tape (A) on the housing.
  - c) Insert flat-bladed screwdriver (B) into the recess at lower side between glass mirror (1) and actuator (2),  and push up pawls to remove glass mirror lower side. See Fig. 1

## INSTALLATION INSTRUCTIONS - Chrome Mirro Cover Kit

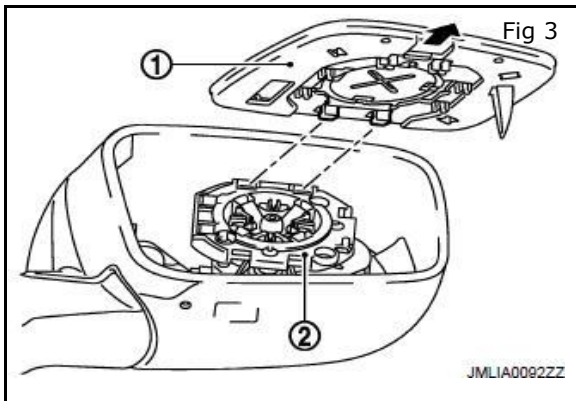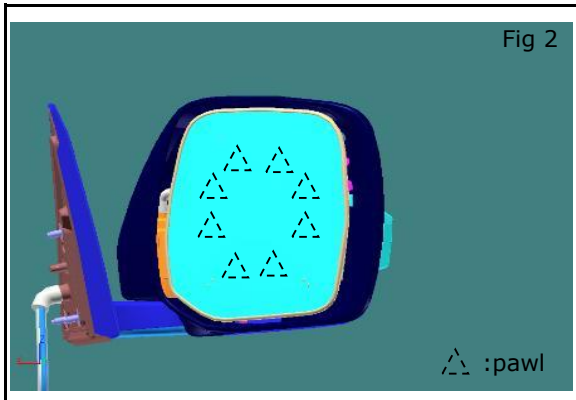

d) Insert flat-bladed screwdriver at RH/LH side between glass mirror and actuator, and push up pawls to remove glass mirror RH/LH side. See Fig.1&2

e) Remove two terminals of mirror heater attachment.

f) Pull glass mirror as shown in the Fig.3 in order to disengage both upper pawls, and then remove glass mirror.

g) Remove the pawls, and disassemble the door mirror cover from the mirror assembly.

### 2. Install the Chrome mirror cover

a) Push Chrome mirror cover against the mirror assembly until Chrome mirror cover pawls are fully inserted and locked.

b) Reinstall all parts that were labeled reuse, using the reverse of the removal process.

c) Check mirror to confirm glass movement, power folding, heated, and dimming functions are working correctly after installation process.