




# GENUINE PARTS

## INSTALLATION INSTRUCTIONS

<b>DESCRIPTION:</b>	Cargo Net
<b>APPLICATION:</b>	QX80
<b>PART NUMBER:</b>	999C1 3X000

**KIT CONTENTS:**

Item	Qty.	Part Description
A	1	Cargo Net
B	1	Installation Instruction Replacement Template



A



B

**TOOLS REQUIRED:**

- No tools required.

**PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:**

- Ensure that net is securely attached so cargo does not fall out during transit.
- Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

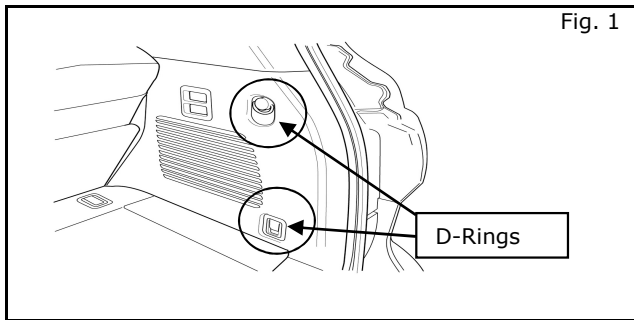


Fig. 1

- 1) Locate the D-rings in the cargo area.
- 2) Attach cargo net hooks to the D-rings on the passenger side of trunk.

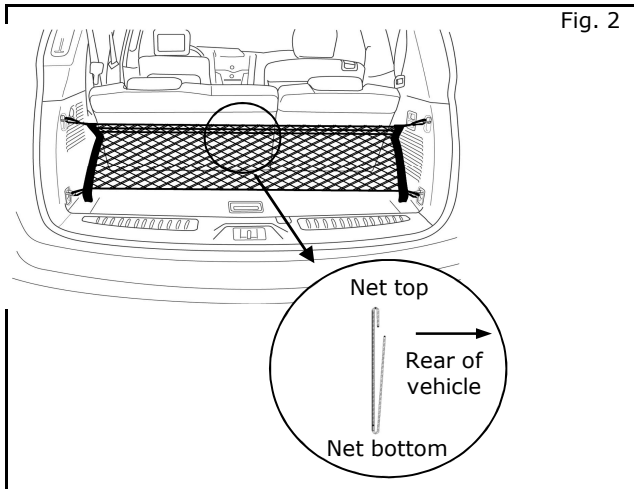


Fig. 2

- 3) Attach cargo net hooks on the other side of the net to the D-rings on the driver's side.

**NOTE:**

- **Make sure the opening on the top of the net is facing rear of vehicle (Fig. 2).**