




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Cargo Area Protector
APPLICATION:	QX60
PART NUMBER:	999C3 R2000 (Black w/Manual 3rd Row Seat) 999C3 R2002 (Beige w/Manual 3rd Row Seat) 999C3 R2100 (Black w/Power 3rd Row Seat) 999C3 R2102 (Beige w/Power 3rd Row Seat)

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Cargo Area Protector	999C3 R2xxx
B	2	Hinge-Assy	999C3 RZ100S1
C	1	Installation Instruction Replacement Template	999V2 AW000

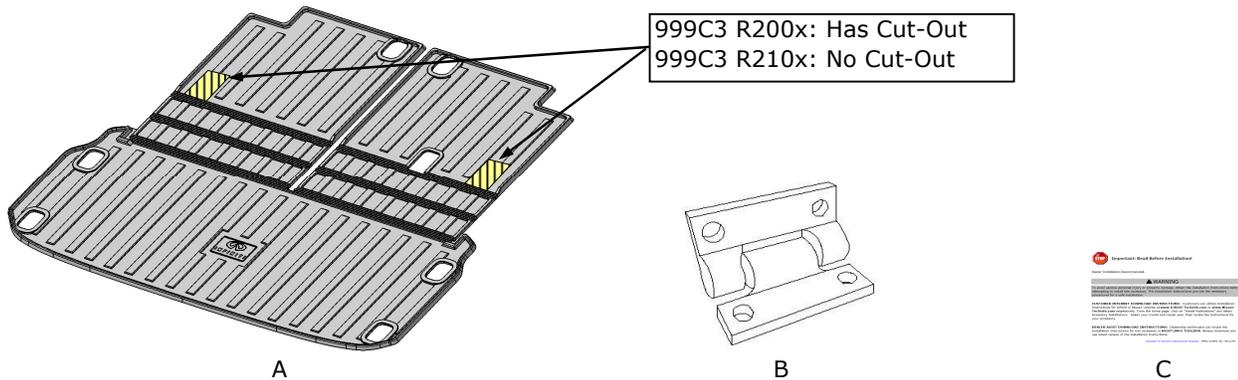

TOOLS REQUIRED:


- #3 Phillips Screw Driver
- 4mm (5/32") Allen Head Socket Driver

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:


⚠ WARNING

Protector is designed to transport normal cargo contents. Flammable or dangerous materials should not be transported in your vehicle at any time.


INSTALLATION PROCEDURE:

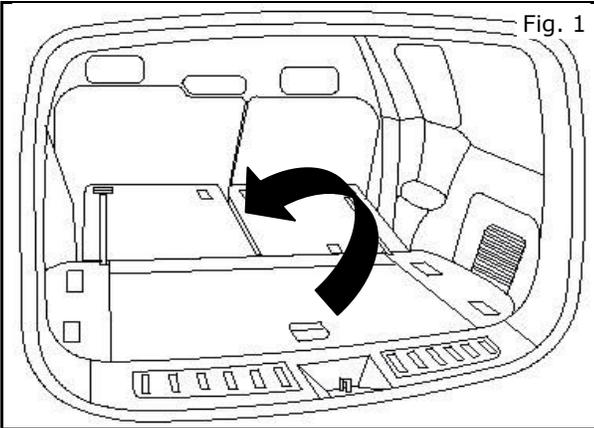

- 1) Fold down headrests and 3rd row seats.

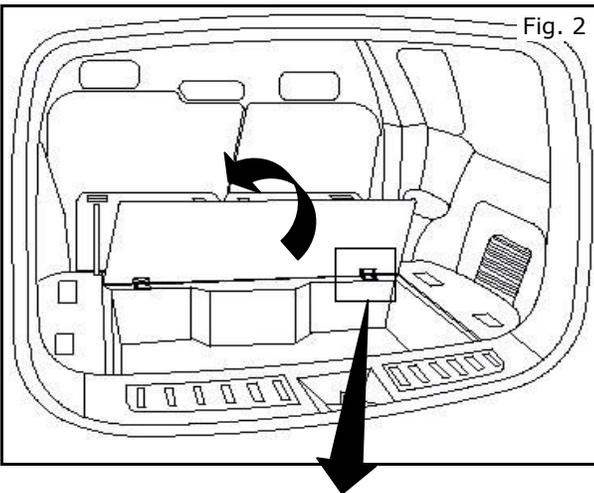


- 2) Lift up cargo bin lid to upright position.

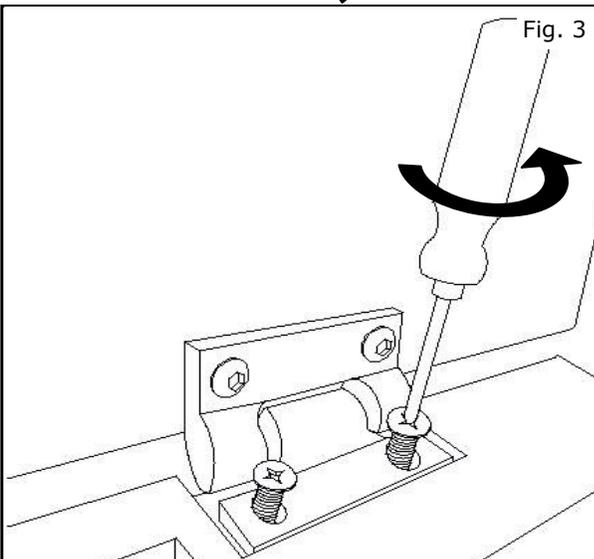


- 3) Loosen and remove (2) passenger side hinge screws with phillips screw driver. Keep screws for later use.
- 4) Repeat for driver side.

INSTALLATION PROCEDURE:

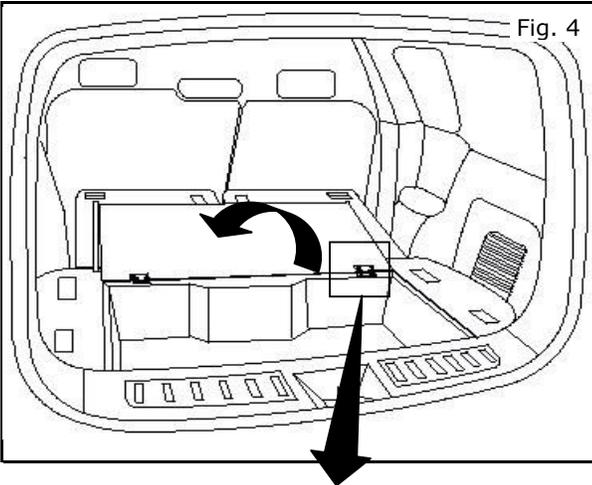




5) Lay cargo bin lid on back of 3rd row seats.

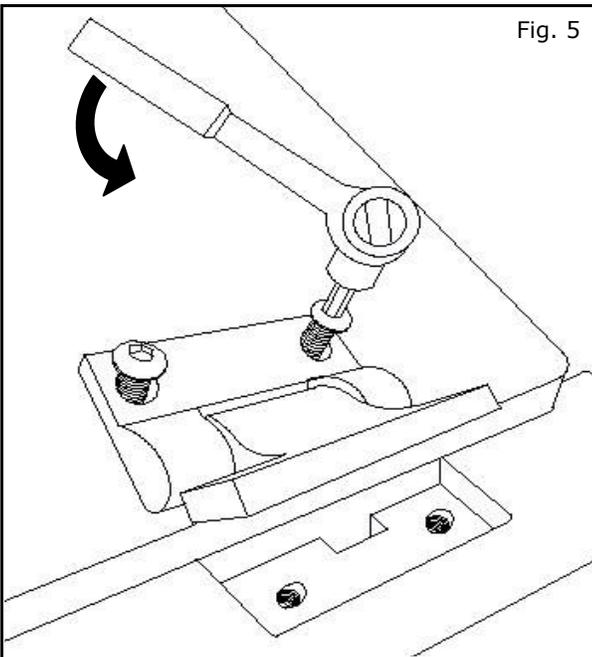

6) Loosen and remove (2) passenger side hinge screws with 4mm allen head socket driver. Keep screws for later use. Discard hinge.


7) Repeat for driver side.

INSTALLATION PROCEDURE:

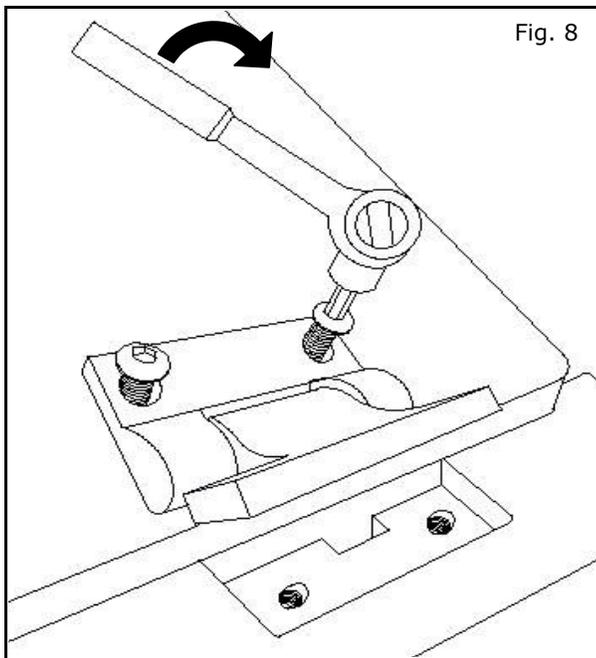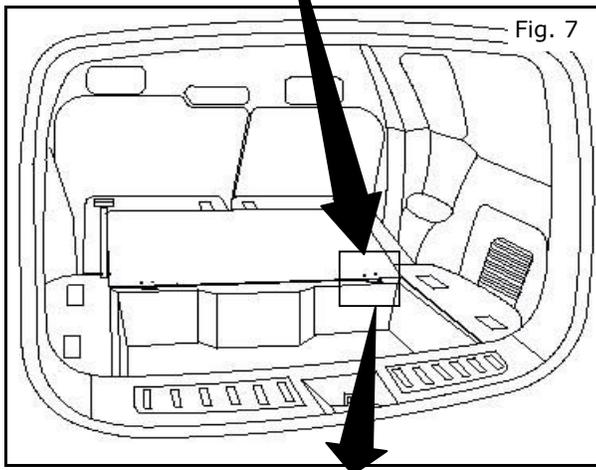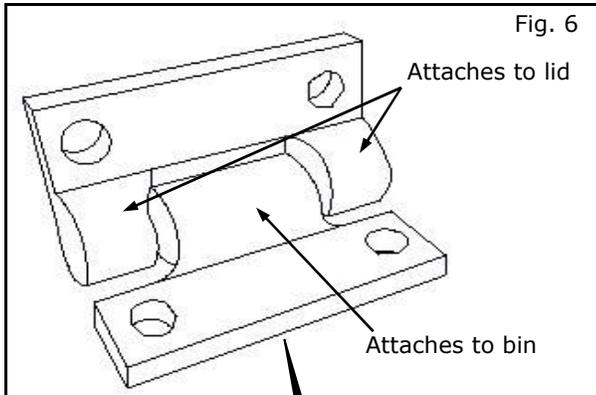


- 8) Remove new molded hinge assembly from packaging and orient hinge as shown in Fig. 6.
- 9) Align passenger side molded hinge assembly with holes on bottom of cargo bin lid.
- 10) Tighten (2) hinge screws with 4mm allen head socket driver to 1.5~2.0 Nm [1.1~1.5 lb-ft].
- 11) Repeat for driver side.

INSTALLATION PROCEDURE:

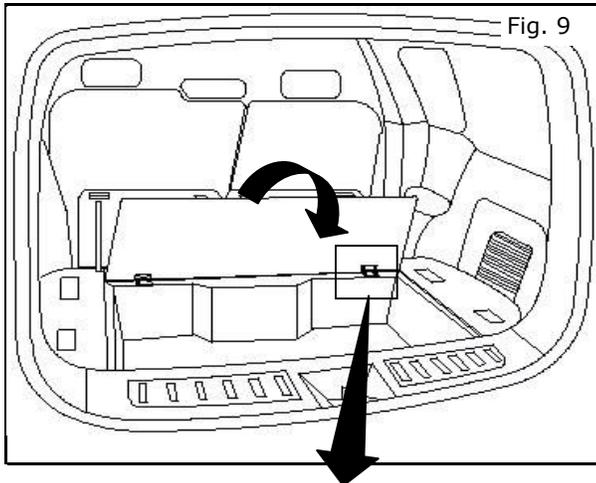


- 12) Place cargo bin lid in upright position, aligning lower hinge holes with vehicle holes.

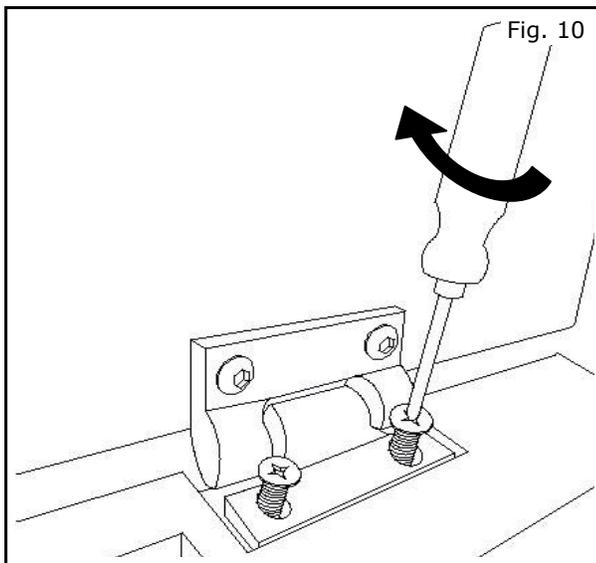


- 13) Tighten (2) passenger side hinge screws with phillips screw driver to 1.5~2.0 Nm [1.1~1.5 lb-ft].

- 14) Repeat for driver side.

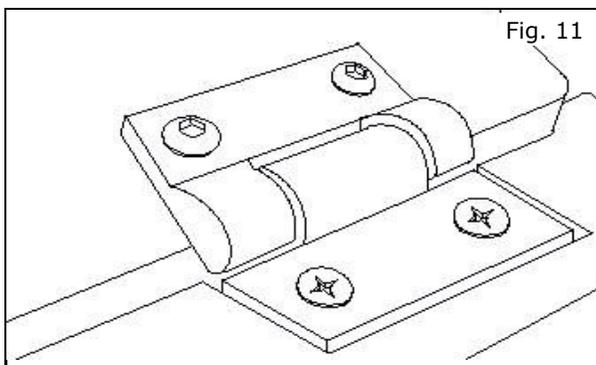


- 15) Ensure both molded hinge assemblies are attached with specified torque.

INSTALLATION PROCEDURE:

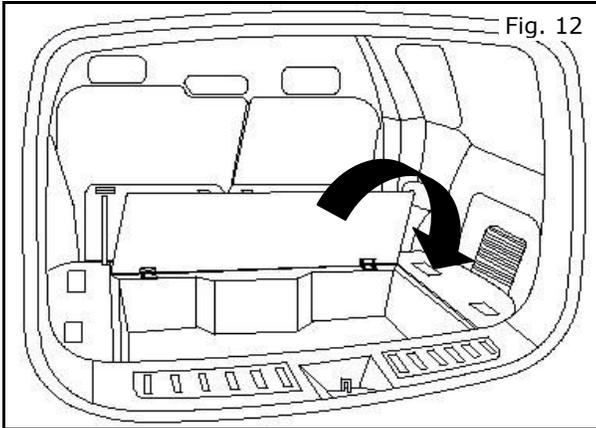


16) Close cargo bin lid.

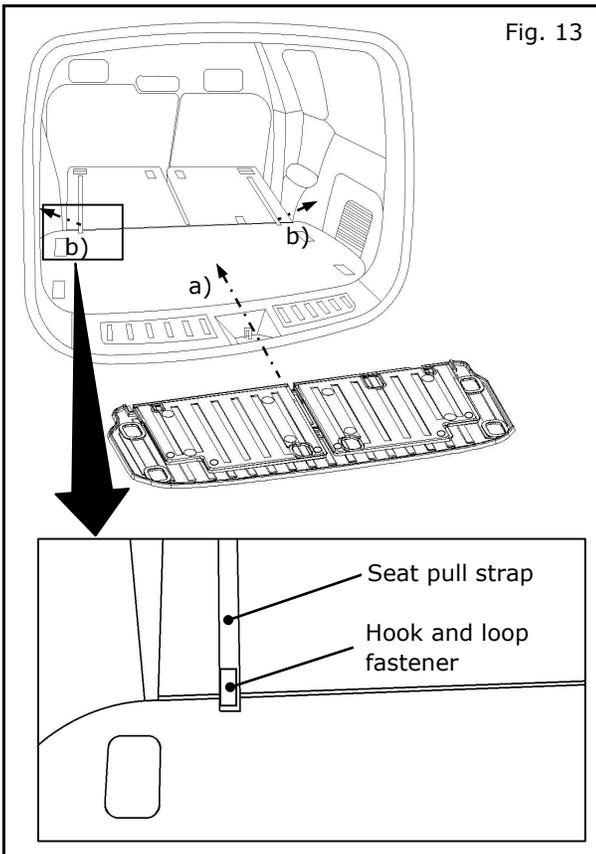

- 17) With protector in folded position:
- a) Place protector into vehicle cargo area and align tray openings with tie-down hooks.
 - b) Disconnect hook and loop fastener on seat pull straps. Move both seat pull straps aside.


NOTE:
For vehicles equipped with Power 3rd Row Seats, there are no seat pull straps. For these vehicles, apply Cargo Protectors without cut-outs (999C3 R210x).

INSTALLATION PROCEDURE:

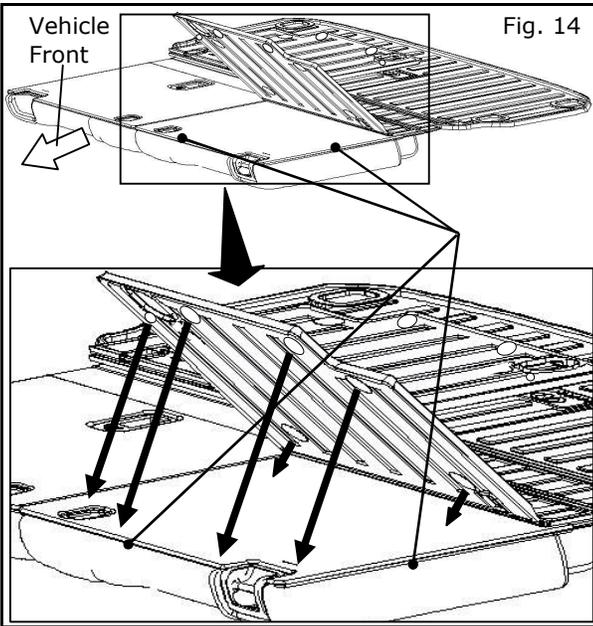


18) Unfold driver side protector flap and align edges and openings to seat back edges and features.

19) Repeat step 18 for passenger side.

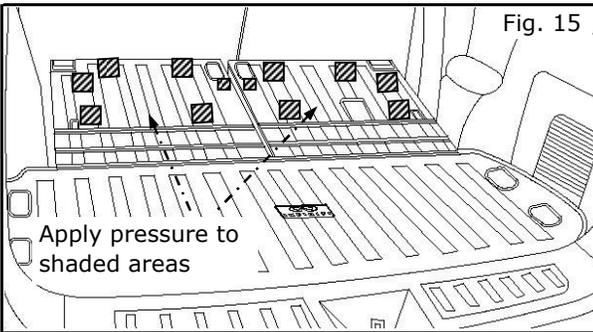

20) Apply pressure to shaded areas in figure 15 to secure hook and loop features.

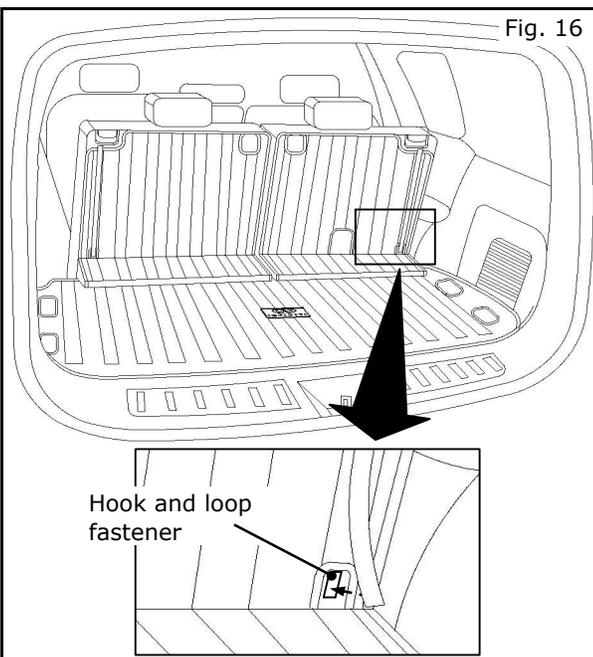

21) Pull seat straps to return seats to original position and re-attach seat straps to hook and loop fasteners.

NOTE:
For vehicles equipped with Power 3rd Row Seats, there are no seat straps.
For these vehicles, apply Cargo Protectors without cut-outs (999C3 R210x).