


Surface Cleaning and Preparation

Make sure the area where the stripe will be installed is cleaned utilizing these guidelines.

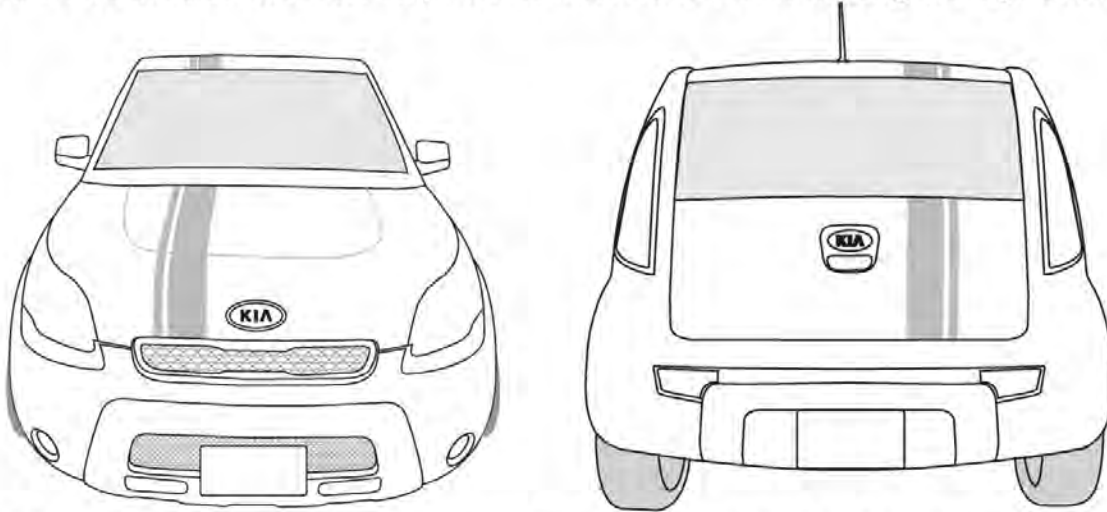

All application surfaces must be considered contaminated and must be cleaned according to Instructional Bulletin #1.10 "Surface Cleaning and Preparation". The surface must be completely dry. Check all seams, body moldings and crevasses for any remaining moisture or solvent. If moisture or solvent is present, use a lint-free cloth to ensure it is completely dry. *This is a critical first step toward successful decal application.*

- The first step to cleaning is to remove all of the dirt and grime with a commercial detergent and water. (See Figure 1)

NOTE: If the vehicle taken to the car wash, it is important to make sure the vehicle is completely dry before applying the graphics. This may mean allowing the vehicle to dry indoors overnight before applying.

- If grease, oil, wax, or other contaminants are present, wipe the substrate with a solvent such as Prep-Sol or Xylol.

- Then do a final cleaning with **isopropyl alcohol (IPA)** to make sure that no oily residue from the other solvents is left behind.

CAUTION: Before using any solvent on a vehicle, be sure to test in an inconspicuous area to ensure the solvent won't damage the vehicle's paint.

- When cleaning the vehicle with IPA, use two lint free towels. One towel should be soaked with IPA, which is used to loosen and clean off the contaminants (dust, dirt, wax, etc.). The second towel should be dry and used to wipe away the excess IPA before it has a chance to evaporate. (See Figure 2)

NOTE: Always ensure the painted surface has been properly processed per the paint manufacturer's specifications or recommendations. The drying or curing period of the paint system must be followed. Failure to adhere to the above can result in poor decal performance and difficult removal characteristics.



Figure 1



Figure 2




KIA MOTORS

Vehicle Model	Soul	Accessory	Racing Stripe
Model Year	2010	Difficulty	(B)
KMA Part No.	U8070 2K000WH	Pamphlet No.	
Vendor Part No.		Revision No.	

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory
(A) Customer (B) Dealer Technician (C) Master Technician

Kia Soul Stripe Instructions

provided by Original Wraps Inc.

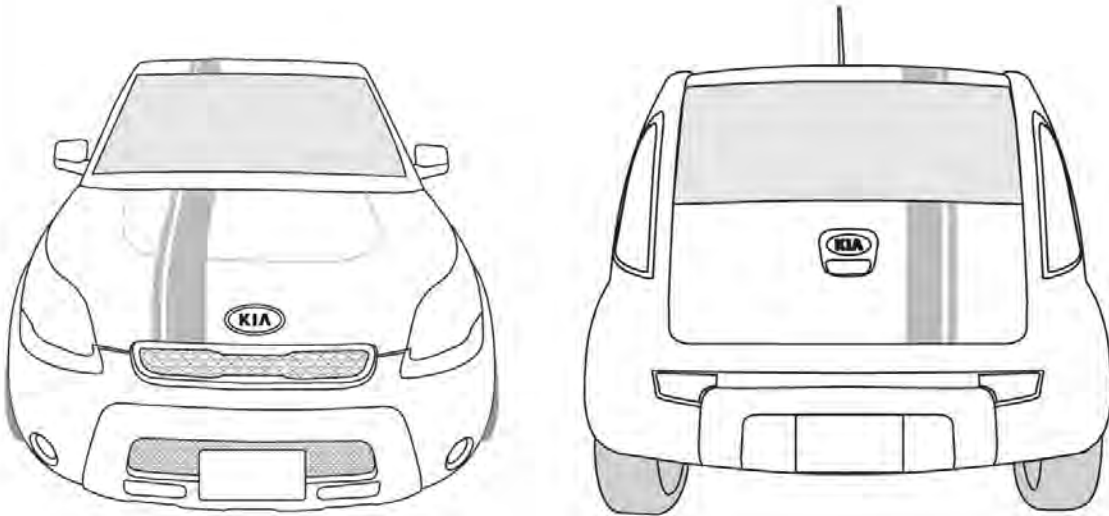

For questions or concerns contact:

Original Wraps Inc.
969 S. Kipling PKWY
Lakewood, CO 80226

Phone - 720-746-1600
Fax - 720-746-1601


*****Drill holes for spoiler before installing stripe.*****

KMA GENUINE APPROVED ACCESSORY

Vehicle Model	Soul	Accessory	Racing Stripe
Model Year	2010	Difficulty	(B)
KMA Part No.	U8070 2K000WH	Pamphlet No.	
Vendor Part No.		Revision No.	


Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory
 (A) Customer (B) Dealer Technician (C) Master Technician

Pieces

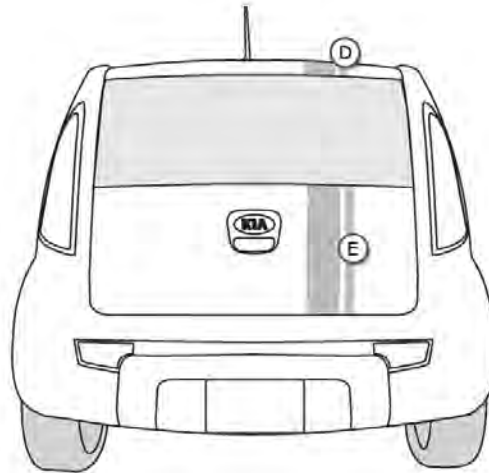

Cover front, roof, and rear,

windshield

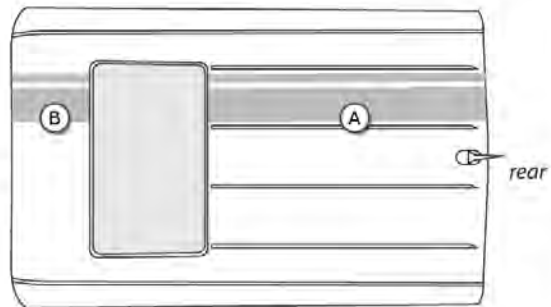

Roof view

*****Drill holes for spoiler before installing stripe.*****








Vehicle Model	Soul	Accessory	Racing Stripe
Model Year	2010	Difficulty	(B)
KMA Part No.	U8070 2K000WH	Pamphlet No.	
Vendor Part No.		Revision No.	

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory
(A) Customer (B) Dealer Technician (C) Master Technician

Port Install Included Items

provided by Original Wraps Inc.

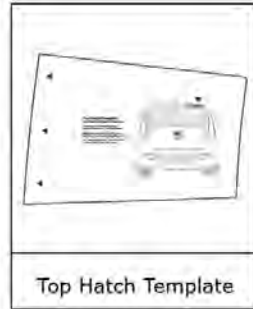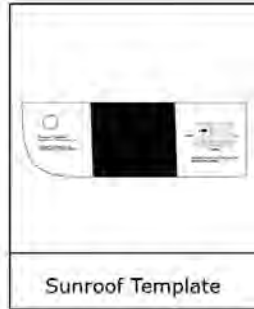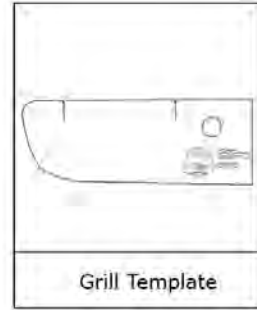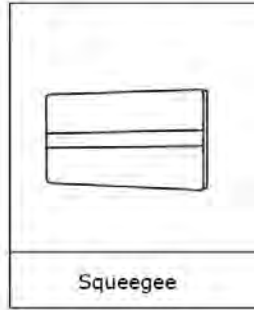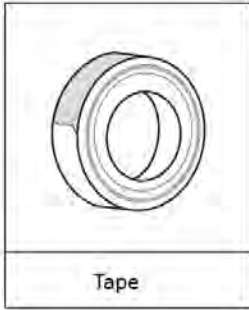

*****Drill holes for spoiler before installing stripe.*****

For questions or concerns contact:





Original Wraps Inc.
969 S. Kipling PKWY
Lakewood, CO 80226

Phone - 720-746-1600
Fax - 720-746-1601












KMA GENUINE APPROVED ACCESSORY (INSTALLATION)

<p style="text-align: right;">8</p>	<p style="text-align: right;">8</p>
<p>NOTE Double check that all pieces and tools are available.</p>	<p>NOTE Clean the vehicle where the stripe is going to lay. Use a soft, lint free cloth. Ensure the area is free from any debris.</p>
<p> Make sure the holes have been drilled for the spoiler before installing the stripe!!</p>	
<p style="text-align: right;">8</p>	<p style="text-align: right;">8</p>
<p>NOTE Line up Stripe A in the center of the roof ridges. It may help to fold up the excess edges on the sides of the stripe in order to ensure it's lined up properly.</p>	<p>NOTE Tape the roof stripe down at it's center point. This will act as a reference point in installing the stripe.</p>
<p> Double check that the stripe is centered and has an even amount of room on both ends.</p>	<p> Make sure the stripe doesn't shift as you tape it down.</p>
<p style="text-align: right;">8</p>	<p style="text-align: right;">8</p>
<p>NOTE Peel the stripe from it's backing from the front of the car towards the center point. Be careful not to shift the stripe when doing this.</p>	<p>NOTE Tear the backing near the center where the stripe is peeled back to.</p>
<p> Make sure to not pull to hard as this may stretch the vinyl.</p>	<p> Tear carefully and keep a consistant distance from the vinyl.</p>












KMA GENUINE APPROVED ACCESSORY (INSTALLATION)

	
8	8
NOTE Fold the backing back. This will make the installation of the stripe easier and will make removing the backing when installing the other side easier as well.	NOTE Begin installing the stripe. Using the squeegee, apply the vinyl from the center out, ensuring it's an evenly distributed application.
	<input checked="" type="checkbox"/> Pay close attention as you apply the stripe, ensuring a bubble-free and even application throughout.
	
8	8
NOTE Finish applying the half of the stripe. Make sure that every part of this half of the stripe has been applied evenly.	NOTE Remove the tape from the center reference point.
<input checked="" type="checkbox"/> Double check that the edge is completely applied.	<input checked="" type="checkbox"/> Be sure to hold the uninstalled half of the stripe down to avoid the stripe being stretched or altered in any way.
	
8	8
NOTE Peel the stripe from its backing from the center of the stripe towards the end of the stripe. Be careful not to alter the stripe in any way while doing this.	NOTE Begin applying the second half of the stripe. Using the squeegee, apply evenly and completely from the center out.
<input checked="" type="checkbox"/> Make sure to not pull too hard as this may stretch the vinyl.	<input checked="" type="checkbox"/> Pay close attention as you apply the stripe, ensuring a bubble-free and even application throughout.











KMA GENUINE APPROVED ACCESSORY (INSTALLATION)

	
	8
NOTE	Finish applying the stripe. Pay close attention to the edge, ensuring it is completely applied.
	 Give close attention to all edges of the stripe.
	
	8
NOTE	Peel back the application tape. Peel slowly and carefully to ensure it doesn't peel any of the stripe with it.
 Keep the application tape low and close to the vehicle while peeling. The closer it is the cleaner it will peel.	NOTE
	Give the stripe a look and make sure that every part has been applied. This is also the time to work any bubbles out. Do so by pushing them towards an edge of the stripe.
 Take caution and be careful how hard you rub the stripe, you don't want to damage it.	
	
	8
NOTE	Grab the Sunroof Template and tape it into place on the sunroof, ensuring it's edges fit with the edges on the sunroof.
 Tape it down in more than one place to keep from shifting.	NOTE
	Line up Stripe B with the template, ensuring each end (front and back) has equal space and it's centered with the black bar on the template.
 Folding back the extra application tape and backing can help in lining it up, but be careful not to fold the stripe.	

KMA GENUINE APPROVED ACCESSORY (INSTALLATION)

		8			8
NOTE	After lining the stripe up with the sunroof template, double check that the stripe has equal distance on the windshield side and that it's edge is parallel with the edge of the stripe.		NOTE	Tape down the edges of the stripe after lining it up and then tape the middle of the stripe down. Remove the tape holding the edges of the stripe.	
				The tape holding the center of the stripe will act as a reference point in the install of the stripe.	
		8			8
NOTE	Peel the stripe from it's backing on the windshield side towards the taped center reference point.		NOTE	Tear the backing, leaving a bit of room to fold it back.	
	Make sure not to move the stripe when peeling.			Make sure not to move the stripe while tearing the backing.	
		8			8
NOTE	Fold the backing under itself. This will make it easier to install the second half of the stripe.		NOTE	Begin applying the stripe using the squeegee. Apply evenly from the center out and down towards the windshield.	
	If torn edge remains, it may be more difficult to remove the backing when applying the second half of the stripe.			Pay close attention when applying on contour curves as it is easier to develop bubbles if you don't take caution.	











KMA GENUINE APPROVED ACCESSORY (INSTALLATION)

			
		8	8
NOTE	Ensure the stripe is completely applied, taking extra care with the edges.	NOTE	Remove the backing from the other side. Be sure not to stretch the stripe while doing this.
			
		8	8
NOTE	Begin applying the second half of the stripe. Using the squeegee, apply the stripe evenly and completely, ensuring there are no air bubbles in the stripe.	NOTE	Finish applying the second half of the stripe, ensuring it's completely and evenly applied.
	Be careful not to stretch the stripe while installing as it will not line up correctly if stretched.		Make sure the edges are completely applied.
			
		8	8
NOTE	Complete the application of the stripe, ensuring it's completely and evenly applied.	NOTE	Remove the application tape. Use caution when removing so as not to peel the stripe with it.
	Make sure all edges are completely applied.		Keep the application tape close to the vehicle while peeling to ensure it will not peel the stripe with it.











KMA GENUINE APPROVED ACCESSORY (INSTALLATION)

8	8
<p>NOTE Go over the stripe, using the squeegee if necessary to get any air bubbles out. Push the air bubbles towards an edge of the stripe with care and caution.</p>	<p>NOTE Line up the Hood Template with the hood. Tape it down once lined up.</p>
8	8
<p>NOTE Line up Stripe C with the hood template, ensuring it's edges fit in the black bar on the template. Folding the edges of the extra application tape and backing up can make this easier.</p>	<p>NOTE Line up the other end of the stripe with the Grill Template, ensuring the stripe's edges line up with the arrows on the template.</p>
<p> Double check that the stripe is centered and has an even amount of room on both ends.</p>	<p> Double check that the stripe is centered with the templates and has an even amount of room on both ends.</p>
8	8
<p>NOTE Peel the stripe from it's backing from the front of the car towards the center point after taping the middle of the stripe to the vehicle as a reference point.</p>	<p>NOTE Tear the backing near the center where the stripe is peeled back to. You may now remove the hood template too.</p>
<p> Make sure to not pull to hard as this may stretch the vinyl.</p>	<p> Tear carefully and keep a consistant distance from the vinyl.</p>


KMA GENUINE APPROVED ACCESSORY (INSTALLATION)

	
8	8
<p>NOTE Fold the extra backing under itself, this will make application easier.</p>	<p>NOTE Use your squeegee to evenly apply the stripe from center out and down. Take your time at the ridge on the hood, ensuring it's completely applied to avoid any air bubbles.</p>
	
8	8
<p>NOTE Once you're to the compound curve in the hood use extra caution. The best way to do this is a sweeping motion back and forth down the hood of the vehicle.</p>	<p>NOTE Once you've applied thru the compound curve, you can go back to the same application as before using the squeegee to apply evenly from center out and down.</p>
<p> Make sure you're applying the stripe evenly and consistently ensuring the distance between the stripes doesn't change.</p>	<p> Be careful not to stretch the stripe and ensure the stripe is completely applied at it's edges.</p>
	
8	8
<p>NOTE After removing the remaining backing from the uninstalled half of the stripe, begin applying the rest of the stripe, using your squeegee to apply evenly and consistently.</p>	<p>NOTE Continue to apply the stripe towards the windshield of the car. Make sure to apply evenly.</p>
<p> Make sure to apply the stripe evenly, ensuring an air bubble free application.</p>	<p> Make sure you apply the edges completely.</p>

KMA GENUINE APPROVED ACCESSORY (INSTALLATION)

	
8	8
<p>NOTE Peel back the application tape carefully and consistently. Keep the application tape close to the vehicle as you do this to ensure no part of the stripe will be peeled with it.</p>	<p>NOTE Ensure the stripe has been completely applied, pushing out any air bubbles that may be in the stripe.</p>
	
8	8
<p>NOTE Line up the Top Hatch Template and tape it in place.</p>	<p>NOTE Line up Stripe D with the left edge of the template. It may help to place the extra backing and application tape under the template so you can see the stripe.</p>
<p> Make sure that the template is perfectly lined up with the appropriate edges on the vehicle.</p>	<p> Make sure there is an even amount of space on the front and back space of the stripe relative to the lines on the vehicle.</p>
	
8	8
<p>NOTE Once lined up, tape the stripe down at it's center point.</p>	<p>NOTE Peel the stripe from it's backing from the front of the vehicle towards the center reference point.</p>
<p> Make sure not to move the stripe while doing this.</p>	<p> Peel carefully so you don't stretch the stripe.</p>

KMA GENUINE APPROVED ACCESSORY (INSTALLATION)

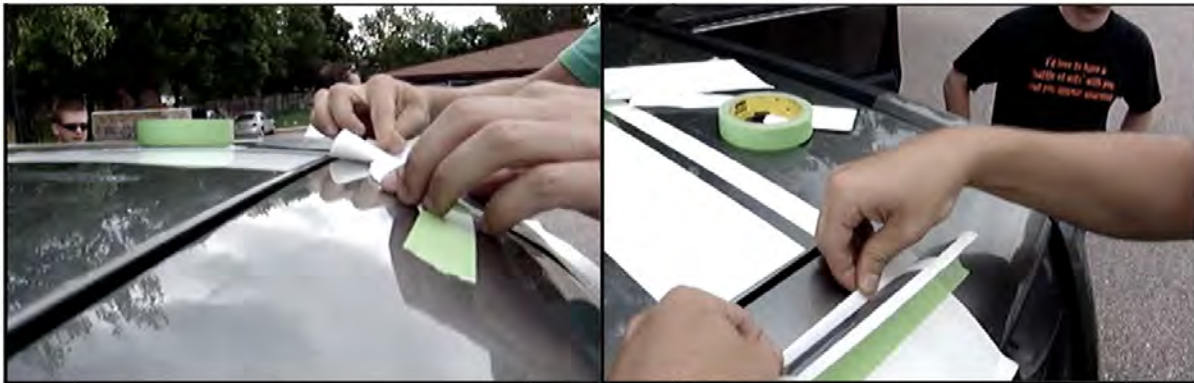

	8		8
--	---	--	---

NOTE	Tear the backing, leaving a bit to be folded under.	NOTE	Fold the backing under itself. This will make the application of the stripe easier.
-------------	---	-------------	---



	8		8
--	---	--	---

NOTE	Using your squeegee, begin applying the stripe evenly and completely from the center towards the front of the vehicle.	NOTE	Remove the center tape and remaining backing from the stripe.
-------------	--	-------------	---

	Make sure you completely apply the edges so they won't peel.		Be careful not to stretch the stripe or peel it when doing so.
--	--	--	--



	8		8
--	---	--	---

NOTE	Using your squeegee, apply the remaining half of the stripe evenly and completely from the center towards the back of the vehicle.	NOTE	Use your squeegee to make sure the entire stripe is applied.
-------------	--	-------------	--

	Make sure you completely apply the edges so they won't peel.		
--	--	--	--

KMA GENUINE APPROVED ACCESSORY (INSTALLATION)

8	8
<p>NOTE Carefully remove the application tape. Keep the application tape close to the vehicle to keep it from peeling the stripe with it.</p>	<p>NOTE Line up and tape in place the Rear Window Template with it's appropriate lines on the rear window.</p>
8	8
<p>NOTE Line up and tape in place the Rear Bottom Template with it's appropriate lines on the bottom of the hatch.</p>	<p>NOTE Line up and tape the other side of the rear bottom template in place.</p>
<p> This will be easier if you pop open the hatch.</p>	<p> Make sure the other side of the template doesn't move out of alignment while doing this.</p>
8	8
<p>NOTE Line up Stripe E with the rear window template. Ensuring it lines up with the black bar on the template.</p>	<p>NOTE Line up the bottom of the stripe with the rear bottom template, ensuring it's centered. Tape the center of the stripe down once lined up.</p>
<p> Tape the top corners of the stripe down once lined up.</p>	<p> Make sure the top edge and bottom edge of the stripe have an equal amount of space from the edge on the vehicle.</p>

KMA GENUINE APPROVED ACCESSORY (INSTALLATION)



	8		8
--	---	--	---

NOTE	Peel the stripe from its backing from the top towards the taped down center point.	NOTE	Tear the backing, leaving some room to fold it under itself.
-------------	--	-------------	--



	8		8
--	---	--	---

NOTE	Fold the backing under itself. This will make it easier to apply the stripe.	NOTE	Using your squeegee, begin applying the stripe evenly and completely from the center out and upwards.
-------------	--	-------------	---

			Pay close attention to ensure there will be no air bubbles.
--	--	--	---



	8		8
--	---	--	---

NOTE	Pay close attention when you reach the ridge on the hatch. Make sure you apply the stripe completely here as it may be tricky.	NOTE	Be sure to apply all the way to the folded backing edge. This will make the other half easier to install.
-------------	--	-------------	---

	Be sure to apply evenly over ridges so as not to distort the direction of the remaining application of the stripe.		
--	--	--	--

KMA GENUINE APPROVED ACCESSORY (INSTALLATION)



	8		8
--	---	--	---

<p>NOTE After peeling the remaining application tape, use your squeegee to begin applying the second half of the stripe evenly and completely from the center out and down.</p>	<p>NOTE Continue applying the stripe, making sure to apply evenly.</p>
--	---



	8		8
--	---	--	---

<p>NOTE Open the rear hatch when finishing the application. This will make it easier to ensure it's completely applied.</p>	<p>NOTE Remove the application tape carefully, keeping the application tape close to the vehicle.</p>
--	--

<p><input checked="" type="checkbox"/> Double check that the edges are completely applied.</p>	<p><input checked="" type="checkbox"/> Make sure you peel from the top down.</p>
--	--



	8		8
--	---	--	---

<p>NOTE Use your squeegee to push out any air bubbles towards the edges of the stripe.</p>	<p>NOTE Review the stripes, ensuring there are no air bubbles and that it is completely applied.</p>
---	---

<p><input checked="" type="checkbox"/> Make sure the stripe has been completely applied.</p>	<p><input checked="" type="checkbox"/> You have now completed the installation of the stripe.</p>
--	---