



## KIA Genuine Accessories

Vehicle Model Cadenza  
 Model Year 2014~  
 Part No. 3R025 ADU00

Accessory Hood Film  
 Difficulty B

### - Accessory Installation

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory  
 ( A ) Customer ( B ) Dealer Technician ( C ) Master Technician



Denotes warnings that may lead to serious physical injury or vehicle damage.



Denotes quality processes to be checked prior to moving to the next step.

Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection.



Denotes cautions to be taken to avoid physical injury or electronic component damage.



Denotes specific tools that are necessary to complete the step.



Mask



Goggles



Denotes cautions to be taken to avoid vehicle and component damage.



Denotes instructional steps necessary to complete the process.






Rubber Gloves



Hearing Protection

### Basic Required Hand Tools

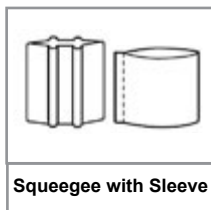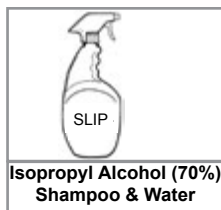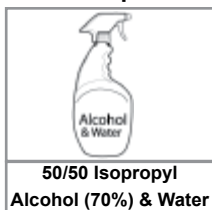

### Preparation - Before Installation:


1. Alcohol, Shampoo & Water mixture: Mix 8 oz. of water, 8 oz. alcohol (70% isopropyl) & 1 ml of baby shampoo in a trigger type spray bottle marked "SLIP."  
 Note: The above listed solution has been formulated for use where ambient & vehicle surface temperatures are within a range of 65°F to 90°F. If temperatures exceed this range, add additional shampoo in increments of 1 ml to aid in alignment.
2. This product should be installed with proper installation tools.
3. Install this product while observing all warnings and precautions stated in this instruction booklet.
4. **VERY IMPORTANT:** Thoroughly clean front fascia with soap and water. If contaminants are found, clean with an automotive grade clay bar.
5. **VERY IMPORTANT:** Sleeve must be installed on Squeegee throughout entire installation process.
6. **VERY IMPORTANT:** Ambient temperature of the Protective Film and vehicle must be 65°F to 90°F at the time of installation and for two hours after.
7. Parts storage should be at room temperature and in a clean dry place. **Care should be taken to avoid a dusty environment.**
8. Place a large towel or pad on the ground to catch wetting mixture.

### Notes to the Installer:

1. Read the entire installation pamphlet prior to installation of the accessory.
2. After washing the front fascia area with soap and water and prior to installing the Protective Film, completely clean the installation area with the isopropyl alcohol and water mixture. If contaminants are present after cleaning, remove the contaminants using an automotive grade clay bar.
3. Inspect part for any dirt or debris on adhesive.
4. Installation results may vary based on condition of vehicle.
5. **VERY IMPORTANT -** Parts and vehicle surface temperature must be between 65° and 90° degrees F at time of installation.


# KIA Genuine Accessories

## Kit Overview

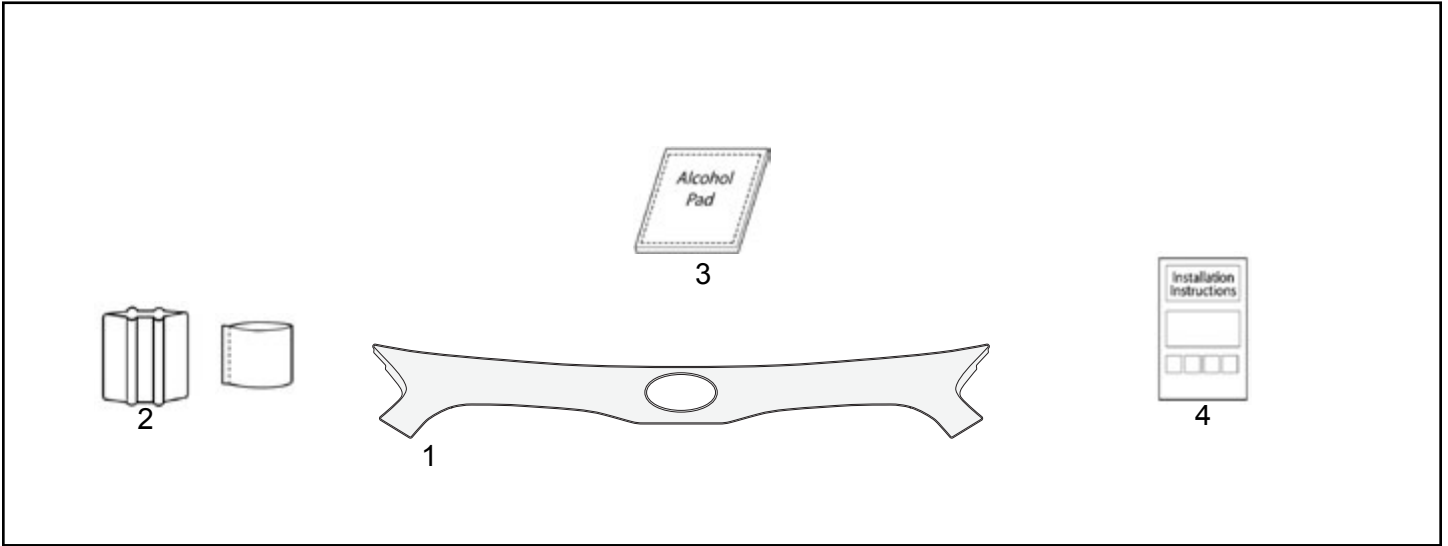

No.	Qty.	Description
1	1	Protective Film
2	1	Squeegee with Sleeve
3	4	Alcohol Pad
4	1	Instructions


# KIA Genuine Accessories

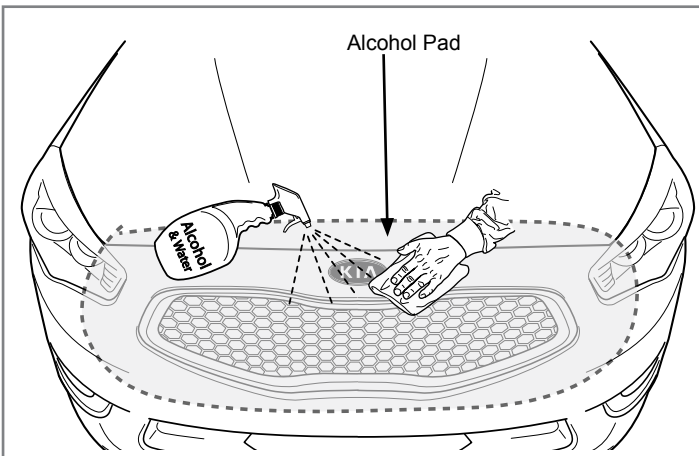

 Alcohol Prep Pad or Isopropyl Alcohol (70%) and Water Mixture in a Spray Bottle and a Microfiber Cloth **1**

**NOTE** Thoroughly clean the front fascia using the alcohol prep pad or isopropyl alcohol (70%) and water mixture and a microfiber cloth.


 Make sure front fascia is completely clean and dried.

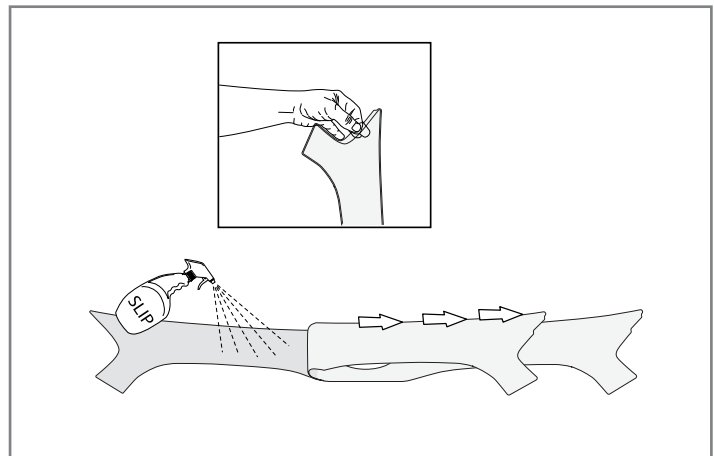


 Alcohol (70%), Shampoo & Water Mixture (SLIP Mixture) **2**


**NOTE** Grasp only the Handling Tab and remove the liner from the back of the Protective Film. Spray both the Protective Film and area of installation on the front fascia with the SLIP mixture.

 Pay special attention to not get any finger prints or dirt on the Protective Film.

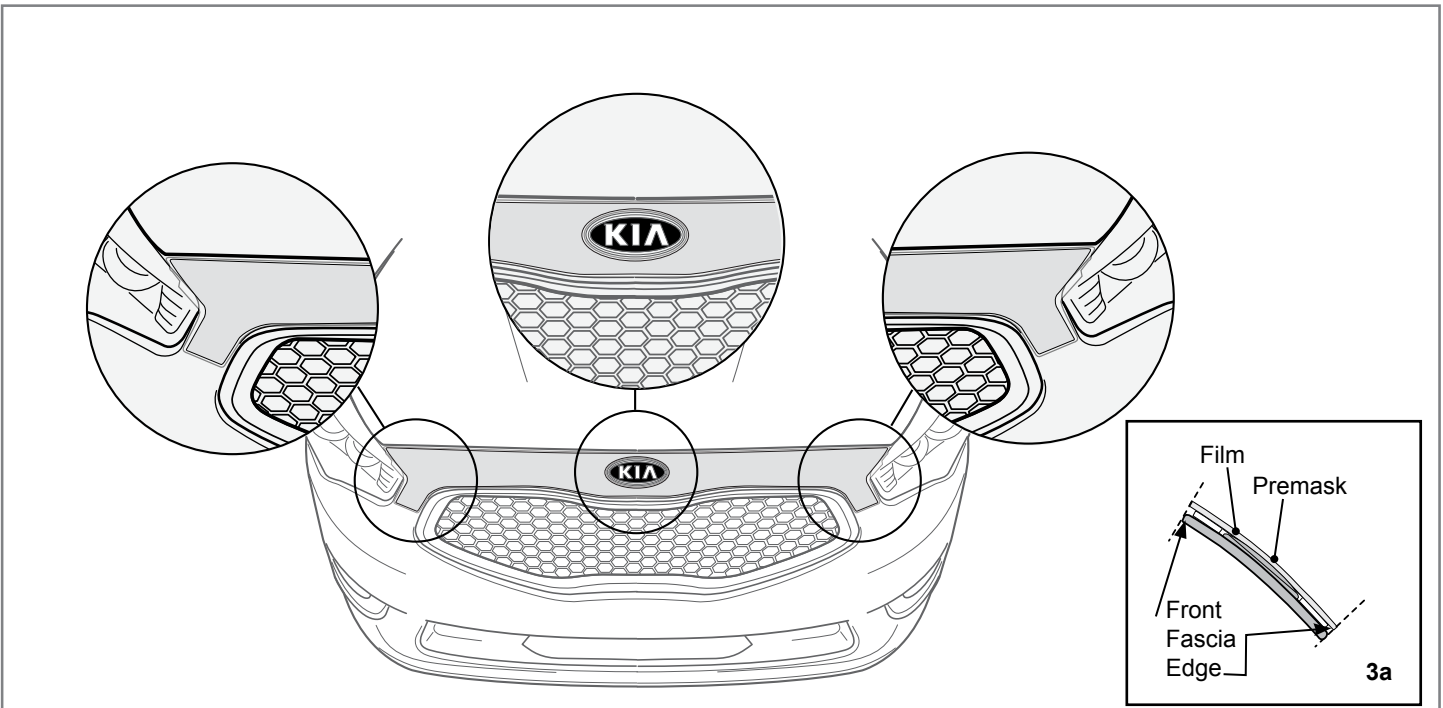


 Alcohol (70%), Shampoo & Water Mixture (SLIP Mixture) **3**

**NOTE** With the vehicle still wet with the SLIP mixture, position the Protective Film onto the front fascia by visually centering the oval cut-out in premask to the center of vehicle logo, as shown. The leading edge of the premask will align to the leading edge of the front fascia from corner to corner, following along the sweep of the top edge of the front fascia as shown above.

 Note: The premask (the clear film over the protective film) must not extend beyond the front leading edge of the front fascia. The premask provides the proper set back of the film to the edge of the front fascia as noted in cross section (insert 3a). Front fascia must be wet to aid installation.

## KIA Genuine Accessories

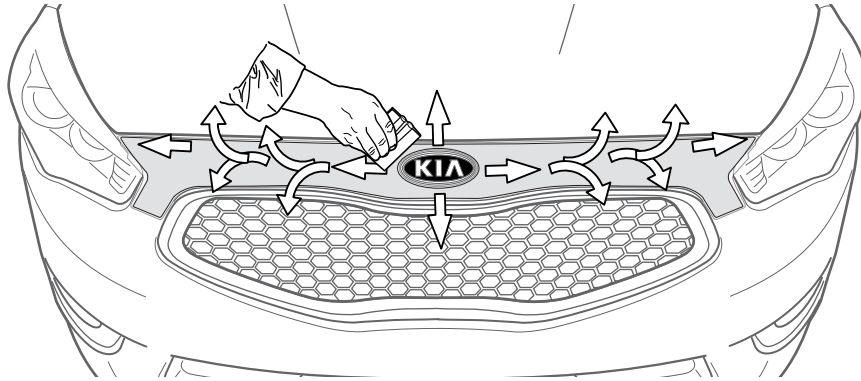

Alcohol (70%), Shampoo & Water Mixture (SLIP Mixture) and Squeegee with Sleeve


4

NOTE

Wet pre-mask with the SLIP mixture and squeegee the Protective Film firmly onto the front fascia using overlapping squeegee strokes. Squeegee the Protective Film starting from the center around the badge bezel first, then work outwards towards the ends.



Front fascia must be wet to aid in installation. Make sure Sleeve is installed on Squeegee. Inspect for bubbles and correct following the procedure on page 5.

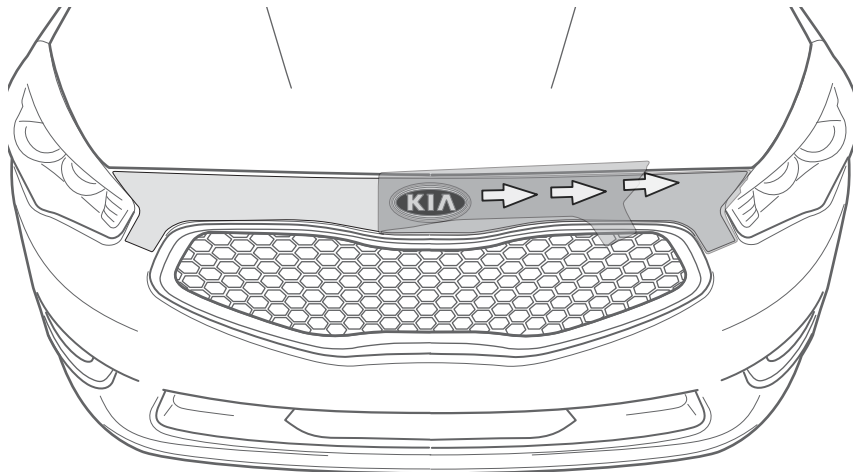

Alcohol (70%), Shampoo & Water Mixture (SLIP Mixture), Squeegee with Sleeve and Microfiber Cloth

5


NOTE

Remove pre-mask, re-wet top of Protective Film with the SLIP mixture and re-squeegee. Dry installation area and check for proper fit. Remove and replace Protective Film if it is not properly installed.



Do not pull straight up on pre-mask during removal. Peel pre-mask at a constant 180° to ensure Protective Film placement. Inspect for bubbles and correct following the procedure on page 5. After installation, do not wash the car for 24 hours.

**KIA Genuine Accessories  
Visual Check**

<b>Items To Be Checked</b>		<b>Results Of The Check</b>
	<b>Use only the handling tabs when handling the Protective Film. Pay special attention to not get any finger prints or dirt on the Protective Film.</b>	<b>No dirt or finger prints on Protective Film.</b>
	<b>Check for bubbles. If bubbles are found, re-wet Protective Film with the soap and water mixture and using a squeegee with sleeve, push/pull/remove bubbles to the closest edge of the film.</b>	<b>No bubbles present.</b>
	<b>Make sure Protective Film is fully adhered.</b>	<b>Protective Film is not lifting and is fully adhered.</b>
	<b>Make sure Protective Film is free of any remaining premask adhesive after installation. Clean the Protective Film with soap and water if necessary.</b>	<b>No premask adhesive remaining on Protective Film.</b>