



KIA Genuine Accessories

Vehicle Model	Sorento	Accessory	Rear Bumper Protector
Model Year	2014 ~	Difficulty	A
Part No.	2P027 ADU00		

- Accessory Installation

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory
(A) Customer (B) Dealer Technician (C) Master Technician

Instructional Symbols / Definitions

	Denotes warnings that may lead to serious physical injury or vehicle damage.		Denotes quality processes to be checked prior to moving to the next step.	Denotes safety equipment required to be used such as a mask, goggles, rubber gloves, and hearing protection.	
	Denotes cautions to be taken to avoid physical injury or electronic component damage.		Denotes specific tools that are necessary to complete the step.		
	Denotes cautions to be taken to avoid vehicle and component damage.		Denotes instructional steps necessary to complete the process.		
				Mask	Goggles
				Rubber Gloves	Hearing Protection

Basic Required Hand Tools


Lint Free Cloth	50/50 Isopropyl Alcohol (70%) & Water Mix

Notes to the Installer:

- 1) Read the entire installation pamphlet prior to beginning the installation of this accessory.
- 2) Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 3) To prevent vehicle damage, never place tools on top of painted surfaces, seats, dash pad, console or floor carpet/mats.
- 4) Always wear appropriate safety gear to include gloves and eye protection when required.
- 5) Bumper surface and Bumper Protector temperature must be between 65 and 110 degrees Fahrenheit at the time of installation.
- 6) A clean, lint free cloth must be used during each installation.


KIA Genuine Accessories

Kit Overview

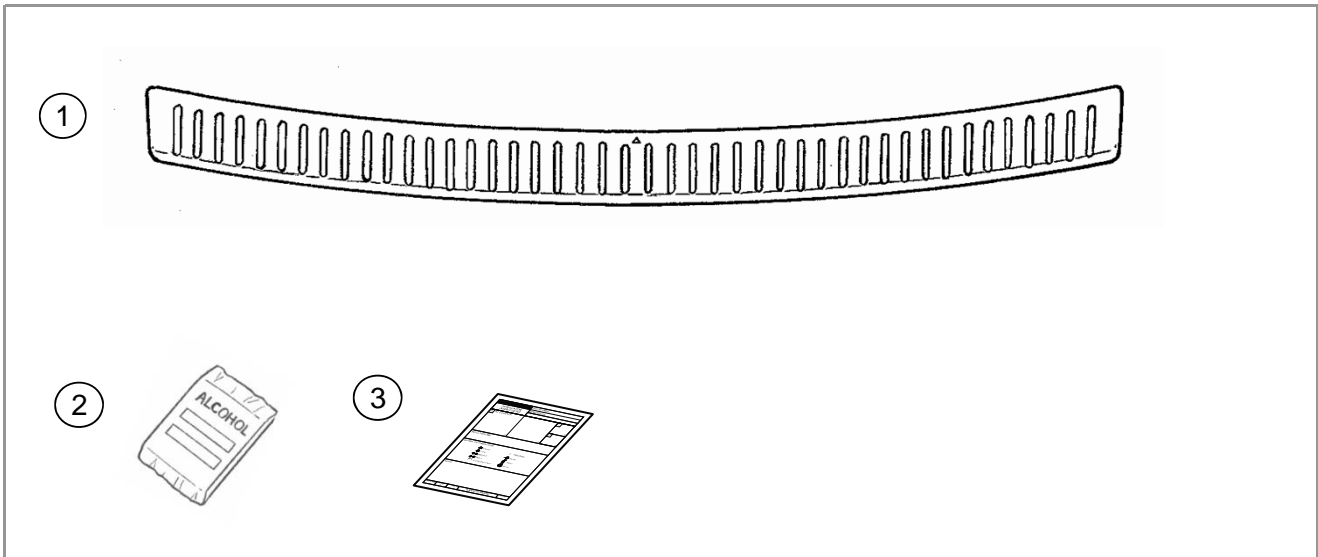


No.	Qty.	Description
1	1	Rear Bumper Protector
2	2	Alcohol Wipe
3	1	Installation Instructions


KIA Genuine Accessories

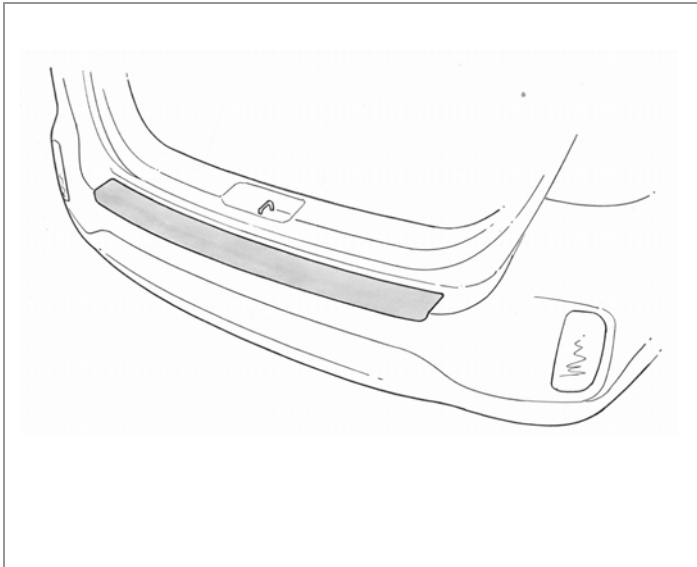


	Lint Free Cloth and Alcohol Wipe or 50/50 Isopropyl Alcohol (70%) and water.	1
NOTE	<ol style="list-style-type: none"> 1. Open lift gate of vehicle to expose Rear Bumper Protector installation surface. 2. Using an alcohol wipe or isopropyl alcohol (70%) water and a clean, lint free cloth, thoroughly clean area and allow to completely dry before continuing installation. Ensure area is completely free of dirt, grease or any other type of debris. 	
	Bumper surface MUST be very clean, completely dry, and between 65°F and 110°F for proper adhesion of tape.	

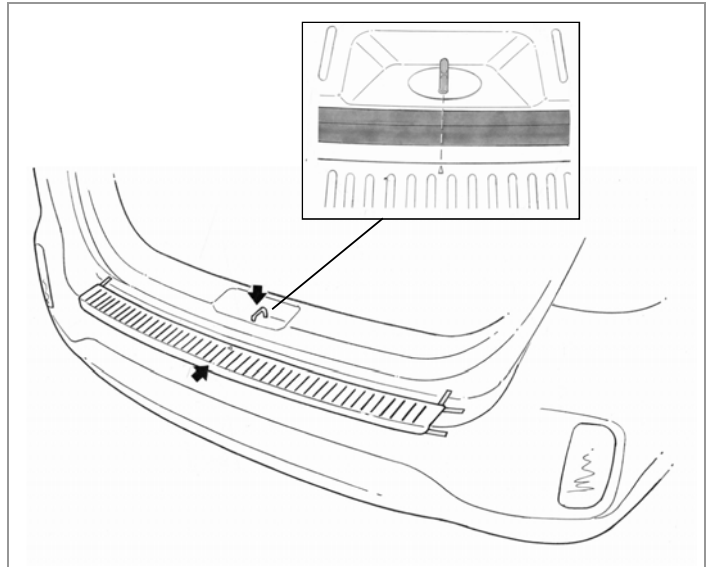

		2
NOTE	1. Without removing the adhesive tape backing, test fit the Rear Bumper Protector to the rear bumper by aligning the center arrow with the vehicle strike latch as shown.	

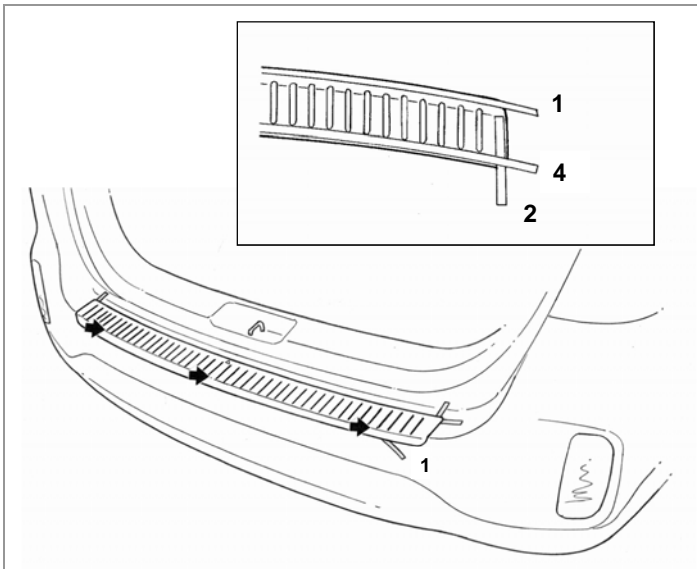


		3
NOTE	<ol style="list-style-type: none"> 1. Peel back the adhesive tape backing #1 approximately 1" - 2" inches. 2. Align the Rear Bumper Protector with the center arrow to the vehicle strike latch. Make sure end spacing is equal and matches bumper profile. 	
	Do not allow adhesive tape backing to fold under the Rear Bumper Protector. Ensure end spacing is equal and matches bumper profile.	

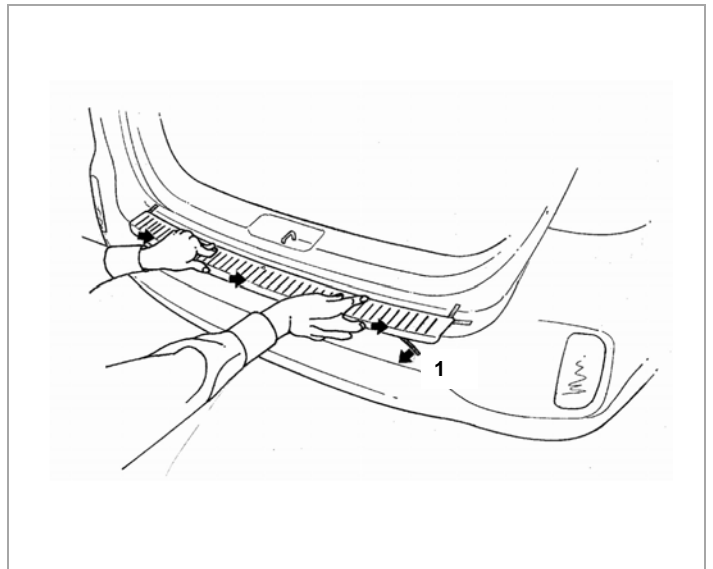


		4
NOTE	<ol style="list-style-type: none"> 1. While holding Rear Bumper Protector in position, maintain light pressure on the Rear Bumper Protector and completely remove the backing from adhesive tape #1. 2. Press the Rear Bumper Protector firmly along length of the adhesive tape. 	
	Check position of Rear Bumper Protector to ensure it has not shifted. Be careful not to break the adhesive tape backing while removing.	


KIA Genuine Accessories

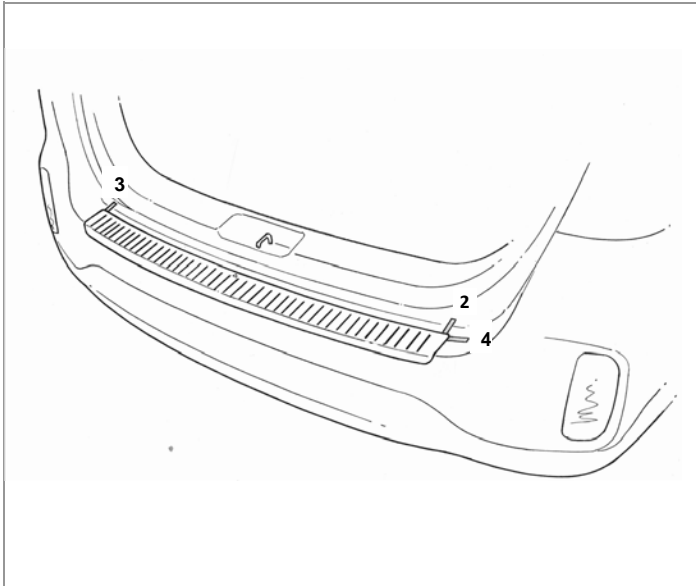

5	
NOTE	<p>1. Completely remove adhesive tape backing #2, #3 and #4, in order while maintaining the aligned position of the Rear Bumper Protector.</p>
	<p>Use caution to ensure adhesive tape backing does not break. Check position of part to ensure it has not shifted.</p>

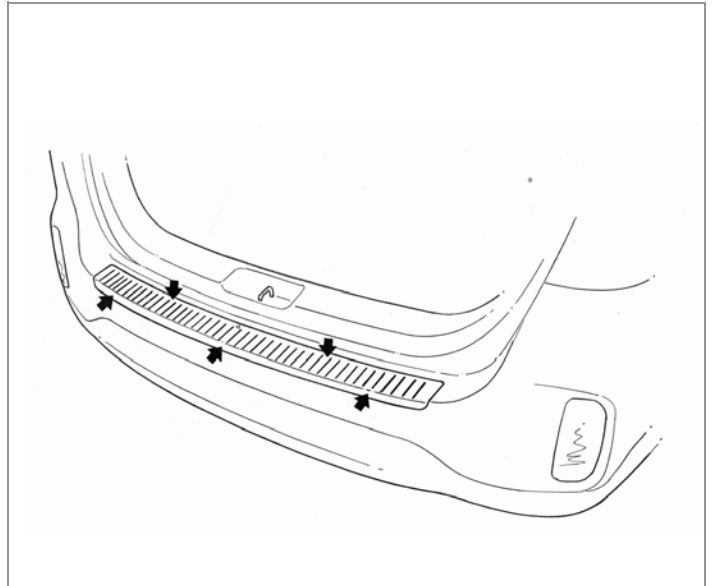

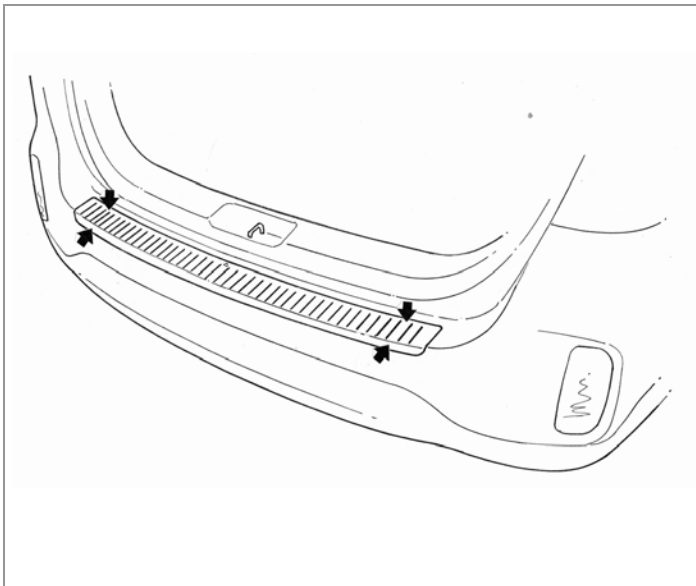

6	
NOTE	<p>1. Press Rear Bumper Protector into place, pushing downward and forward while working your way side to side.</p> <p>2. Make FOUR (4) side to side passes along the rear bumper surface with STRONG downward pressure using the palm of your hand or thumb in the taped areas.</p>
	<p>Tape is pressure sensitive and STRONG. Pressure is critical to achieve effective adhesion. Pressure sensitive adhesive reaches maximum bond after 24 hours of contact. DO NOT wash vehicle for 24 hours.</p>





7	
NOTE	<p>1. After completing Step 6, press down and hold Rear Bumper Protector with firm pressure on each end, as well as the center, for 15 seconds each.</p>



KIA Genuine Accessories Visual Check

	Items to be checked	Results of the check
	Ensure accurate centering of Rear Bumper Protector on bumper.	Rear Bumper Protector is properly centered.
	Ensure the Rear Bumper Protector is fully adhered to the rear bumper.	Rear Bumper Protector is properly installed.

Care and Cleaning

	Wash with mild soap and water.
	Do not use abrasive or petroleum based cleaners.

Caution - Please Read

	Do not use a machine car wash within 24 hours after installation.
	Do not drive the vehicle at high speeds (no more than 60 mph) within 24 hours after installation.