




FITTING INSTRUCTIONS


Part #: 0000-8W-L47
0000-8W-L49

2014 MAZDA3 4-Door & 5-Door


Paint Protection Film: Rear Bumper Guard

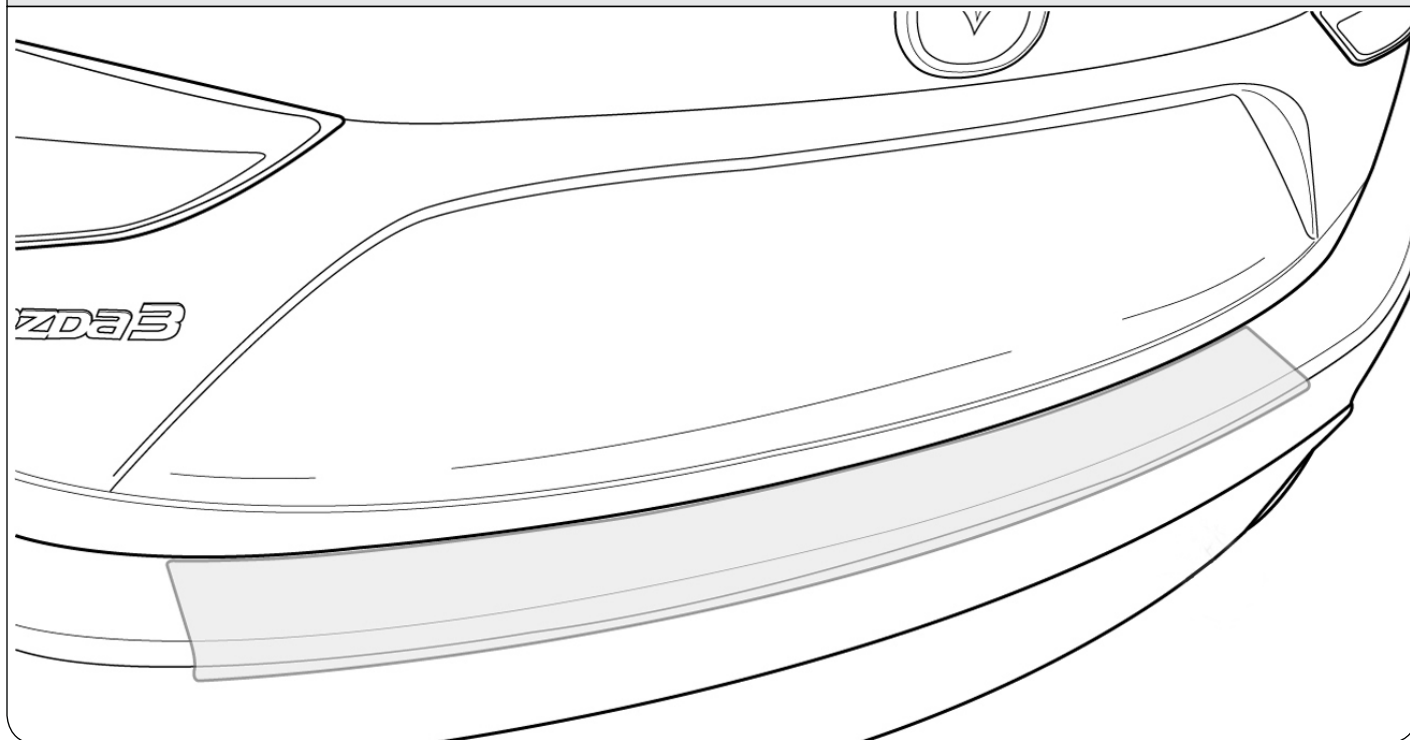

Kit Contents

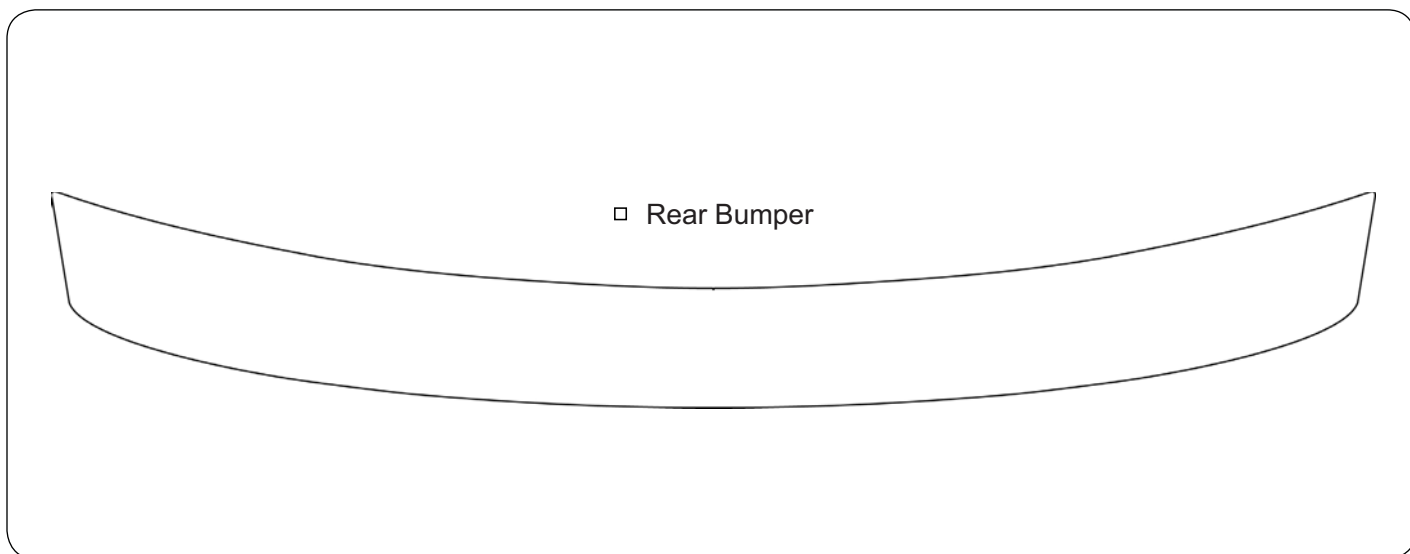

Tools

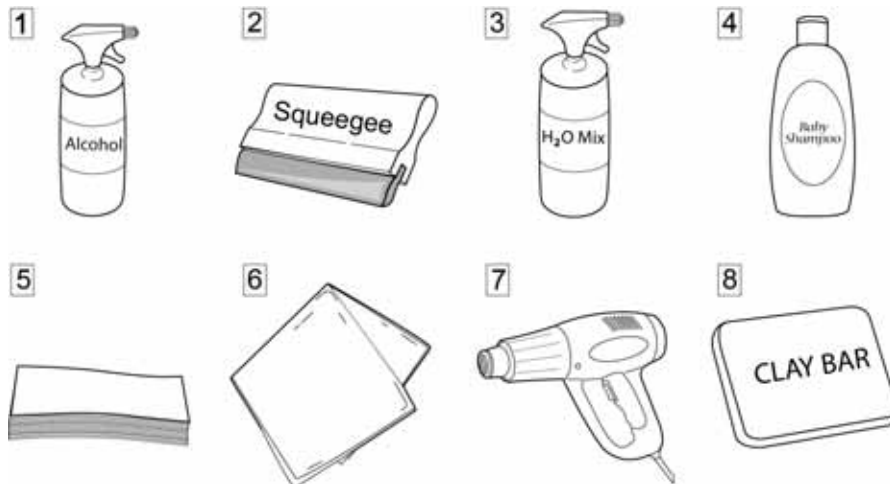

1. 70% Isopropyl Alcohol
2. Squeegee
3. H₂O Mix
4. Baby Shampoo
5. Wipes
6. Microfiber Towels


Optional Tools:

7. Heat Gun
8. Clay Bar
9. Supplementary Tools

Installation Solution Mixture Guide

Baby Shampoo & Water Solution

The solution mixture is extremely crucial for a proper installation. The mixture will vary depending on temperature. Follow the instructions and see the chart for guidance.

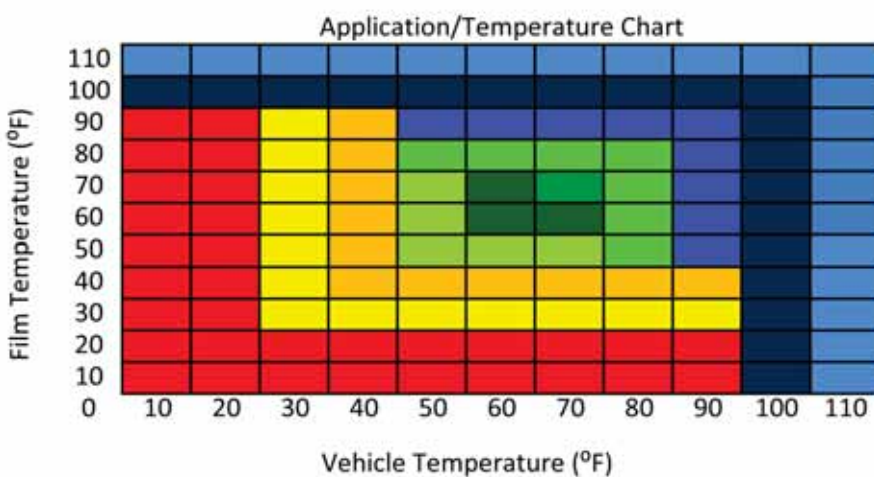

What you'll need:

1. (2) 32 oz Spray Bottles
2. Water (Distilled Preferred)
3. 70% Isopropyl Alcohol


Mixing Installation Solutions:

1. Fill up 1st spray bottle with water (distilled preferred).
2. Add 4 drops of Unscented Johnson's Baby Shampoo
3. Shake Well
4. 2nd spray bottle will be used for Isopropyl Alcohol. This accelerates the adhesive to be more aggressive. It will be 60% water and 40% alcohol. It is used for tacking areas and holding edges from lifting.

- Install Not Recommended at temp. Cool down car or film by spraying cold water on vehicle surface.
- Install Not Recommended at temp. Cool down car or film by spraying cold water on vehicle surface.
- Good Install Conditions. Mix 6 drops of shampoo to 32 oz of water (distilled preferred), compensate for heat.
- Excellent Install Conditions. Mix 5 drops of shampoo to 32 oz of water (distilled preferred).
- Ideal Install Conditions. Mix 4 drops of shampoo (aprox 1/4 in size) to 32oz of water (distilled preferred).
- Excellent Install Conditions. Mix 4 drops of shampoo (aprox 1/4 in size) to 32oz of water (distilled preferred).
- Good Install Conditions. Decrease amount of soap, add 2-4 oz of 70% isopropyl alcohol to mix.
- Install Not Recommended at this temperature. Warm up vehicle's paint and film before applying.
- Install Not Recommended at this temp. Warm up vehicle's paint and film before applying.
- Install Not Recommended at this temp. Warm up vehicle's paint and film before applying.


Vehicle Cleaning Prep

- 1 Always before applying PPF film be sure to clean and prep the surface using an alcohol based cleaner or degreaser if needed. Additional prep may include using a clay bar to clean very small stubborn debris.

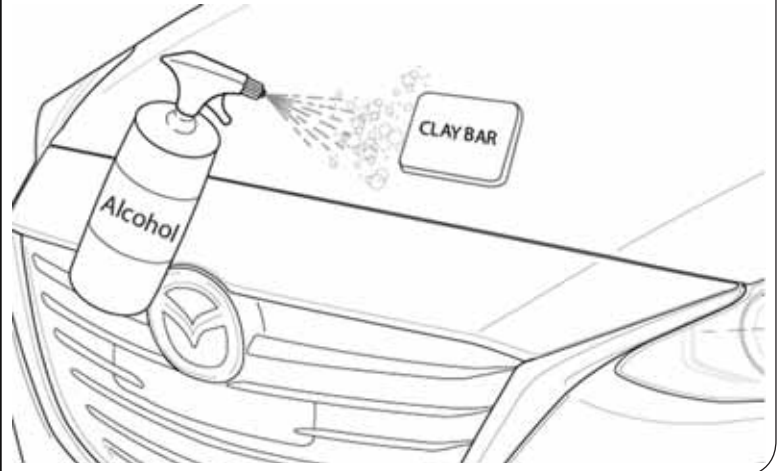


Rear Bumper Application


- 1 Prep vehicle surface for film placement. Spray rear bumper piece and surface of bumper. Then proceed to place film in line with **trunk hook**.

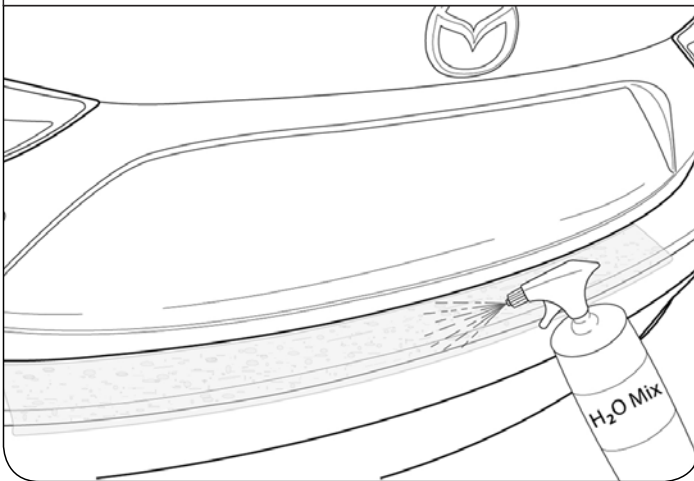


- 2 Locate the center of rear bumper piece and lift to spray alcohol in the center.

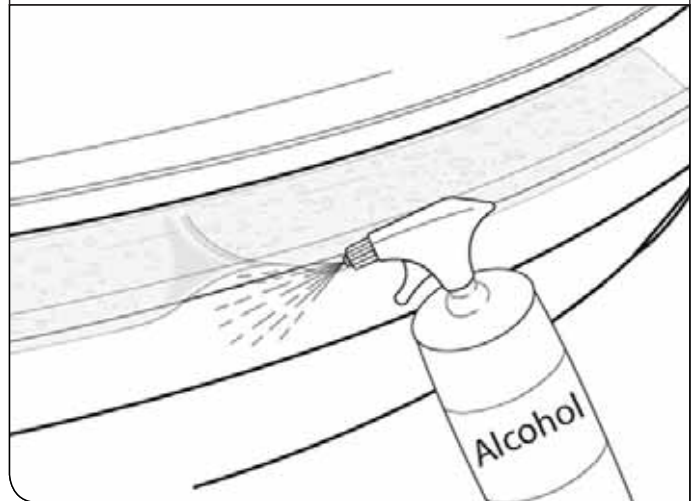

Rear Bumper Continued →

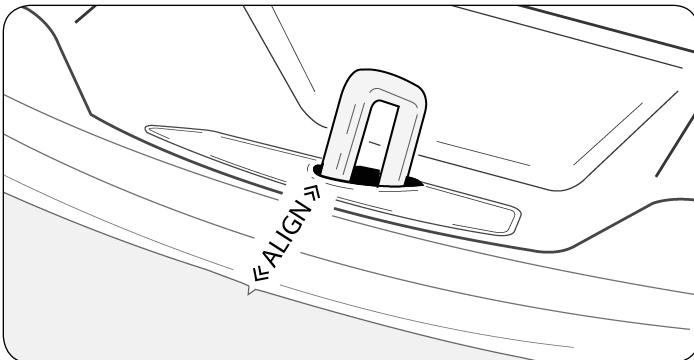


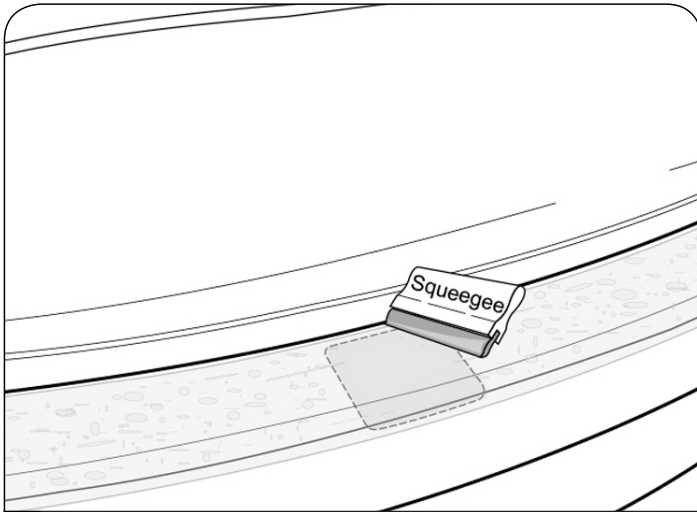

- 3 Squeegee down center creating an alcohol tack and a clean center place.


Note:

keep film wet when squeegeeing into place, prevent dry marks or silvering. If they occur, lift up the film & re-wet adhesive side with soap & re-apply piece.

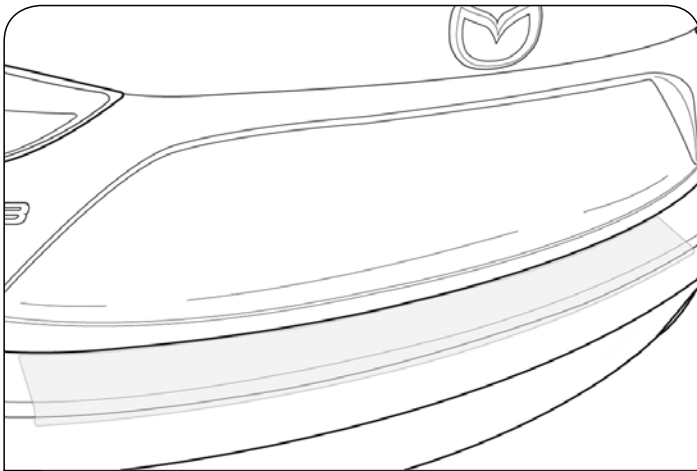


- 5 Repeat squeegee passes on the reverse side and go over a couple of times, Inspecting for excess water.

REPEAT STEPS ON REVERSE SIDE.

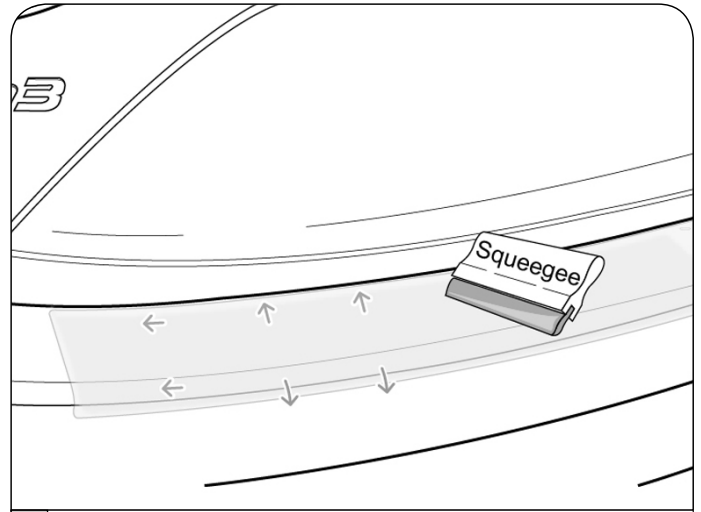

- 4 Re-wet side of film and begin to lightly stretch film into place. Hold in position with one hand and squeegee outward from the clean center in the direction pictured above.

Finishing Steps

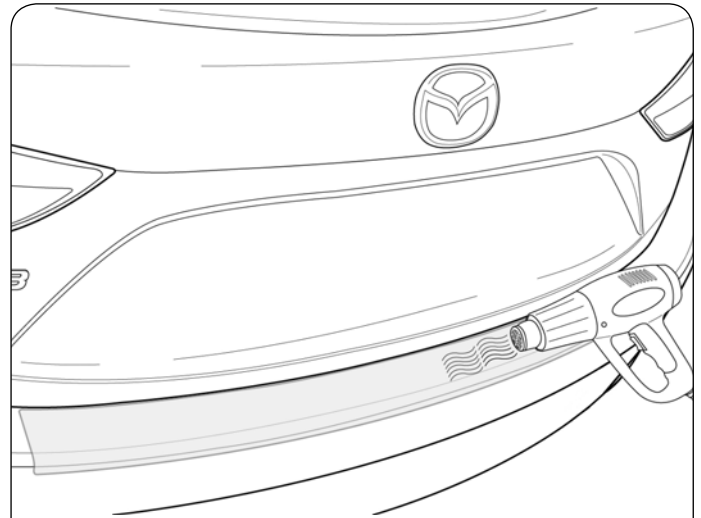

After all parts of kit are installed (rear bumper). Dry kit pieces using a heatgun.

ALL STEPS COMPLETED!