



GENUINE ACCESSORIES  
INSTALLATION INSTRUCTIONS

PART NUMBER:  
0000-8K-N02

CARGO NET

APPLICABLE MODELS:  
2007 > MAZDA CX9

PACKAGE CONTENTS

Cargo Net  
Installation Instructions

TOOLS REQUIRED

None

**1** Installing Net - Envelope Position

1. Open lift gate.
2. Locate the anchor locations inside the rear storage area; vehicle is symmetrical. (Fig. 1)
3. When the net is in the envelope position, attach the lower left side hook of the net to the Driver's side D-ring at the rear of the storage area. (Fig. 2) Repeat for the Passenger side of the vehicle.

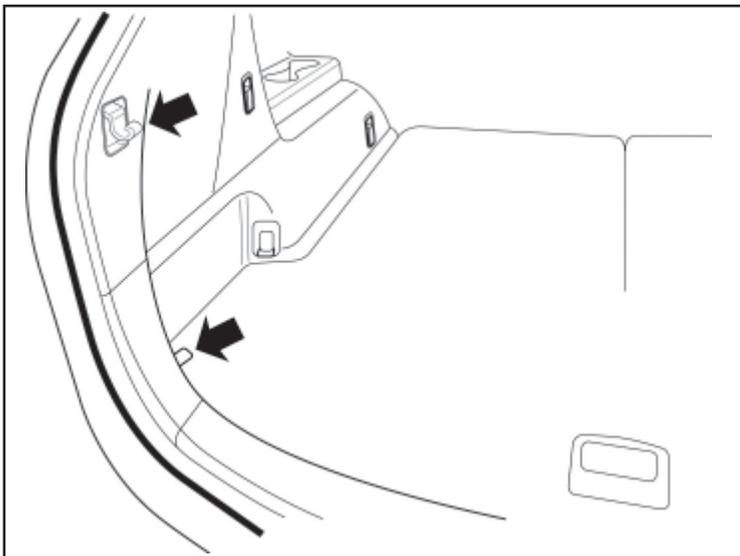


Fig. 1

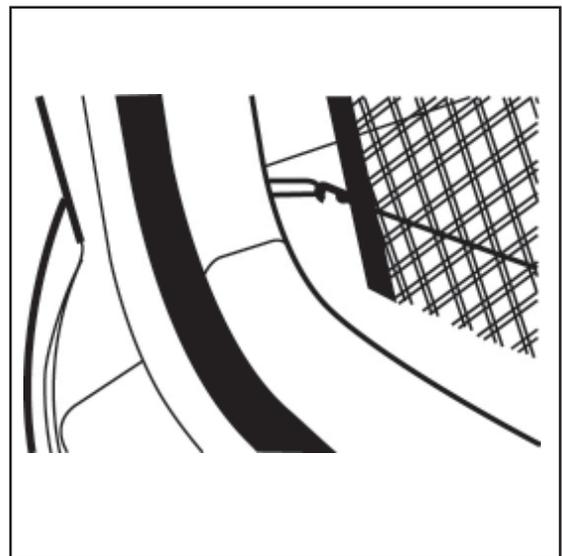


Fig. 2

## 2 Installing Net - Envelope Position (Cont.)

4. Attach both loops at the ends on the left side of the net to the Driver's side hook at the liftgate. (Fig. 3) Repeat for the Passenger side of the vehicle.
5. Confirm the completed assembly. (Fig. 4)

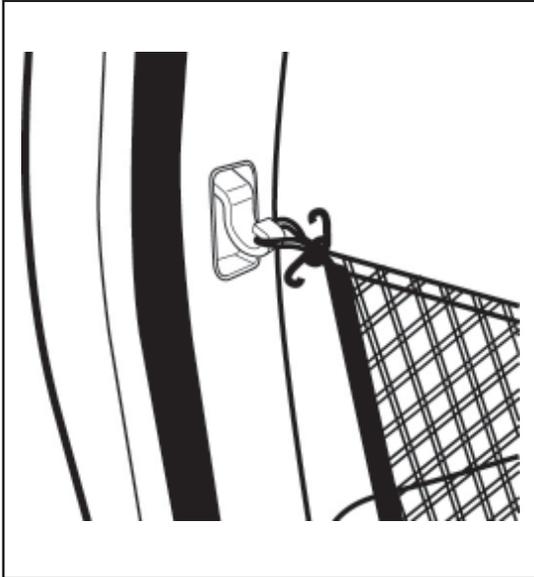


Fig. 3

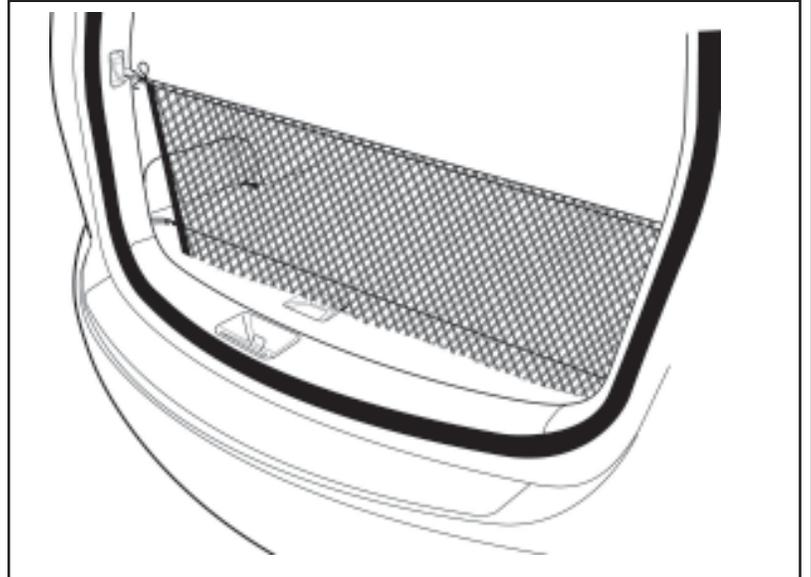


Fig. 4

## 1 Installing Net - Half-Floor Position

1. Open rear lift gate, fold down 3rd row seat.
2. Locate the 4 D-rings inside the rear storage area. (Fig. 5)
3. Fold the net in half. Attach the hooks at one end of the net to the Driver's side D-rings at the rear of the vehicle as shown. (Fig. 6)  
Repeat for the Passenger side of the vehicle.

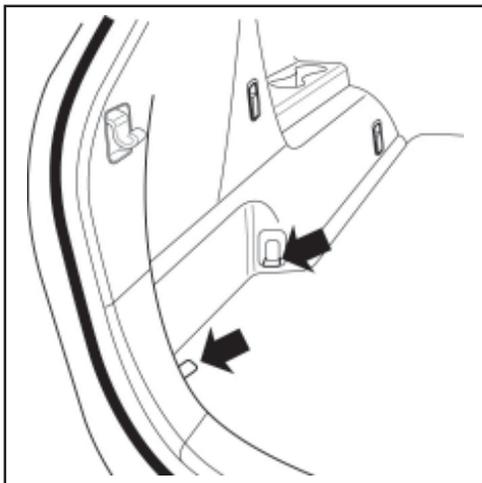


Fig. 5

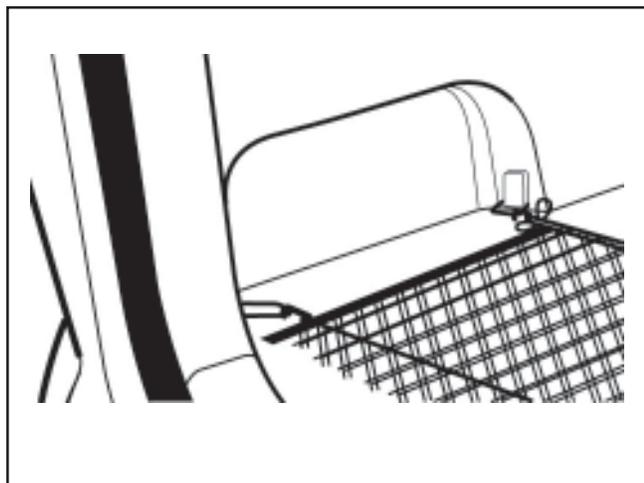


Fig. 6

## 2 Installing Net - Half Floor Position (Cont.)

4. Confirm completed assembly (Fig. 7).

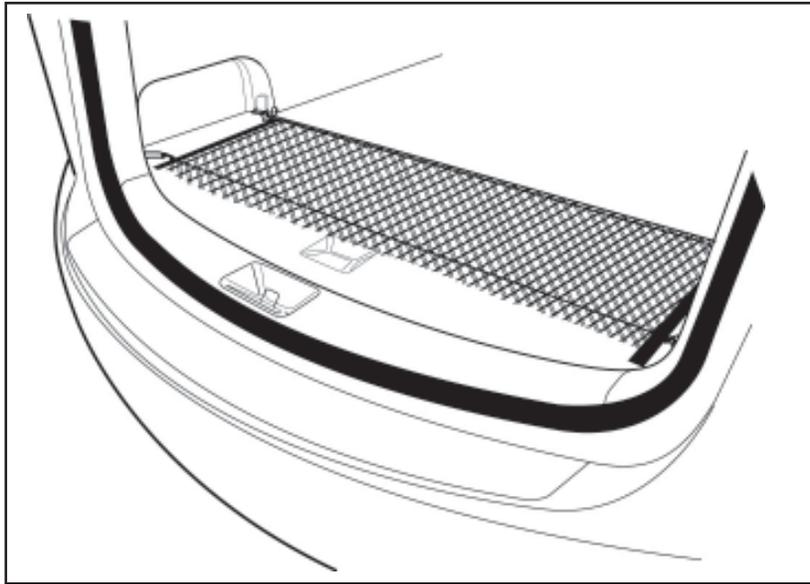


Fig. 7

## 1 Installing Net - Full Floor Position

1. Open rear lift gate, fold down 3rd row seat.
2. Locate the 6 D-rings inside the rear storage area; vehicle is symmetrical. (Fig. 8)
3. Open the net so it is completely flat. Attach the hooks at the front end of the net to the Driver's side D-rings in the vehicle as shown. (Fig. 9)  
Repeat for the Passenger side of the vehicle.

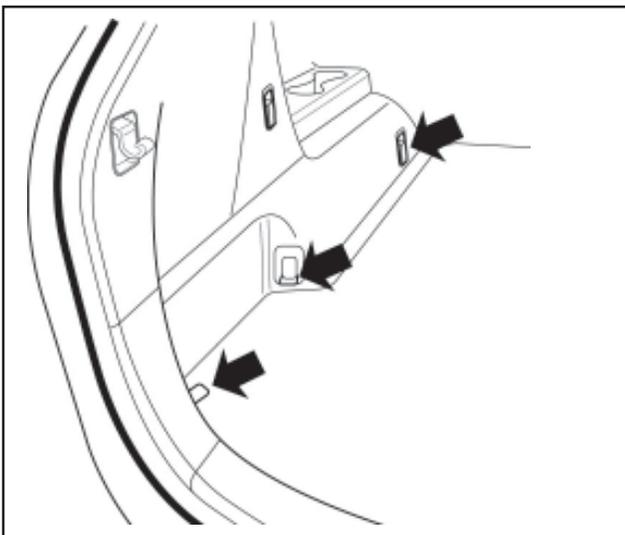


Fig. 8

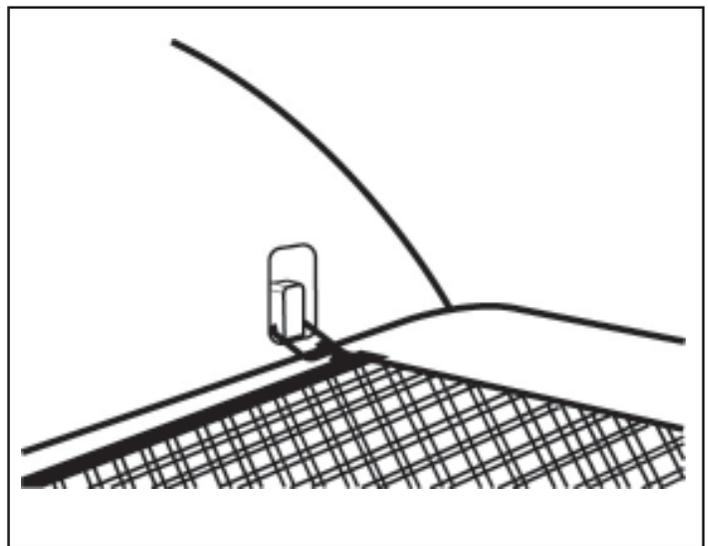


Fig. 9

## 2 Installing Net - Full Floor Position (Cont.)

4. Attach the hooks at rear end of the net to the Driver's side D-rings at the rear of the vehicle as shown. (Fig.10)  
Repeat for the Passenger side of the vehicle.
5. Confirm completed assembly (Fig.11)

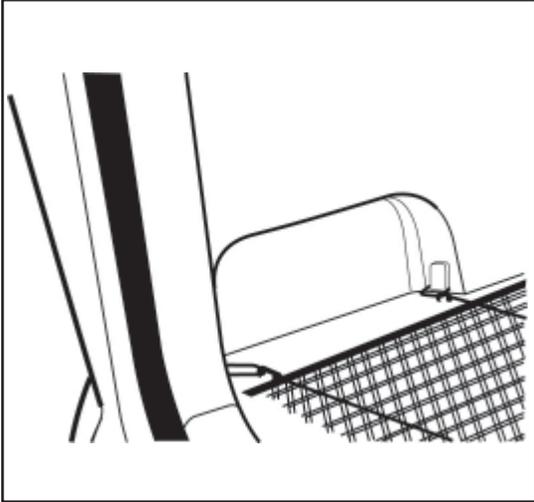


Fig. 10

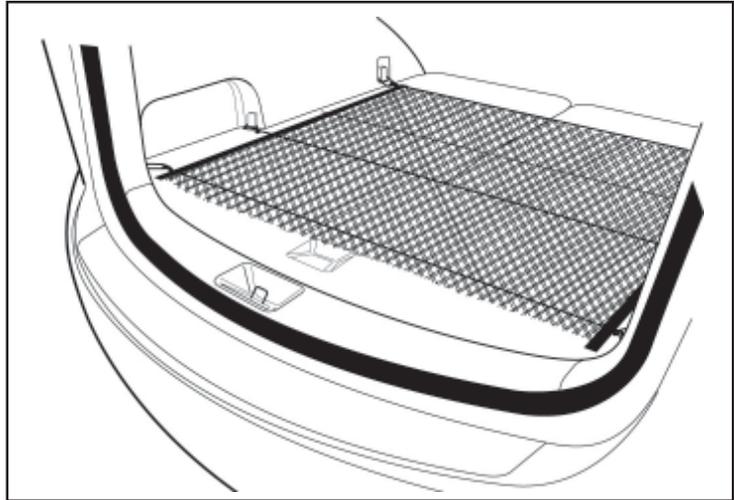


Fig. 11

PLACE INSTRUCTIONS IN GLOVE BOX FOR CUSTOMERS REFERENCE



**WARNING:** OBJECT(S) RESTRAINED NOT TO EXCEED 30 lbs. (13.6 kg)