




# INSTALLATION INSTRUCTIONS

## ECLIPSE 2006 -

### Sunroof Deflector


PART NUMBER: MZ313515

#### APPLICATION



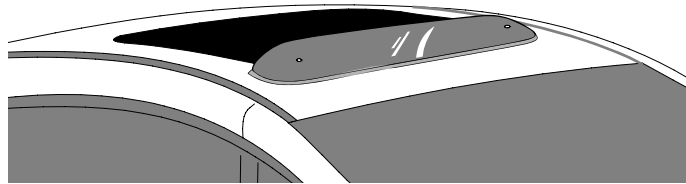


ECLIPSE







#### TOOLS REQUIRED




10mm (13/32") closed end wrench

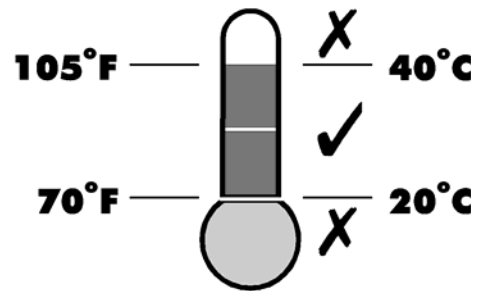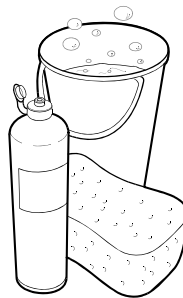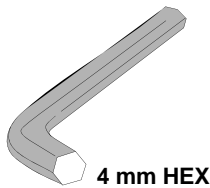

#### BILL OF MATERIALS

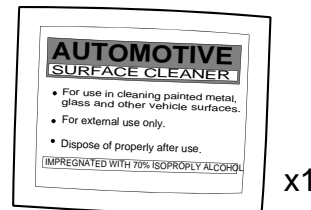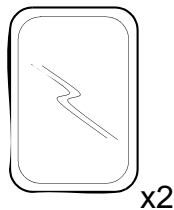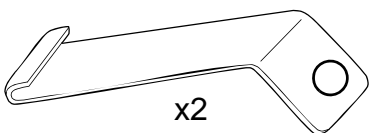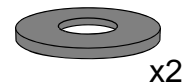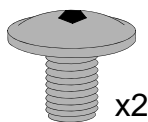


**1.**

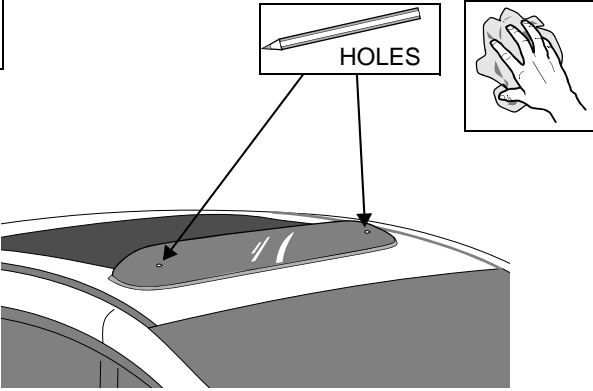


Thoroughly clean installation areas and open the sunroof window. Trial fit the Sunroof Deflector. Note the two holes in Sunroof Deflector. Using a non-permanent felt pen or pencil, mark the positions of the two holes onto sunroof. Remove Sunroof Deflector.

**2.**

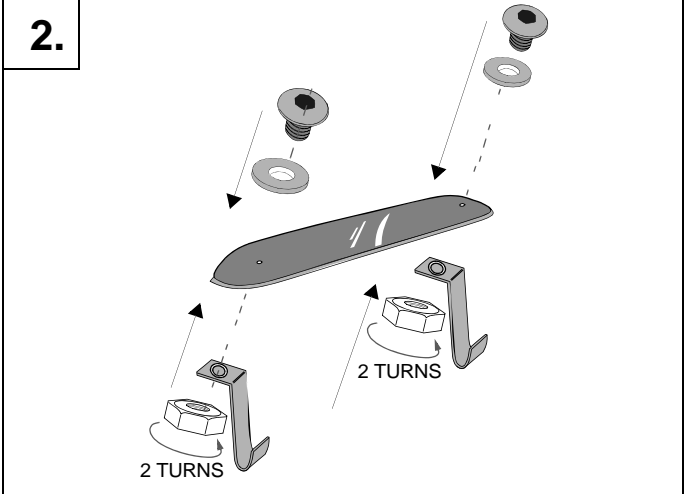


Hand tighten the Sunroof Deflector to both clips using the allen screws, washers and nuts provided

**3.**

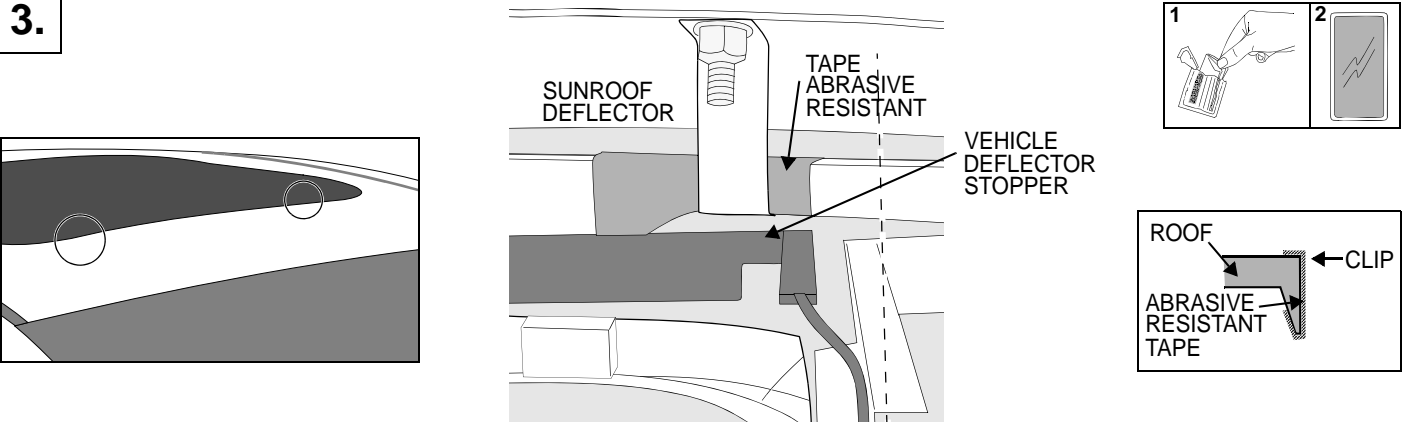


Re-fit the Sunroof Deflector and take note where the clips make contact with the sunroof surface. Remove Sunroof Deflector and clean the areas with alcohol wipe provided. Wipe dry with a clean cloth, **not a shop rag**. Align abrasive resistant tape with the edge of the **vehicle deflector stopper** and adhere abrasive resistant tape as shown.

**4.**

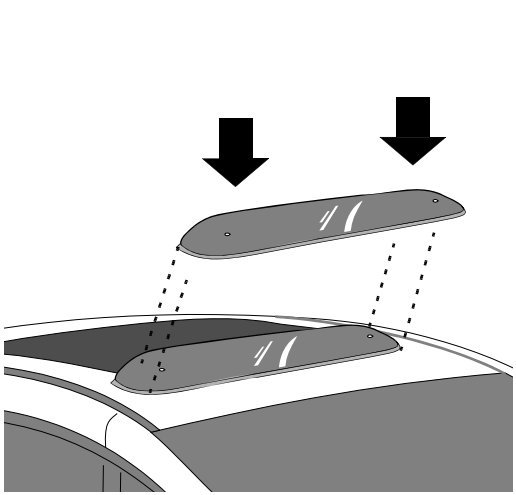


Re-fit the Sunroof Deflector centrally onto roof.

**5.**

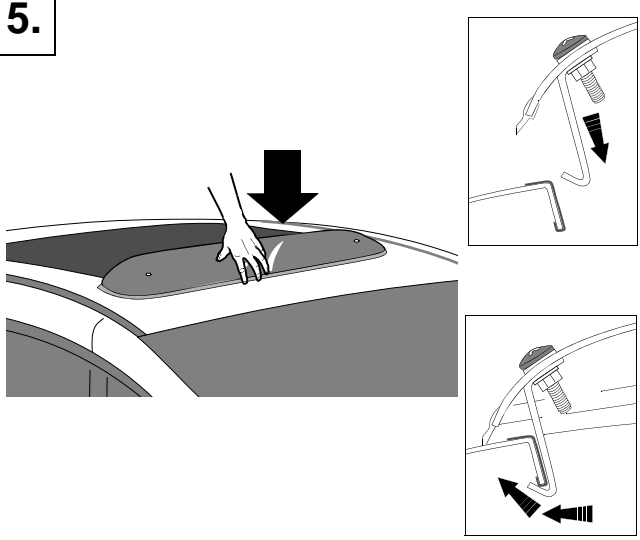


6.


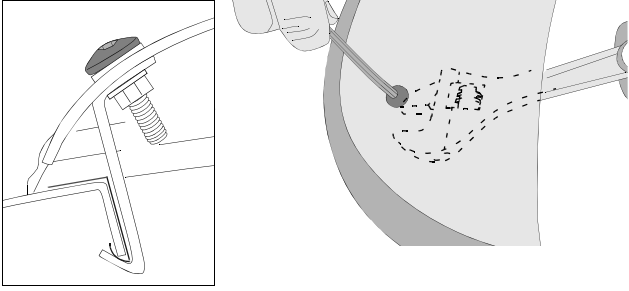


Using an allen key and a wrench, start to tighten one end while at the same time applying pressure to the top front corner near the screw to ensure the rubber gasket is flat against the roof and not curling under itself. Repeat process to the other side.

7.

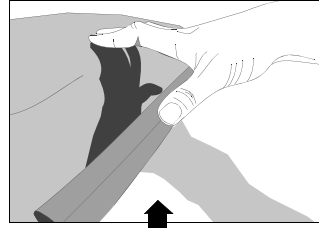


PUSH DOWN  
ON THE  
RUBBER GASKET

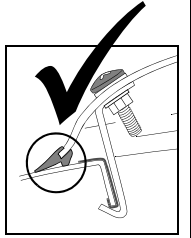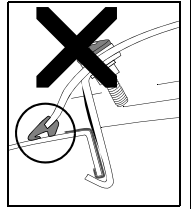

Push down on the rubber gasket with your thumb along the entire length to seat the rubber gasket correctly with the roof surface as shown.

8.

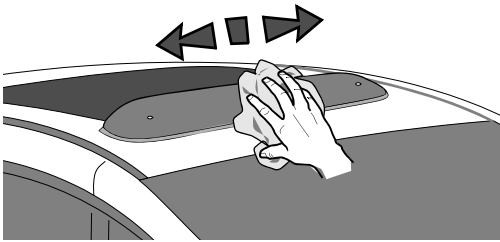

Do not use abrasive cleaners.



Clean Sunroof Deflector with a mild detergent and water solution.