



GENUINE ACCESSORIES  
ACCÉSSOIRES AUTHENTIQUES

# INSTALLATION INSTRUCTIONS INSTRUCTIONS DE POSE

FLAT NET  
FILET UTILITAIRE DE COFFRE

MITSUBISHI OUTLANDER  
PART NUMBER / NUMERO DE PIÈCE: MZ313814


**CONTENTS:**  
**CONTENU DE LA TROUSSE:**  
-1 CARGO NET  
-1 FILET UTILITAIRE DE COFFRE

**TOOLS REQUIRED:**  
**OUTILS REQUIS:**  
-NONE REQUIRED  
-AUCUN

## INSTALLATION INSTRUCTIONS: INSTRUCTIONS DE POSE:

1

- LOCATE THE 4 'D' RING ATTACHMENT POINTS IN THE CARGO AREA.
- LOCALISER LES QUATRES POINTS D'INSTALLATION EN FORME DE BAGUE EN 'D'.

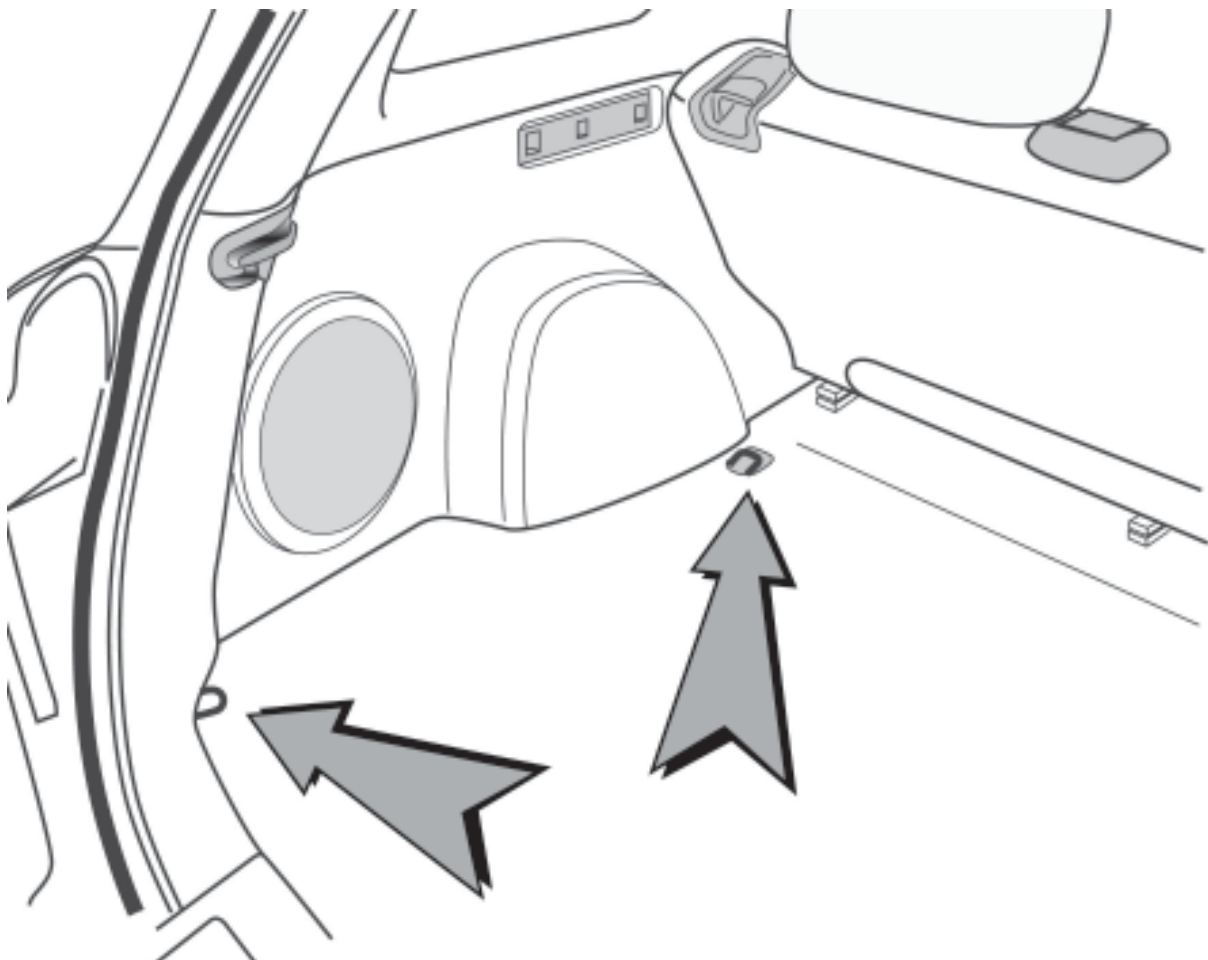

2

- SECURE EACH OF THE HOOKS ON THE NET TO EACH OF THE 4 'D' RINGS.
- ATTACHER LES QUATRES CROCHETS DU FILET AUX QUATRES BAGUES EN FORME DE 'D' TEL QU'ILLUSTRÉ.

