




GENUINE ACCESSORIES

# INSTALLATION INSTRUCTIONS LANCER 2008 - Sunroof Deflector


PART NUMBER: MZ313957

## APPLICATION

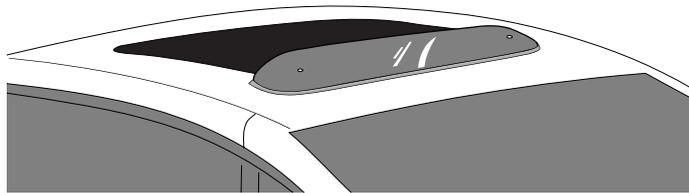


LANCER

## TOOLS REQUIRED

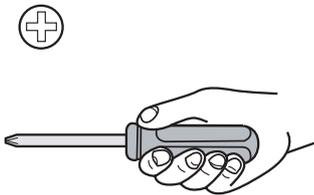

NON-PERMANENT  
SOFT MARKER

## BILL OF MATERIALS

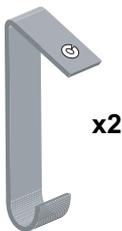

x2



x2

ABRASIVE  
RESISTANT  
TAPE



x2



x2



x1



Allow tape to cure for four hours before driving vehicle.




Clean Sunroof Deflector with a mild detergent and water solution.




Do not use abrasive cleaners.

1.

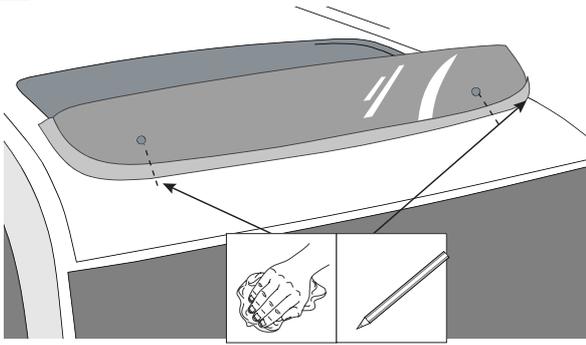


Open the sunroof and clean installation areas thoroughly. Trial fit Sunroof Deflector centrally on roof. Take note and mark the areas on Sunroof Deflector where rubber extrusion and metal clips are to be positioned. Remove Sunroof Deflector.

2.

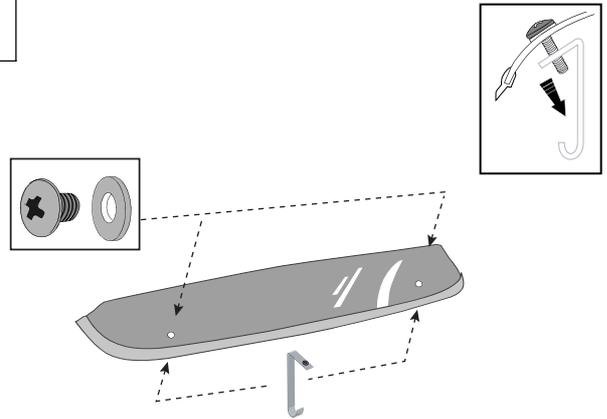


Loosely attach the clips to the Sunroof Deflector.

3.

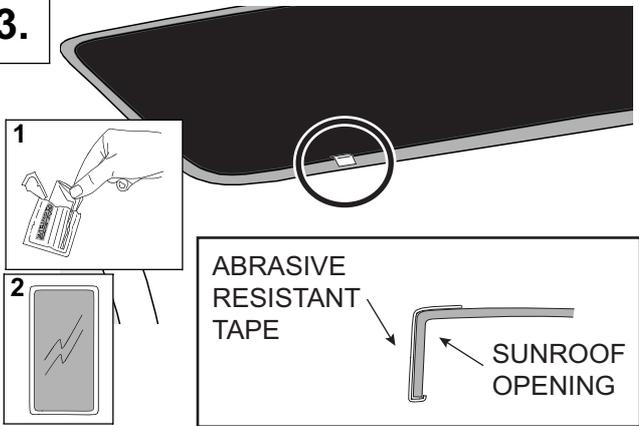


At the previously marked clip positions, clean the sunroof opening with alcohol wipe provided, remove any residue with a dry clean cloth. Adhere abrasive resistant tape at the contact areas of the inner flange area of the sunroof opening, as shown.

4.

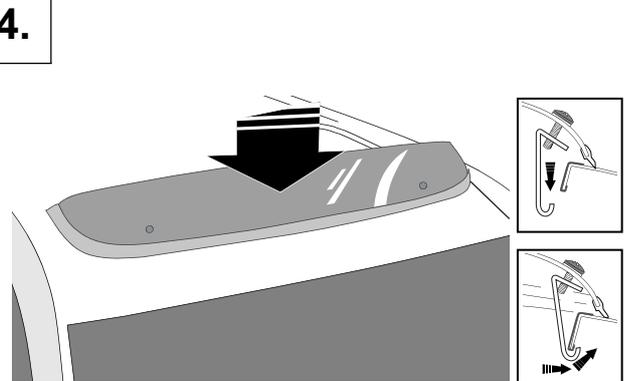


Re-fit the Sunroof Deflector centrally on the roof. Position clips at front of the sunroof opening. Depress the corners of the Sunroof Deflector to hook the clips under the inside edge of the opening.

5.

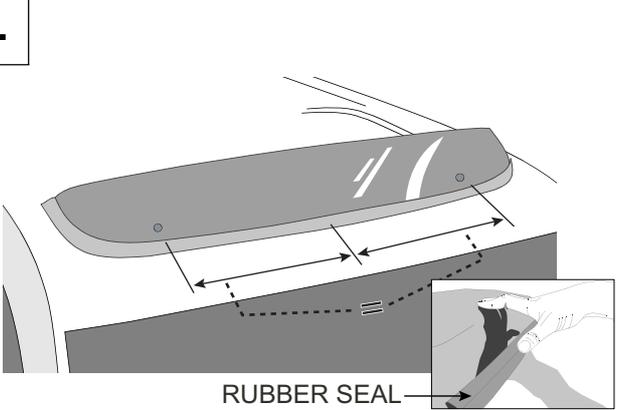

Before tightening, make sure the Sunroof Deflector is centered on the roof and that the clips are seated correctly and over the abrasive resistant tape.

6.

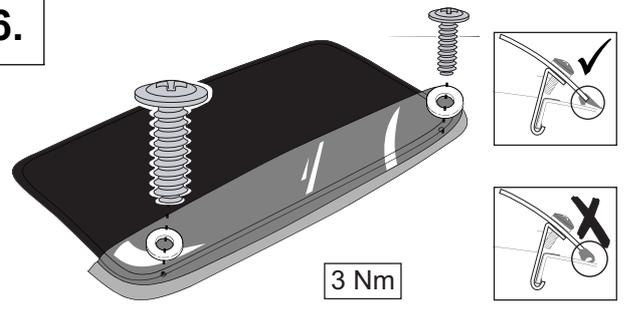

Ensure rubber seal is spread out flat against the roof and does not curl under at any point. Tighten the screws, alternating between sides, until the clips seat against the Deflector. **DO NOT OVER TIGHTEN!**  
**TO REMOVE:** Reverse above procedure. Check tension of part periodically, and tighten screws if required.




GENUINE ACCESSORIES

# INSTRUCTIONS D'INSTALLATION LANCER 2008 -

## Défecteur pour toit ouvrant



NUMÉRO DE PIÈCE: MZ313957

### APPLICATION

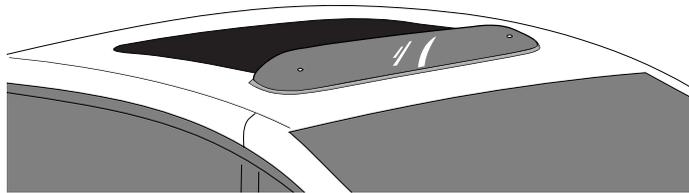


LANCER

### OUTILS REQUIS

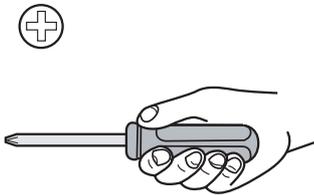


NON-PERMANENT  
SOFT MARKER

### Liste de Matériel

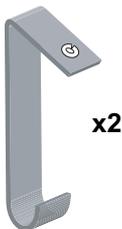

RUBAN  
ABRASIF  
ROBUST




Allow tape to cure for four  
hours before driving vehicle.



Clean Sunroof Deflector with a mild  
detergent and water solution.




Do not use abrasive cleaners.

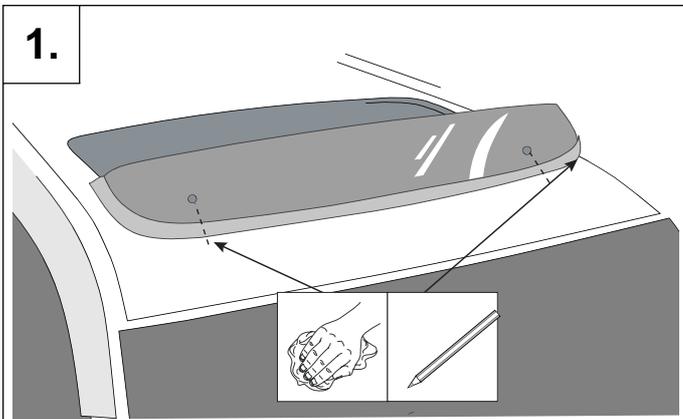


1.

Ouvrez le toit ouvrant et nettoyez soigneusement les zones d'installation. Ajustez temporairement le déflecteur de toit ouvrant au centre du toit. Prenez note de et marquez les zones du déflecteur de toit ouvrant où les extrusions de caoutchouc et les attaches en métaux doivent être situés. Retirez le déflecteur de toit ouvrant.

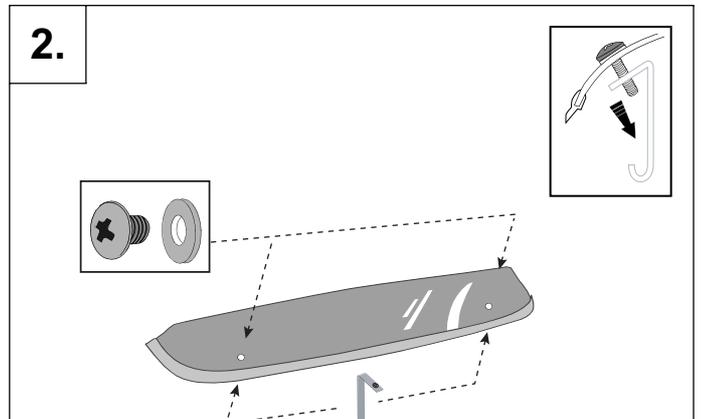


2.

Attachez lâchement les attaches au déflecteur de toit ouvrant.

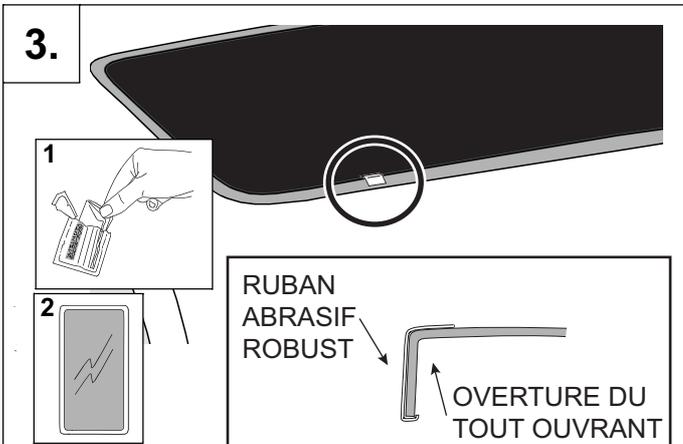


3.

Aux positions des attaches préalablement marquées, nettoyez l'ouverture du toit ouvrant avec le linge imbibé d'alcool fourni et retirez tout résidu avec un chiffon propre et sec. Faites adhérer le ruban abrasif robuste aux points de contacts de l'emplacement de la collerette intérieure du toit ouvrant.

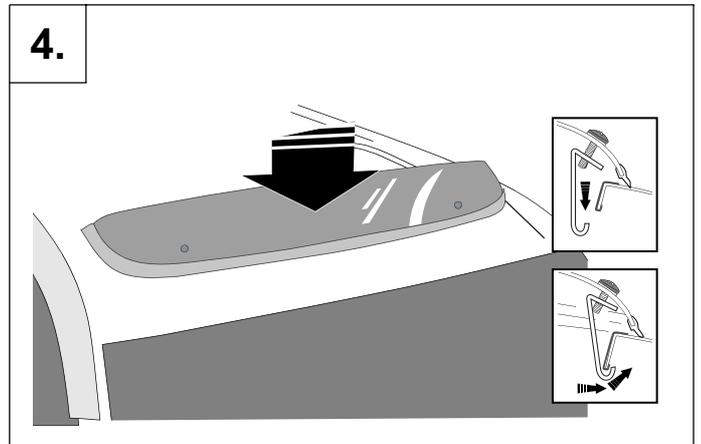


4.

Remplacez le déflecteur de toit ouvrant au centre du toit. Placez les attaches à l'avant de l'ouverture du toit ouvrant. Abaissez les coins du déflecteur de toit ouvrant pour pouvoir accrocher les attaches sous le bord intérieur de l'ouverture.

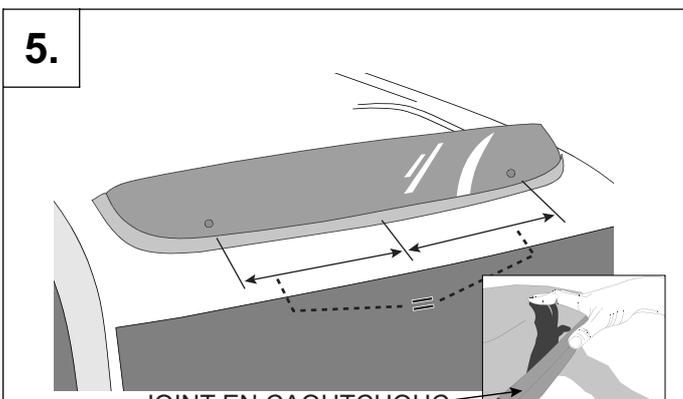

5.

Avant de serrer, assurez-vous que le déflecteur de toit ouvrant soit centré sur le toit et que les attaches reposent correctement au-dessus du ruban adhésif robuste.

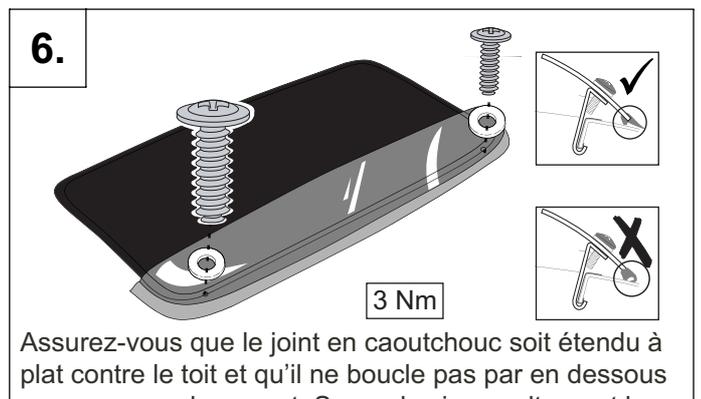

6.

Assurez-vous que le joint en caoutchouc soit étendu à plat contre le toit et qu'il ne boucle pas par en dessous en aucun emplacement. Serrez la vis, en alternant les côtés, jusqu'à ce que les attaches reposent contre le déflecteur.

**NE SERREZ PAS À L'EXCÈS!**

**POUR ENLEVER : Renversez la procédure ci-dessus. Vérifiez la tension de la partie périodiquement, et serrez les vis s'il y a lieu.**