


LANCER EVOLUTION (2008–) SIDE SPOILER INSTALLATION AND HANDLING INSTRUCTIONS

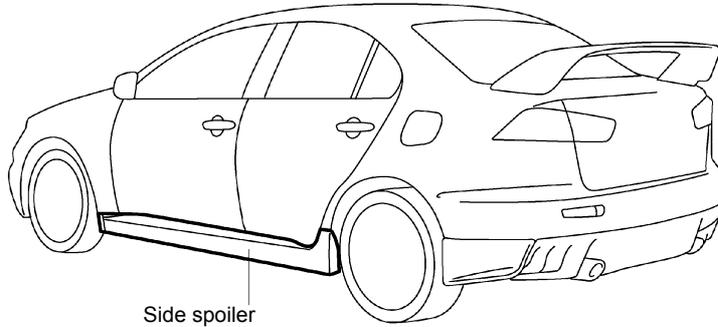

| Color Name | Color Code | Part No. |
|------------|------------|------------|
| Silver | A31 | MZ380433EX |
| Blue | D06 | MZ380434EX |
| Black | U02 | MZ380435EX |
| Red | P26 | MZ380436EX |
| Gray | A39 | MZ380437EX |
| White | W37 | MZ380438EX |

Thank you for purchasing the Mitsubishi Genuine Accessory.
To install and use the product correctly with proper knowledge of it, read this publication carefully.
Keep this publication for reference when maintenance is required.

Attention

- This publication gives precautionary instructions in the boxes titled as follows.
Read through these instructions thoroughly.



Caution

Describes precautions that should be observed in order to prevent injury or damage to the vehicle or its components, which may occur if sufficient care is not taken.



Note

Provides additional information that facilitates installation work.

- Failure to follow these instructions not only prevents the product from working properly but may lead to trouble with the vehicle. Be sure to follow all instructions carefully.
- If there is anything unclear about the installation, handling and/or usage of the product, contact your Mitsubishi Motors dealer for clarification.
- Mitsubishi Motors Corporation is not responsible for any defects or difficulties caused by or resulting from the failure to follow given instructions.
- We recommend you to have the installation performed at an authorized Mitsubishi Motors dealer.

To the dealer:

Be sure that the customer receives this publication.

■ **TOOLS** (Make the following tools ready for use.)

Phillips screwdriver



Phillips stubby screwdriver






Socket wrench (10 mm)



Torque wrench



■ **COMPONENTS** (Make sure that all of the following components were included in the kit.)

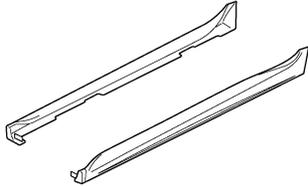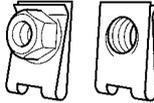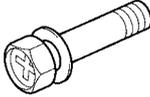
| | | |
|---|---|---|
| <p>① Side spoiler: 2 (right and left, 1 each)</p>  | <p>② Speed nut: 2</p>  | <p>③ Bolt (M6 × 6): 2</p>  |
| <p>④ Plain washer (M6 × 20): 2</p>  | <p>⑤ Caution label: 4</p>  | |

■ **PRECAUTIONS**

- Be sure to apply the parking brake securely. Remove the ignition key from the key cylinder.
- The drawings in the Installation Procedures depict the installation of the left side part. Install the other parts in the same manner.

INSTALLATION PROCEDURES

A. REMOVING THE SIDE AIRDAM

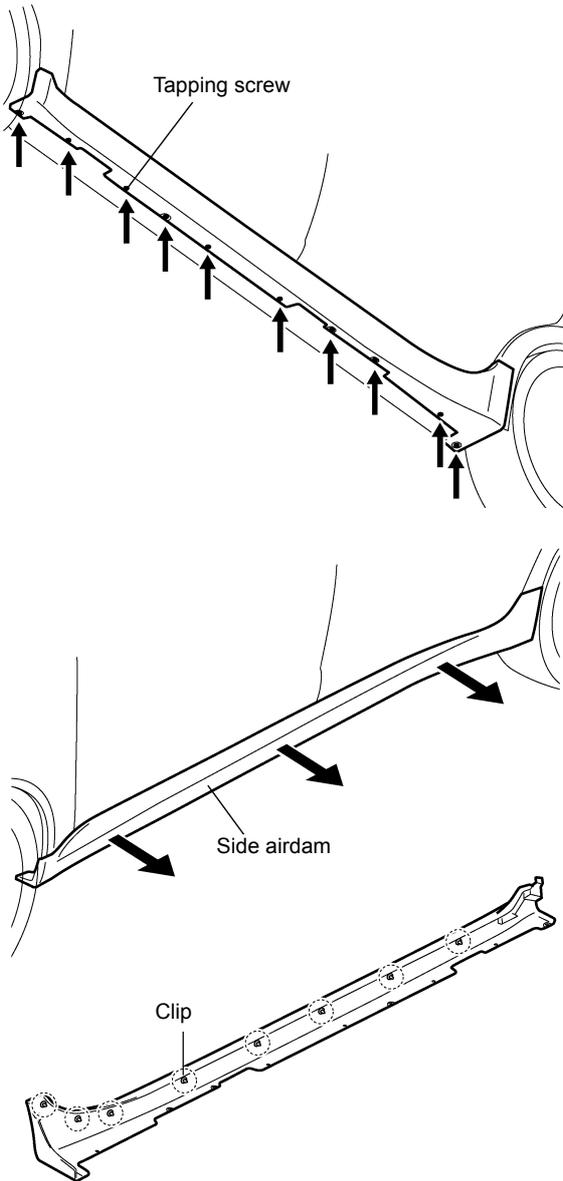

- 1) Remove the ten tapping screws at the bottom of the side airdam.

⚠ Caution

- Keep the removed tapping screws as they will be reused.

- 2) Remove the side airdam by pulling it outward.


⚠ Caution

- The side airdam is attached by adhesive tape below the doors. Be sure to remove all remnants of the adhesive tape from the body.

- 3) Remove the eight clips from the removed side airdam.

| | |
|-------|--|
| Check | |
|-------|--|


B. INSTALLING THE CLIPS TO THE SIDE SPOILER

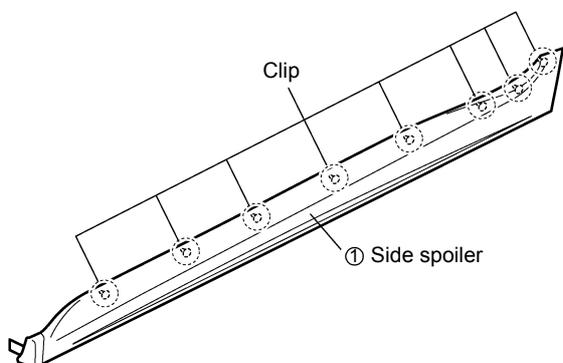

- 1) Install the eight clips removed from the side airdam to the side spoiler ①.

| | |
|-------|--|
| Check | |
|-------|--|


C. INSTALLING THE SPEED NUT

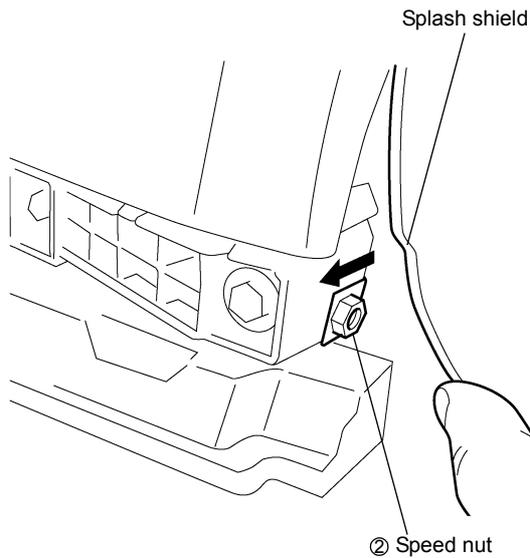

- 1) Raise the end of the splash shield at the front wheel housing as shown in the drawing.
- 2) Slip the speed nut ② into position from the direction shown in the drawing.

| | |
|-------|--|
| Check | |
|-------|--|


D. INSTALLING THE SIDE SPOILER

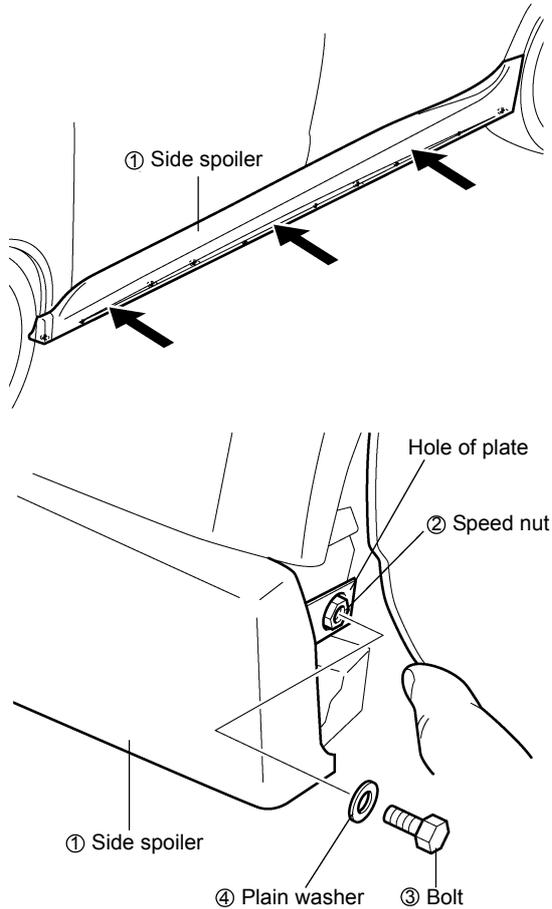


- 1) Make sure that the eight clips are installed in the correct positions. Then install the side spoiler ① to the vehicle.
- 2) If the molding around the side spoiler ① is caught inside the spoiler, correct it and seat it in position.
- 3) Set the plate of the side spoiler ① to place the speed nut ② mounted in C-2) into its hole.
- 4) Install the bolt ③ and plain washer ④ to the speed nut ② and tighten the bolt to the specified torque.

| |
|----------------------------------|
| Tightening torque: 5.0 ± 1.0 N·m |
|----------------------------------|

- 5) Restore the splash shield in position.

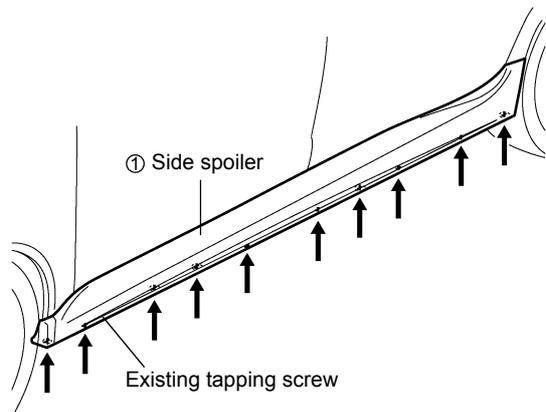


Front door

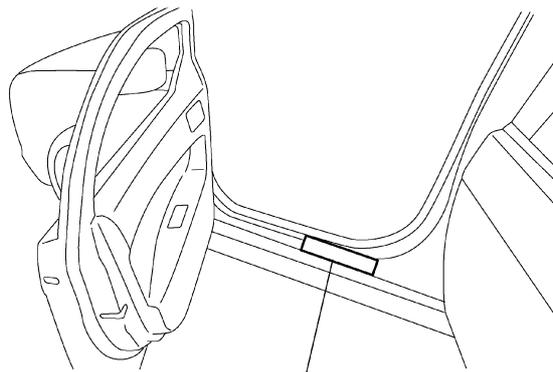

⑤ Caution label

Rear door

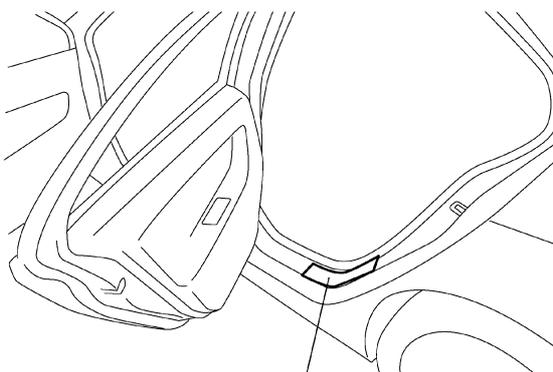

⑤ Caution label

- 6) Install the ten existing tapping screws to the bottom of the side spoiler ① and tighten them to the specified torque.

| |
|---|
| Tightening torque: $5.0 \pm 1.0 \text{ N}\cdot\text{m}$ |
|---|

- 7) Attach the caution labels ⑤ at the positions shown in the drawing: the positions where the labels are easily visible when getting in/out of the vehicle.

| | |
|-------|--------------------------|
| Check | <input type="checkbox"/> |
|-------|--------------------------|

E. CHECKING AFTER INSTALLATION

- Check the installation condition of the product.
- Check that there is no looseness on the side spoiler ①.
- Check that all the fasteners are fastened firmly.

| | |
|-------|--------------------------|
| Check | <input type="checkbox"/> |
|-------|--------------------------|