



# GENUINE PARTS

## INSTALLATION INSTRUCTIONS

**DESCRIPTION:** Rear Bumper Protector - Clear

**APPLICATION:** Altima


**PART NUMBER:** 999T6 U4000

**KIT CONTENTS:**


| ITEM | QTY | Part Description                              |
|------|-----|---|
| A    | 1   | Clear Rear Bumper Film                        |
| B    | 2   | Plastic Squeegee                              |
| C    | 3   | Squeegee Sleeve                               |
| D    | 4   | Installation Instruction Replacement Template |



A



B



C

**STOP Important: Read Before Installation**

**WARNING**

Do not use this product if you are allergic to any of the components listed on the label. Do not use this product if you are allergic to any of the components listed on the label. Do not use this product if you are allergic to any of the components listed on the label.

**CAUTIONS: EXTREMELY FLAMMABLE PRECAUTIONS:** Keep away from heat, sparks, open flames, and other sources of ignition. Do not use near fire, flames, or hot surfaces. Do not use in the vicinity of welding, brazing, or other hot work. Do not use in the vicinity of electrical equipment. Do not use in the vicinity of electrical equipment. Do not use in the vicinity of electrical equipment.

**WARNING: EXTREMELY FLAMMABLE PRECAUTIONS:** Keep away from heat, sparks, open flames, and other sources of ignition. Do not use near fire, flames, or hot surfaces. Do not use in the vicinity of welding, brazing, or other hot work. Do not use in the vicinity of electrical equipment. Do not use in the vicinity of electrical equipment. Do not use in the vicinity of electrical equipment.

D

**TOOLS REQUIRED:**

- 90% Isopropyl Alcohol
- Joy Dish Soap
- 32 Ounce Spray Bottle
- Water
- Soft Lint Free Microfiber Cloth
- 3M Air Release Tool


**PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:**

- Dealer Installation Recommended.
- **Application Solution:** Fill a 32 spray bottle with 25% isopropyl alcohol, 75% water, and add 5-7 drops of dish soap.
- Install in a non-dusty environment.
- Thoroughly wash vehicle with soap and water.
- Use tabs when handling film so no finger prints are left on adhesive.


**CAUTION**

- Install rear bumper protector only when part & vehicle temperatures are between 60°F - 110°F (60°C - 42°C).
- Do not wash or expose vehicle to a wet environment for 24 hours after installing rear bumper protector.


## INSTALLATION PROCEDURE:

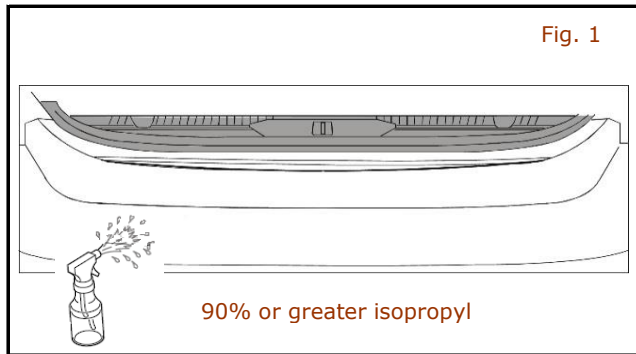

- 1) Using a clean lint free microfiber cloth clean surface of rear bumper with 90% or greater isopropyl alcohol. Allow area to dry completely.

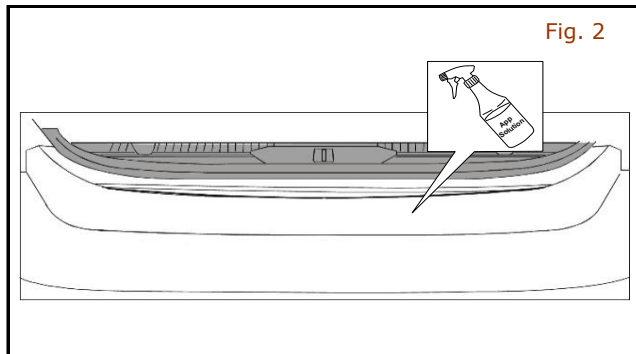


- 2) Spray bumper surface with application solution.

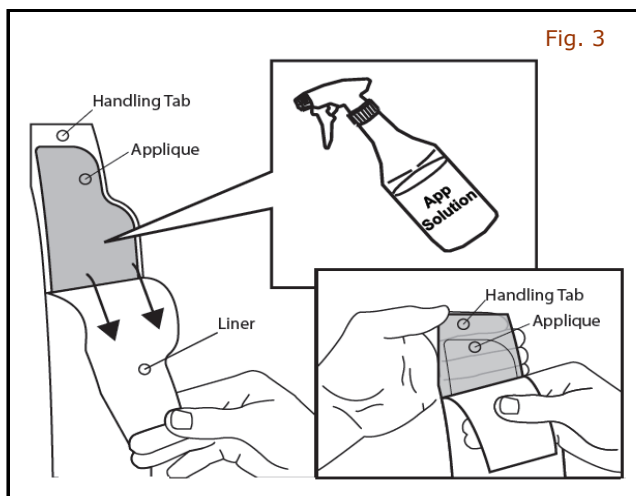


- 3) Hold part by handling tab and remove part liner.
- 4) Spray adhesive side with an even mist with application solution.

**INSTALLATION PROCEDURE:** (continued)

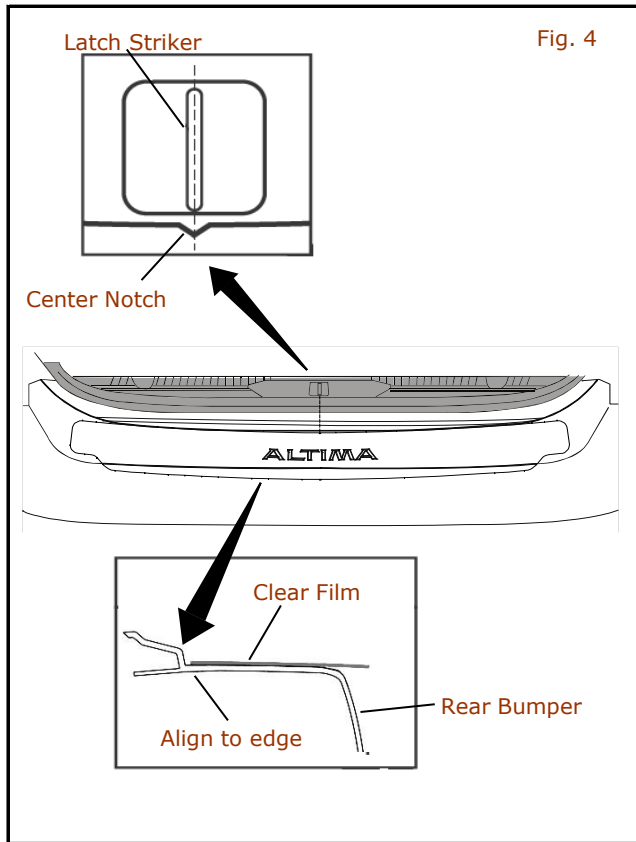


- 5) Align applique into position with notch to latch striker and film edge against bumper edge.

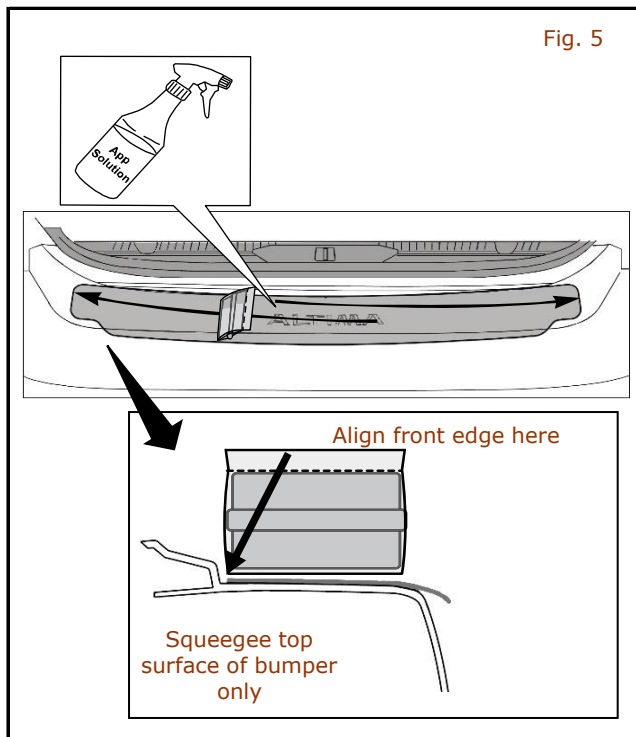

- 6) Spray top surface of premask with even mist of application solution.
  - 7) Begin squeegee while lightly touching premask surface on top surface only.
- NOTE:**  
**Always use squeegee with plastic sleeve as shown.**
- 8) As you drag squeegee apply firm pressure. This will aid in not leaving impression in part.
  - 9) Firmly squeegee the applique down ONLY adhering on the top surface of the bumper.


**INSTALLATION PROCEDURE:** (continued)

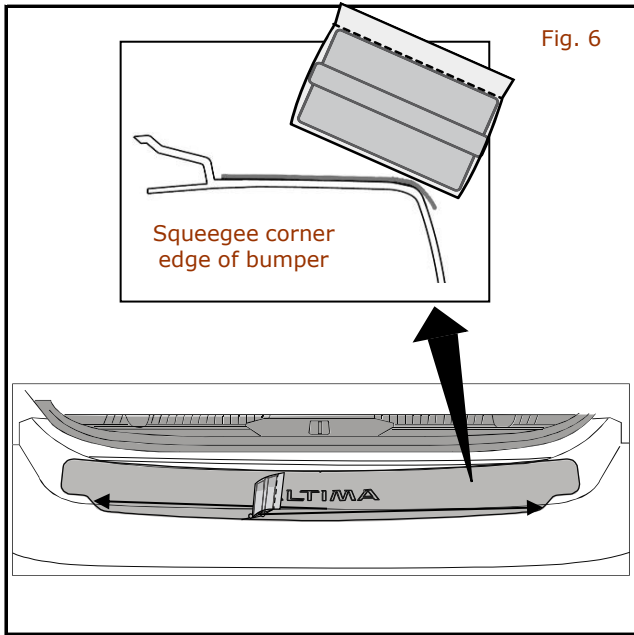

- 10) Firmly squeegee corner edge of bumper with three or four back and forth strokes in direction shown.

**NOTE:**

**Make sure no bubbles are present before going to next step. Do not wrap edge at this time.**

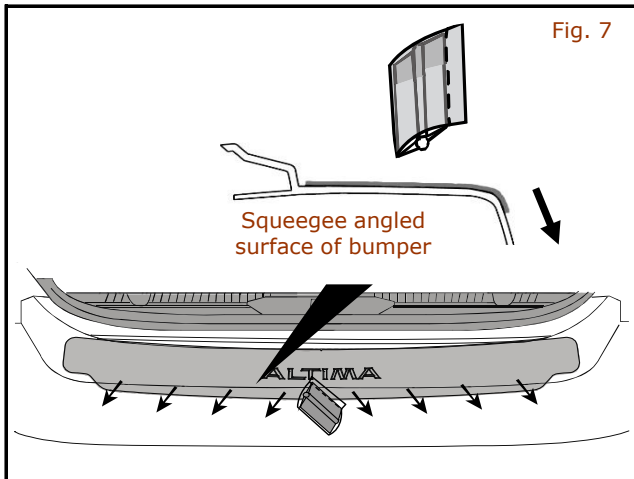


- 11) Adhere angled surface by holding squeegee at 45° angle and firmly squeegee from top down to get edge to stick.

- 12) Make sure all air and water is removed from under applique. Re-squeegee any edges that may have lifted.

- 13) A 50/50 alcohol & water solution can be sprayed under the edges if not adhering.

**NOTE:**

**Do not spray 90% isopropyl alcohol. It will damage the adhesive of the clear bumper protector**

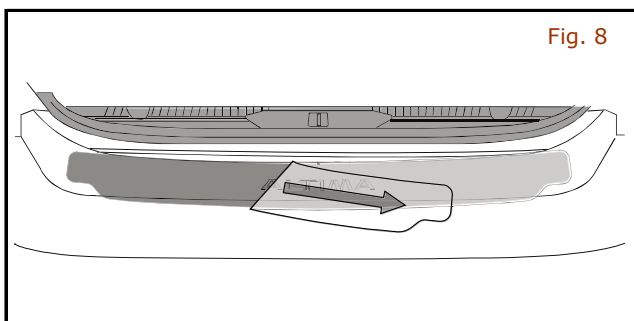


- 14) Remove premask top protective covering CAREFULLY 180° against itself.

- 15) Re-squeegee any edges that may have lifted.

**NOTE:**

**Inspect for bubbles. If a bubble with application solution is located, re-squeegee using a firm, fast stroke. If the bubble persists, use an "air release tool" to puncture the base of the bubble.**

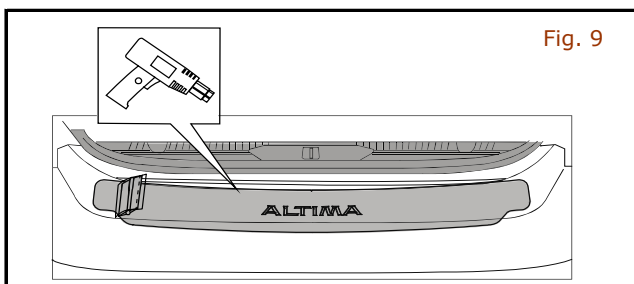

- 16) Use heat gun to secure edges if necessary.

- 17) Do not expose vehicle to moisture for 24 hours.