



GENUINE PARTS

INSTALLATION INSTRUCTIONS

1. DESCRIPTION: Hood Protector

2. APPLICATION: 2005 Nissan Pathfinder, Frontier

3. PART NUMBER: 999D5-XR000

4. KIT CONTENTS:

<u>Item No.</u>	<u>Qty</u>	<u>Description</u>
1)	1	Hood Protector
2)	6	Screw Plugs
3)	6	Self Tapping Screws
4)	6	Fiber Washers

5. TOOLS REQUIRED:

- Clean Rag
- #2 Phillips Screwdriver
- Non Permanent Pen or Pencil

6. INSTALLATION PRECAUTIONS / NOTES:

- 1) Clean with mild soap and water using a soft cloth or chamois.
- 2) Never use ammonia based cleaners or solvents.
- 3) Before securing the Hood Protector, ensure that the part is centralized with hood.
- 4) Do not over tighten screws.

INSTALLATION INSTRUCTIONS - HOOD PROTECTOR KIT

7. INSTALLATION PROCEDURE

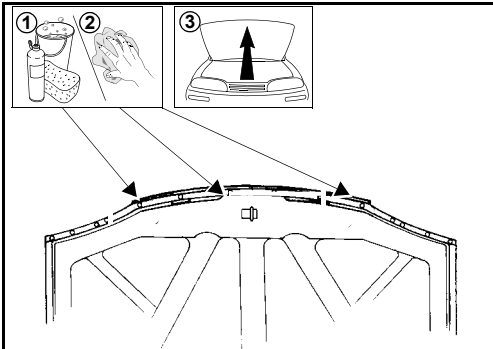


Figure 1. Cleaning hood areas

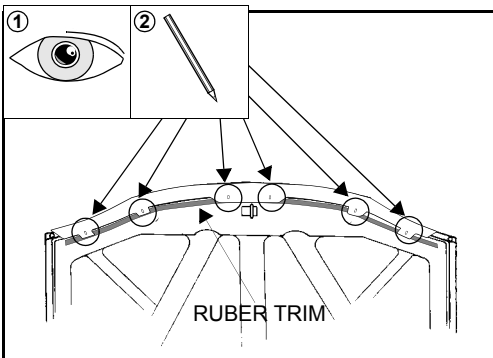


Figure 2.

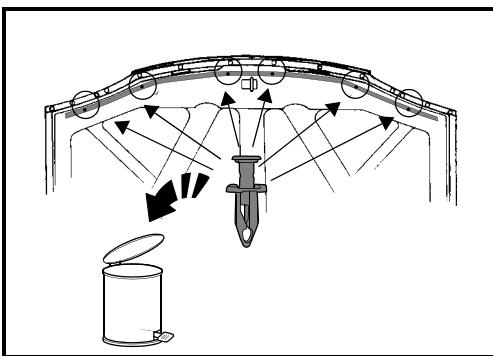


Figure 3. Remove rubber trim retaining plugs

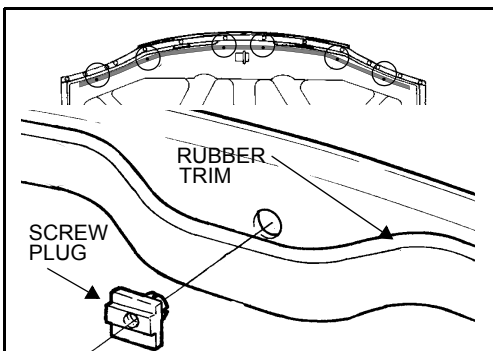


Figure 4.

1. Thoroughly clean the front of the hood and raise the hood.

2. Trial fit Hood Protector centrally onto hood. Note the slots in the Hood Protector tags that correspond to the rubber trim retaining plugs in the underside of hood, as shown in figure 2. Remove the Hood Protector.

3. Remove and discard the rubber trim retaining plugs, as per figure 3.

4. Insert the screw plugs provided in the previously removed rubber trim retaining plug holes. Ensure screw plugs are underneath the rubber trim. See figure 4.

INSTALLATION INSTRUCTIONS - HOOD PROTECTOR KIT

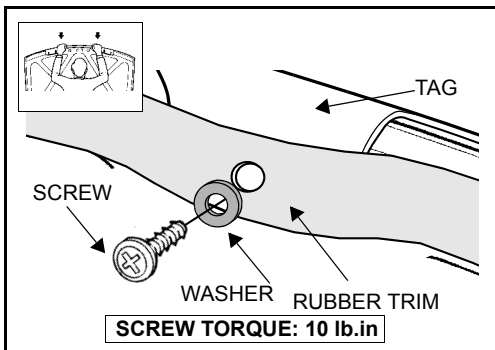


Figure 5.

5. Re-install Hood Protector onto hood ensuring that the Hood Protector tags fit beneath the rubber trim. Ensure that the boss heads of screw plugs locate into the slots in the Hood Protector tags. Secure Hood Protector to hood using the screws and washers provided.


Important

When tightening the screws, apply pressure to each tag section to prevent the tag lifting off from the screw plugs. The screw plug will spin if pressure is not applied.


The correct sequence is screw plug, Hood Protector, rubber trim, washer and screw.

See figure 5.

NOTE: DO NOT OVER-TORQUE SCREWS.

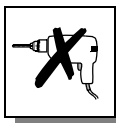


Do not use power tools to install this product. The use of power tools during installation may void the product warranty.

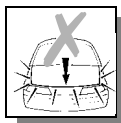

Do not slam hood.



Clean Hood Protector with a mild detergent and water solution.

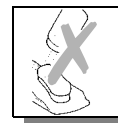

Do not use abrasive cleaners.