



# INSTALLATION INSTRUCTIONS






**1) DESCRIPTION:** TRAILER BALL MOUNT

**2) APPLICATION:** SEE CHART BELOW

**3) PART NUMBER:**

VEHICLE APPLICATION	PART NUMBER	WEIGHT CAPACITY
PATHFINDER (2005-2012) TITAN (2004-LATER) NV FULL SIZE (2012-LATER)	999T5-XY100	5,000 LBS MAX.
JX & PATHFINDER (2013-LATER) FRONTIER (2005-LATER)	999T5-BY100	5,000 LBS MAX.
XTERRA (2005-LATER)	999T5-KY100	5,000 LBS MAX.

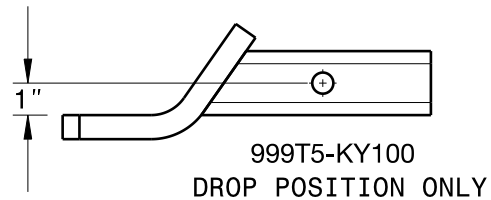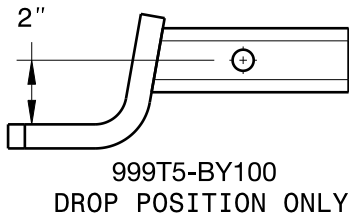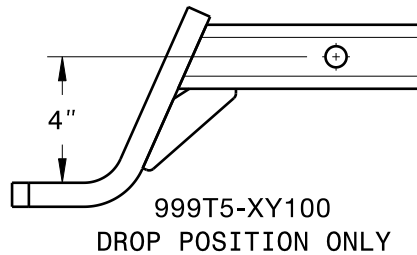

**4) KIT CONTENTS:**

QTY	DESCRIPTION	QTY	DESCRIPTION
1	BALL MOUNT	1	SAFETY PIN
1	RECEIVER HITCH PIN	1	BALL MOUNT BUSHING/WASHER KIT (999T5-BY100 & 999T5-KY100 KITS ONLY)

**5) TOOLS REQUIRED:** NONE

**6) INSTALLATION PRECAUTIONS / NOTES:**  
CAUTION: VEHICLE TOWING CAPACITY MAY DIFFER FROM BALL MOUNT RATING. SEE OWNER'S MANUAL FOR VEHICLE TOWING CAPACITY. REMOVE BALL MOUNT FROM RECEIVER WHEN NOT TOWING.

**7) BALL MOUNT INSTALLATION**

RECEIVER PIN  
SAFETY PIN

INSTALL BALL MOUNT INTO RECEIVER & ATTACH USING RECEIVER PIN & SAFETY PIN. SEE THE ILLUSTRATIONS FOR PROPER INSTALLATION & ORIENTATION OF BALL MOUNT PER EACH VEHICLE APPLICATION.