




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Interior Appliqué
APPLICATION:	Nissan Leaf
PART NUMBER:	999G3 8Z000

KIT CONTENTS:

Item	Qty.	Part Description
A	1	Center Console Appliqué
B	2	Alcohol wipe
C	1	Installation Instruction Replacement Template

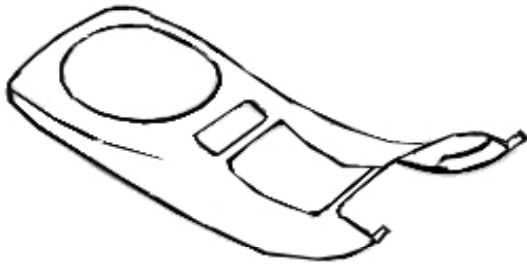

A



B



C

TOOLS REQUIRED:

- None


PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended. Instructions may refer to Service Manual.
- Read the installation sheet and check the entire kit for possible damage or defects before performing any work.
- Dry fit all parts to become familiar with proper placement.


CAUTION

- Do not touch the tape side with your fingers to avoid contaminating the tape and reducing adhesion strength.
- These parts are to be installed when the ambient temperature is between 60°F - 80°F.
- Do not wash or expose the vehicle to a wet environment for 24 hours after installing the Center Console Appliqué.
- The tape will set in 15-20 seconds after adhesion starts.
- Do not reposition the appliqué once the tape has started to set.


INSTALLATION PROCEDURE:

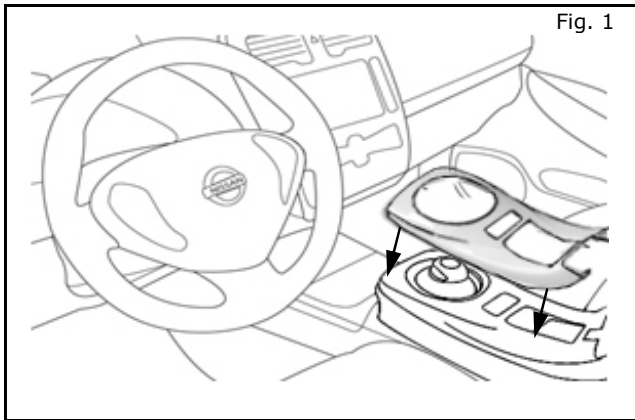


- 1) Open center console arm rest and dry fit appliqué to ensure proper fit and location before removing tape liners.

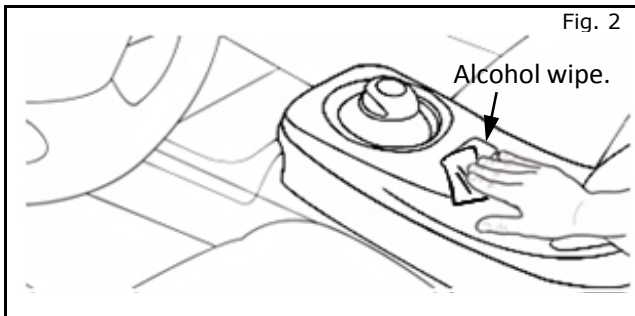

- 2) Clean all areas of center console that will be covered by the appliqué using alcohol wipe.

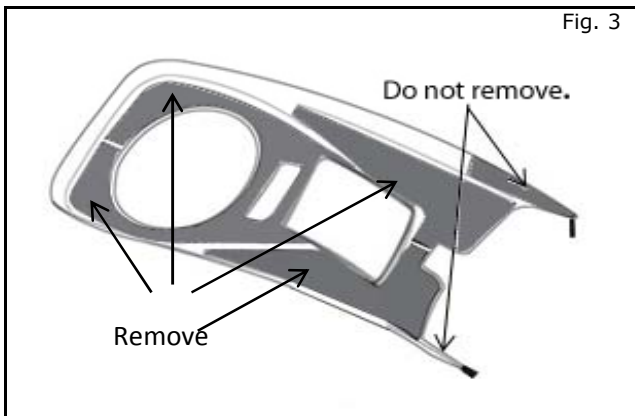


- 3) Remove ONLY inner 4 tape liners (on flat horizontal surface). DO NOT remove side wall 2 tape liners (on vertical surface) at this point.

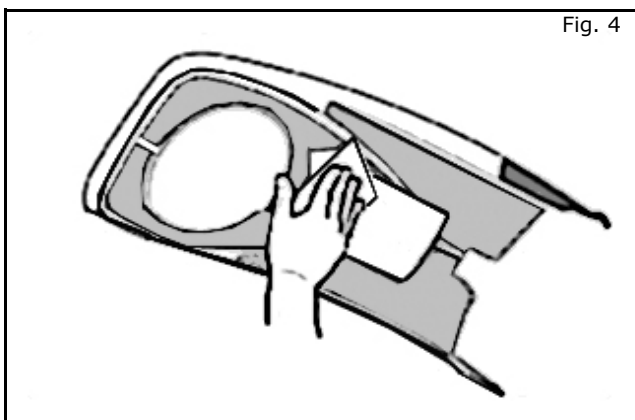


- 4) Using a new alcohol pad, wipe exposed tapes to allow some adjustments if necessary.


INSTALLATION PROCEDURE:

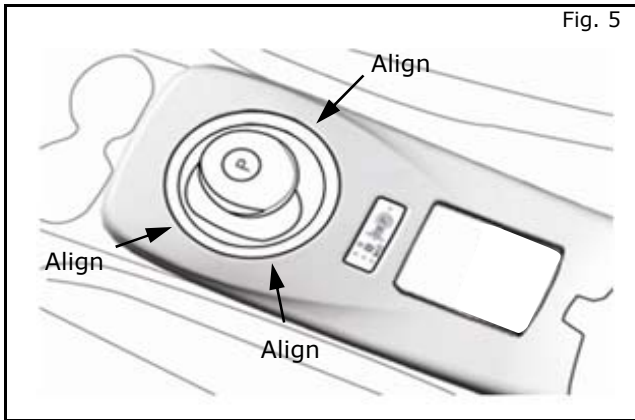

- 5) Carefully and lightly place appliqué in position by dropping it straight down without bending, and align circular area of appliqué with center console immediately, before alcohol on exposed tapes dries.

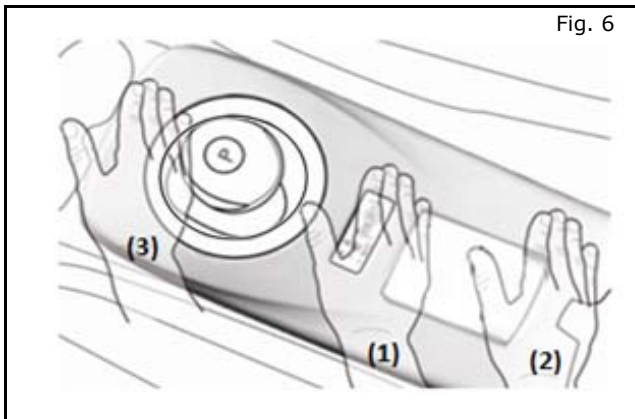

- 6) Once appliqué is adjusted to correct position, apply firm pressure for at least 30 seconds starting from the middle of the part (1) to ensure adhesion. Repeat the process at position (2) then (3).

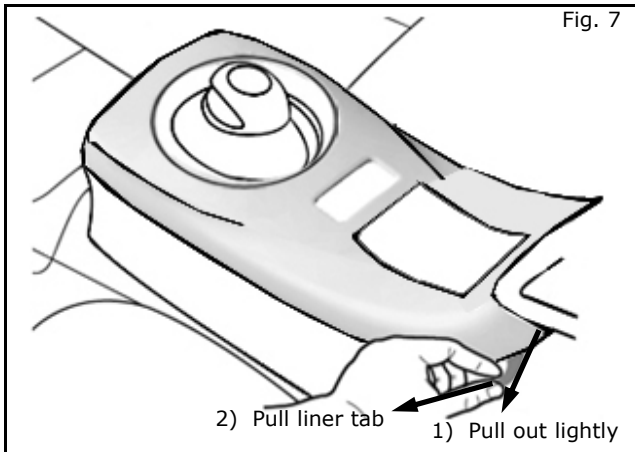

- 7) Lightly pull out on rear corner of appliqué and pull liner tab to remove tape liner along each side walls.
- 8) Apply firm and even pressure on side walls of appliqué to ensure adequate adhesion.