




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Retractable Tonneau Cover
APPLICATION:	Murano
PART NUMBER:	999N3 C3000 - Black 999N3 C3001 - Beige

KIT CONTENTS:

Item	Qty.	Part Description
A	1	Tonneau Cover Assy
B	1	Installation Instructions Replacement Template

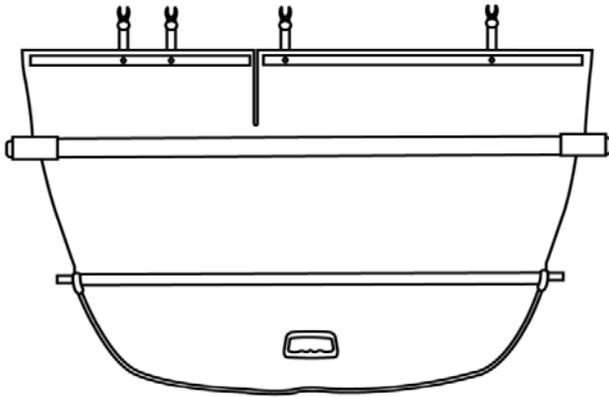

A



B

TOOLS REQUIRED:

- No tools required.

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Cover is not intended for objects to be placed on top.

WARNING


Your cargo cover is designed to cover normal cargo contents. Flammable or dangerous materials should not be transported in your vehicle at any time.

CAUTION

Cargo cover does not provide load restraint.


INSTALLATION PROCEDURE:

Fig. 1

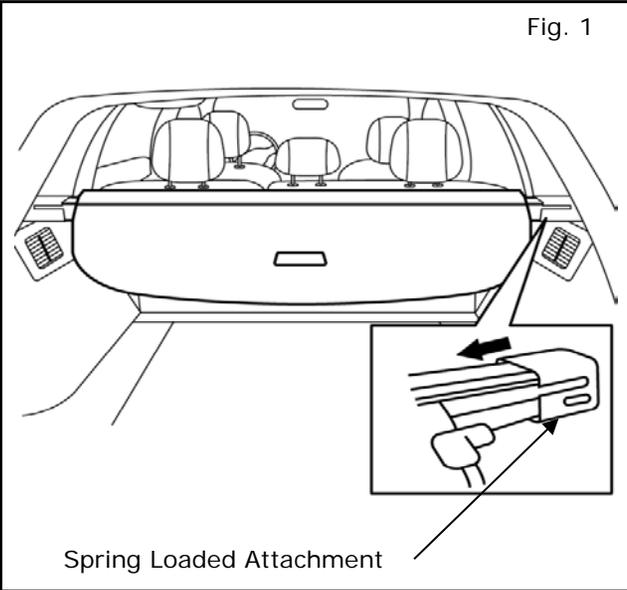


- 1) Insert cargo cover end into driver side rectangular sockets.
- 2) Pull spring loaded end on passenger side of cargo cover and insert into passenger side rectangular socket.

Fig. 2

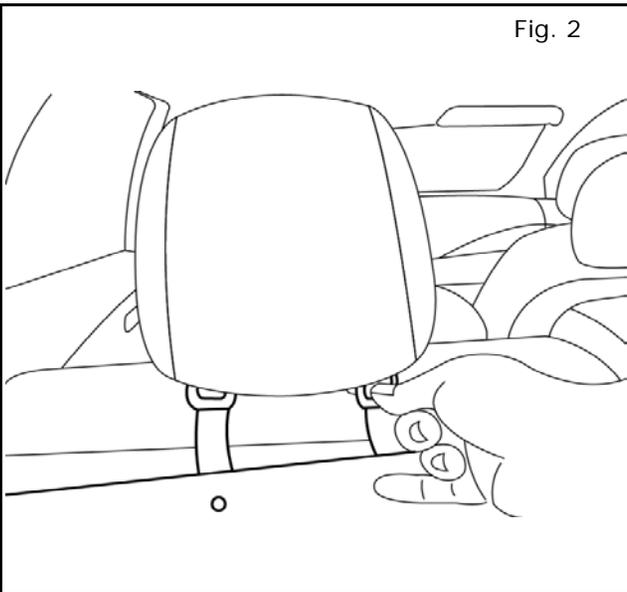


- 3) Attach clips to rear driver side seat head rest posts.

Fig. 3

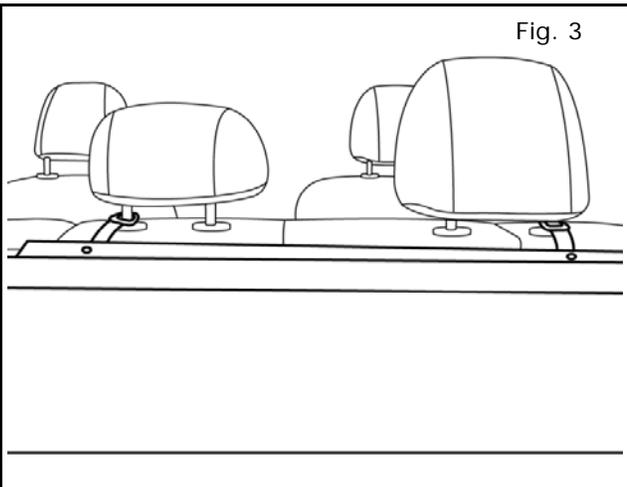

- 4) Attach clips to rear seat center and passenger head rest posts.

INSTALLATION PROCEDURE:

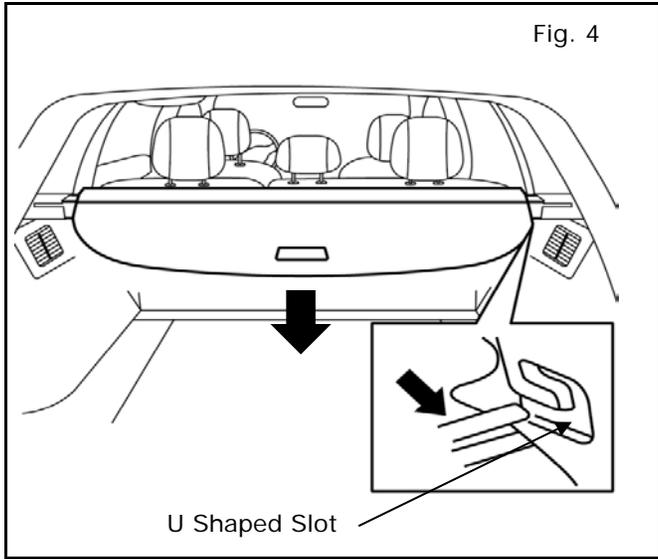

- 5) Pull retractable cargo cover rearward and up into both U shaped slots until it locks into place.