



GENUINE PARTS

INSTALLATION INSTRUCTIONS


DESCRIPTION: Carpeted Floor Mats (Rear mats)

APPLICATION: NV3500 Passenger Van

PART NUMBER: 999E2 HZ000

KIT CONTENTS:

| Item | Qty. | Part Description |
|------|------|---|
| A | 1 | 2nd row mat |
| B | 1 | 3rd row mat |
| C | 1 | 4th row mat |
| D | 1 | Installation Instruction Replacement Template |

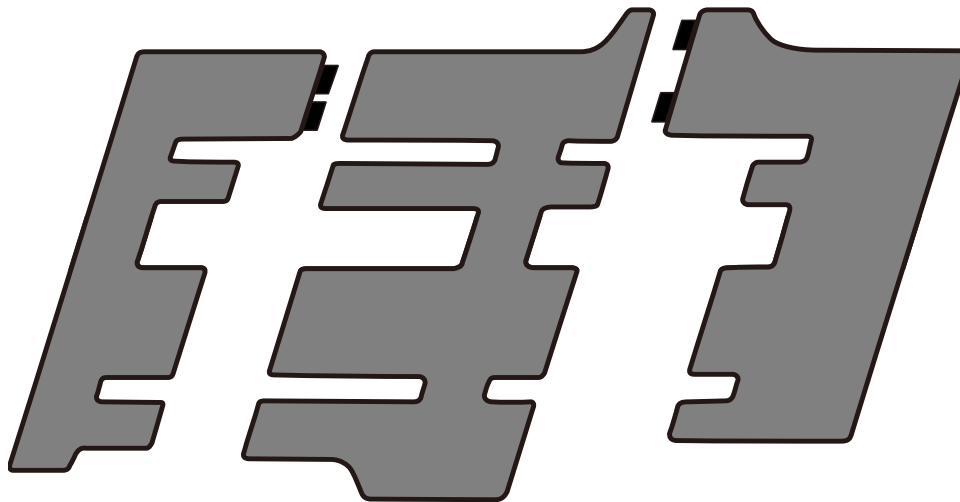

A

B

C

D

STOP! Important: Read Before Installation!

Dealer Installation Recommended.

WARNING

To avoid serious personal injury or property damage, obtain the Installation Instructions before attempting to install this accessory. The Installation Instructions provide the necessary procedures for a safe installation.

CUSTOMER INTERNET DOWNLOAD INSTRUCTIONS: Customers can obtain Installation Instructions for online or in-store services at www.infiniti-technique.com or www.Mitsubishi.com respectively. From the home page, click on "Online Publications" and select necessary instructions. Select your model and make year, then locate the instructions for your accessory.

DEALER ASSIST DOWNLOAD INSTRUCTIONS: Dealership technicians can locate the Installation Instructions for this accessory in ASSIST/INFO TOOLBOX. Always download and use latest version of the Installation Instructions.


TOOLS REQUIRED:

- No tools required


PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Keep this installation instruction sheet with Vehicle Owner's Manual for reference.


INSTALLATION PROCEDURE:

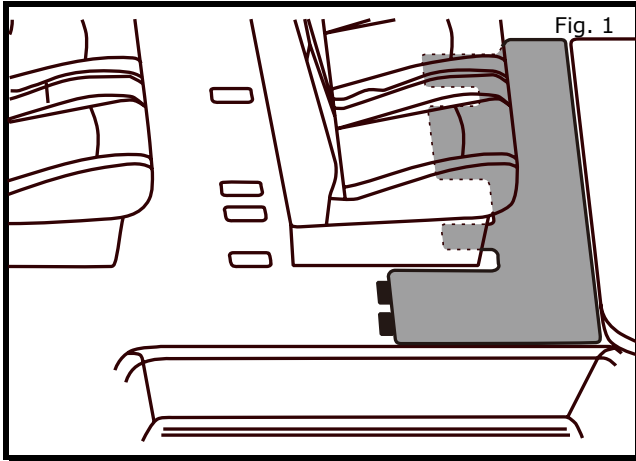

- 1) Install 2nd row mat into position. Adjust mat as necessary.

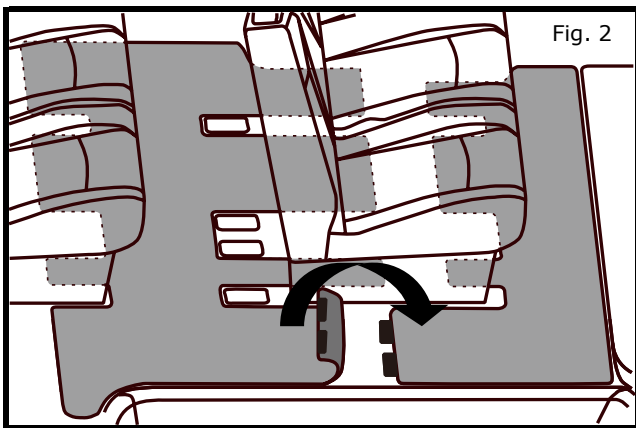

- 2) Install 3rd row mat into position. Adjust mat as necessary.
- 3) Join the 2 mats together using the hook & loop tabs making sure there is proper engagement.

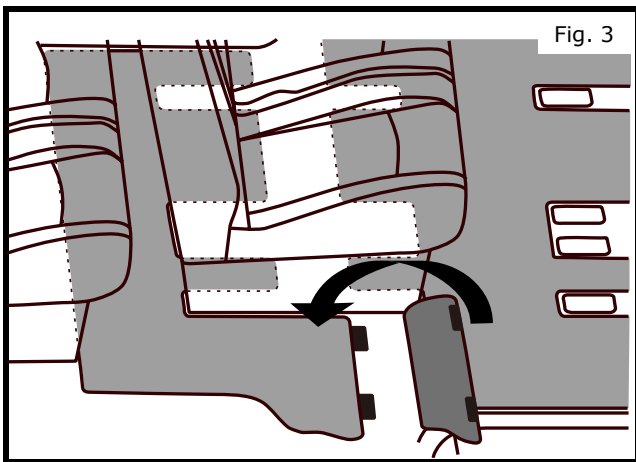

- 4) Install 4th row mat into position. Adjust mat as necessary.
- 5) Join the 2 mats together using the hook & loop tabs making sure there is proper engagement.