




GENUINE PARTS

INSTALLATION INSTRUCTIONS

| | |
|---------------------|---|
| DESCRIPTION: | Cargo Area Protector |
| APPLICATION: | Pathfinder |
| PART NUMBER: | 999C3 XZ100 (Black) 999C3 XZ101 (Beige) 999C3 X2002 (Chocolate) |

KIT CONTENTS:

| Item | Qty. | Part Description | Service Part Number |
|------|------|--|---------------------|
| A | 1 | Cargo Area Protector | 999C3 Xxxxx |
| B | 2 | Hook and Loop Adapter (comes attached to underside of protector) | Not Available |
| C | 2 | Hinge-Assy | 999C3 RZ100S1 |
| D | 1 | Installation Instruction Replacement Template | 999V2 AW000 |

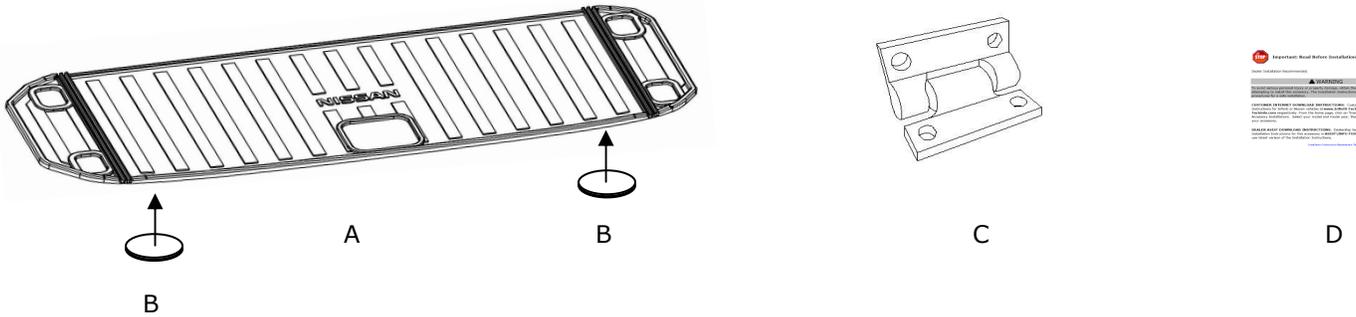

TOOLS REQUIRED:

- #3 Phillips Screw Driver
- 4mm (5/32") Allen Head Socket Driver

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:


- Dealer Installation Recommended. Instructions may refer to Service Manual.

Note: Protector is equipped with very aggressive hook fasteners on underside. Do not place protector in the cargo area without due care. Hook fastener will affix itself to ANY carpet surface. Use care when placing into vehicle.


⚠ WARNING

Protector is designed to transport normal cargo contents. Flammable or dangerous materials should not be transported in your vehicle at any time.


INSTALLATION PROCEDURE:

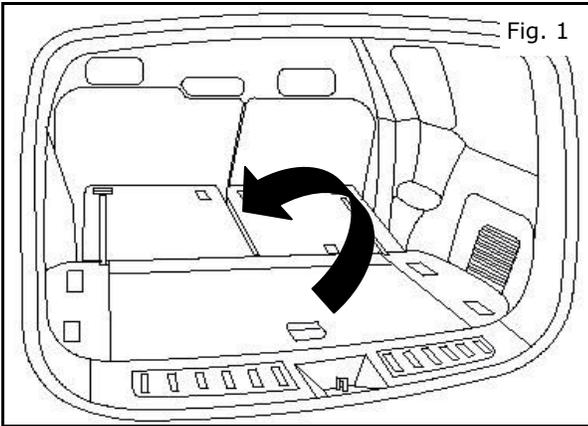

- 1) Fold down headrests and 3rd row seats.

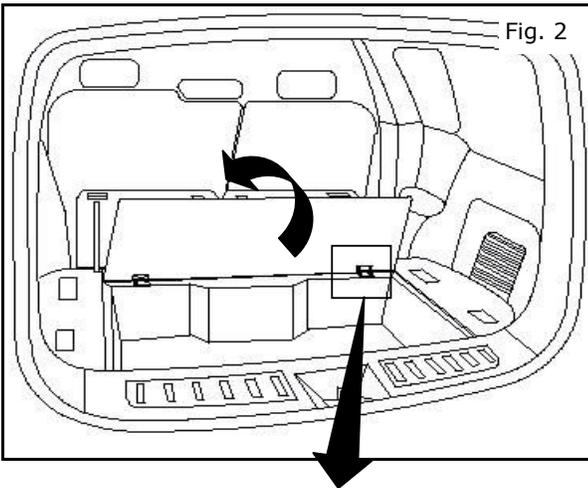


- 2) Lift up cargo bin lid to upright position.

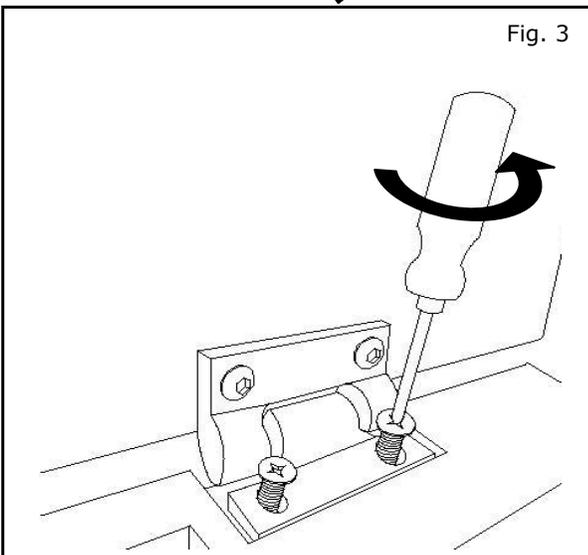


- 3) Loosen and remove (2) passenger side hinge screws with phillips screw driver. Keep screws for later use.
- 4) Repeat for driver side.

INSTALLATION PROCEDURE:

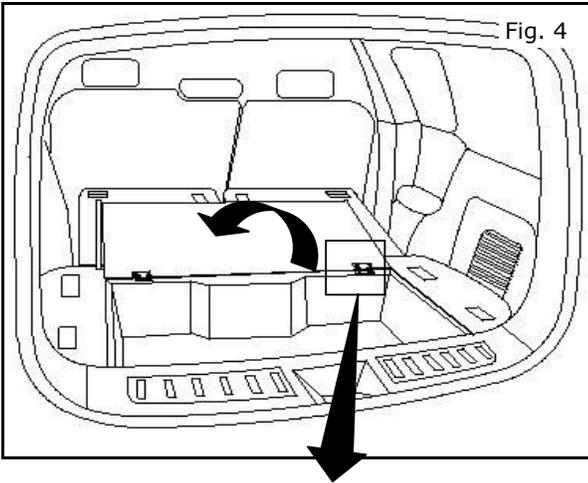




5) Lay cargo bin lid on back of 3rd row seats.

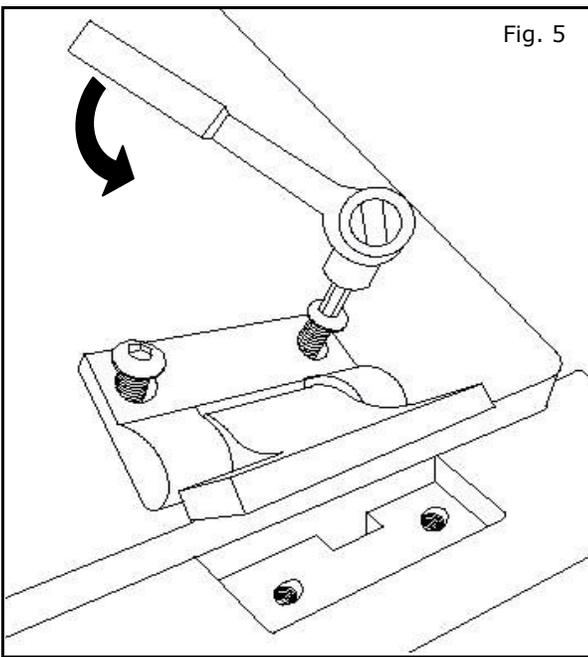

6) Loosen and remove (2) passenger side hinge screws with 4mm allen head socket driver. Keep screws for later use. Discard hinge.


7) Repeat for driver side.

INSTALLATION PROCEDURE:

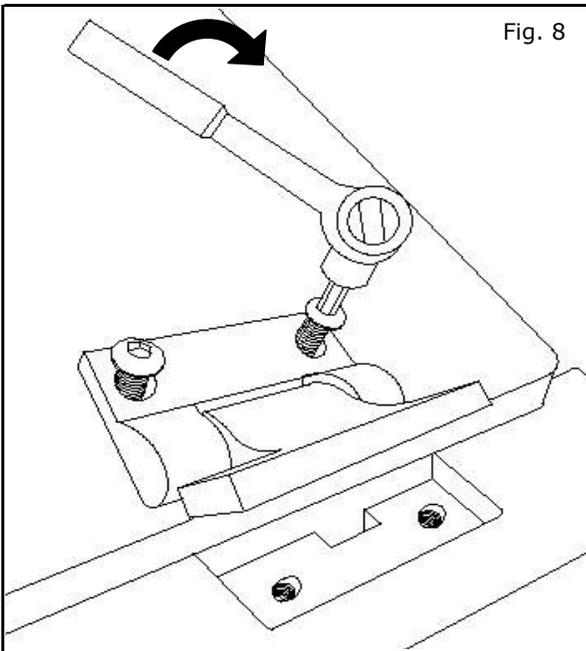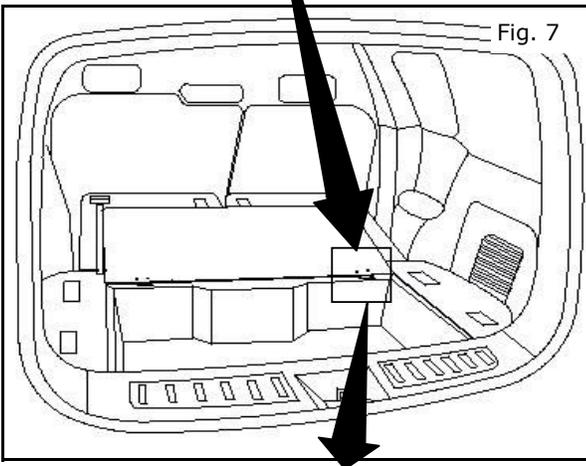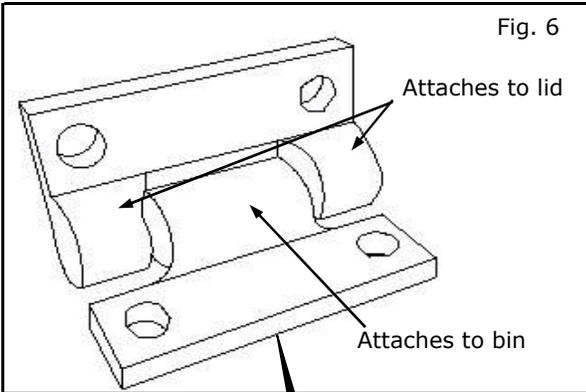


- 8) Remove new molded hinge assembly from packaging and orient hinge as shown in Fig. 6.
- 9) Align passenger side molded hinge assembly with holes on bottom of cargo bin lid.
- 10) Tighten (2) hinge screws with 4mm allen head socket driver to 1.5~2.0 Nm [1.1~1.5 lb-ft].
- 11) Repeat for driver side.


INSTALLATION PROCEDURE:

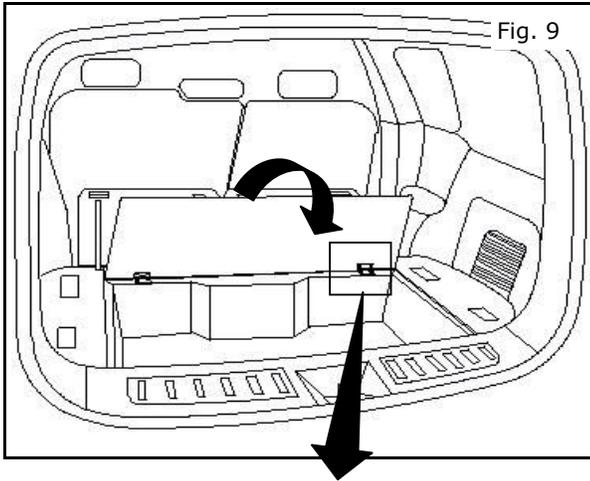

- 12) Place cargo bin lid in upright position, aligning lower hinge holes with vehicle holes.

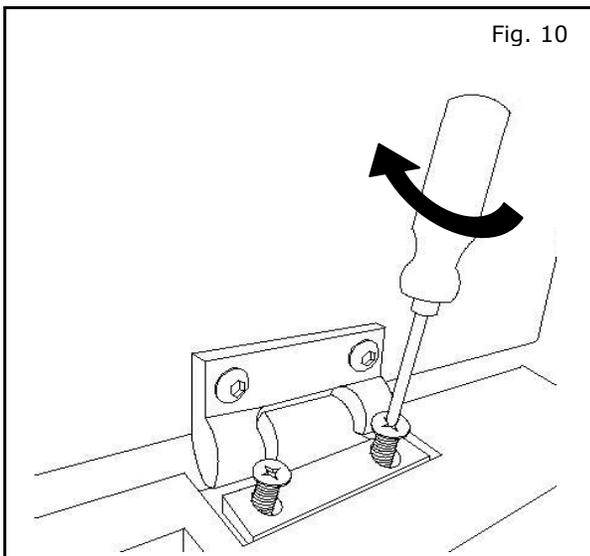


- 13) Tighten (2) passenger side hinge screws with phillips screw driver to 1.5~2.0 Nm [1.1~1.5 lb-ft].
- 14) Repeat for driver side.

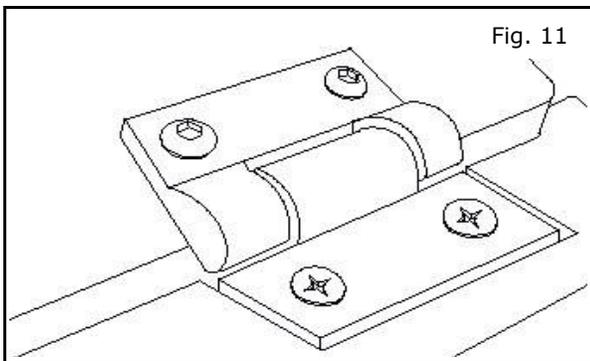


- 15) Ensure both molded hinge assemblies are attached with specified torque.

INSTALLATION PROCEDURE:

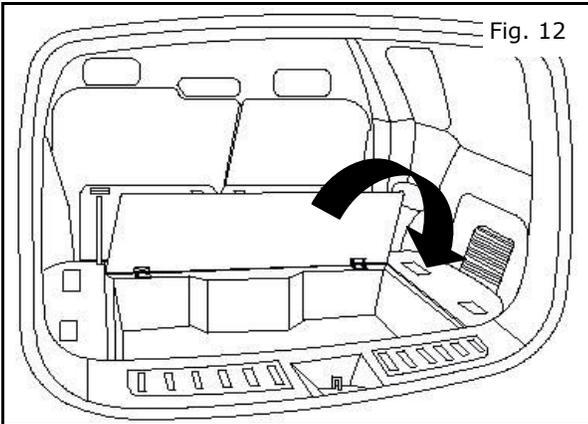


- 16) Close cargo bin lid.

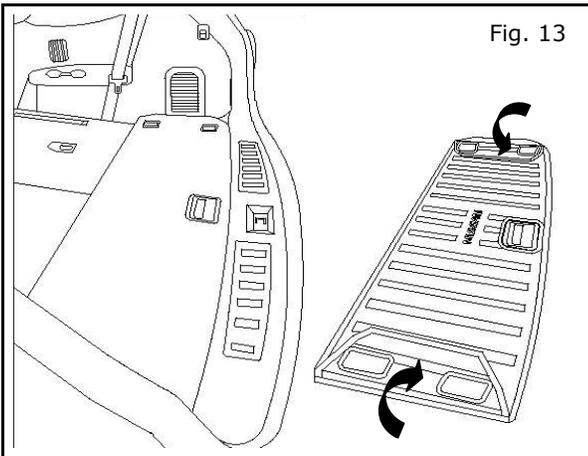

Note:


- Protector is equipped with aggressive hook fastener on underside.
- Use care when placing into vehicle.

- 17) Fold up protector's side flaps and cover underside hook and loop adapters with fingers.

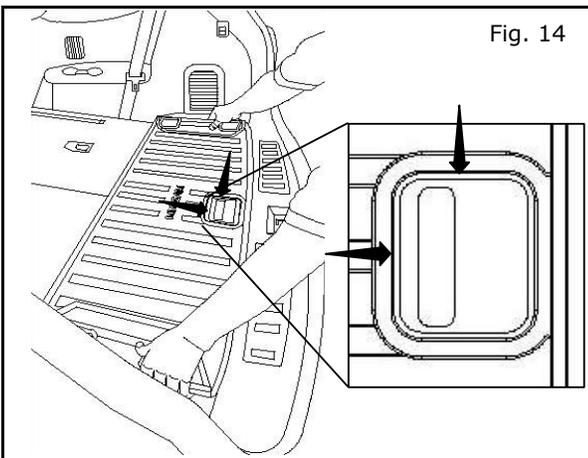


- 18) Place protector into cargo area, carefully aligning protector's center opening with vehicle load floor latch.


INSTALLATION PROCEDURE:

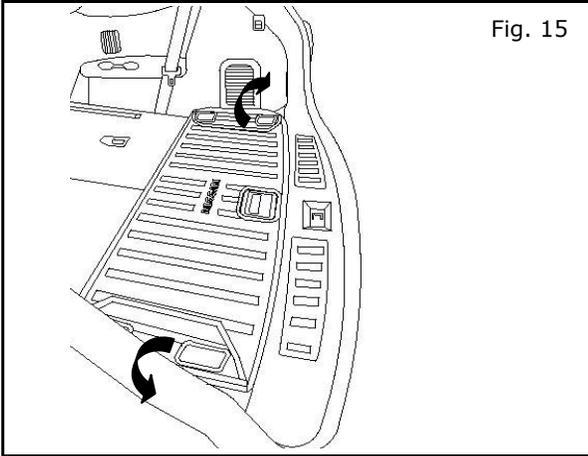

- 19) Once aligned, remove fingers from underside hook and loop adapters. Fold down side flaps.

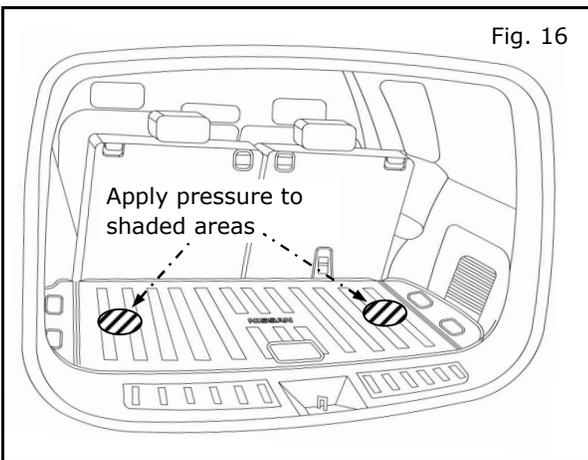

- 20) Apply pressure to shaded areas as shown to secure hook and loop fasteners.

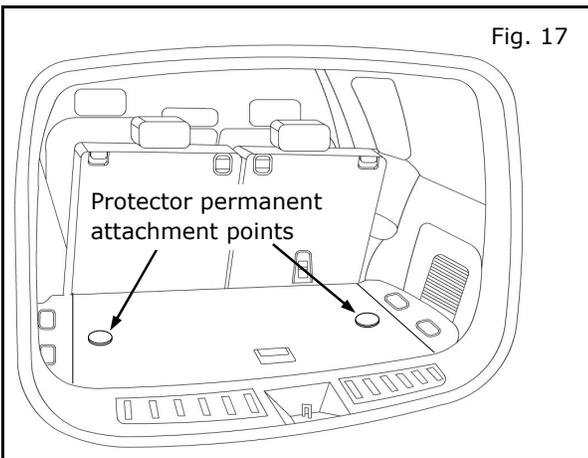

- 21) When protector is removed from vehicle, 2" round hook/loop discs remain attached to load floor carpet.

Note: Do not remove adapters after they have been properly installed.