




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Side Window Deflector
APPLICATION:	Pathfinder (2013)
PART NUMBER:	999D3 XZ000

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Side Window Deflector-Front LH	---
B	1	Side Window Deflector-Front RH	---
C	1	Side Window Deflector-Rear LH	---
D	1	Side Window Deflector-Rear RH	---
E	8	Bracket A	---
F	2	Bracket B	---
G	10	Capped Screw	---
H	10	Washer	---
I	10	Nut	---
J	1	Nut Tool	---
K	10	Abrasive Tape	---
L	2	Alcohol Wipe - 2 pk	---
M	1	Installation Instruction Replacement Template	999V2 AW000

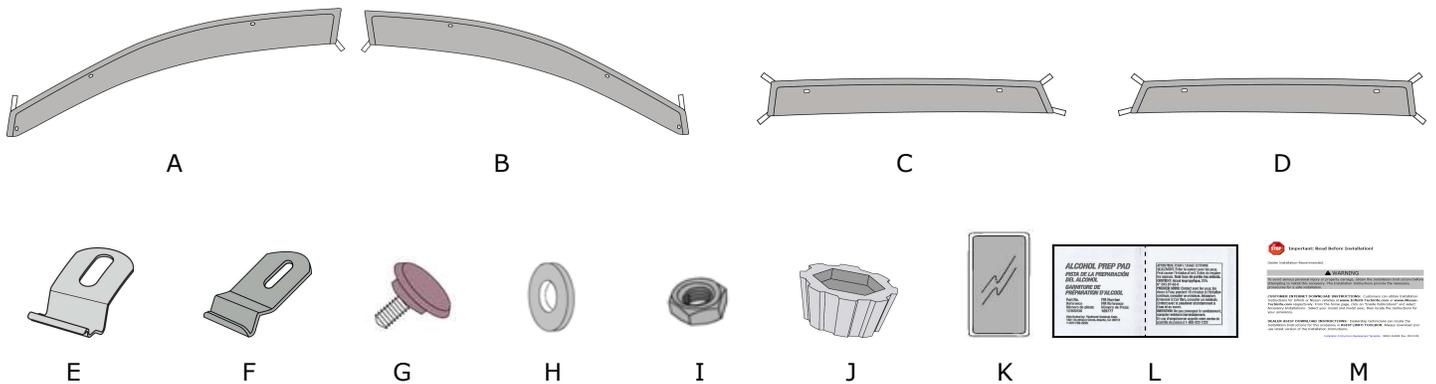




TOOLS REQUIRED:

- Clean Cloth
- Soap/Water
- 90% or great isopropyl alcohol
- Masking Tape
- Scale/Measuring Tape (mm)
- Non Permanent Marker / Pencil

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Read all instructions carefully before beginning installation.
- Never use ammonia based cleaner or solvents on the hood protector
- Dealer Installation Recommended.
- No moisture contact or washing vehicle for 24 hours after installation.
- Ideal ambient temperature for installation is above 55° (15°C).

INSTALLATION PROCEDURE:

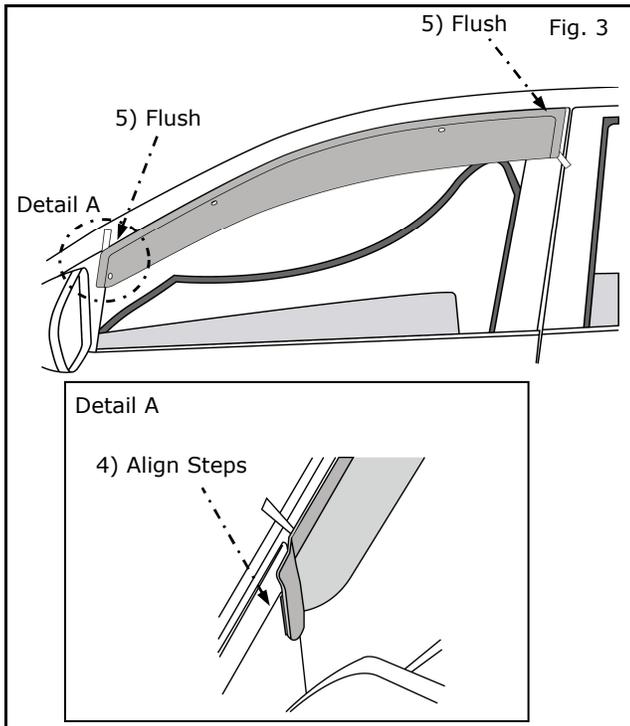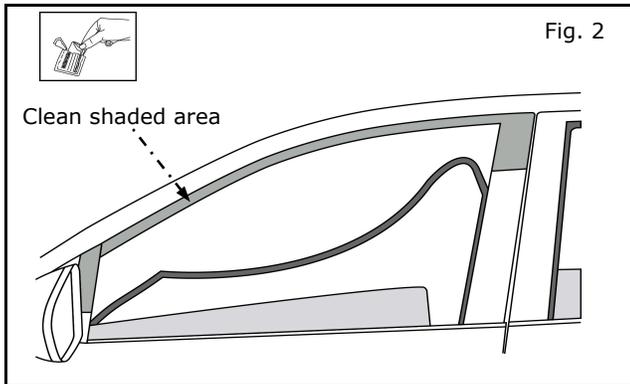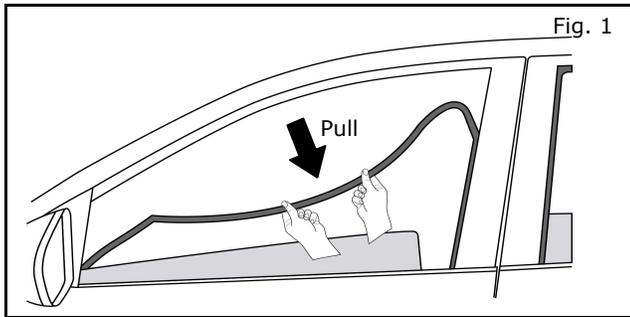


- 1) Clean front door with soap/water and dry with a clean cloth.
- 2) Lower window and pull rubber weather strip down to expose door flange and mirror sail edge.


- 3) Clean installation surface (shaded area) with provided alcohol wipe.

- 4) Align front flange of deflector over mirror sail at step in both parts.
- 5) Dry fit deflector by aligning top of deflector edge flush to top of door frame.

INSTALLATION PROCEDURE: (continue)

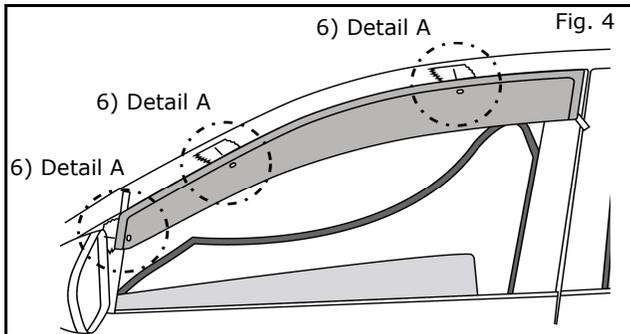


- 6) Place masking tape on roof surface and mirror sail at bracket hole locations and mark with pen or pencil.

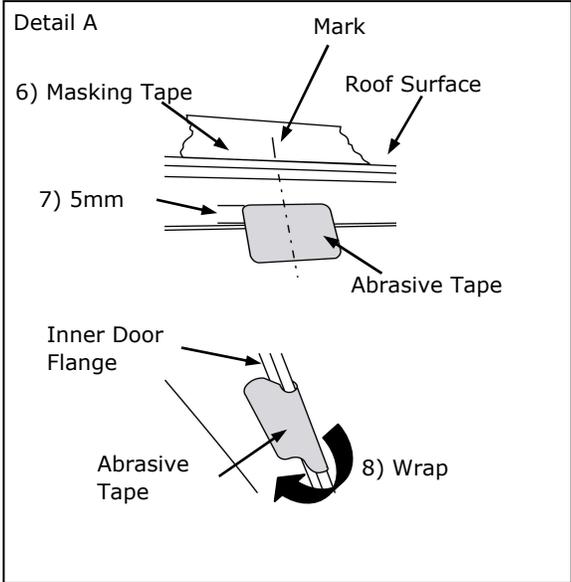


- 7) Place abrasive tape with 5mm contacting door surface and mirror surface centered to marked tape locations (see detail A).

- 8) Wrap abrasive tape into inner door flange (see detail A).

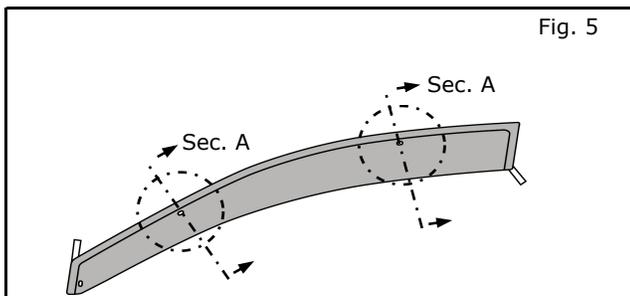


- 9) Attach Bracket A using a capped screw through deflector and bracket.
- 10) With capped screw through deflector and bracket, place washer and nut on capped screw.
- 11) Loosely tighten nut with nut tool.

NOTE:
Do not fully tighten screws.

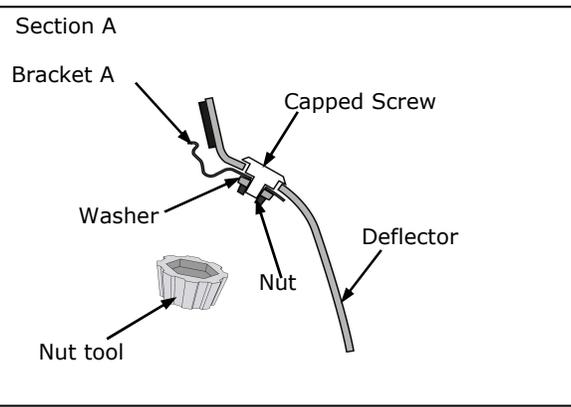


INSTALLATION PROCEDURE: (continue)

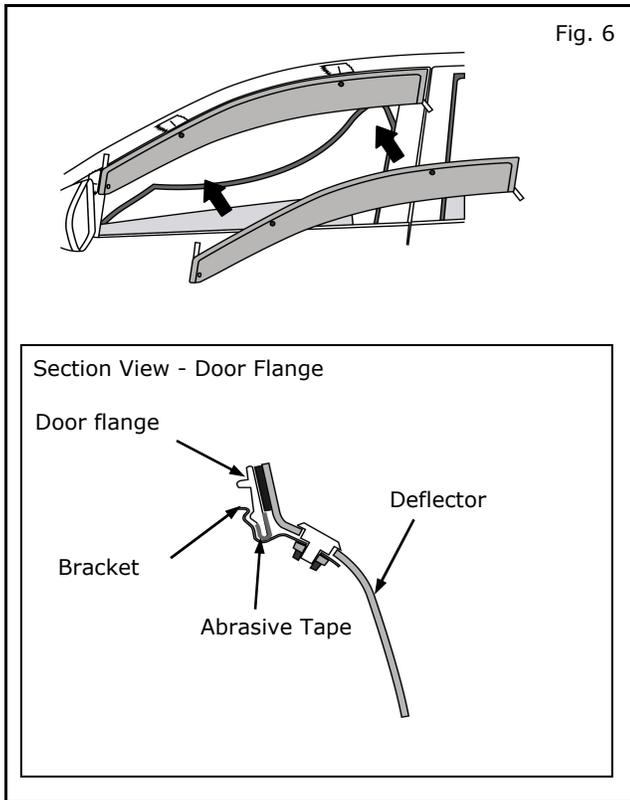


- 12) Attach deflector to door by sliding brackets onto door flange.

NOTE:
Make sure liner pull tabs are exposed.

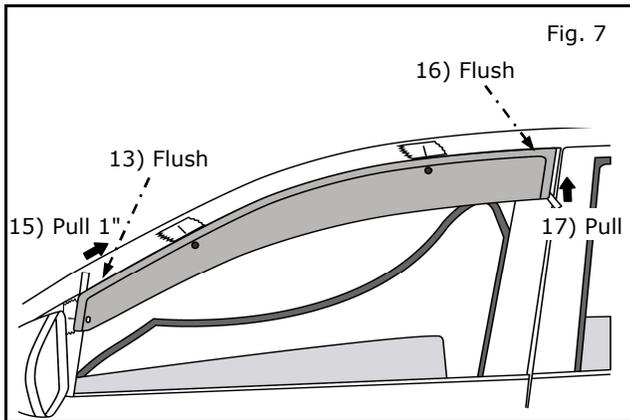


- 13) Align top of deflector edge flush to top of door frame at marked front location.
- 14) Align front flange of deflector over mirror sail at step in both parts.
- 15) Pull front pull tab back about 1" and tack down deflector.
- 16) Align top of deflector edge flush to top of door frame at marked rear location.
- 17) Pull vertical pull tab to remove liner and tack down deflector in place.

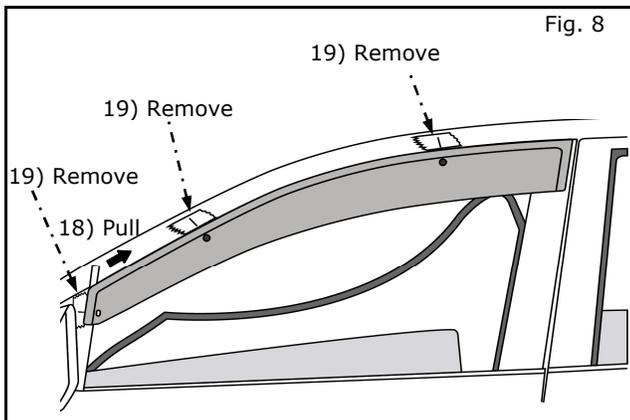


- 18) Remove tape liner by pulling on exposed pull tab.
- 19) Remove masking tape.


INSTALLATION PROCEDURE: (continue)

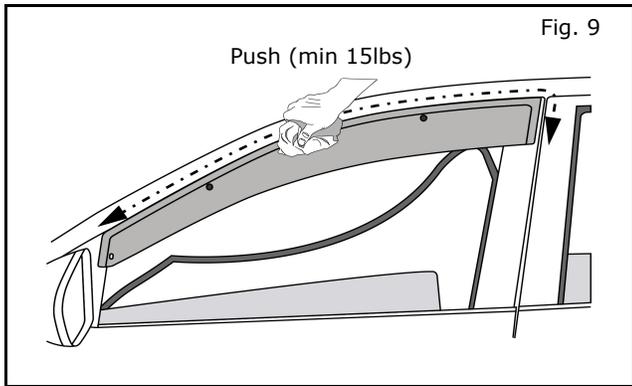

20) Using a clean cloth apply at least 15 lbs. of pressure along tape length.

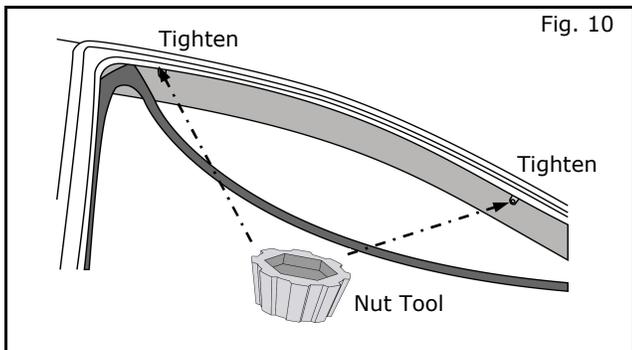

21) Use nut tool and tighten nuts on brackets.


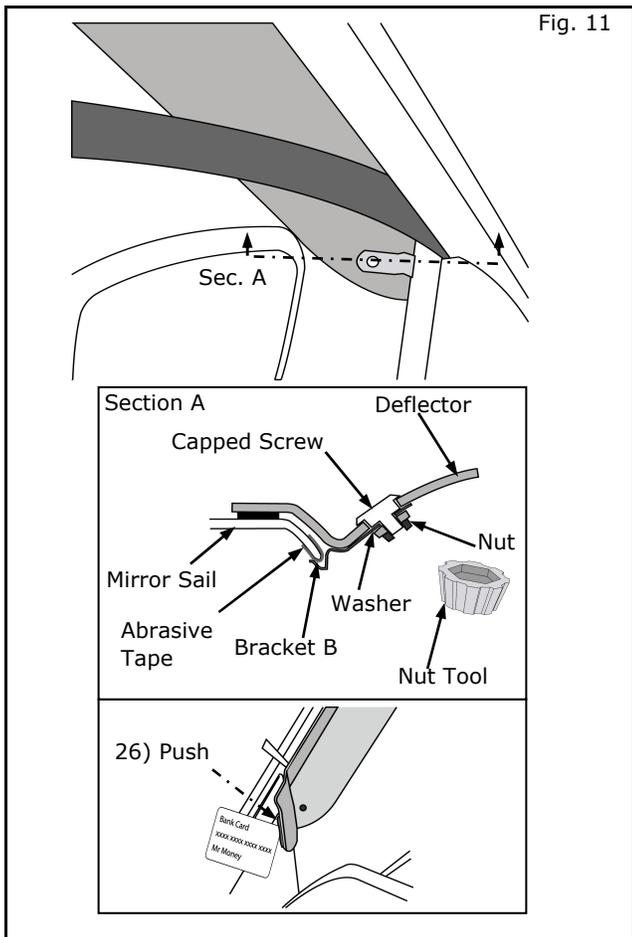


- 22) Place Bracket B onto mirror sail.
- 23) Attach Bracket B to deflector by using a capped screw through deflector and bracket.
- 24) With capped screw through deflector and bracket, place washer and nut on capped screw.
- 25) Tighten nut with nut tool.


- 26) If exposed, push foam seal under deflector flange with credit card.
- 27) Place rubber weather strip back into door channel.

INSTALLATION PROCEDURE: (continue)

- 28) Clean rear door with soap/water and dry with a clean cloth.
- 29) Lower window and pull rubber weather strip down to expose door flange.

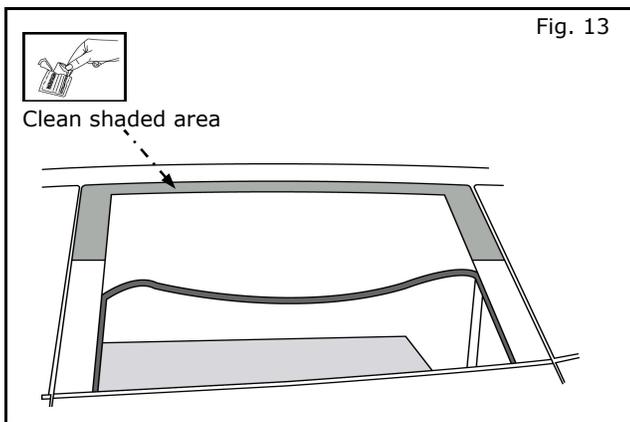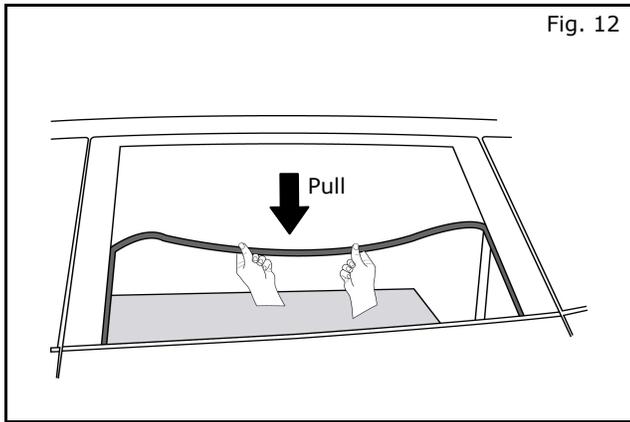

- 30) Clean installation surface (shaded area) with provided alcohol wipe.

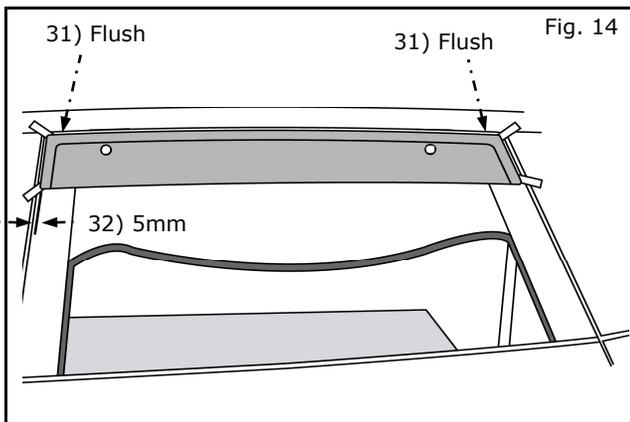

- 31) Dry fit deflector by aligning top of deflector edge flush to top of door frame at marked locations.
- 32) Line up front vertical edge 5mm away from edge of door frame.

INSTALLATION PROCEDURE: (continue)


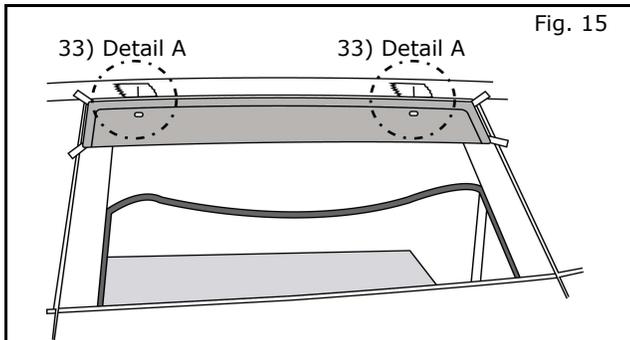


Fig. 15

33) Place masking tape on roof surface at bracket locations and mark with pen or pencil.

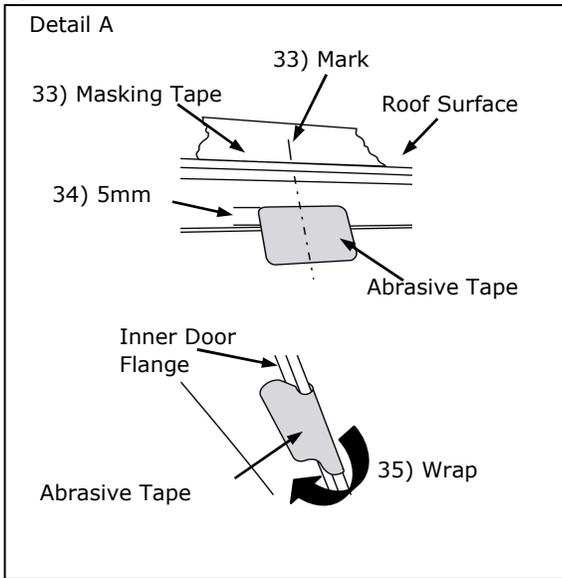

34) Place abrasive tape with 5mm contacting door surface and centered to marked tape locations. See detail A.

35) Wrap abrasive tape into inner door flange. See detail A.

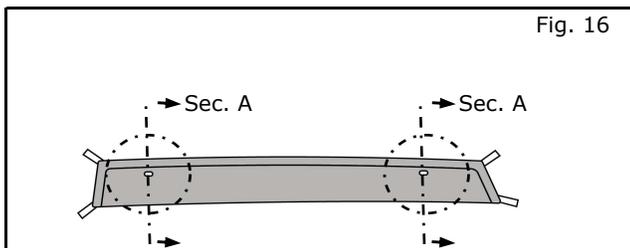



Fig. 16

36) Attach Bracket A using a capped screw through deflector and bracket.


37) With capped screw through deflector and bracket place washer and nut on capped screw.

38) Loosely tighten nut with nut tool.

NOTE:
Do not fully tighten screws.

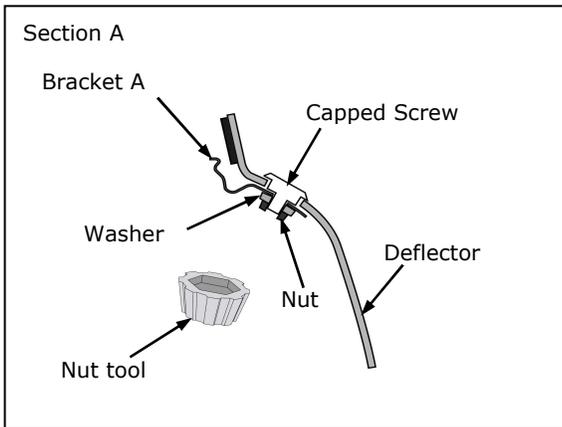


INSTALLATION PROCEDURE: (continue)

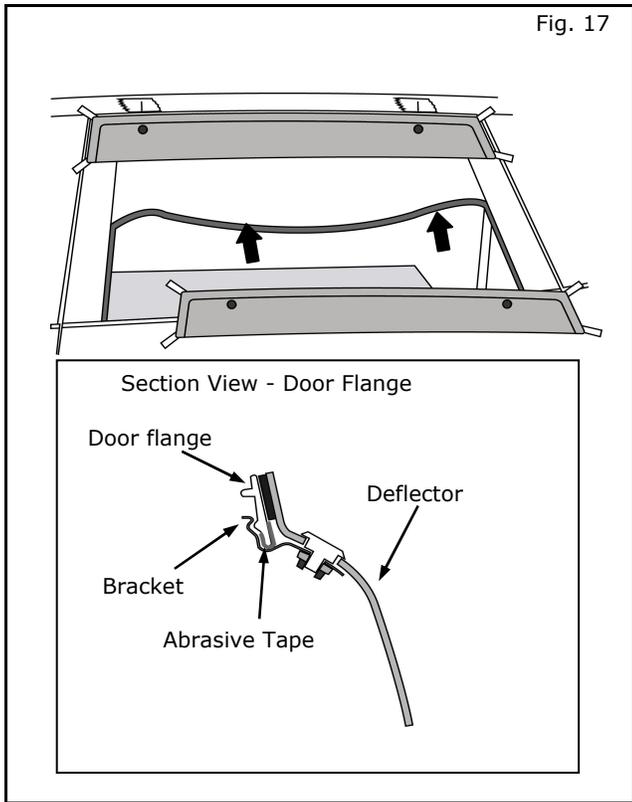


39) Attach deflector to door by sliding brackets onto door flange.

NOTE:
Make sure liner pull tabs are exposed.

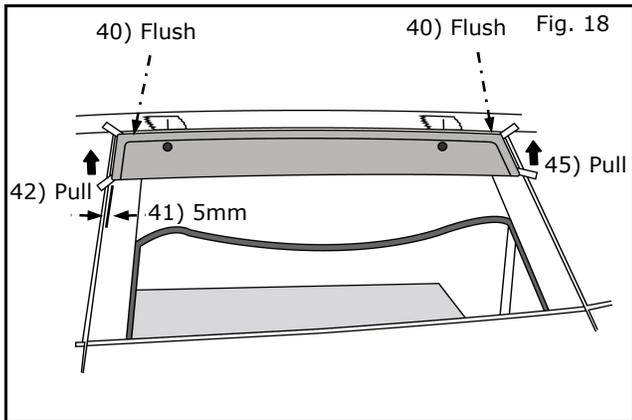


- 40) Align top of deflector edge flush to top of door frame at marked front location.
- 41) Line up front vertical edge 5mm away from edge of door frame.
- 42) Pull front vertical pull tab and remove liner.
- 43) Tack down deflector in place
- 44) Align top of deflector edge flush to top of door frame at marked rear location.
- 45) Pull vertical pull tab and remove liner.
- 46) Tack down deflector in place

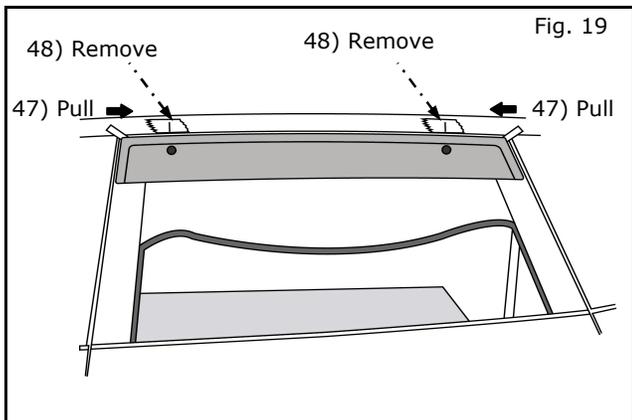


- 47) Remove tape liner by pulling on exposed pull tabs.
- 48) Remove masking tape.

INSTALLATION PROCEDURE: (continue)

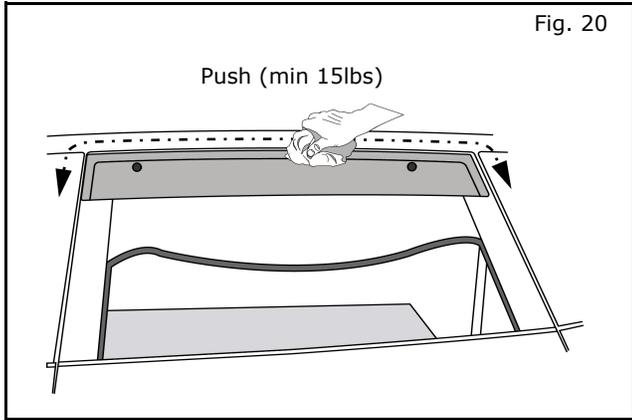

49) Using a clean cloth apply at least 15 lbs. of pressure along tape length.

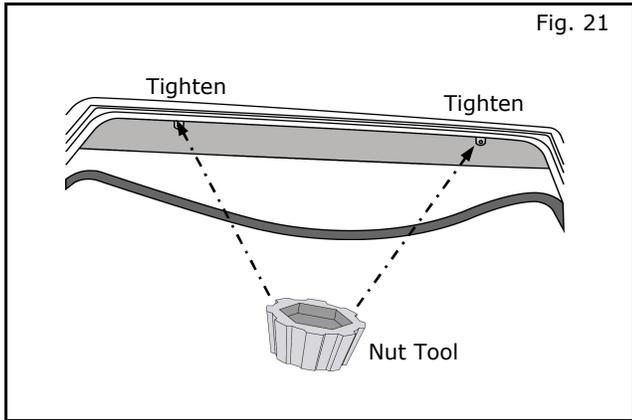

50) Use nut tool and tighten nuts on brackets.

51) Push rubber weather strip back into door channel.

52) Repeat steps 1-51 for other side.