



# GENUINE PARTS

## INSTALLATION INSTRUCTIONS

<b>DESCRIPTION:</b>	Rear Bumper Protective Film
<b>APPLICATION:</b>	NISSAN Rogue
<b>PART NUMBER:</b>	999T6-G2001

### KIT CONTENTS:

Item	QTY	Part Description	Service Part Number
A	1	Clear Rear Bumper Film	N/A
B	1	Plastic Squeegee	N/A
C	1	Installation Instructions Replacement Template	999V2 AW000



A



B



C


### TOOLS REQUIRED:

- 90% Isopropyl Alcohol
- Dish Soap
- 32 Ounce Spray Bottle
- Water
- Soft Lint Free Micro fiber Cloth


### PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended.
- **Application Solution:** Fill a 32 spray bottle with 25% isopropyl alcohol, 75% water, and add 5-7 drops of dish soap.
- Install in a non-dusty environment.
- Thoroughly wash vehicle with soap and water.
- Use tabs when handling film so no finger prints are left on adhesive.
- Install at ambient temperature of 65-90° F.


## INSTALLATION PROCEDURE:

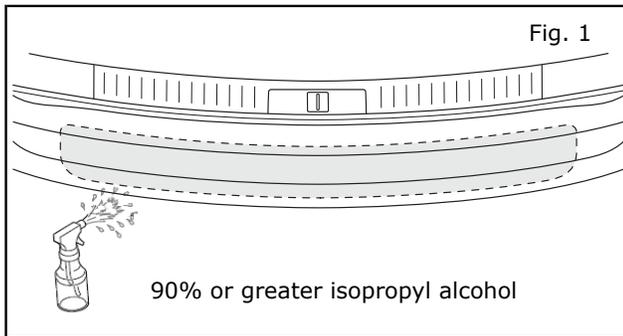

- 1) Using a clean lint free micro fiber cloth clean surface of rear bumper with 90% or greater isopropyl alcohol. Allow area to dry completely.

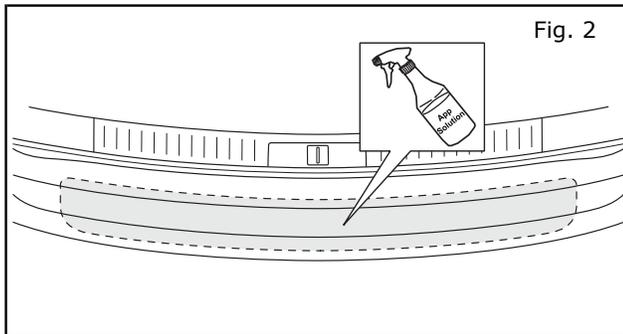


- 2) Spray bumper surface with application solution.  
Service Part Number

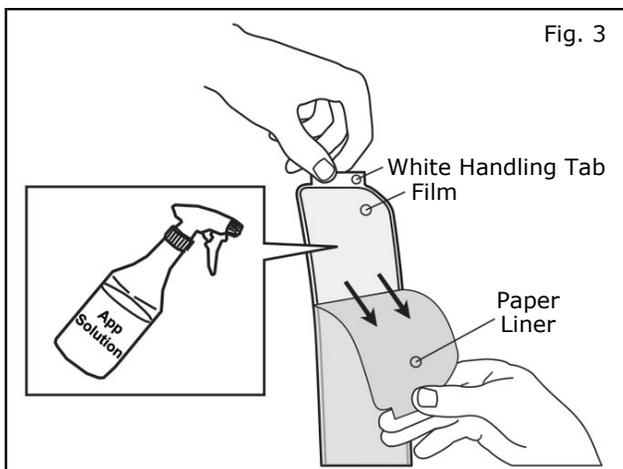


- 3) Hold by white handling tab and remove paper liner.
- 4) Spray adhesive side with an even mist of application solution.

**INSTALLATION PROCEDURE:** (continued)



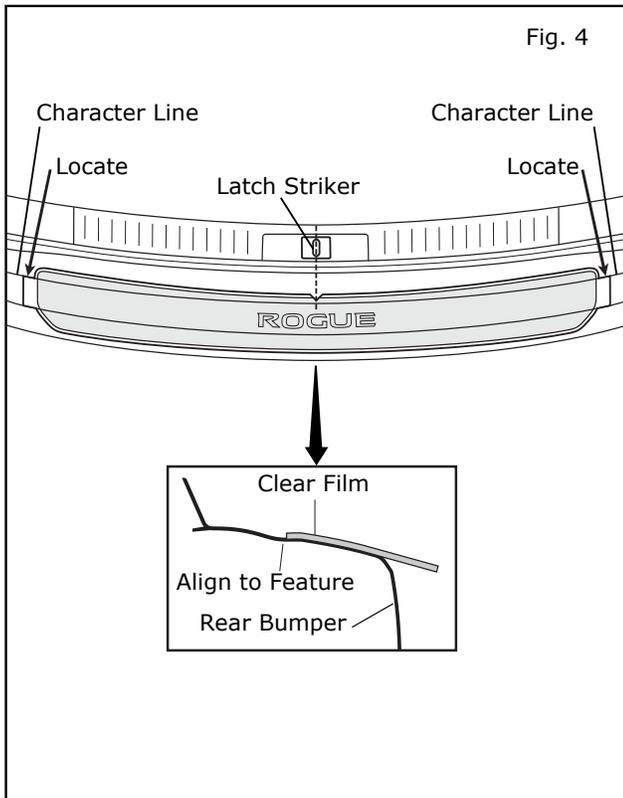


- 5) Align film into position with notch to latch striker and film locator to character line.

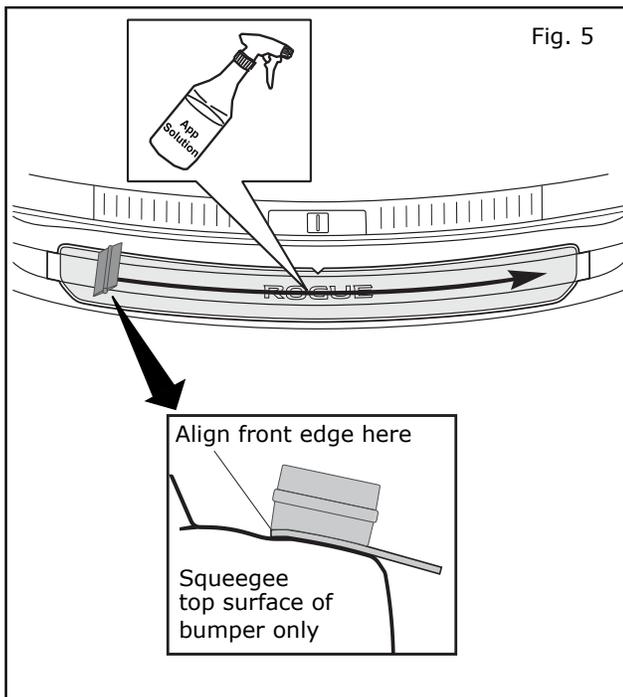

- 6) Spray top surface of pre-mask with even mist of application solution.
- 7) Begin squeegee while lightly touching pre-mask surface on top surface only.
- 8) As you drag squeegee apply firm pressure. This will aid in not leaving impression in part.
- 9) Firmly squeegee film down ONLY adhering on the top surface of the bumper.

**INSTALLATION PROCEDURE:** (continued)

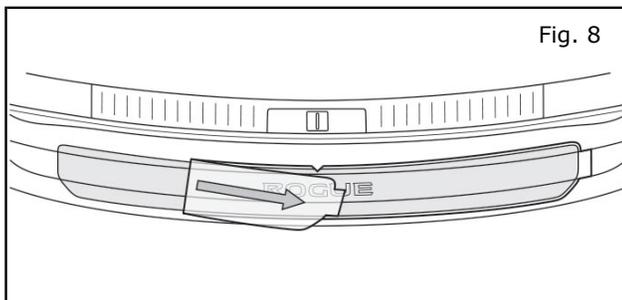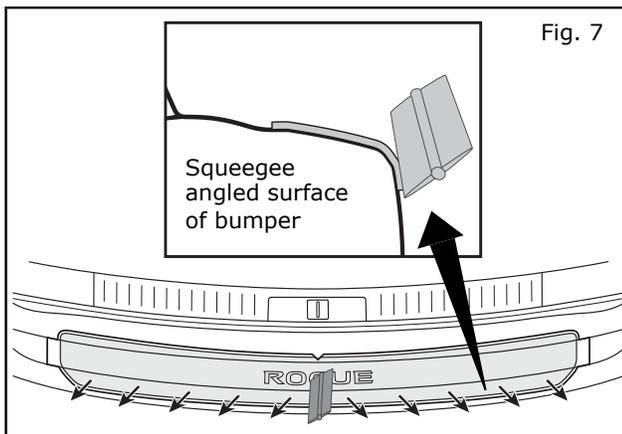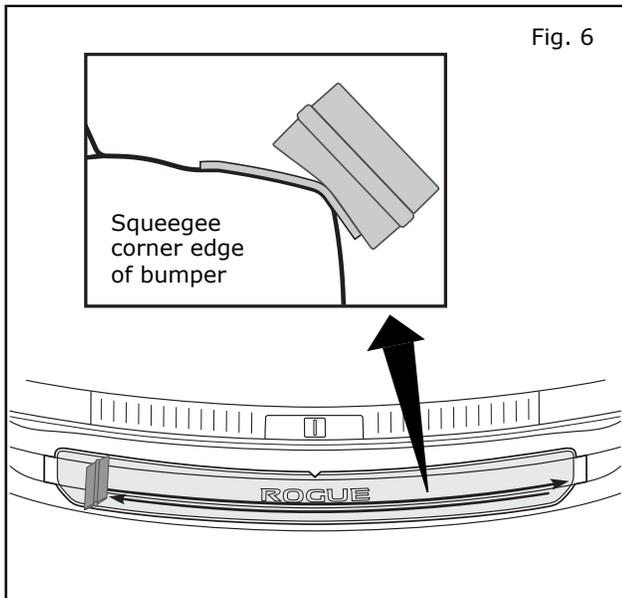

- 10) Firmly squeegee corner edge of bumper with three or four back and forth strokes in direction shown.

**NOTE:**

**Make sure no bubbles are present before going to next step. Do not wrap edge at this time. Re-squeegee if bubbles are present.**

- 11) Adhere angled surface by holding squeegee at 45° angle and firmly squeegee from center to right with several strokes (repeat from center to left).
- 12) Make sure all air and water is removed from under film. Re-squeegee any edges that may have lifted.

- 13) Remove pre-mask top protective covering CAREFULLY 180° against itself.

- 14) Re-squeegee any edges that may have lifted.

**NOTE:**

**An alcohol & water solution can be sprayed under edges if not adhering.**

**NOTE:**

**Inspect for bubbles. If a bubble is located, re-squeegee using a firm, fast stroke.**