




# GENUINE PARTS

## INSTALLATION INSTRUCTIONS


<b>DESCRIPTION:</b>	Hide-Away Trunk Net Kit
<b>APPLICATION:</b>	Sentra
<b>PART NUMBER:</b>	999C1 LZ000

### KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Trunk Net	999C1 LZ000
B	4	Cargo Net Hook	84937 ZB000
C	1	Installation Instruction Replacement Template	999V2 AW000

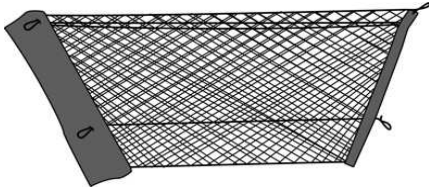

A



B

**STOP** Important! Read Before Installation!

Dealer Installation Recommended.

**WARNING**

The dealer service personnel verify all necessary warnings, obtain the Installation Instructions before attempting to install this accessory. The Installation Instructions provide the necessary procedures for safe installation.

**CUSTOMER INTERNET DOWNLOAD INSTRUCTIONS:** Customers can obtain Installation Instructions for vehicle or vehicle options at [www.infiniti-techinfo.com](http://www.infiniti-techinfo.com) or [www.infiniti-techinfo.com](http://www.infiniti-techinfo.com) respectively. From the home page, click on "make publication" and select document instructions. Select your model and model year. Then locate the instructions for your vehicle.

**DEALER AGENT DOWNLOAD INSTRUCTIONS:** Dealership Technicians can locate the Installation Instructions for this accessory in **ASSET LINKED TOOLBOX**. Always download and use latest version of the Installation Instructions.

Infiniti Technical Publications Division 999C1 LZ000 Rev. 07/10/12

C

### TOOLS REQUIRED:

- Flat Head Screw Driver

### PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that net is securely attached so items do not fall out during transit.
- Keep this installation instruction sheet with the Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

### INSTALLATION PROCEDURE:

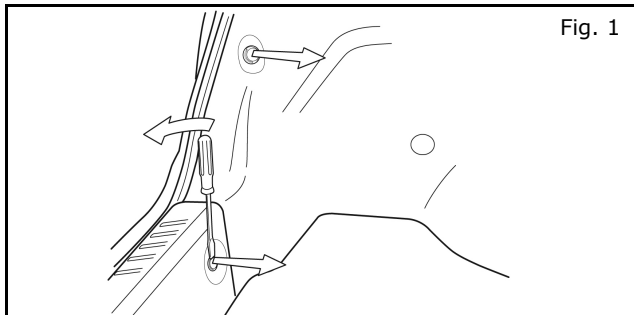


Fig. 1

- 1) Use a flat head screw driver to pry out center pin and remove 4 clips from trunk trim panel (driver's side shown).


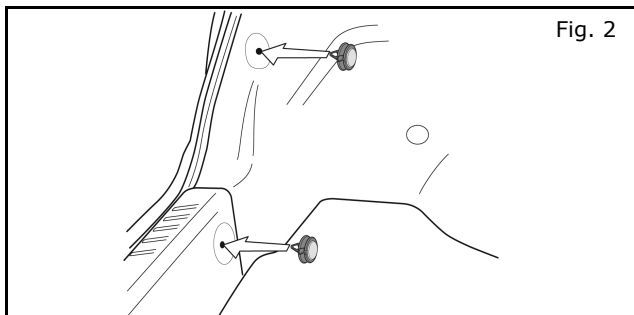


Fig. 2


- 2) Install cargo net hooks.
- 3) Repeat step 2 for passenger side.

## INSTALLATION PROCEDURE:

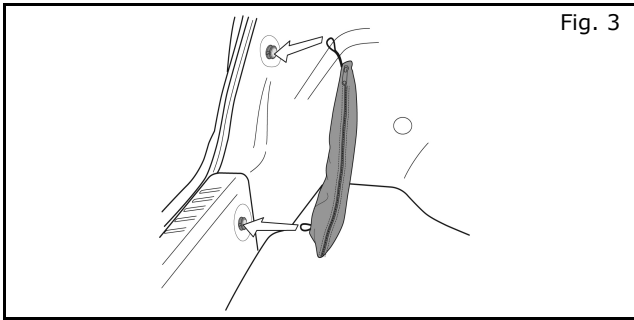


- 4) Position pouch so loops are toward rear of vehicle and attach to driver side hooks.

Note: Zipper should be facing passenger side.

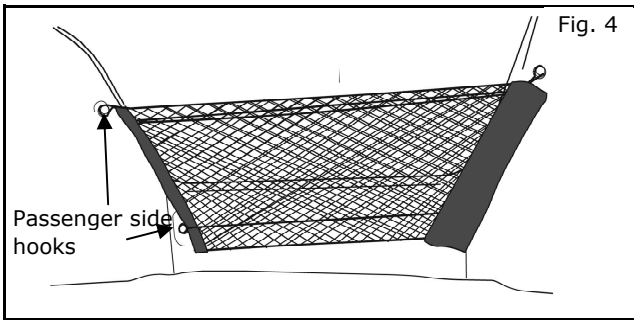

- 5) Unzip pouch, unroll cargo net and attach loops to passenger side hooks.

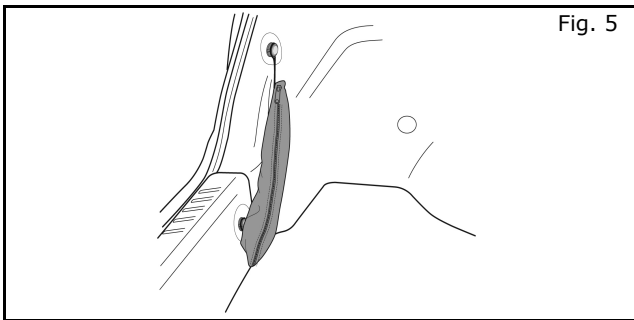

- 6) To store cargo net in pouch, leave driver side cargo net loops attached, detach passenger side loops, roll net into pouch and zip closed.