




## GENUINE PARTS

### INSTALLATION INSTRUCTIONS


**DESCRIPTION:** Splash Guard-Rear  
**APPLICATION:** Titan, without over fender  
**PART NUMBER:** 999J2 W4104

**KIT CONTENTS:**

Item	Qty.	Part Description	Service Part Number
A	1	Splash Guard - Rear Right	999J2 W4108
B	1	Splash Guard - Rear Left	999J2 W4107
C	2	Grommet	12-81 00441
D	6	Philips Head Screw - 20mm	14-51 00891
E	1	Installation Instruction Replacement Template	N/A

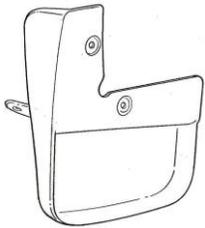

A

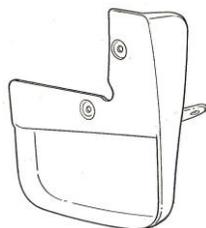

B



C



D



E

**TOOLS REQUIRED:**


- clean rag
- soap & water
- #2 phillips screw driver

**PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:**

- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.
- Dealer Installation Recommended.
- Parts to be installed at room temperature.


## INSTALLATION PROCEDURE:

Fig. 1

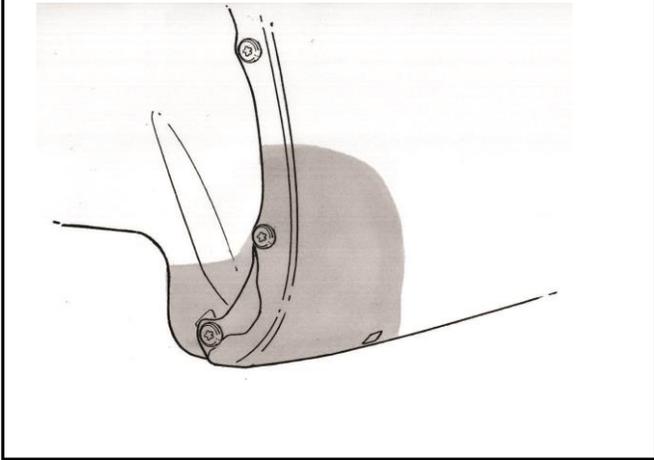


1) Clean shaded area with soap and water mixture and dry.

Fig. 2

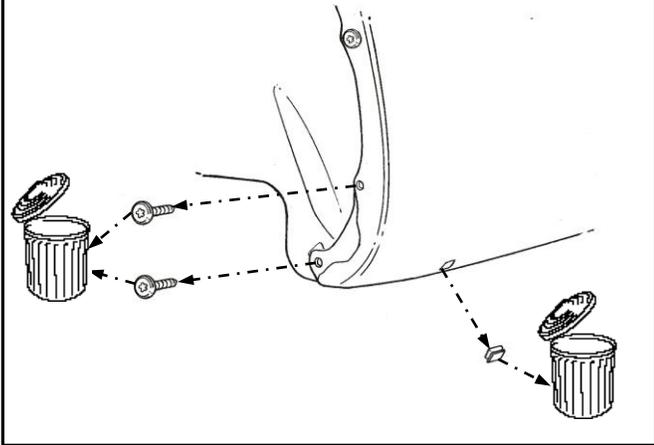


2) Remove existing screws -15mm and hole plug and discard.

Fig. 3

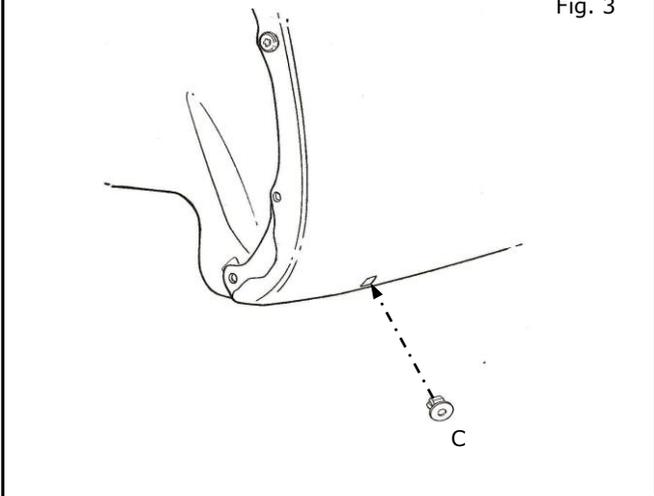


3) Install supplied grommet ( C ) .

**INSTALLATION PROCEDURE:** (continue)

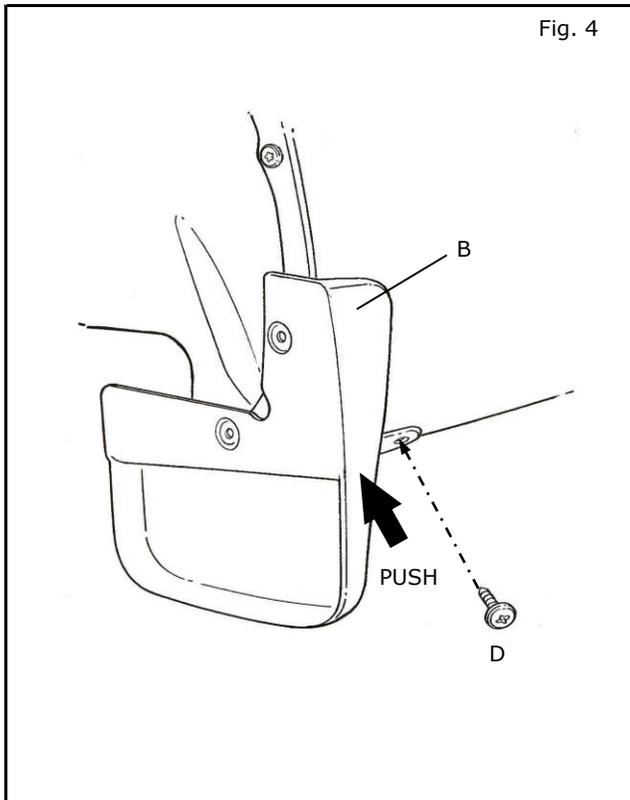

- 4) Align rear splashguard to vehicle.
- 5) Hold splash guard up and into vehicle and install supplied screw - 20mm (D) in lower mount tab and tighten.

**NOTE:**  
**Do not over tighten screw. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}**

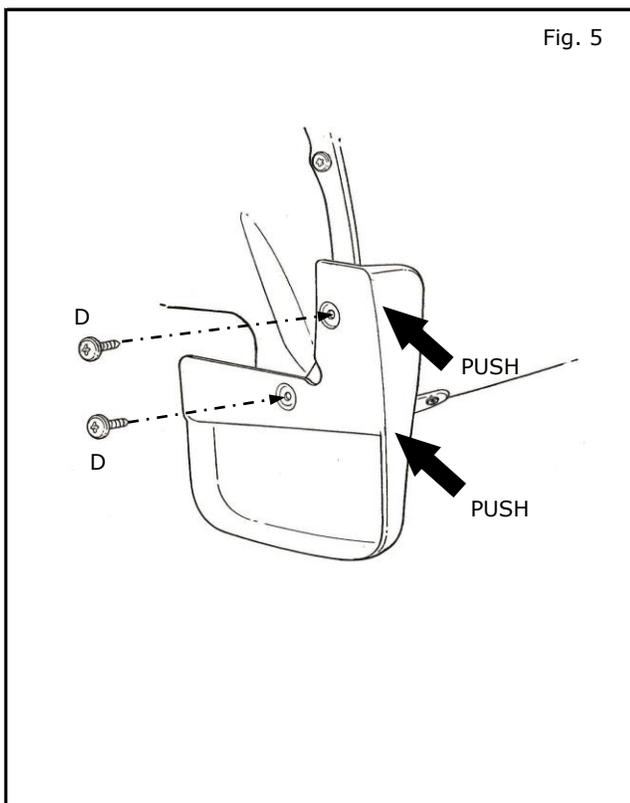

- 6) Install supplied screws - 20mm (D) in middle then top hole, push up and into vehicle while tightening.

**NOTE:**  
**Do not over tighten screw. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}**