






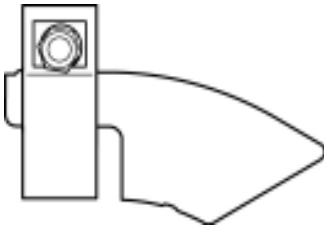


## GENUINE PARTS

### INSTALLATION INSTRUCTIONS

<b>DESCRIPTION:</b>	STAINLESS EXHAUST FINISHER														
<b>APPLICATION:</b>	Versa Note														
<b>PART NUMBER:</b>	999M6 4Z000														
	Installation of this accessory may require installation of additional Parts														
	• Clamp														
<b>KIT CONTENTS:</b>															
<table border="1"><thead><tr><th>Item</th><th>Qty.</th><th>Part Description</th><th>Service Part Number</th></tr></thead><tbody><tr><td>A</td><td>1</td><td>STAINLESS EXHAUST FINISHER (50.8 mm x 137 mm )</td><td>999M6 4Z000</td></tr><tr><td>B</td><td>1</td><td>Installation Instruction Replacement Template</td><td>999V2 AW000</td></tr></tbody></table>	Item	Qty.	Part Description	Service Part Number	A	1	STAINLESS EXHAUST FINISHER (50.8 mm x 137 mm )	999M6 4Z000	B	1	Installation Instruction Replacement Template	999V2 AW000			
Item	Qty.	Part Description	Service Part Number												
A	1	STAINLESS EXHAUST FINISHER (50.8 mm x 137 mm )	999M6 4Z000												
B	1	Installation Instruction Replacement Template	999V2 AW000												
															
A		B													
<b>TOOLS REQUIRED:</b>															
• Torque Wrench                      • 15 mm Deep Well Socket															
• Safety Glasses															
<b>PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:</b>															
<ul style="list-style-type: none"><li>• Study illustrations and read the instructions carefully before attempting assembly.</li><li>• Always wear safety glasses while working under any vehicle.</li><li>• Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.</li><li>• Check that torque wrench is set to correct setting (37 to 40.5 ft-lbs, 50.0 to 55.0 Nm).</li></ul>															
<div> <b>WARNING</b></div>															
<ul style="list-style-type: none"><li>• Ensure that the exhaust pipe is cool. If car has been running, turn the engine off and allow the exhaust pipe to cool for a minimum of 20 minutes.</li><li>• Do not use an air gun to tighten the clamp as this will over-torque the clamp and distort both the tip and the exhaust pipe.</li><li>• When installing the exhaust tip, take care to ensure that the clamp does not damage the truck bumper.</li></ul>															

## INSTALLATION PROCEDURE:

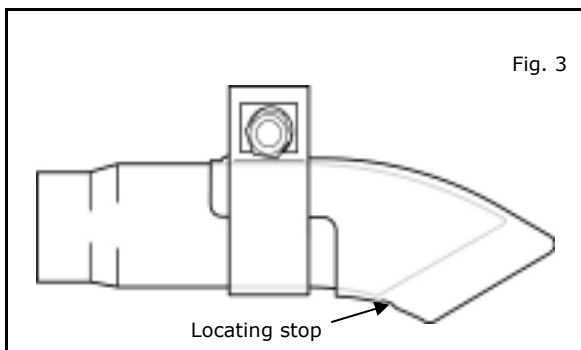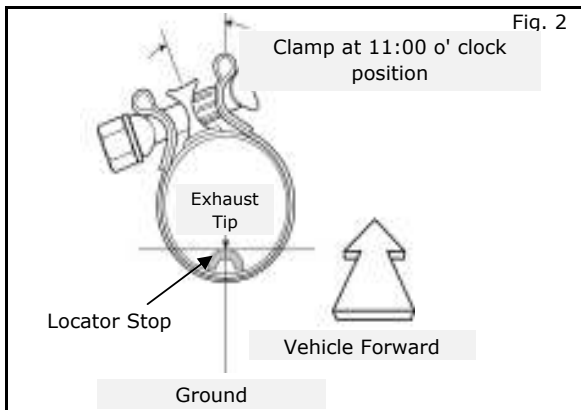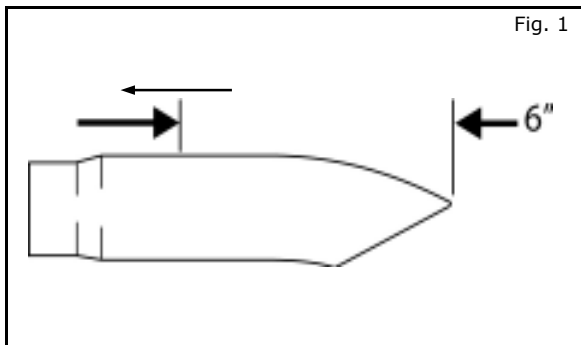

### 1) Installation

- Clean the vehicle's tail pipe over 6" (15.2 cm) from the end ensuring it is free of dirt and debris. (see Figure 1)
- Remove exhaust tip from package and set on a soft surface to prevent scratching.
- Install clamp if it is not already installed.
- Holding the tip so the clamp is facing toward you turn the clamp to 11 o'clock to allow for wrench to be properly seated. (See Figure 2)
- Slide the exhaust tip over the exhaust pipe until tip can't be pushed forward anymore (exhaust pipe touches locating stop on tip). (see Figure 3).
- Align exhaust tip so it is parallel to the ground. (see Figure 2)

### 2) Completing Installation

- Tighten the clamp to a static torque value of 25.0-30.0 ft-lb (39.9-40.7 Nm)
- Clean exhaust tip with an approved cleaner and soft cloth.

**ACCESSORY CHECK:**

- ☐ Confirm Stainless Exhaust Finisher is securely clamped to exhaust pipe.



**CAUTION**

**Use caution when re-installing interior components to avoid damage, scratches, or breaking of mounting clips. Refer to the vehicle service manual for more information.**

**FINAL INSPECTION:**

- ☐ Verify re-installed trim parts for proper flush fit (no gap, no waviness, etc.).
- ☐ Verify re-installed trim parts are free from cracks, scratches or stress marks.
- ☐ Verify interior and exterior is not damaged.