



GENUINE PARTS

INSTALLATION INSTRUCTIONS

| DESCRIPTION: Rear View Mirror Appliqué | | |
|--|--|--|
| APPLICATION: Nissan Versa Note (Hatch Back) | | |
| PART NUMBER: 999G3 44200 / 01 / 02 / 03 / 04 / 05 | | |
| KIT CONTENTS: | | |
| Item Qty. Description | | |
| A 1 Mirror Applique | | |
| B 1 Alcohol wipe C 1 Instruction Replacement Template | | |
| | | |
| | | |
| A B C | | |
| | | |
| | | |
| TOOLS REQUIRED: | | |
| None. | | |
| PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES: | | |
| Read the installation sheet and check the entire kit for possible damage or defects before performing any work. | | |
| Always dry fit parts before removing the adhesive liners to ensure proper fit, alignment, and component • location. Kit contents are labeled to indicate proper location. | | |
| Part application only for OE mirror. | | |
| | | |
| | | |
| | | |
| • Do not touch the tape side with your fingers to avoid contaminating the tape and reducing adhesion strength. | | |
| These parts are to be installed when the ambient temperature is between 60°F - 80°F, (16°C - 26 °C). | | |
| Do not wash or expose the vehicle to a wet environment for 24 hours after installing the Appliqué. | | |
| The tape will set in 15-20 seconds after the installation. | | |
| Do not reposition the appliqués once the tape has started to set/adhere to vehicle. | | |
| | | |
| | | |
| | | |

INSTALLATION PROCEDURE:

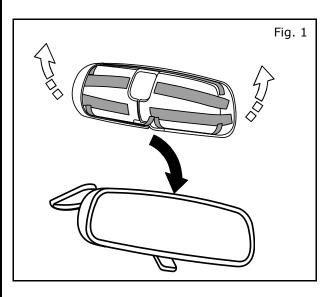

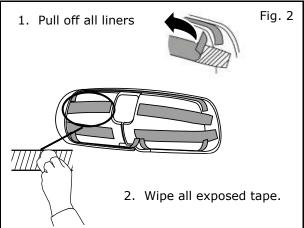

 Locate the rear view mirror, and dry fit part before removing the adhesive liner to establish correct part orientation. (Fig. 1)

Note: Part has to be gently opened up to fit over the mirror post.

- Remove the applique and use an alcohol wipe to clean the back of the mirror where appliqué is to adhere.
- Remove adhesive liner from back of the mirror applique. (Fig. 2)
- 4) While using a new section of the alcohol wipe, wipe all exposed tape to assist ease of installation. (Fig.2)

5) Carefully and lightly place part in position. Pull the applique back and squeeze entire surface with 15lbs force for 30sec until tape sets.
 (Fig. 3)

FINAL INSPECTION:

Fig. 3

Confirm day-night toggle lever works properly without interference.

